



**EVB-USB7006
Evaluation Kit
User's Guide**

Note the following details of the code protection feature on Microchip products:

- Microchip products meet the specifications contained in their particular Microchip Data Sheet.
 - Microchip believes that its family of products is secure when used in the intended manner, within operating specifications, and under normal conditions.
 - Microchip values and aggressively protects its intellectual property rights. Attempts to breach the code protection features of Microchip product is strictly prohibited and may violate the Digital Millennium Copyright Act.
 - Neither Microchip nor any other semiconductor manufacturer can guarantee the security of its code. Code protection does not mean that we are guaranteeing the product is "unbreakable" Code protection is constantly evolving. Microchip is committed to continuously improving the code protection features of our products.
-

This publication and the information herein may be used only with Microchip products, including to design, test, and integrate Microchip products with your application. Use of this information in any other manner violates these terms. Information regarding device applications is provided only for your convenience and may be superseded by updates. It is your responsibility to ensure that your application meets with your specifications. Contact your local Microchip sales office for additional support or, obtain additional support at <https://www.microchip.com/en-us/support/design-help/client-support-services>.

THIS INFORMATION IS PROVIDED BY MICROCHIP "AS IS". MICROCHIP MAKES NO REPRESENTATIONS OR WARRANTIES OF ANY KIND WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, STATUTORY OR OTHERWISE, RELATED TO THE INFORMATION INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY, AND FITNESS FOR A PARTICULAR PURPOSE, OR WARRANTIES RELATED TO ITS CONDITION, QUALITY, OR PERFORMANCE.

IN NO EVENT WILL MICROCHIP BE LIABLE FOR ANY INDIRECT, SPECIAL, PUNITIVE, INCIDENTAL, OR CONSEQUENTIAL LOSS, DAMAGE, COST, OR EXPENSE OF ANY KIND WHATSOEVER RELATED TO THE INFORMATION OR ITS USE, HOWEVER CAUSED, EVEN IF MICROCHIP HAS BEEN ADVISED OF THE POSSIBILITY OR THE DAMAGES ARE FORESEEABLE. TO THE FULLEST EXTENT ALLOWED BY LAW, MICROCHIP'S TOTAL LIABILITY ON ALL CLAIMS IN ANY WAY RELATED TO THE INFORMATION OR ITS USE WILL NOT EXCEED THE AMOUNT OF FEES, IF ANY, THAT YOU HAVE PAID DIRECTLY TO MICROCHIP FOR THE INFORMATION.

Use of Microchip devices in life support and/or safety applications is entirely at the buyer's risk, and the buyer agrees to defend, indemnify and hold harmless Microchip from any and all damages, claims, suits, or expenses resulting from such use. No licenses are conveyed, implicitly or otherwise, under any Microchip intellectual property rights unless otherwise stated.

Trademarks

The Microchip name and logo, the Microchip logo, Adaptec, AVR, AVR logo, AVR Freaks, BesTime, BitCloud, CryptoMemory, CryptoRF, dsPIC, flexPWR, HELDO, IGLOO, JukeBlox, KeeLoq, Kleeer, LANCheck, LinkMD, maXStylus, maXTouch, MediaLB, megaAVR, Microsemi, Microsemi logo, MOST, MOST logo, MPLAB, OptoLyzer, PIC, picoPower, PICSTART, PIC32 logo, PolarFire, Prochip Designer, QTouch, SAM-BA, SenGenuity, SpyNIC, SST, SST Logo, SuperFlash, Symmetricom, SyncServer, Tachyon, TimeSource, tinyAVR, UNI/O, Vectron, and XMEGA are registered trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

AgileSwitch, APT, ClockWorks, The Embedded Control Solutions Company, EtherSynch, Flashtec, Hyper Speed Control, HyperLight Load, Libero, motorBench, mTouch, Powermite 3, Precision Edge, ProASIC, ProASIC Plus, ProASIC Plus logo, Quiet-Wire, SmartFusion, SyncWorld, Temux, TimeCesium, TimeHub, TimePictra, TimeProvider, TrueTime, and ZL are registered trademarks of Microchip Technology Incorporated in the U.S.A.

Adjacent Key Suppression, AKS, Analog-for-the-Digital Age, Any Capacitor, AnyIn, AnyOut, Augmented Switching, BlueSky, BodyCom, Clockstudio, CodeGuard, CryptoAuthentication, CryptoAutomotive, CryptoCompanion, CryptoController, dsPICDEM, dsPICDEM.net, Dynamic Average Matching, DAM, ECAN, Espresso T1S, EtherGREEN, GridTime, IdealBridge, In-Circuit Serial Programming, ICSP, INICnet, Intelligent Parallelizing, IntelliMOS, Inter-Chip Connectivity, JitterBlocker, Knob-on-Display, KoD, maxCrypto, maxView, memBrain, Mindi, MiWi, MPASM, MPF, MPLAB Certified logo, MPLIB, MPLINK, MultiTRAK, NetDetach, Omniscient Code Generation, PICDEM, PICDEM.net, PICKit, PICtail, PowerSmart, PureSilicon, QMatrix, REAL ICE, Ripple Blocker, RTAX, RTG4, SAM-ICE, Serial Quad I/O, simpleMAP, SimpliPHY, SmartBuffer, SmartHLS, SMART-I.S., storClad, SQL, SuperSwitcher, SuperSwitcher II, Switchtec, SynchroPHY, Total Endurance, Trusted Time, TSHARC, USBCheck, VariSense, VectorBlox, VeriPHY, ViewSpan, WiperLock, XpressConnect, and ZENA are trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

SQTP is a service mark of Microchip Technology Incorporated in the U.S.A.

The Adaptec logo, Frequency on Demand, Silicon Storage Technology, and Symmcom are registered trademarks of Microchip Technology Inc. in other countries.

GestIC is a registered trademark of Microchip Technology Germany II GmbH & Co. KG, a subsidiary of Microchip Technology Inc., in other countries.

All other trademarks mentioned herein are property of their respective companies.

© 2022, Microchip Technology Incorporated and its subsidiaries.

All Rights Reserved.

ISBN: 978-1-6683-0872-1

For information regarding Microchip's Quality Management Systems, please visit www.microchip.com/quality.

Table of Contents

Preface	5
Introduction	5
Document Layout	5
Conventions Used in this Guide	6
Warranty Registration	7
The Microchip Web Site	7
Development Systems Customer Change Notification Service	7
Customer Support	8
Document Revision History	8
Chapter 1. Overview	
1.1 Introduction	9
1.2 Features	9
1.3 Block Diagram	10
1.4 References	11
1.5 Acronyms and Definitions	11
Chapter 2. Getting Started	
2.1 Introduction	13
2.2 Kit Contents	13
2.3 Quick Start	13
Chapter 3. Hardware Configuration	
3.1 Hardware Configuration Options	15
3.1.1 Configuration	15
3.1.2 Power Source - Self Powered	16
3.1.3 Downstream Port Power Control	17
3.1.4 LED Indicators	17
3.1.5 Switches	18
3.1.6 Connector Descriptions	18
3.1.7 Test Points	19
Appendix A. Schematics	
A.1 Introduction	21
Appendix B. Bill of Materials	
B.1 Introduction	29
Appendix C. PCB Silk Screens	
C.1 Introduction	35
Worldwide Sales and Service	38

NOTES:

Preface

NOTICE TO CUSTOMERS

All documentation becomes dated, and this manual is no exception. Microchip tools and documentation are constantly evolving to meet customer needs, so some actual dialogs and/or tool descriptions may differ from those in this document. Please refer to our web site (www.microchip.com) to obtain the latest documentation available.

Documents are identified with a “DS” number. This number is located on the bottom of each page, in front of the page number. The numbering convention for the DS number is “DSXXXXA”, where “XXXX” is the document number and “A” is the revision level of the document.

For the most up-to-date information on development tools, see the MPLAB® IDE online help. Select the Help menu, and then Topics to open a list of available online help files.

INTRODUCTION

This chapter contains general information that will be useful to know before using the EVB-USB7006 Evaluation Kit User's Guide. Items discussed in this chapter include:

- [Document Layout](#)
- [Conventions Used in this Guide](#)
- [Warranty Registration](#)
- [The Microchip Web Site](#)
- [Development Systems Customer Change Notification Service](#)
- [Customer Support](#)
- [Document Revision History](#)

DOCUMENT LAYOUT

This document describes how to use the EVB-USB7006 Evaluation Kit as a demonstration platform optimized for portable applications. The manual layout is as follows:

- **Chapter 1. “Overview”** – This chapter shows a brief description of the EVB-USB7006 Evaluation Kit.
- **Chapter 2. “Getting Started”** – This chapter provides information about setup and operation of the EVB-USB7006 Evaluation Kit.
- **Chapter 3. “Hardware Configuration”** – This chapter includes information about the hardware configuration of the EVB-USB7006 Evaluation Kit.
- **Appendix A. “Schematics”** – This appendix shows the EVB-USB7006 Evaluation Kit schematics.
- **Appendix B. “Bill of Materials”** – This appendix includes the EVB-USB7006 Evaluation Kit Bill of Materials (BOM).
- **Appendix C. “PCB Silk Screens”** – This appendix includes the EVB-USB7006 Evaluation Kit silk screen.

CONVENTIONS USED IN THIS GUIDE

This manual uses the following documentation conventions:

DOCUMENTATION CONVENTIONS

Description	Represents	Examples
Arial font:		
Italic characters	Referenced books	<i>MPLAB® IDE User's Guide</i>
	Emphasized text	...is the <i>only</i> compiler...
Initial caps	A window	the Output window
	A dialog	the Settings dialog
	A menu selection	select Enable Programmer
Quotes	A field name in a window or dialog	"Save project before build"
Underlined, italic text with right angle bracket	A menu path	<u><i>File>Save</i></u>
Bold characters	A dialog button	Click OK
	A tab	Click the Power tab
N'Rnnnn	A number in verilog format, where N is the total number of digits, R is the radix and n is a digit.	4'b0010, 2'hF1
Text in angle brackets < >	A key on the keyboard	Press <Enter>, <F1>
Courier New font:		
Plain Courier New	Sample source code	#define START
	Filenames	autoexec.bat
	File paths	c:\mcc18\h
	Keywords	_asm, _endasm, static
	Command-line options	-Opa+, -Opa-
	Bit values	0, 1
	Constants	0xFF, 'A'
Italic Courier New	A variable argument	<i>file.o</i> , where <i>file</i> can be any valid filename
Square brackets []	Optional arguments	mcc18 [options] <i>file</i> [options]
Curly brackets and pipe character: { }	Choice of mutually exclusive arguments; an OR selection	errorlevel {0 1}
Ellipses...	Replaces repeated text	var_name [, var_name...]
	Represents code supplied by user	void main (void) { ... }

WARRANTY REGISTRATION

Please complete the enclosed Warranty Registration Card and mail it promptly. Sending the Warranty Registration Card entitles users to receive new product updates. Interim software releases are available at the Microchip website.

THE MICROCHIP WEB SITE

Microchip provides online support via our web site at www.microchip.com. This web site is used as a means to make files and information easily available to customers. Accessible by using your favorite Internet browser, the website contains the following information:

- **Product Support** – Data sheets and errata, application notes and sample programs, design resources, user's guides and hardware support documents, latest software releases and archived software
- **General Technical Support** – Frequently Asked Questions (FAQs), technical support requests, online discussion groups, Microchip consultant program member listing
- **Business of Microchip** – Product selector and ordering guides, latest Microchip press releases, listing of seminars and events, listings of Microchip sales offices, distributors and factory representatives

DEVELOPMENT SYSTEMS CUSTOMER CHANGE NOTIFICATION SERVICE

Microchip's customer notification service helps keep customers current on Microchip products. Subscribers will receive e-mail notification whenever there are changes, updates, revisions, or errata related to a specified product family or development tool of interest.

To register, access the Microchip web site at www.microchip.com, click on Customer Change Notification and follow the registration instructions.

The Development Systems product group categories are:

- **Compilers** – The latest information on Microchip C compilers, assemblers, linkers and other language tools. These include all MPLAB® C compilers; all MPLAB assemblers (including MPASM™ assembler); all MPLAB linkers (including MPLINK™ object linker); and all MPLAB librarians (including MPLIB™ object librarian).
- **Emulators** – The latest information on Microchip in-circuit emulators. This includes the MPLAB REAL ICE and MPLAB ICE 2000 in-circuit emulators.
- **In-Circuit Debuggers** – The latest information on the Microchip in-circuit debuggers. This includes MPLAB ICD 3 in-circuit debuggers and PICKit™ 3 debug express.
- **MPLAB IDE** – The latest information on Microchip MPLAB IDE, the Windows Integrated Development Environment for development systems tools. This list is focused on the MPLAB IDE, MPLAB IDE Project Manager, MPLAB Editor and MPLAB SIM simulator, as well as general editing and debugging features.
- **Programmers** – The latest information on Microchip programmers. These include production programmers such as MPLAB REAL ICE in-circuit emulator, MPLAB ICD 3 in-circuit debugger and MPLAB PM3 device programmers. Also included are nonproduction development programmers such as PICSTART® Plus and PICKit 2 and 3.

CUSTOMER SUPPORT

Users of Microchip products can receive assistance through several channels:

- Distributor or Representative
- Local Sales Office
- Field Application Engineer (FAE)
- Technical Support

Customers should contact their distributor, representative or field application engineer (FAE) for support. Local sales offices are also available to help customers. A listing of sales offices and locations is included in the back of this document.

Technical support is available through the web site at:

<http://www.microchip.com/support>

DOCUMENT REVISION HISTORY

Revisions	Section/Figure/Entry	Correction
DS50003364A (07-13-22)	Initial release	

Chapter 1. Overview

1.1 INTRODUCTION

The EVB-USB7006 is a demonstration and evaluation platform that provides the necessary requirements and interface options for evaluating the USB7006, which is a 6-port High-Speed (HS) USB smart hub on a 4-layer RoHS-compliant Printed Circuit Board (PCB). This allows the user to gain an understanding of the product and accelerate the integration of the USB7006 into the user's design.

The EVB-USB7006 is compliant with the USB 2.0 HS, Full-Speed (FS), and Low-Speed (LS) USB signaling. The EVB-USB7006 is also compliant with USB 3.2 Gen1 on the upstream port and on downstream ports 1 through 5.

The evaluation platform supports six downstream ports: five USB 3.2 Gen1 ports with Type-A connectors and one USB2.0 port with a Type-A connector. The EVB-USB7006 platform also supports battery charging on all six downstream ports (maximum of 10A [Note 1] at any one time). The EVB-USB7006 supports FlexConnect role reversal for any of the four downstream ports with the upstream port.

The EVB-USB7006 has four configurations for operation through internal default settings and supports custom configurations through SMBus or through the external 16-Mbit SPI Flash device.

The EVB-USB7006 demonstrates driver compatibility with Microsoft® Windows® 10, Windows 8.x, Windows 7, Windows XP, Mac OS® X 10.4+, and Linux® hub drivers.

For more information about EVB-USB7006, see [Section 1.2 "Features"](#).

Note 1: Requires a 12V, 85W supply.
--

1.2 FEATURES

- Microchip's PortSwap, PHYBoost™, and VariSense™ technologies
- USB7006 in a 100-pin QFN RoHS compliant package
- USB 3.2 compliant (Gen1 operation)
- USB 2 compliant (HS, FS, and LS operation)
- 5V-tolerant USB pins
- Self-powered operation
- USB 3.2 Gen1 Type-A upstream port
- Six Downstream USB ports:
 - Five Type-A USB 3.2 Gen1 downstream ports
 - Two Type-A USB 2.0-only downstream ports
- All downstream ports support individual port power and overcurrent sense.
- All downstream ports can be enabled for battery charging with the battery charging select shunts J10 and J14. (BC1.2 or SE1, 2.1A maximum per port)
- Onboard SPI Flash for external downloadable firmware
- Operates from a single voltage (+12.0V, regulated) external power supply
- Onboard 25 MHz crystal or oscillator input
- Single onboard +5.2V, 15A regulator

- ### 1.3 BLOCK DIAGRAM

1.4 REFERENCES

Concepts and materials available in the following document may be helpful when reading this user guide. Visit www.microchip.com for the latest documentation.

- *USB7006 6-Port USB 3.2 Gen 1 SmartHub Controller Data Sheet*

1.5 ACRONYMS AND DEFINITIONS

TABLE 1-1: ACRONYMS AND DEFINITIONS

Acronym	Definition
BC1.2	The latest USB-IF specified USB battery charging standard
CDP	Charging Downstream Port, a BC1.2-compliant port allows simultaneous USB data and USB charging
DCP	Dedicated Charging Port, a BC1.2-compliant port which is only capable of USB charging (no data)
DFP	Downstream Facing Port
EVB	Evaluation Board
OTP	One-Time-Programmable Memory
SDP	Standard Downstream Port, a standard USB port with no high-current battery charging capabilities
SE1	Type of Battery Charging (non-USB compliant) that sets the USB D+/D- to specific DC voltages to communicate charging capability
Type-C	Reversible USB Connector
USB-IF	USB Integrators Forum, a collection of corporate sponsored members responsible for developing USB specifications
Gen1	USB Specification 3.2 Gen1

NOTES:

Chapter 2. Getting Started

2.1 INTRODUCTION

The Microchip EVB-USB7006 is designed for flexible configuration solutions. It can be configured via default internal register settings, via a downloadable external firmware to an onboard SPI Flash (OTP memory), via SMBus, or via the onboard configuration switches. When configured with the default internal register settings, the device operates as a USB 3.2 Gen1 hub with one upstream Gen1 port, five downstream Gen1 ports, and one downstream USB 2.0 port, with Microchip's standard VID/PID/DID settings.

Microchip provides a comprehensive software programming tool, MPLAB® Connect (MPLABC), for configuring USB7006 functions, registers, and OTP memory. USB7006 requires MPLABC version 2.1.0 or greater.

For additional information on the MPLABCC programming tool, refer to Software Libraries within the Microchip USB7006 product page at www.microchip.com/USB7006.

2.2 KIT CONTENTS

The EVB-USB7006 Evaluation Kit includes the basic equipment necessary for evaluation. The items included in the kit are:

- EVB-USB7006 Evaluation Board
- Type-A to Type-uB USB cable

2.3 QUICK START

To quickly start using the board, perform the following steps:

1. Connect a 12V power supply to the barrel connector (J5) or the terminal block (J4) on the EVB-USB7006.
2. Using a Type-A to Type-uB USB cable, connect the EVB-USB7006 to a USB host via the upstream "Port 0" USB Type-B socket (J1).

Devices may now be connected to any of the downstream ports to enumerate and use those devices with the USB host.

To perform additional configuration or evaluate specific features, launch the MPLABC software on your USB host or manipulate the included hardware configuration options detailed in the next sections.


NOTES:

Chapter 3. Hardware Configuration

3.1 HARDWARE CONFIGURATION OPTIONS

Figure 3-1 shows the top view of the EVB-USB7006.

FIGURE 3-1: EVB- USB7006 (TOP VIEW)

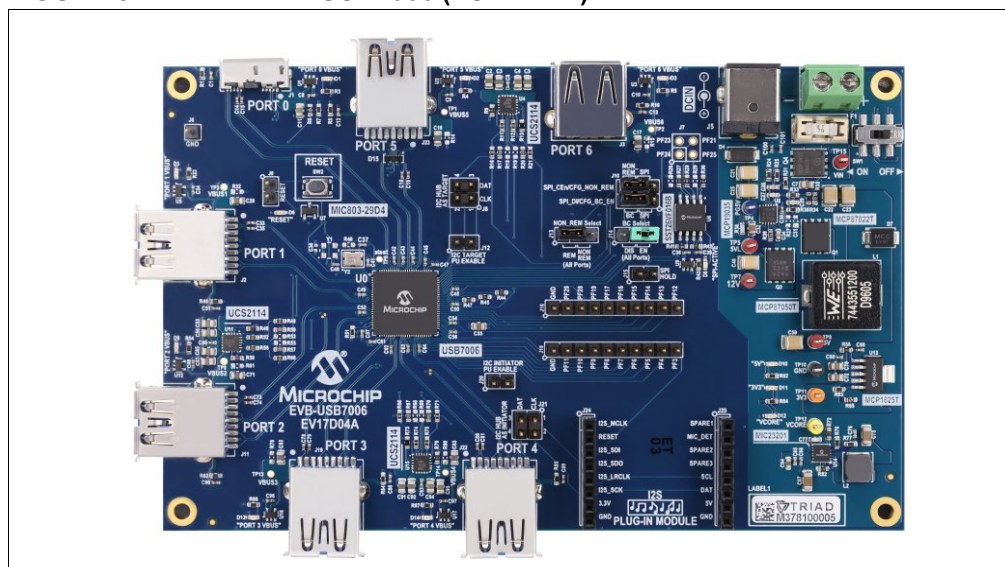

3.1.1 Configuration

3.1.1.1 EXTERNAL SPI FLASH

Upon power-up, the USB7006 first looks for an external SPI ROM device and a valid signature in the Flash. If one is found, the external ROM is enabled and code execution is initiated from the external SPI ROM device.

To enable operation from the SPI device, install shunts to pins 1-2 and 4-5 of J10. When code is executing from an SPI ROM device, a blue LED “SPI-ACTIVE” (D8) illuminates.

- Note 1:** CFG_BC and CFG_Non-Rem options are deselected when SPI shunts are installed on J10. When operating in SPI mode, all configuration is handled by the code executing from the SPI ROM device.
- 2:** If the SPI Flash is not properly programmed or has an invalid signature, the USB7006 reverts to internal defaults even if the SPI ROM is selected.

3.1.1.2 SMBUS

If an SPI Flash device is not found, the firmware checks if SMBus is enabled.

To select SMBus configuration, leave J10 open to disconnect the SPI ROM. To connect the SMBus pull-up resistors, connect a shunt to J12 pins 1 and 2. The SMBus signals may be accessed at J8, where pin 1 is the clock and pin 3 is data (pin 2 is ground).

If configuration SMBus is enabled (that is, SMBus clock and data are pulled up), the USB7006 waits indefinitely for data from the SMBus interface and will not enumerate to the USB host until the special USB Attach command is sent.

3.1.1.3 INTERNAL DEFAULT CONFIGURATIONS WITH STRAPPING OPTIONS

When the USB7006 does not detect a valid SPI Flash image and does not look for SMBus configuration upon power-up, the USB7006 uses internal default register settings. It also sets the Vendor ID, Product ID, Language ID, and Device ID, and additional settings from the internal ROM code.

If configuration is not done through SPI or SMBus, additional configuration is available through two functions: CFG_BC_EN and CFG_NON-REM. The controls are configured by selecting one of the six resistor values for each pin. The EVB-USB7006 demonstrates two of the six possible resistor values for each of CFG_BC_EN and CFG_NON-REM. These straps are sensed by the USB7006 device at power-on to determine the resultant configuration of the device.

To select the CFG_BC_EN and CFG_NON-REM modes, shunts must be connected to J10, J13, and J14 headers.

To use the battery charging strap options, connect a shunt to pins 2-3 of J10 and connect a shunt to J14 according to [Table 3-1](#). For the NON_REM strap options, connect a shunt to pins 5-6 of J10 and connect a shunt to J13 according to [Table 3-2](#).

TABLE 3-1: BATTERY CHARGING OPTIONS (CFG_BC_EN – J14)

J14 Shunt Position	(J10 is shunted pins 2 and 3.)
2-3	All ports are BC 1.2-disabled.
1-2	All downstream ports are BC1.2-enabled.

TABLE 3-2: NON-REMOVABLE PORT OPTIONS (CFG_NON-REM – J13)

J13 Shunt Position	(J10 is shunted pins 5 and 6.)
1-2	All ports are non-removable.
2-3	All ports are removable.

3.1.2 Power Source - Self Powered

The EVB-USB7006 only supports self-powered operation. Power is supplied through one +12.0V regulated external power supply. The power supply is connected to the 2.5 mm connector J5 on the board. Alternatively, an external voltage can be supplied to the screw terminal “12V” (J4). The +12.0V feeds a 15A regulator that outputs +5.2V (nominal) across the board and also supplies the +3.3V regulator and the 1.2V regulator.

CAUTION

The supplied 12.0V external power supply cannot support simultaneous battery charging on all downstream ports. Use a higher power supply if the required test use case exceeds the power capability of the supply. Failure to heed to this warning could result in damage to the 12.0V external power supply.

3.1.3 Downstream Port Power Control

USB power to the six downstream ports is controlled via port power controllers with auto-discharge functionality. All downstream ports support BC 1.2 battery charging.

The five downstream USB 3.2 ports and additional USB 2 port are each capable of up to 3A of current at 5V.

3.1.4 LED Indicators

Table 3-3 describes the LED indicators on the EVB-USB7006.

TABLE 3-3: EVB-USB7006 LED INDICATOR DESCRIPTIONS

Ref. Des.	Label	Description
D8	"SPI-ACTIVE"	Indicates SPI Flash Memory activity
D6	"RESET"	The RST_N signal is asserted.
D1	"Upstream VBUS"	Illuminates when 5V to upstream PORT0 VBUS is present
D5	"PORT 1 VBUS"	Illuminates when 5V to upstream PORT1 VBUS is present
D9	"PORT 2 VBUS"	Illuminates when 5V to upstream PORT2 VBUS is present
D13	"PORT 3 VBUS"	Illuminates when 5V to upstream PORT3 VBUS is present
D14	"PORT 4 VBUS"	Illuminates when 5V to upstream PORT4 VBUS is present
D2	"PORT 5 VBUS"	Illuminates when 5V to upstream PORT5 VBUS is present
D3	"PORT 6 VBUS"	Illuminates when 5V to upstream PORT6 VBUS is present
D10	"5V"	Illuminates when 5V is present from the 5V voltage regulator
D11	"3V3"	Illuminates when 3.3V is present from the 3.3V voltage regulator
D12	"VCORE"	Illuminates when 1.2V (VCORE) is present from the 1.2V regulator

3.1.5 Switches

Table 3-4 describes the switches on the EVB-USB7006.

TABLE 3-4: EVB-USB7006 SWITCH DESCRIPTIONS

Ref. Des.	Label	Description
SW2	"RESET"	Momentary push-button switch to assert RST_N
SW1	"ON/OFF"	Connects or disconnects the 12 VDC supply

3.1.6 Connector Descriptions

Table 3-5 describes the connectors included on the PCB.

TABLE 3-5: EVB-USB7006 CONNECTOR DESCRIPTIONS

Ref. Des.	Type	Label	Description
J6	Barrel Jack	"12VDC"	12 VDC supply connection (center pin positive)
J4	2-pin terminal block	—	Alternative 12 VDC supply connection. Pin 1 is positive.
J1	USB Type-B Connector	"PORT0"	Upstream Type-A connection
J2	USB Type-A Connector	"PORT1"	Downstream Port 1 USB connection
J11	USB Type-A Connector	"PORT2"	Downstream Port 2 USB connection
J19	USB2 Type-A Connector	"PORT3"	Downstream Port 3 USB connection
J22	USB2 Type-A Connector	"PORT4"	Downstream Port 4 USB connection
J23	USB Type-A Connector	"PORT5"	Downstream Port 5 USB connection
J3	USB Type-A Connector	"PORT6"	Downstream Port 6 USB connection
J15	1x2 Header	"HOLD"	When shunted, disables the SPI memory
J10	2x3 Header	"SPI_DI/CFG_BC_EN" "SPI_CEn/CFG_NON_REM"	Selects between SPI memory capability and BC/NON_REM capability. For SPI, connect pins 2 and 3 as well as 5 and 6. For BC, connect pins 4 and 5. For NON_REM, connect pins 1 and 2.
J9	2x1 Header	"Ext.Reset"	Connection for an external Reset switch
J7	2x2 Header	PF24 PF23 PF25 PF21	SPI data pins provided for debugging SPI memory
J6	1x1 Header	"GND"	Circuit Ground
J18	1x10 Header	—	PF3 to PF11
J16	1x10 Header	—	PF12 to PF29
J11	USB Type-A Connector	"PORT1"	Downstream Type-C Gen1 Port 1 USB connection
J20	1x2 Header	"PU"	Pull-up resistors, I2C

TABLE 3-5: EVB-USB7006 CONNECTOR DESCRIPTIONS (CONTINUED)

Ref. Des.	Type	Label	Description
J14	1x3 Header	"BC SELECT"	See Table 3-1 .
J7	2x2 Header	—	Debug Header
J13	1x3 Header	"NON_REM_SELECT"	See Table 3-2 .
J24	1x8 Header	—	Audio Codec Socket
J25	1x8 Header	—	Audio Codec Socket

3.1.7 Test Points

[Table 3-6](#) describes the test points on the EVB-USB7006. A header may be permanently installed on the through-hole test points if needed.

TABLE 3-6: EVB-USB7006 TEST POINT DESCRIPTIONS

Ref. Des.	Type	Description
TP1	Test Pad	VBUS Port 5
TP2	Test Pad	VBUS Port 6
TP3	Test Pad	VBUS Port 1
TP4	Test Pad	PG5V
TP5	Test Pad	5VL
TP6	Test Pad	ATEST
TP7	Test Loop (Red)	12V
TP8	Test Pad	5V
TP9	Test Pad	VBUS Port 2
TP10	Test Loop (Black)	Circuit Ground
TP11	Test Loop (Orange)	3.3V
TP12	Test Loop (Yellow)	VCORE (1.2V)
TP13	Test Pad	VBUS Port 3
TP14	Test Pad	VBUS Port 4
TP15	Test Loop (Red)	VIN


NOTES:

Appendix A. Schematics

A.1 INTRODUCTION

This appendix shows the EVB-USB7006 Evaluation Kit schematics.

FIGURE A-1: EVB-USB7006 TABLE OF CONTENTS

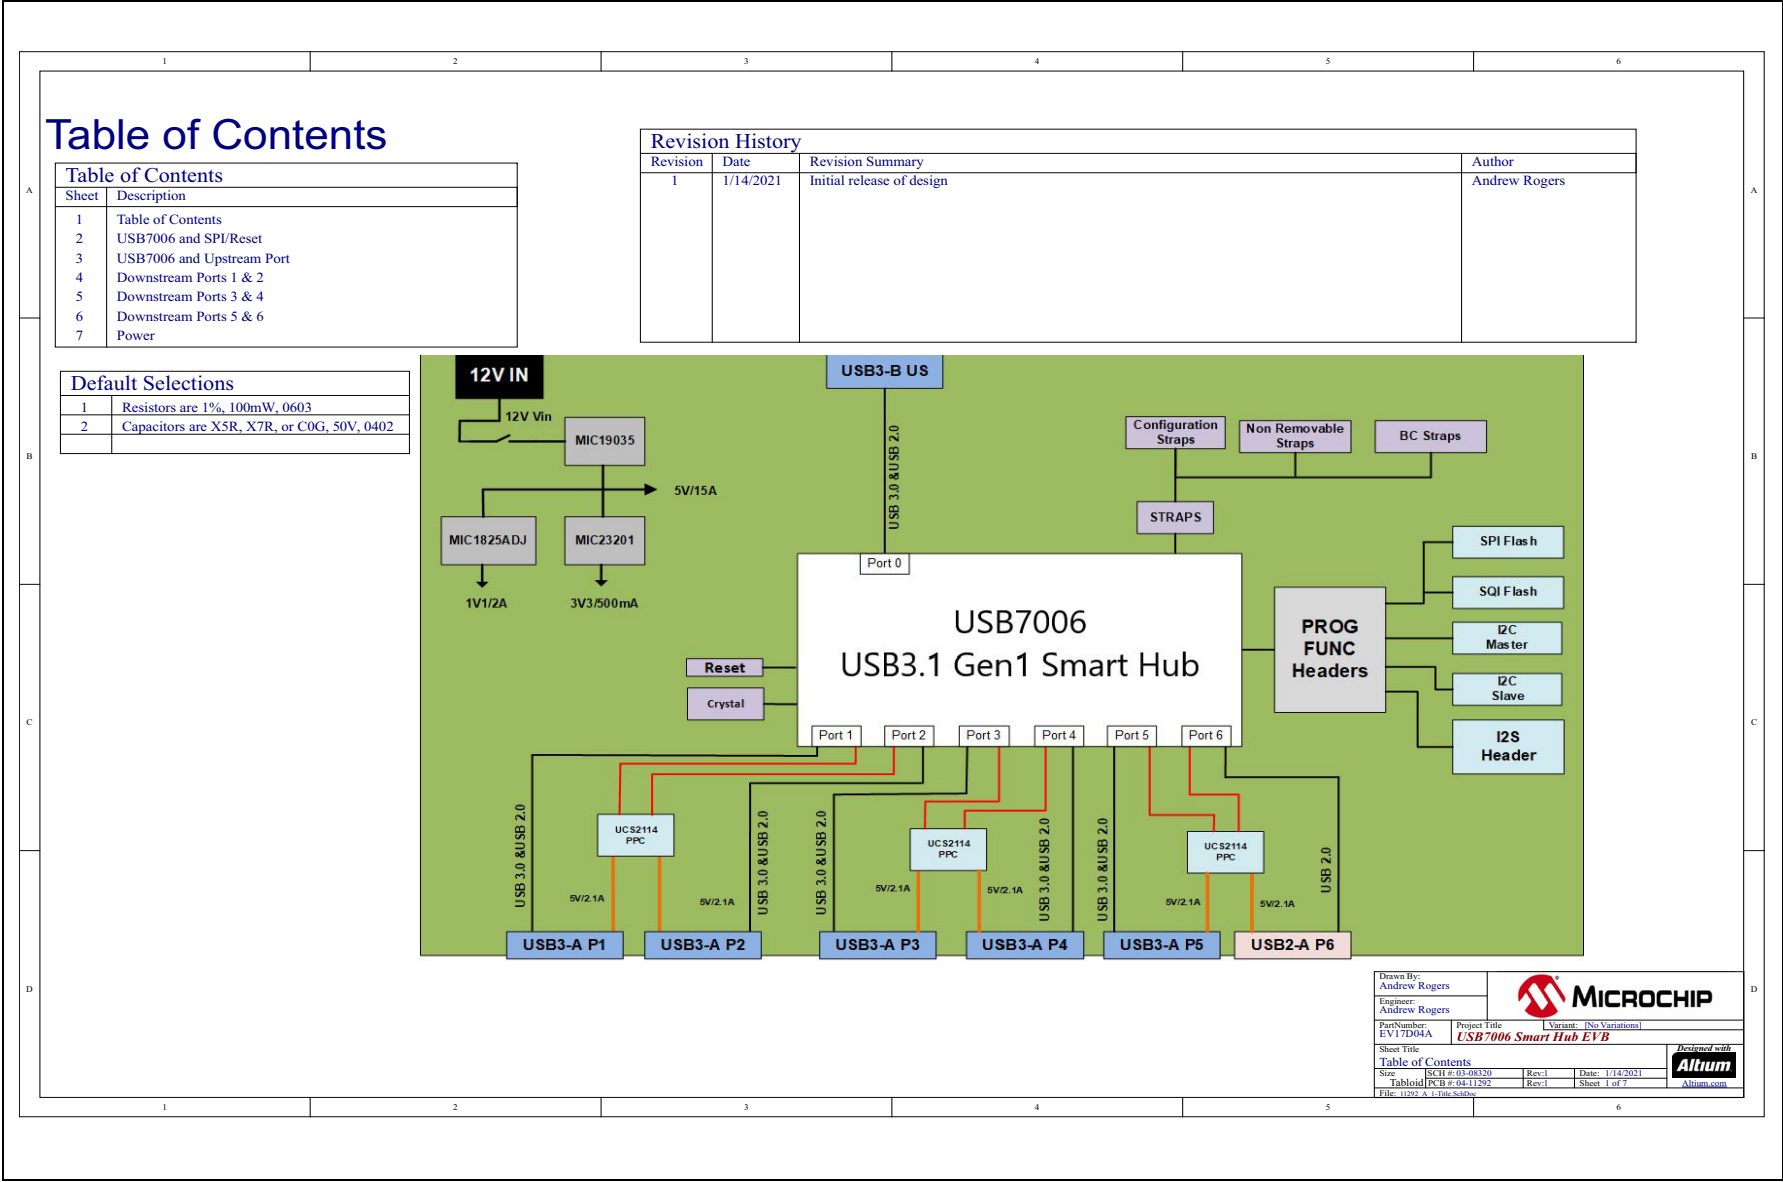

USB7006 and SPI/Reset

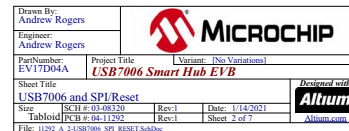


FIGURE A-3: EVB-USB7006 USB UPSTREAM AND AUDIO CODEC INTERFACE



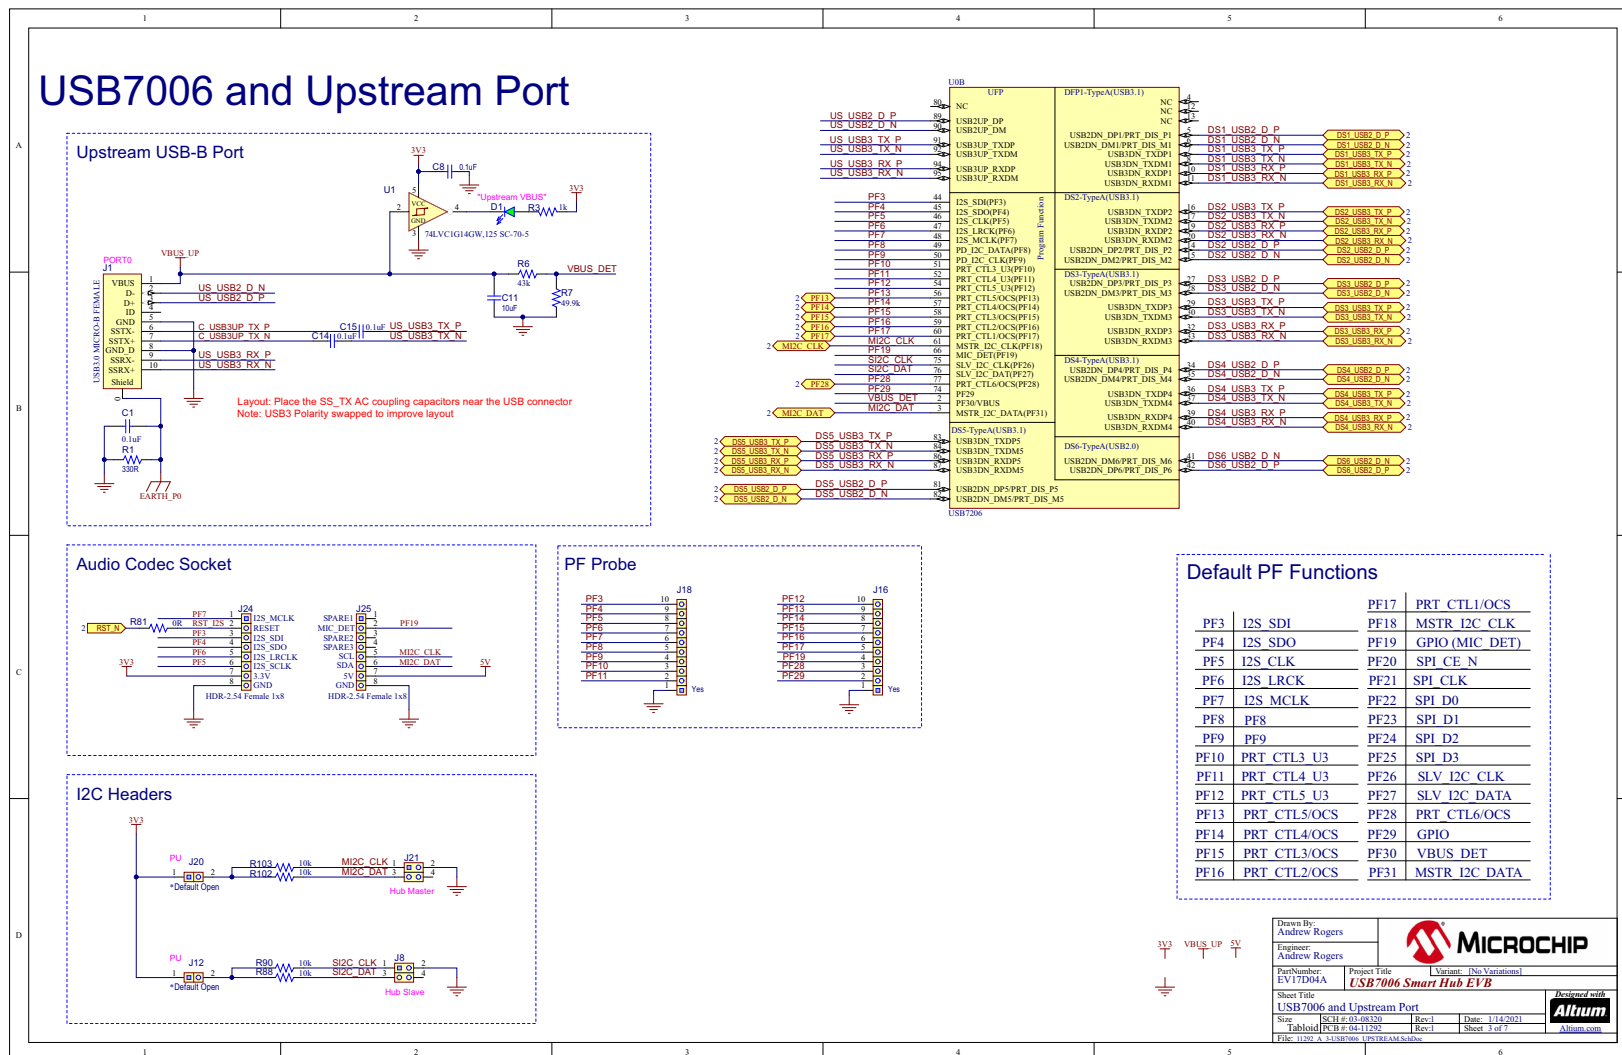


FIGURE A-4: EVB-USB7006 USB DOWNSTREAM PORTS 1 & 2 AND POWER SWITCH

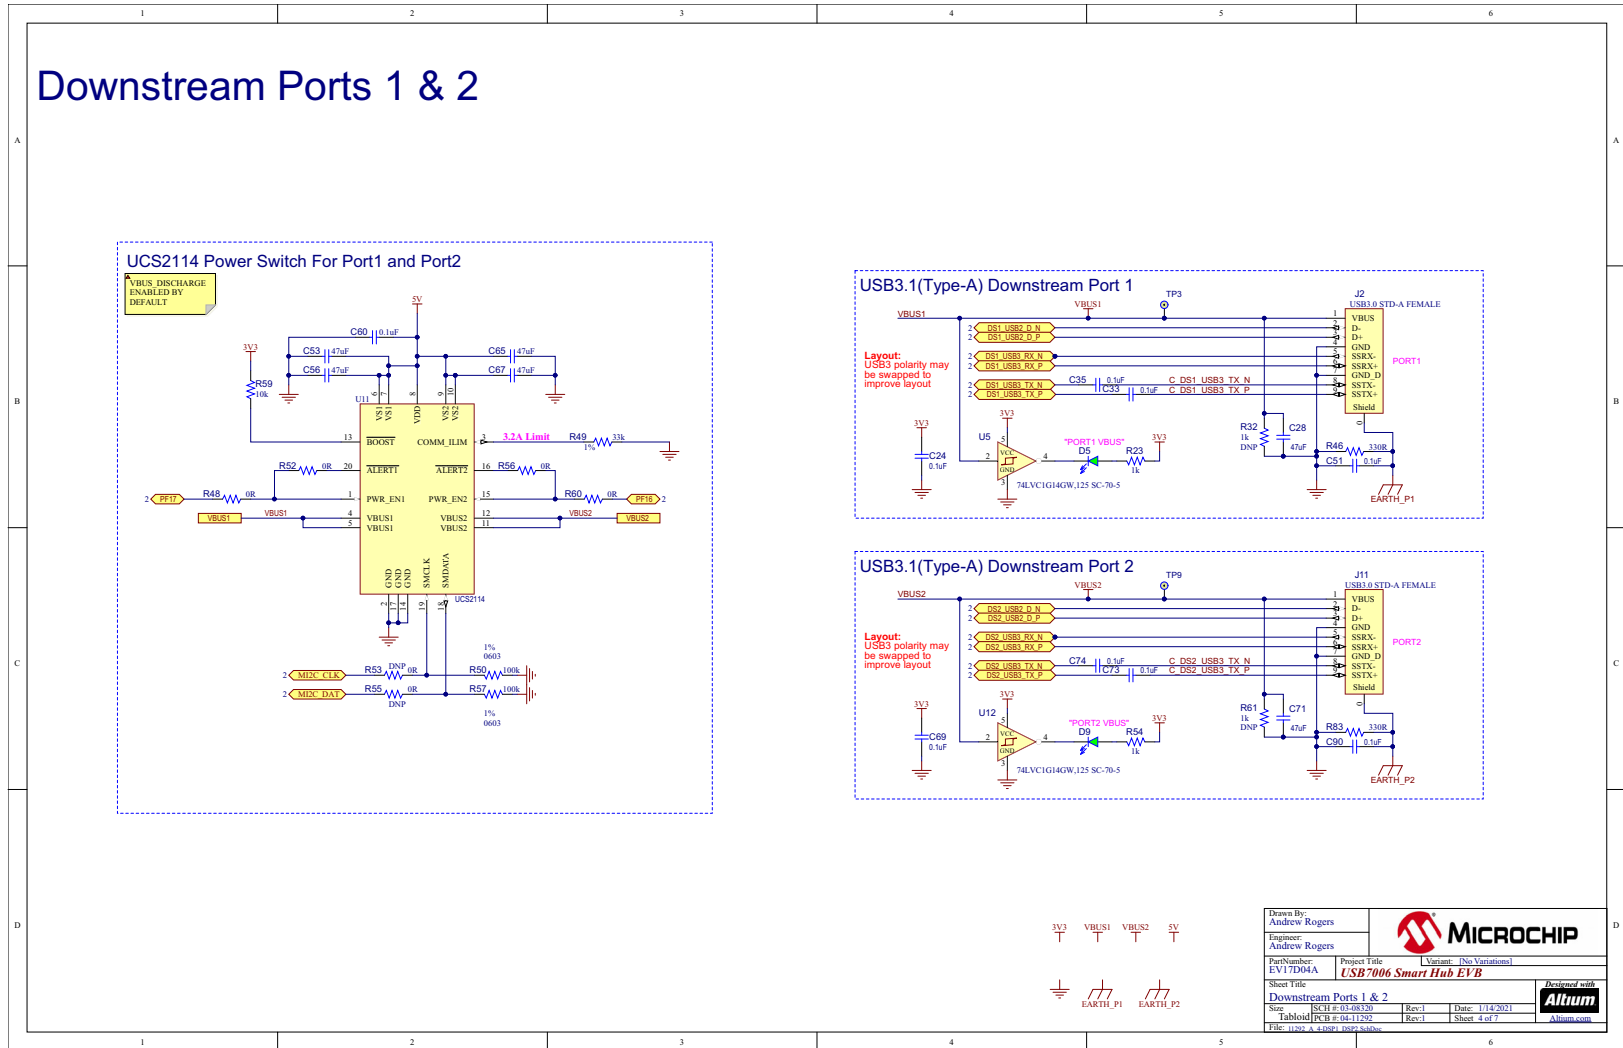


Downstream Ports 3 & 4

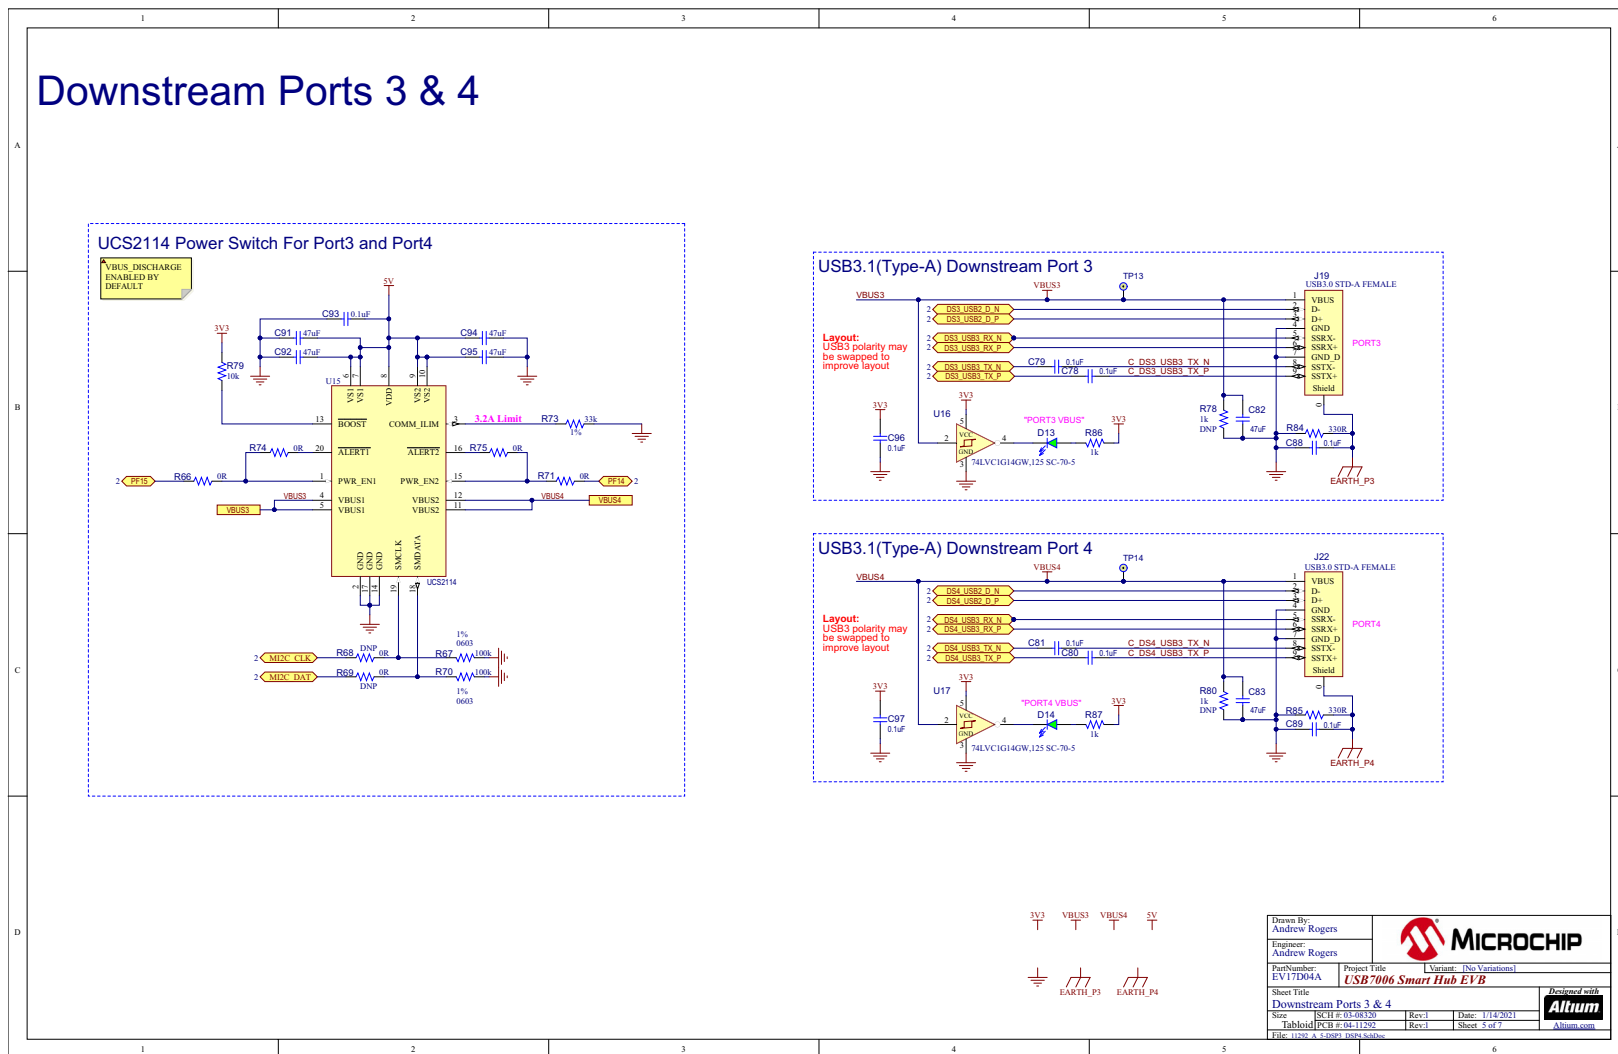

Downstream Ports 5 & 6



FIGURE A-7: EVB-USB7006 VOLTAGE REGULATORS

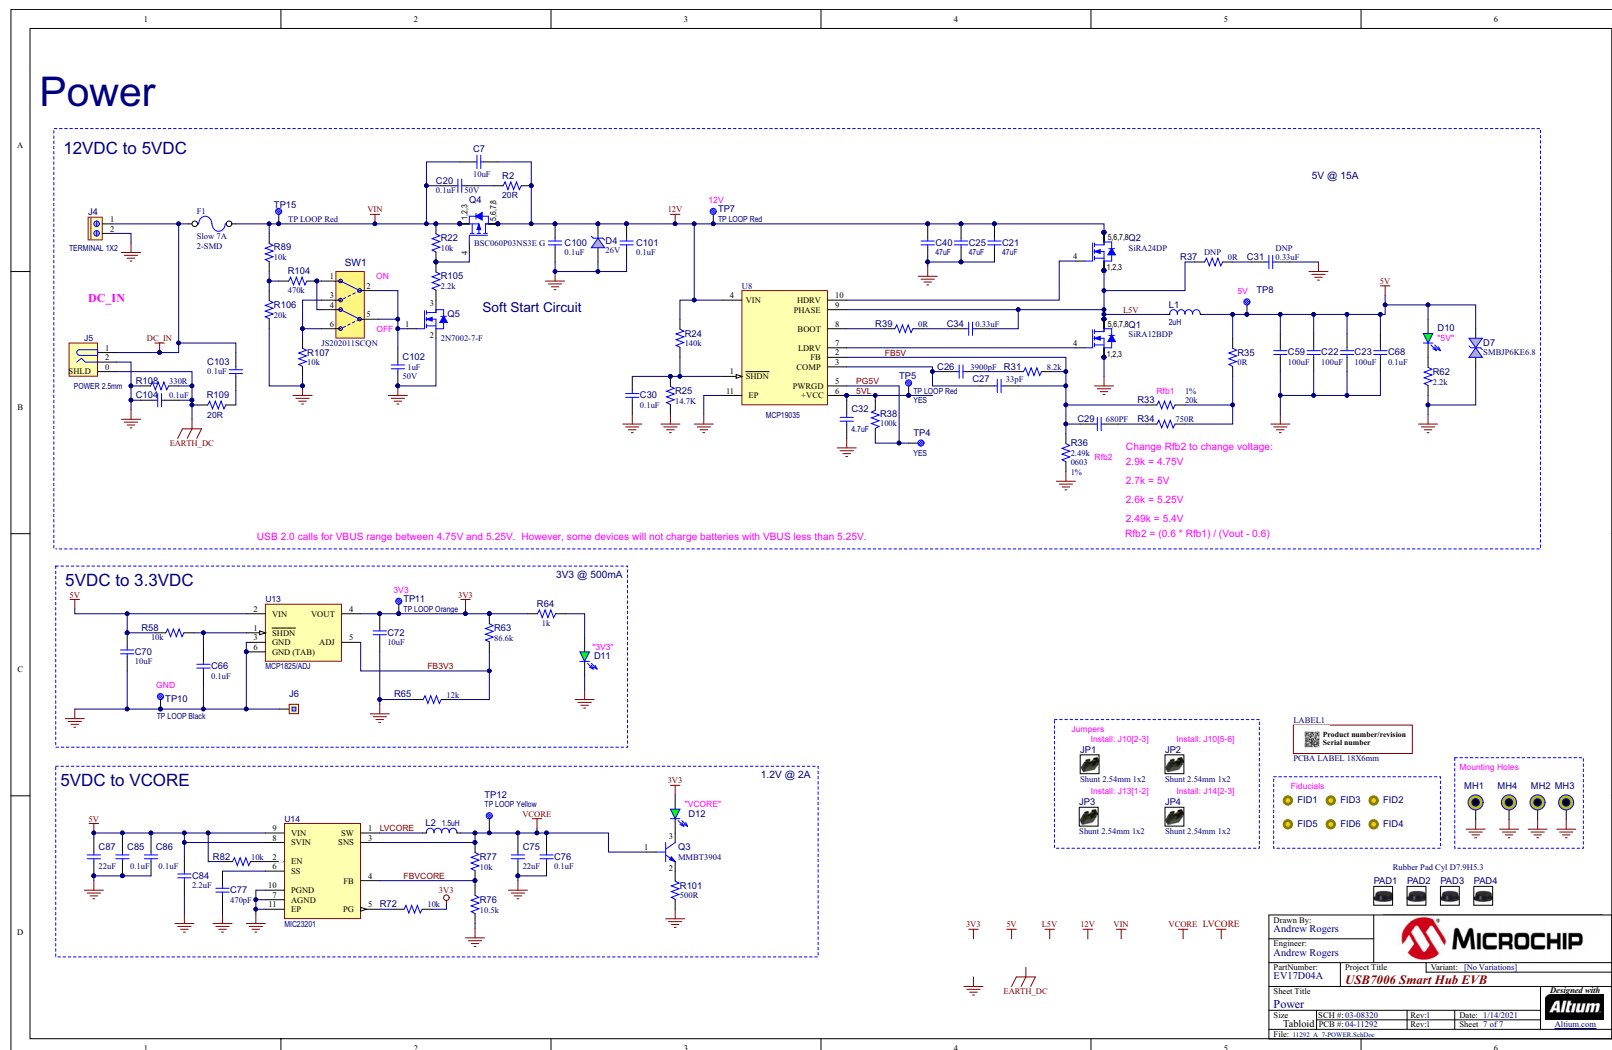

Appendix B. Bill of Materials

B.1 INTRODUCTION

This appendix contains the EVB-USB7006 Evaluation Board Bill of Materials (BOM).

TABLE B-1: BILL OF MATERIALS

Item	Qty	Reference	Description	Populated	Manufacturer	Manufacturer Part Number
1	35	C1, C6, C14, C15, C30, C38, C39, C41, C42, C43, C44, C45, C47, C48, C49, C50, C52, C54, C57, C58, C60, C61, C62, C63, C64, C66, C68, C76, C85, C86, C93, C98, C99, C103, C104	CAP CER 0.1 μ F 16V 10% X7R SMD 0402	Yes	Wurth Electronics Inc	885012205037
2	12	C2, C3, C4, C5, C53, C56, C65, C67, C91, C92, C94, C95	CAP CER 47 μ F 6.3V 20% X5R SMD 0805	Yes	Taiyo Yuden	JMK212BJ476MG-T
3	5	C7, C11, C55, C70, C72	CAP CER 10 μ F 16V 10% X5R SMD 0805	Yes	Wurth Electronics Inc	885012107014
4	23	C8, C9, C10, C12, C13, C18, C19, C24, C33, C35, C51, C69, C73, C74, C78, C79, C80, C81, C88, C89, C90, C96, C97	CAP CER 0.1 μ F 35V 10% X7R SMD 0402	Yes	TDK Corporation	CGA2B3X7R1V104K050BB
5	6	C16, C17, C28, C71, C82, C83	CAP CER 47 μ F 10V 20% X5R SMD 0805	Yes	TDK Corporation	C2012X5R1A476M125AC
6	3	C20, C100, C101	CAP CER 0.1 μ F 50V 10% X7R SMD 0402	Yes	Taiyo Yuden	UMK105B7104KV-FR
7	3	C21, C25, C40	CAP CER 47 μ F 16V 10% X5R SMD 1210	Yes	Murata Electronics North America	GRM32ER61C476KE15K
8	3	C22, C23, C59	CAP CER 100 μ F 10V 20% X5R SMD 1210	Yes	Murata Electronics North America	GRM32ER61A107ME20L
9	1	C26	CAP CER 3900 pF 50V 5% C0G SMD 0603	Yes	TDK	C1608C0G1H392J080AA
10	1	C27	CAP CER 33 pF 50V 5% C0G SMD 0603	Yes	WURTH ELEKTRONIK	885012006054
11	1	C29	CAP CER 680 pF 50V NP0 0603	Yes	KEMET	C0603C681K5GAC7867
12	1	C31	CAP CER 0.33 μ F 16V 10% X7R SMD 0603	DNP	WUERTH ELEKTRONIK	885012206049
13	1	C32	CAP CER 4.7 μ F 35V 10% X7R SMD 0805	Yes	TDK Corporation	C2012X7R1V475K125AE
14	1	C34	CAP CER 0.33 μ F 16V 10% X7R SMD 0603	Yes	WUERTH ELEKTRONIK	885012206049
15	1	C36	CAP CER 0.1 μ F 16V 10% X7R SMD 0402	DNP	Wurth Electronics Inc	885012205037
16	2	C37, C46	CAP CER 10 pF 50V 5% NP0 SMD 0402	Yes	AVX Corporation	04025A100JAT2A
17	2	C75, C87	CAP CER 22 μ F 10V 10% X7R SMD 1206	Yes	Samsung Electro-Mechanics America, Inc	CL31B226KPHNNNE
18	1	C77	CAP CER 470 pF 25V 5% NP0 SMD 0603	Yes	AVX	06033A471JAT2A
19	1	C84	CAP CER 2.2 μ F 10V 10% X7R SMD 0603	Yes	Taiyo Yuden	LMK107B7225KA-T
20	1	C102	CAP CER 1 μ F 50V 10% X5R SMD 0603	Yes	Taiyo Yuden	UMK107BJ105KA-T
21	10	D1, D2, D3, D5, D9, D10, D11, D12, D13, D14	DIO LED GREEN 2V 30 mA 3 5mcd Clear SMD 0603	Yes	Lite-On Inc	LTST-C191KGKT
22	1	D4	DIO TVS SMAJ26A 26V 400W DO-214AC_SMA	Yes	Littlefuse	SMAJ26A
23	1	D6	DIO RED 2V 20 mA 54 mcd CLEAR SMD 0603	Yes	Lite-On Inc.	LTST-C191KRKT
24	1	D7	DIO TVS SMBJP6KE6.8CA 5.8V 600W DO-214AA_SMB	Yes	Micro Commercial Co	SMBJP6KE6.8CA-TP
25	1	D8	DIO LED BLUE 2.8V 20 mA 15 mcd Clear SMD 0603	Yes	Lite-On	LTST-C193TBKT-5A
26	1	D15	DIO TVS ESD8006MUTAG 3.3V SMD UDFN-8	Yes	ON Semiconductor	ESD8006MUTAG

TABLE B-1: BILL OF MATERIALS

Item	Qty	Reference	Description	Populated	Manufacturer	Manufacturer Part Number
27	1	D16	DIO TVS ARRAY SESD7L5.0DT5G 5V AEC-Q101 SMD SOT-723	Yes	ON Semiconductor	SESD7L5.0DT5G
28	1	F1	RES FUSE 7A 72VAC 60VDC SLOW 2-SMD	Yes	Littelfuse Inc.	0154007.DRT
29	1	J1	CON USB3.0 MICRO-B FEMALE SMD R/A	Yes	Hirose Electric Co Ltd	ZX360D-B-10P(30)
30	5	J2, J11, J19, J22, J23	CON USB3.0 STD-A FEMALE TH R/A	Yes	Würth Electronics Inc.	692122030100
31	1	J3	CON USB2.0 STD-A FEMALE TH R/A	Yes	TE Connectivity AMP Connectors	292303-1
32	1	J4	CON TERMINAL 5.08 mm 1X2 Female 16-30AWG 13.5A TH RA	Yes	TE Connectivity	282836-2
33	1	J5	CON POWER 2.5 mm 5.5 mm TH R/A	Yes	CUI Inc.	PJ-063BH
34	1	J6	CON HDR-2.54 Male 1x1 Gold 5.84 MH TH VERT	Yes	TE Connectivity	5-146280-1
35	1	J7	CON HDR-2.54 Male 2x2 Gold 5.84 MH TH VERT	DNP	Samtec	TSW-102-07-G-D
36	2	J8, J21	CON HDR-2.54 Male 2x2 Gold 5.84 MH TH VERT	Yes	Samtec	TSW-102-07-G-D
37	4	J9, J12, J15, J20	CON HDR-2.54 Male 1x2 Gold 5.84 MH TH VERT	Yes	FCI	77311-118-02LF
38	1	J10	CON HDR-2.54 Male 3x2 Gold 5.84 MH TH VERT	Yes	Samtec Inc.	TSW-102-07-G-T
39	2	J13, J14	CON HDR-2.54 Male 1x3 Gold 5.84 MH TH VERT	Yes	FCI	68000-103HLF
40	2	J16, J18	CON HDR-2.54 Male 1x10 Gold 5.84 MH TH VERT	Yes	Samtec Inc.	TSW-110-07-G-S
41	2	J24, J25	CON HDR-2.54 Female 1x8 Tin TH VERT	Yes	Sullins	PPTC081LFBN-RC
42	4	JP1, JP2, JP3, JP4	MECH HW JUMPER 2.54 mm 1x2	MECH	3M	969102-0000-DA
43	1	L1	INDUCTOR 2 μ H 23A 20% SMD L12.8W12.8H6.2	Yes	Würth Electronics Inc.	7443551200
44	1	L2	INDUCTOR 1.5 μ H 3A 20% SMD L5W5H2.2	Yes	Murata Electronics North America	LQH5BPN1R5NT0L
45	1	LABEL1	LABEL PCBA 18x6 mm BarCode-AssyID-Rev-Serno	MECH		
46	4	PAD1, PAD2, PAD3, PAD4	MECH HW RUBBER PAD CYLINDRICAL D7.9 H5.3 BLACK	MECH	3M	SJ61A11
47	1	Q1	TRANS FET N-CH SiRA12BDP-T1-GE3 30V 60A 38W PPAK SO-8	Yes	Vishay Siliconix	SIRA12BDP-T1-GE3
48	1	Q2	TRANS FET N-CH SiRA24DP-T1-GE3 25V 60A 62.5W PPAK SO-8	Yes	Vishay / Siliconix	SIRA24DP-T1-GE3
49	1	Q3	TRANS BJT NPN MMBT3904 40V 200 mA 310 mW SOT-23-3	Yes	Micro Commercial Components Corporation	MMBT3904-TP
50	1	Q4	TRANS FET P-CH BSC060P03NS3E G -30V -100A 83W PG-TDSON-8	Yes	Infineon Technologies	BSC060P03NS3EGATMA1
51	1	Q5	TRANS FET N-CH 2N7002-7-F 60V 170 mA 370 mW SOT-23-3	Yes	Diodes Inc	2N7002-7-F
52	8	R1, R8, R10, R46, R83, R84, R85, R108	RES TKF 330R 1% 1/10W SMD 0603	Yes	Panasonic	ERJ-3EKF3300V
53	2	R2, R109	RES TKF 20R 1% 1/10W SMD 0603	Yes	Panasonic	ERJ-3EKF20R0V
54	10	R3, R4, R5, R23, R43, R54, R64, R86, R87, R92	RES TKF 1k 1% 1/10W SMD 0603	Yes	Panasonic	ERJ-3EKF1001V
55	1	R6	RES TKF 43k 1% 1/10W SMD 0603	Yes	Yageo	9C06031A4302FKHFT

TABLE B-1: BILL OF MATERIALS

Item	Qty	Reference	Description	Populated	Manufacturer	Manufacturer Part Number
56	1	R7	RES TKF 49.9k 1% 1/10W SMD 0603	Yes	Panasonic	ERJ-3EKF4992V
57	19	R9, R27, R30, R42, R44, R45, R47, R58, R59, R72, R79, R82, R88, R89, R90, R98, R99, R102, R103	RES TKF 10k 1% 1/10W SMD 0603	Yes	ROHM	MCR03EZPFX1002
58	15	R11, R12, R16, R21, R35, R39, R48, R52, R56, R60, R66, R71, R74, R75, R81	RES TKF 0R 1/10W SMD 0603	Yes	Panasonic	ERJ-3GSY0R00V
59	3	R13, R49, R73	RES TKF 33k 1% 1/10W AEC-Q200 SMD 0603	Yes	Vishay	CRCW060333K0FKEA
60	6	R14, R15, R32, R61, R78, R80	RES TKF 1k 1% 1/10W SMD 0603	DNP	Panasonic	ERJ-3EKF1001V
61	6	R17, R20, R50, R57, R67, R70	RES TKF 100k 1% 1/10W SMD 0603	Yes	TE Connectivity	1622827-1
62	10	R18, R19, R26, R29, R37, R40, R53, R55, R68, R69	RES TKF 0R 1/10W SMD 0603	DNP	Panasonic	ERJ-3GSY0R00V
63	3	R22, R77, R107	RES TKF 10k 1% 1/10W SMD 0603	Yes	Panasonic	ERJ-3EKF1002V
64	1	R24	RES TKF 140k 1% 1/10W SMD 0603	Yes	Panasonic	ERJ-3EKF1403V
65	1	R25	RES TKF 14.7K 1% 1/10W SMD 0603	Yes	Panasonic Electronic Components	ERJ-3EKF1472V
66	3	R28, R41, R91	RES TKF 100k 1% 1/10W SMD 0603	Yes	Vishay Dale	CRCW0603100KFKEA
67	1	R31	RES TKF 8.2k 1% 1/10W SMD 0603	Yes	Panasonic	ERJ-3EKF8201V
68	2	R33, R106	RES TKF 20k 1% 1/10W SMD 0603	Yes	Panasonic	ERJ-3EKF2002V
69	1	R34	RES TKF 750R 1% 1/10W SMD 0603	Yes	Vishay	CRCW0603750RFKEA
70	1	R36	RES TKF 2.49k 1% 1/10W SMD 0603	Yes	Panasonic	ERJ-3EKF2491V
71	1	R38	RES TF 100k 1% 1/8W SMD 0603	Yes	Vishay	MCT06030C1003FP500
72	4	R51, R94, R96, R100	RES TKF 200k 1% 1/10W SMD 0603	Yes	Panasonic	ERJ-3EKF2003V
73	2	R62, R105	RES TKF 2.2k 1% 1/10W SMD 0603	Yes	Panasonic	ERJ-3EKF2201V
74	1	R63	RES TKF 86.6k 1% 1/10W SMD 0603	Yes	Panasonic Electronic Components	ERJ-3EKF8662V
75	2	R65, R97	RES TKF 12k 1% 1/10W SMD 0603	Yes	Yageo	RC0603FR-0712KL
76	1	R76	RES TF 10.5k 0.1% 1/10W SMD 0603 AEC-Q200	Yes	Panasonic Electronic Components	ERA-3AEB1052V
77	2	R93, R95	RES TKF 10R 1% 1/10W SMD 0603	Yes	Panasonic	ERJ-3EKF10R0V
78	1	R101	RES TKF 500R 5% 1/10W SMD 0603	Yes	Vishay Dale	TNPU0603500RAZEN00
79	1	R104	RES TKF 470k 1% 1/10W SMD 0603	Yes	Vishay	CRCW0603470KFKEA
80	1	SW1	SWITCH SLIDE DPDT 6V 300 mA JS202011SCQN SMD	Yes	C&K	JS202011SCQN
81	1	SW2	SWITCH TACT SPST 16V 50 mA PTS810 SJM 250 SMTR LFS SMD	Yes	C&K Components	PTS810 SJM 250 SMTR LFS
82	1	TP4	CON TP LOOP BLUE Ag TH	Yes	Keystone Electronics	5117
83	4	TP5, TP7, TP8, TP15	MISC, TEST POINT MULTI PURPOSE MINI RED	Yes	Keystone	5000
84	1	TP10	MISC, TEST POINT MULTI PURPOSE MINI BLACK	Yes	Keystone	5001
85	1	TP11	CON TP LOOP Orange TH	Yes	Keystone Electronics	5003

TABLE B-1: BILL OF MATERIALS

Item	Qty	Reference	Description	Populated	Manufacturer	Manufacturer Part Number
86	1	TP12	MISC, TEST POINT PC MINI, 0.040" D YELLOW	Yes	Keystone	5004
87	1	U0	MCHP INTERFACE USB HUB USB7206 VQFN100	Yes	Microchip Technology Inc	USB7206
88	9	U1, U2, U3, U5, U9, U12, U16, U17, U18	74LVC1G14GW,125 SCHMITT-TRG INVERTER	Yes	NXP	74LVC1G14GW,125
89	3	U4, U11, U15	MCHP INTERFACE USB Power Controller UCS2114 QFN-20	Yes	Microchip Technology	UCS2114-1-V/LX
90	1	U6	MCHP MEMORY SERIAL FLASH 16M 104 MHz SST26VF016B-104I/SM SOIJ-8	Yes	Microchip Technology	SST26VF016B-104I/SM
91	1	U7	MCHP ANALOG SUPERVISOR 2.93V MIC803-29D4VM3-TR SOT-23-3	Yes	Microchip Technology	MIC803-29D4VM3-TR
92	1	U8	MCHP ANALOG PWM CONTROLLER 600 kHz MCP19035-BAABE/MF DFN-10	Yes	Microchip Technology	MCP19035-BAABE/MF
93	1	U13	MCHP ANALOG LDO ADJ MCP1825T-ADJE/DC SOT-223-5	Yes	Microchip	MCP1825T-ADJE/DC
94	1	U14	MCHP ANALOG SWITCHER Buck 0.95V to 3.6V 2A MIC23201YML-TR MLF-10	Yes	Microchip Technology	MIC23201YML-TR
95	1	Y1	MCHP CLOCK OSCILLATOR SINGLE 25 MHz DSC1001CI2-025.0000T CDFN-4	DNP	Microchip Technology	DSC1001CI2-025.0000T
96	1	Y2	MCHP CRYSTAL 25 MHz 10 pF SMD L3.2W2.5H0.8	Yes	Microchip Technology	VXM7-9013-25M0000000

NOTES:

Appendix C. PCB Silk Screens

C.1 INTRODUCTION

This appendix shows the top and bottom silk screen images of the EVB-USB7006 PCB.

FIGURE C-1: EVB-USB7006 TOP SILK SCREEN IMAGE


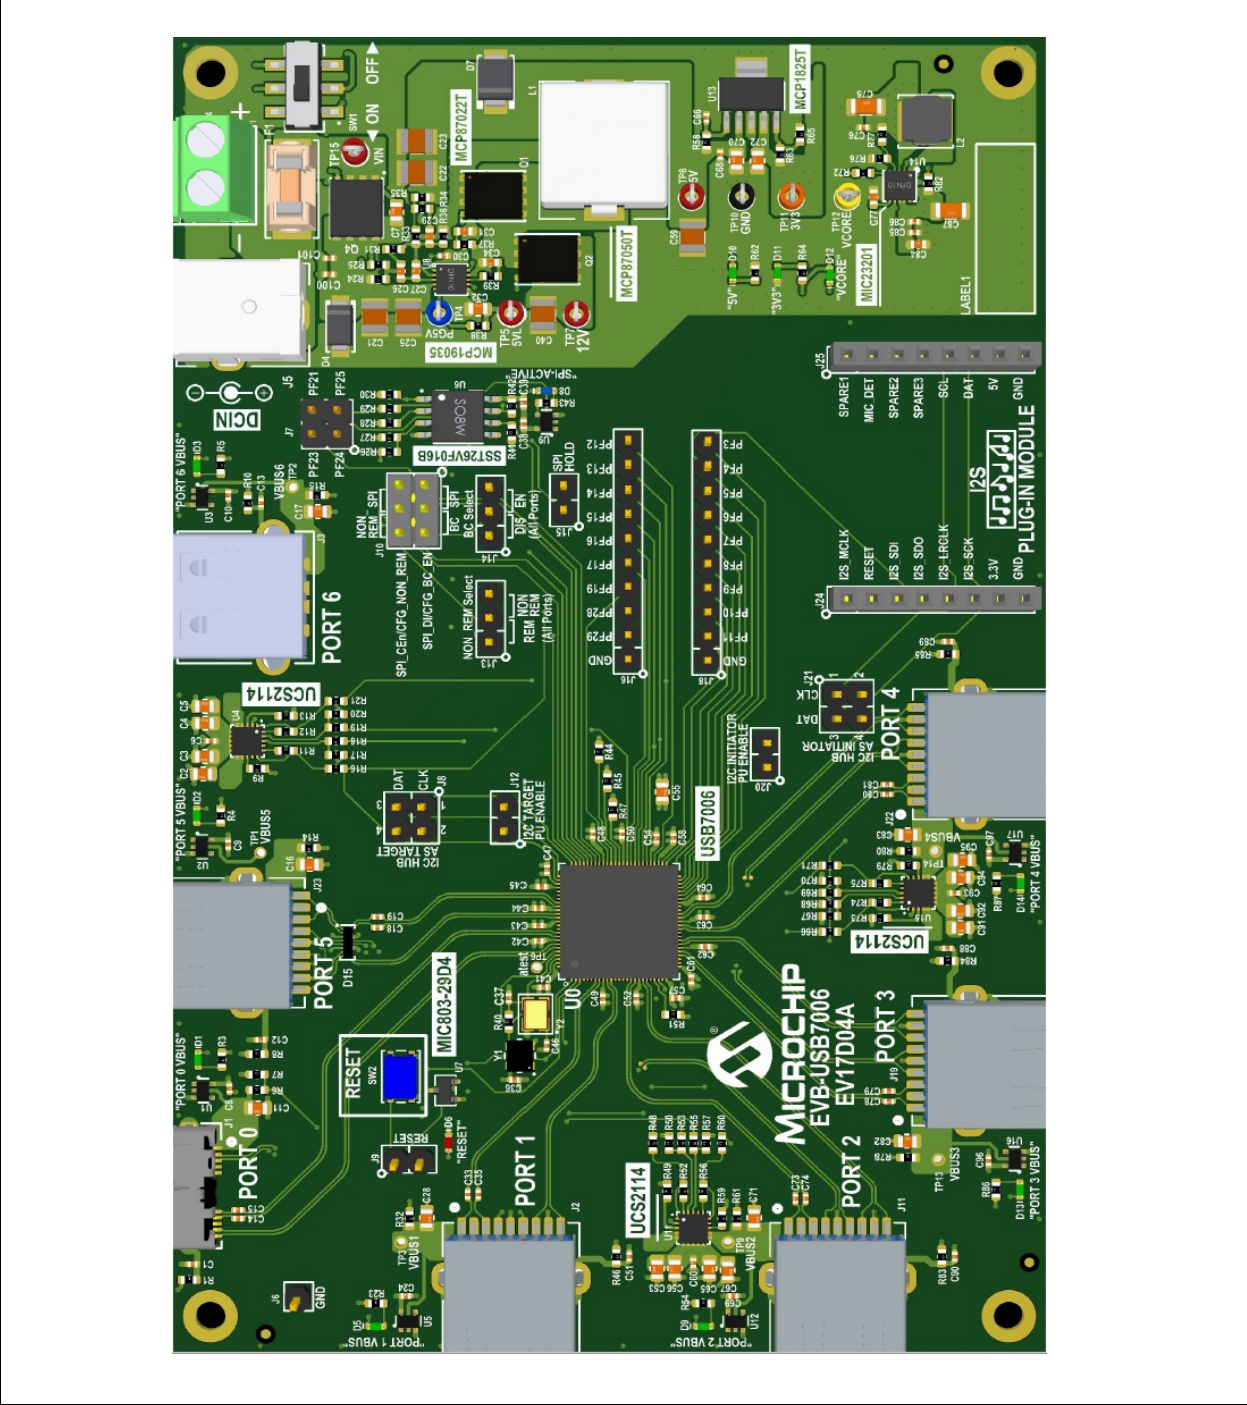


FIGURE C-2: EVB-USB7006 BOTTOM SILK SCREEN IMAGE

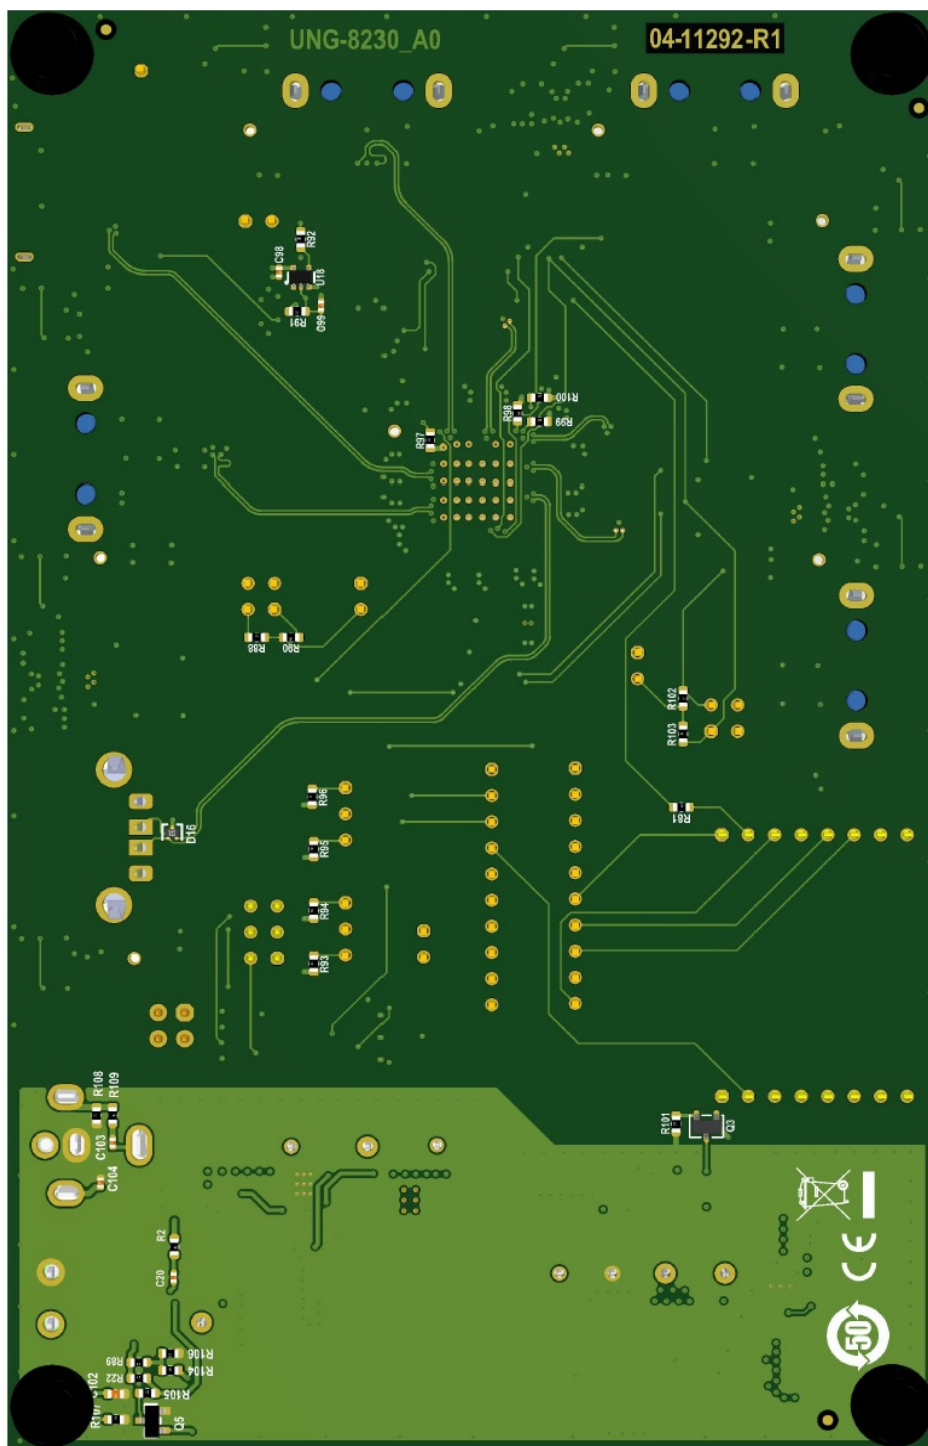

Worldwide Sales and Service

AMERICAS

Corporate Office
2355 West Chandler Blvd.
Chandler, AZ 85224-6199
Tel: 480-792-7200
Fax: 480-792-7277
Technical Support:
<http://www.microchip.com/support>
Web Address:
www.microchip.com

Atlanta
Duluth, GA
Tel: 678-957-9614
Fax: 678-957-1455

Austin, TX
Tel: 512-257-3370

Boston
Westborough, MA
Tel: 774-760-0087
Fax: 774-760-0088

Chicago
Itasca, IL
Tel: 630-285-0071
Fax: 630-285-0075

Dallas
Addison, TX
Tel: 972-818-7423
Fax: 972-818-2924

Detroit
Novi, MI
Tel: 248-848-4000

Houston, TX
Tel: 281-894-5983

Indianapolis
Noblesville, IN
Tel: 317-773-8323
Fax: 317-773-5453
Tel: 317-536-2380

Los Angeles
Mission Viejo, CA
Tel: 949-462-9523
Fax: 949-462-9608
Tel: 951-273-7800

Raleigh, NC
Tel: 919-844-7510

New York, NY
Tel: 631-435-6000

San Jose, CA
Tel: 408-735-9110
Tel: 408-436-4270

Canada - Toronto
Tel: 905-695-1980
Fax: 905-695-2078

ASIA/PACIFIC

Australia - Sydney
Tel: 61-2-9868-6733

China - Beijing
Tel: 86-10-8569-7000

China - Chengdu
Tel: 86-28-8665-5511

China - Chongqing
Tel: 86-23-8980-9588

China - Dongguan
Tel: 86-769-8702-9880

China - Guangzhou
Tel: 86-20-8755-8029

China - Hangzhou
Tel: 86-571-8792-8115

China - Hong Kong SAR
Tel: 852-2943-5100

China - Nanjing
Tel: 86-25-8473-2460

China - Qingdao
Tel: 86-532-8502-7355

China - Shanghai
Tel: 86-21-3326-8000

China - Shenyang
Tel: 86-24-2334-2829

China - Shenzhen
Tel: 86-755-8864-2200

China - Suzhou
Tel: 86-186-6233-1526

China - Wuhan
Tel: 86-27-5980-5300

China - Xian
Tel: 86-29-8833-7252

China - Xiamen
Tel: 86-592-2388138

China - Zhuhai
Tel: 86-756-3210040

ASIA/PACIFIC

India - Bangalore
Tel: 91-80-3090-4444

India - New Delhi
Tel: 91-11-4160-8631

India - Pune
Tel: 91-20-4121-0141

Japan - Osaka
Tel: 81-6-6152-7160

Japan - Tokyo
Tel: 81-3-6880-3770

Korea - Daegu
Tel: 82-53-744-4301

Korea - Seoul
Tel: 82-2-554-7200

Malaysia - Kuala Lumpur
Tel: 60-3-7651-7906

Malaysia - Penang
Tel: 60-4-227-8870

Philippines - Manila
Tel: 63-2-634-9065

Singapore
Tel: 65-6334-8870

Taiwan - Hsin Chu
Tel: 886-3-577-8366

Taiwan - Kaohsiung
Tel: 886-7-213-7830

Taiwan - Taipei
Tel: 886-2-2508-8600

Thailand - Bangkok
Tel: 66-2-694-1351

Vietnam - Ho Chi Minh
Tel: 84-28-5448-2100

EUROPE

Austria - Wels
Tel: 43-7242-2244-39
Fax: 43-7242-2244-393

Denmark - Copenhagen
Tel: 45-4485-5910
Fax: 45-4485-2829

Finland - Espoo
Tel: 358-9-4520-820

France - Paris
Tel: 33-1-69-53-63-20
Fax: 33-1-69-30-90-79

Germany - Garching
Tel: 49-8931-9700

Germany - Haan
Tel: 49-2129-3766400

Germany - Heilbronn
Tel: 49-7131-72400

Germany - Karlsruhe
Tel: 49-721-625370

Germany - Munich
Tel: 49-89-627-144-0
Fax: 49-89-627-144-44

Germany - Rosenheim
Tel: 49-8031-354-560

Israel - Ra'anana
Tel: 972-9-744-7705

Italy - Milan
Tel: 39-0331-742611
Fax: 39-0331-466781

Italy - Padova
Tel: 39-049-7625286

Netherlands - Drunen
Tel: 31-416-690399
Fax: 31-416-690340

Norway - Trondheim
Tel: 47-7288-4388

Poland - Warsaw
Tel: 48-22-3325737

Romania - Bucharest
Tel: 40-21-407-87-50

Spain - Madrid
Tel: 34-91-708-08-90
Fax: 34-91-708-08-91

Sweden - Gothenberg
Tel: 46-31-704-60-40

Sweden - Stockholm
Tel: 46-8-5090-4654

UK - Wokingham
Tel: 44-118-921-5800
Fax: 44-118-921-5820