

# TO220-5 / TO263-5 Voltage Regulator Evaluation Board User's Guide

### Note the following details of the code protection feature on Microchip devices:

- Microchip products meet the specification contained in their particular Microchip Data Sheet.
- Microchip believes that its family of products is one of the most secure families of its kind on the market today, when used in the intended manner and under normal conditions.
- There are dishonest and possibly illegal methods used to breach the code protection feature. All of these methods, to our knowledge, require using the Microchip products in a manner outside the operating specifications contained in Microchip's Data Sheets. Most likely, the person doing so is engaged in theft of intellectual property.
- Microchip is willing to work with the customer who is concerned about the integrity of their code.
- Neither Microchip nor any other semiconductor manufacturer can guarantee the security of their code. Code protection does not mean that we are guaranteeing the product as "unbreakable."

Code protection is constantly evolving. We at Microchip are committed to continuously improving the code protection features of our products. Attempts to break Microchip's code protection feature may be a violation of the Digital Millennium Copyright Act. If such acts allow unauthorized access to your software or other copyrighted work, you may have a right to sue for relief under that Act.

Information contained in this publication regarding device applications and the like is provided only for your convenience and may be superseded by updates. It is your responsibility to ensure that your application meets with your specifications. MICROCHIP MAKES NO REPRESENTATIONS WARRANTIES OF ANY KIND WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, STATUTORY OR OTHERWISE, RELATED TO THE INFORMATION, INCLUDING BUT NOT LIMITED TO ITS CONDITION. QUALITY, PERFORMANCE, MERCHANTABILITY FITNESS FOR PURPOSE. Microchip disclaims all liability arising from this information and its use. Use of Microchip devices in life support and/or safety applications is entirely at the buyer's risk, and the buyer agrees to defend, indemnify and hold harmless Microchip from any and all damages, claims, suits, or expenses resulting from such use. No licenses are conveyed, implicitly or otherwise, under any Microchip intellectual property rights.

### **Trademarks**

The Microchip name and logo, the Microchip logo, Accuron, dsPIC, KEELOQ, KEELOQ logo, MPLAB, PIC, PICmicro, PICSTART, rfPIC, SmartShunt and UNI/O are registered trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

FilterLab, Linear Active Thermistor, MXDEV, MXLAB, SEEVAL, SmartSensor and The Embedded Control Solutions Company are registered trademarks of Microchip Technology Incorporated in the U.S.A.

Analog-for-the-Digital Age, Application Maestro, CodeGuard, dsPICDEM, dsPICDEM.net, dsPICworks, dsSPEAK, ECAN, ECONOMONITOR, FanSense, In-Circuit Serial Programming, ICSP, ICEPIC, Mindi, MiWi, MPASM, MPLAB Certified logo, MPLIB, MPLINK, mTouch, nanoWatt XLP, PICkit, PICDEM, PICDEM.net, PICtail, PIC<sup>32</sup> logo, PowerCal, PowerInfo, PowerMate, PowerTool, REAL ICE, rfLAB, Select Mode, Total Endurance, TSHARC, WiperLock and ZENA are trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

SQTP is a service mark of Microchip Technology Incorporated in the U.S.A.

All other trademarks mentioned herein are property of their respective companies.

© 2009, Microchip Technology Incorporated, Printed in the U.S.A., All Rights Reserved.

Printed on recycled paper.

QUALITY MANAGEMENT SYSTEM

CERTIFIED BY DNV

ISO/TS 16949:2002

Microchip received ISO/TS-16949:2002 certification for its worldwide headquarters, design and wafer fabrication facilities in Chandler and Tempe, Arizona; Gresham, Oregon and design centers in California and India. The Company's quality system processes and procedures are for its PIC® MCUs and dsPIC® DSCs, KEELOQ® code hopping devices, Serial EEPROMs, microperipherals, nonvolatile memory and analog products. In addition, Microchip's quality system for the design and manufacture of development systems is ISO 9001:2000 certified.



## **Table of Contents**

reface	7
Introduction	
Document Layout	7
Conventions Used in this Guide	
Recommended Reading	9
The Microchip Web Site	
Customer Support	
Document Revision History	
hapter 1. Product Overview	
1.1 Introduction	11
1.2 What is the TO220-5 / TO263-5 Voltage Regulator Evaluation Board? .	11
1.3 What the TO220-5 / TO263-5 Voltage Regulator Evaluation Board kit includes.	12
hapter 2. Installation and Operation	
2.1 Introduction	13
2.2 Features	13
2.3 Getting Started	13
ppendix A. Schematic and Layouts	
A.1 Introduction	15
A.2 Board - Schematic	16
A.3 Board - Top Silkscreen	17
A.4 Board - Top Solder	18
A.5 Board - Bottom Solder	19
ppendix B. Bill Of Materials (BOM)	
Vorldwide Sales and Service	22

O220-5 / TO263-5 Voltage Regulator Evaluation Board User's Guide						
OTES:						



### **Preface**

### **NOTICE TO CUSTOMERS**

All documentation becomes dated, and this manual is no exception. Microchip tools and documentation are constantly evolving to meet customer needs, so some actual dialogs and/or tool descriptions may differ from those in this document. Please refer to our web site (www.microchip.com) to obtain the latest documentation available.

Documents are identified with a "DS" number. This number is located on the bottom of each page, in front of the page number. The numbering convention for the DS number is "DSXXXXXA", where "XXXXXX" is the document number and "A" is the revision level of the document.

For the most up-to-date information on development tools, see the MPLAB<sup>®</sup> IDE on-line help. Select the Help menu, and then Topics to open a list of available on-line help files.

### INTRODUCTION

This chapter contains general information that will be useful to know before using the TO220-5 / TO263-5 Voltage Regulator Evaluation Board. Items discussed in this chapter include:

- Document Layout
- · Conventions Used in this Guide
- · Recommended Reading
- The Microchip Web Site
- Customer Support
- Document Revision History

### DOCUMENT LAYOUT

This document describes how to use the TO220-5 / TO263-5 Voltage Regulator Evaluation Board. The manual layout is as follows:

- Chapter 1. "Product Overview" Important information about the TO220-5 / TO263-5 Voltage Regulator Evaluation Board.
- Chapter 2. "Installation and Operation" Includes instructions on how to get started with this user's guide and a description of the user's guide.
- Appendix A. "Schematic and Layouts" Shows the schematic and board layouts for the TO220-5 / TO263-5 Voltage Regulator Evaluation Board.
- Appendix B. "Bill Of Materials (BOM)" Lists the parts used to build the sub-assemblies in the TO220-5 / TO263-5 Voltage Regulator Evaluation Board.

### **CONVENTIONS USED IN THIS GUIDE**

This manual uses the following documentation conventions:

### **DOCUMENTATION CONVENTIONS**

Description	Represents	Examples		
Arial font:				
Italic characters	Referenced books	MPLAB <sup>®</sup> IDE User's Guide		
	Emphasized text	is the only compiler		
Initial caps	A window	the Output window		
	A dialog	the Settings dialog		
	A menu selection	select Enable Programmer		
Quotes	A field name in a window or dialog	"Save project before build"		
Underlined, italic text with right angle bracket	A menu path	File>Save		
Bold characters	A dialog button	Click <b>OK</b>		
	A tab	Click the <b>Power</b> tab		
N'Rnnnn	A number in verilog format, where N is the total number of digits, R is the radix and n is a digit.	4'b0010, 2'hF1		
Text in angle brackets < >	A key on the keyboard	Press <enter>, <f1></f1></enter>		
Courier New font:				
Plain Courier New	Sample source code	#define START		
	Filenames	autoexec.bat		
	File paths	c:\mcc18\h		
	Keywords	_asm, _endasm, static		
	Command-line options	-Opa+, -Opa-		
	Bit values	0, 1		
	Constants	0xff, 'A'		
Italic Courier New	A variable argument	file.o, where file can be any valid filename		
Square brackets []	Optional arguments	<pre>mcc18 [options] file [options]</pre>		
Curly brackets and pipe character: {   }	Choice of mutually exclusive arguments; an OR selection	errorlevel {0 1}		
Ellipses	Replaces repeated text	<pre>var_name [, var_name]</pre>		
	Represents code supplied by user	void main (void) { }		

### RECOMMENDED READING

This user's guide describes how to use TO220-5 / TO263-5 Voltage Regulator Evaluation Board. Other useful documents are listed below. The following Microchip documents are available and recommended as supplemental reference resources.

MCP1790 Datasheet, "70 mA, High Voltage Regulator", DS-22075

MCP1825 Datasheet, "500 mA, Low Voltage, Low Quiescent Current LDO Regulator", DS-22056

MCP1826 Datasheet, "1000 mA, Low Voltage, Low Quiescent Current LDO Regulator", DS-22057

MCP1827 Datasheet, "1.5A, Low Voltage, Low Quiescent Current LDO Regulator", DS-22001

These datasheets provide useful information regarding voltage regulator parameters that may be validated using this evaluation board.

### THE MICROCHIP WEB SITE

Microchip provides online support via our web site at www.microchip.com. This web site is used as a means to make files and information easily available to customers. Accessible by using your favorite Internet browser, the web site contains the following information:

- Product Support Data sheets and errata, application notes and sample programs, design resources, user's guides and hardware support documents, latest software releases and archived software
- General Technical Support Frequently Asked Questions (FAQs), technical support requests, online discussion groups, Microchip consultant program member listing
- Business of Microchip Product selector and ordering guides, latest Microchip press releases, listing of seminars and events, listings of Microchip sales offices, distributors and factory representatives

### **CUSTOMER SUPPORT**

Users of Microchip products can receive assistance through several channels:

- Distributor or Representative
- · Local Sales Office
- Field Application Engineer (FAE)
- · Technical Support
- Development Systems Information Line

Customers should contact their distributor, representative or field application engineer (FAE) for support. Local sales offices are also available to help customers. A listing of sales offices and locations is included in the back of this document.

Technical support is available through the web site at: http://support.microchip.com

### DOCUMENT REVISION HISTORY

### Revision A (April 2009)

· Initial Release of this Document.

O220-5 / TO263-5 Voltage Regulator Evaluation Board User's Guide					
IOTES:					



### **Chapter 1. Product Overview**

### 1.1 INTRODUCTION

The TO220-5 / TO263-5 Voltage Regulator Evaluation Board is designed to provide functional evaluation of Microchip Voltage Regulators that utilize the TO220-5 and TO263-5 package and the following device pinouts:

Pin Number	U1 footprint
Pin 1	SHDN
Pin 2	VIN
Pin 3	GND
Pin 4	VOUT
Pin 5	PWRGD/ADJ

The TO220-5 / TO263-5 Voltage Regulator Evaluation Board does not come with a voltage regulator soldered onto the board. This allows the user to attach the voltage regulator of their choosing to the board and perform quiescent current, ground current, PSRR, and other desired tests.

The TO220-5 / TO263-5 Voltage Regulator Evaluation Board is based upon a modulare concept which will allow the user to plug in additional boards to increase the test capability of the voltage regulator. Planned additional modulare plugin boards currently consist of an Input Voltage Linestep Board, Output Voltage Loadstep Board, and several other device packages.

## 1.2 WHAT IS THE TO220-5 / TO263-5 VOLTAGE REGULATOR EVALUATION BOARD?

The TO220-5 / TO263-5 Voltage Regulator Evaluation Board is designed to evaluate and test voltage regulators. By soldering the desired device to the evaluation board, the user can easily validate several parameters of the device.

### 1.2.1 Functional Blocks

The TO220-5 / TO263-5 Voltage Regulator Evaluation Board can be broken up into 6 functional blocks. The blocks are:

- Input Capacitance
- · Shutdown Control
- · Ground Current Measurement
- · Voltage Adjust
- Power Good
- Load Resistor

### 1.2.2 Input Capacitance

Jumper JP1 connects the input capacitance to the circuit. The input capacitor is disconnected when performing Power Supply Ripple Rejection tests. By default, C1 is populated with a 1  $\mu$ F, 50V, XR7 ceramic capacitor.

### 1.2.3 Shutdown Control

Jumper JP2 allows the user to select the Shutdown (SHDN) pin voltage level. The voltage level may be set to  $V_{\text{IN}}$ , GND, or open, depending on the placement of the JP2 jumper. When the jumper is not connecting pins 1 and 2 or pins 2 and 3 of JP2, the voltage level may be set by attaching an external signal to TP5. This allows the user to enable, disable, or pulse the shutdown pin of the device.

The board comes with R1 populated with a 10 k $\Omega$  resistor.

### 1.2.4 Ground Current Measurement

Jumper JP3 allows measurement of ground current. When a current meter is connected to TP6 and TP7 and jumper JP3 is removed, the ground current of the device may be measured.

### 1.2.5 Voltage Adjust

For Adjustable Output Voltage devices, R2 and R3 may be populated with appropriate values to provide the desired output voltage.

The board comes with R2 populated with a 69.8 k $\Omega$  resistor.

### 1.2.6 Power Good (PWRGD)

For devices with a Power Good (PWRGD) output, either R2 or R4 is populated depending on the desired pullup source voltage.

R2 selects V<sub>OUT</sub> as the pullup source voltage.

R4 selects V<sub>IN</sub> as the pullup source voltage.

The board comes with R2 populated with a 69.8  $k\Omega$  resistor.

### 1.2.7 Load Resistor

R5 and R6 may be populated with the desired load resistor values for the device being evaluated. Jumper JP4 connects R5 to the device output. Jumper JP5 connects R6 to the device output.

### 1.2.8 Output Capacitor

C2 may be populated with the desired output capacitance. By default, C2 is populated with a 1  $\mu$ F, 6.3V, XR7 ceramic capacitor.

### 1.2.9 Power Supply

J1 or TP1 and TP2 are connected to the user's power supply.

## 1.3 WHAT THE TO220-5 / TO263-5 VOLTAGE REGULATOR EVALUATION BOARD KIT INCLUDES.

This TO220-5 / TO263-5 Voltage Regulator Evaluation Board kit includes:

- TO220-5 / TO263-5 Voltage Regulator Evaluation Board (102-00203, Qty 2)
- · Important Information "Read First"



### Chapter 2. Installation and Operation

### 2.1 INTRODUCTION

The TO220-5 / TO263-5 Voltage Regulator Evaluation Board is designed to be used to facilitate the evaluation of Microchip's voltage regulators or to be used as a standalone voltage regulator board. Jumpers have been placed on the board to facilitate testing of specific voltage regulator parameters.

The TO220-5 / TO263-5 Voltage Regulator Evaluation Board kit comes with a 1  $\mu$ F ceramic input and output capacitor soldered to the board. The board has two unpopulated resistor locations that may be used for loads.

### 2.2 FEATURES

The TO220-5 / TO263-5 Voltage Regulator Evaluation Board has the following features:

- Input and Output headers for future connection to Line Step and Load Step modules
- · Ample testpoints to attach multimeters, power supplies, and loads
- · Jumper to select ground current measurement
- · Jumpers to connect output load resistors
- Jumper to connect input capacitor to circuit

### 2.3 GETTING STARTED

The TO220-5 / TO263-5 Voltage Regulator Evaluation Board is fully assembled and tested. All that is required for operating is a user supplied voltage regulator and a supply voltage source. Some of the tests that may be completed using the TO220-5 / TO263-5 Voltage Regulator Evaluation Board shall now be described.

### 2.3.1 Ground Current and Quiescent Current

When measuring ground current, jumper JP3 should be removed, otherwise leave jumper JP3 on. To measure ground current, perform the following steps:

- 1. Add desired load resistors to R5 and R6.
- 2. Remove jumpers JP3, JP4, and JP5.
- 3. Connect an Ampere Meter across testpoints TP6(+) and TP7(-). Select the appropriate meter scale for the device being evaluated.
- 4. Connect a voltmeter across testpoints TP9(+) and TP10(-).
- 5. Add jumper JP1.
- 6. Apply source voltage to testpoints TP1(+) and TP2(-).
- 7. Verify the voltage across testpoints TP9 and TP10 is within the expected range of the device being tested.
- 8. Read the Ground Current directly from the ampere meter connected to testpoints TP6 and TP7.

### TO220-5 / TO263-5 Voltage Regulator Evaluation Board User's Guide

- Vary the input voltage to obtain data for ground current versus input voltage. With
  no load attached to the output of the voltage regulator, the measured ground
  current is also called the quiescent current of the regulator.
- 10. Add a load selection jumper, JP4 or JP5.
- 11. Read the Ground Current directly from the ampere meter connected to testpoints TP6 and TP7.
- 12. The data collected will be the *ground current* versus load current.

### 2.3.2 Load Resistance

R5 and R6 are used to set desired load values. One choice is to set R5 to the minimum current desired for testing. R6 would then be set to a value desired for specific tests. Either value may be selected by adding their respective jumpers.

### 2.3.3 Line Step

Dynamic Line Step response may be evaluated by connecting an electronically switched input voltage to testpoints TP1(+) and TP2(-) or to connector J1. An oscilloscope is connected to TP3(Ch1 Trigger), TP9(Ch2) and TP10(Gnd). An appropriate load is selected using R5 and JP4 or R6 and JP5. The input voltage is then electronically switched from a low voltage to a high voltage. The corresponding voltage waveform data of the voltage regulator response is captured by the oscilloscope. Microchip will be offering a Line Step module that connects directly to connector J1. The Line Step module will be capable of switching between two voltage levels that the user supplies.

### 2.3.4 Load Step

Dynamic Load Step response may be evaluated by connecting an electronically switched load to testpoints TP9(+) and TP10(-) or to connector P1. An oscilloscope is connected to the electronic load switch signal (Ch1 Trigger) and to TP9(Ch2) and TP10(Gnd). The load is then electronically switched from a high resistance to a low resistance. The corresponding voltage waveform data of the voltage regulator response is captured by the oscilloscope. Microchip will be offering a Load Step module that connects directly to connector P1. The Load Step module will have several selectable load values populated onboard to cover a wide range of loads. The load will have the ability to be electronically or manually switched.

### 2.3.5 Power Supply Rejection Ratio (PSRR)

Power Supply Rejection Ratio tests are performed by removing the input capacitor jumper, JP1, and connecting an appropriate PSRR analyzer to the TO220-5 / TO263-5 Voltage Regulator Evaluation Board. The PSRR analyzer may then sweep the input voltage frequencies and record the corresponding output voltages.




## Appendix A. Schematic and Layouts

### A.1 INTRODUCTION


This appendix contains the following schematics and layouts for the TO220-5 / TO263-5 Voltage Regulator Evaluation Board:

- · Board Schematic
- Board Top Silk-Screen
- · Board Top Solder
- · Board Bottom Solder


### A.2 BOARD - SCHEMATIC

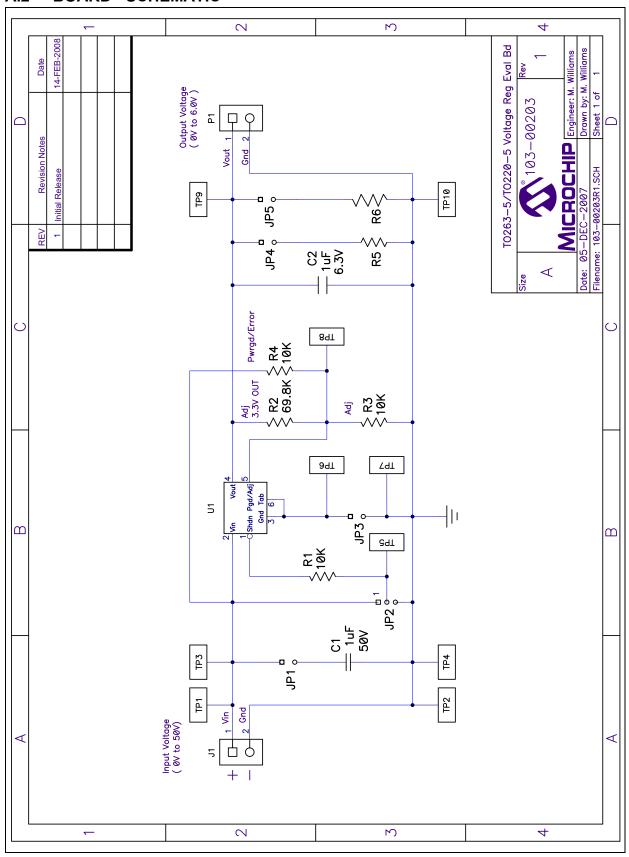


### A.3 BOARD - TOP SILK-SCREEN

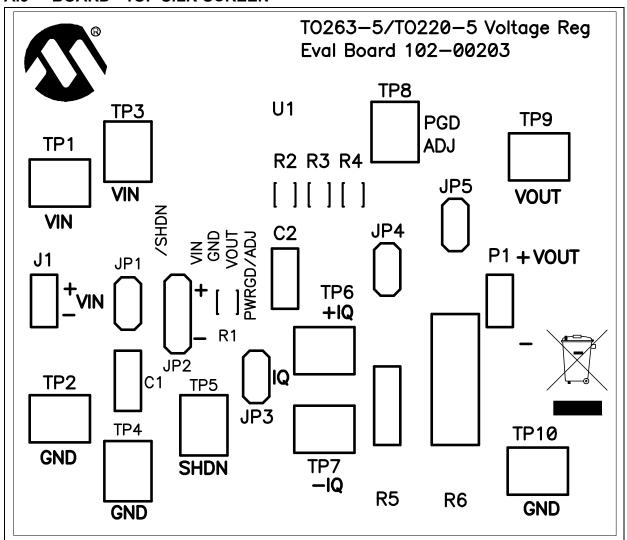

### A.4 BOARD - TOP SOLDER

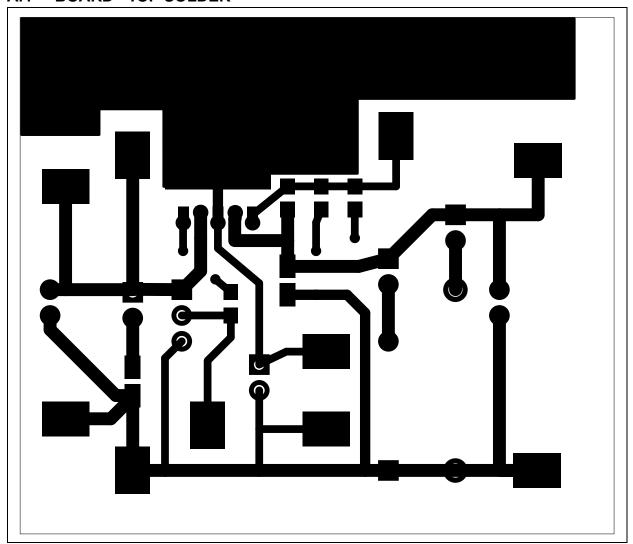

### A.5 BOARD - BOTTOM SOLDER

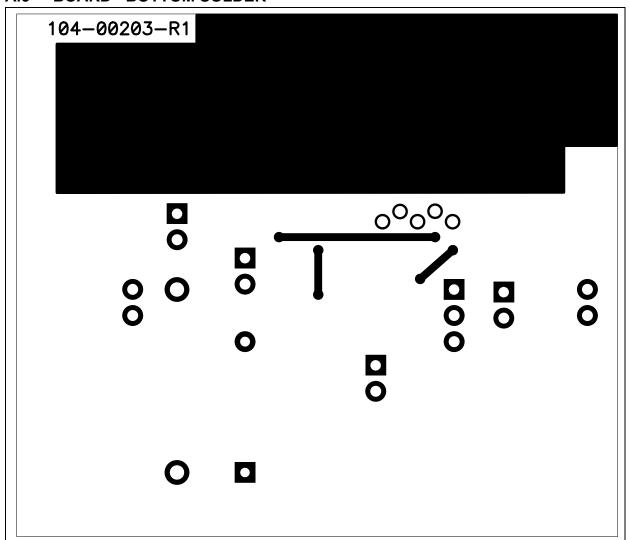

O220-5 / TO263-5 Voltage Regulator Evaluation Board User's Guide					
OTES:					



## **Appendix B. Bill Of Materials (BOM)**

TABLE B-1: BILL OF MATERIALS (BOM)

		Description	Manufacturer	Part Number
1	C1	Capacitor, Ceramic, 1 µF, 50V, X7R, SMT 0805	Murata Electronics <sup>®</sup>	GRM21BR71H105KA12L
1	C2	Capacitor, Ceramic, 1 µF, 16V, X7R, SMT 0805	Kemet <sup>®</sup> Electronics	C0805C105K4RACTU
4	Each Corner	Bumpon Hemisphere 0.44 x 0.20 Clear	3M	SJ-5303 (Clear)
1	J1	2 pin RA header, 0.100 centers, 0.025 sq pins, 0.070 pcb to pin center height, 36 pins to a strip (yields 18 headers)	3M	929835-01-36-RK
5	JP1, JP2, JP3, JP4, JP5	Connector, Shorting jumper, Tin, 0.100"	Sullins	STC02SYAN
4	JP1, JP3, JP4, JP5	2 pin header, 0.100 centers, 0.025 sq pins, 0.070 pcb to pin center height, 36 pins to a strip (yields 18 headers)	Molex <sup>®</sup> Electronics	22-28-4360
1	JP2	3 pin header, 0.100 centers, 0.025 sq pins, 0.070 pcb to pin center height, 36 pins to a strip (yields 12 headers)	Molex <sup>®</sup> Electronics	22-28-4360
1	P1	RA socket, 0.100 centers, 0.025 sq pins, 0.070 pcb to pin center height	Sullins	PPPC021LGBN-RC
1	PCB	RoHS Compliant Bare PCB, TO220-5 / TO263-5 Voltage Regulator Evaluation Board	Advanced Circuits	104-00203
1	R1	10K Res, Smt 0805, 1%, 1/8W	Rohm	MCR10EZHF1002
1	R2	69.8K Res, Smt 0805, 1%, 1/8W	Rohm	MCR10EZHF6982
4	R3, R4, R5, R6	*** DO NOT POPULATE ***	_	_
10	TP1, TP2, TP3, TP4, TP5, TP6, TP7, TP8, TP9, TP10	SMT Testpoint	Keystone Electronics®	5016
1	U1	*** DO NOT POPULATE ***	_	_

**Note 1:** The components listed in this Bill of Materials are representative of the PCB assembly. The released BOM used in manufacturing uses all RoHS-compliant components.



### WORLDWIDE SALES AND SERVICE

### **AMERICAS**

Corporate Office

2355 West Chandler Blvd. Chandler, AZ 85224-6199 Tel: 480-792-7200

Fax: 480-792-7277 Technical Support:

http://support.microchip.com

Web Address: www.microchip.com

Atlanta

Duluth, GA Tel: 678-957-9614 Fax: 678-957-1455

**Boston** 

Westborough, MA Tel: 774-760-0087 Fax: 774-760-0088

Chicago

Itasca, IL Tel: 630-285-0071 Fax: 630-285-0075

Cleveland

Independence, OH Tel: 216-447-0464 Fax: 216-447-0643

**Dallas** 

Addison, TX Tel: 972-818-7423 Fax: 972-818-2924

Detroit

Farmington Hills, MI Tel: 248-538-2250 Fax: 248-538-2260

Kokomo

Kokomo, IN Tel: 765-864-8360 Fax: 765-864-8387

Los Angeles

Mission Viejo, CA Tel: 949-462-9523 Fax: 949-462-9608

Santa Clara

Santa Clara, CA Tel: 408-961-6444 Fax: 408-961-6445

Toronto

Mississauga, Ontario,

Canada

Tel: 905-673-0699 Fax: 905-673-6509

### ASIA/PACIFIC

**Asia Pacific Office** 

Suites 3707-14, 37th Floor Tower 6, The Gateway Harbour City, Kowloon

Hong Kong Tel: 852-2401-1200

Fax: 852-2401-3431

Australia - Sydney

Tel: 61-2-9868-6733 Fax: 61-2-9868-6755

China - Beijing

Tel: 86-10-8528-2100 Fax: 86-10-8528-2104

China - Chengdu

Tel: 86-28-8665-5511 Fax: 86-28-8665-7889

China - Hong Kong SAR

Tel: 852-2401-1200 Fax: 852-2401-3431

China - Nanjing

Tel: 86-25-8473-2460 Fax: 86-25-8473-2470

China - Qingdao

Tel: 86-532-8502-7355 Fax: 86-532-8502-7205

China - Shanghai

Tel: 86-21-5407-5533 Fax: 86-21-5407-5066

China - Shenyang

Tel: 86-24-2334-2829 Fax: 86-24-2334-2393

China - Shenzhen

Tel: 86-755-8203-2660 Fax: 86-755-8203-1760

China - Wuhan

Tel: 86-27-5980-5300 Fax: 86-27-5980-5118

China - Xiamen

Tel: 86-592-2388138 Fax: 86-592-2388130

China - Xian

Tel: 86-29-8833-7252 Fax: 86-29-8833-7256

China - Zhuhai

Tel: 86-756-3210040 Fax: 86-756-3210049

### ASIA/PACIFIC

India - Bangalore

Tel: 91-80-3090-4444 Fax: 91-80-3090-4080

India - New Delhi

Tel: 91-11-4160-8631 Fax: 91-11-4160-8632

India - Pune

Tel: 91-20-2566-1512 Fax: 91-20-2566-1513

Japan - Yokohama

Tel: 81-45-471- 6166 Fax: 81-45-471-6122

Korea - Daegu

Tel: 82-53-744-4301 Fax: 82-53-744-4302

Korea - Seoul

Tel: 82-2-554-7200 Fax: 82-2-558-5932 or 82-2-558-5934

Malaysia - Kuala Lumpur

Tel: 60-3-6201-9857 Fax: 60-3-6201-9859

Malaysia - Penang

Tel: 60-4-227-8870 Fax: 60-4-227-4068

Philippines - Manila

Tel: 63-2-634-9065 Fax: 63-2-634-9069

Singapore

Tel: 65-6334-8870 Fax: 65-6334-8850

Taiwan - Hsin Chu

Tel: 886-3-6578-300 Fax: 886-3-6578-370

Taiwan - Kaohsiung

Tel: 886-7-536-4818 Fax: 886-7-536-4803

Taiwan - Taipei

Tel: 886-2-2500-6610 Fax: 886-2-2508-0102

Thailand - Bangkok

Tel: 66-2-694-1351 Fax: 66-2-694-1350

### **EUROPE**

Austria - Wels

Tel: 43-7242-2244-39 Fax: 43-7242-2244-393

Denmark - Copenhagen

Tel: 45-4450-2828 Fax: 45-4485-2829

France - Paris

Tel: 33-1-69-53-63-20 Fax: 33-1-69-30-90-79

**Germany - Munich** 

Tel: 49-89-627-144-0 Fax: 49-89-627-144-44

Italy - Milan

Tel: 39-0331-742611 Fax: 39-0331-466781

Netherlands - Drunen

Tel: 31-416-690399 Fax: 31-416-690340

Spain - Madrid

Tel: 34-91-708-08-90 Fax: 34-91-708-08-91

**UK - Wokingham** Tel: 44-118-921-5869

Fax: 44-118-921-5869

03/26/09