


## DF58 Series Mating / Unmating Operation Instruction

## Mating


① By positioning the convexity of the socket sides to the header concavity, align the centers of the socket and the header in pitch direftion.

② Slightly press the socket down at the center of the socket.

3 Press down at the lever side with stabilizing the cable side to insert. Mating completes.

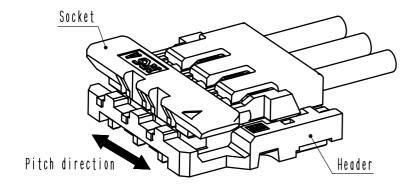


HRSDRAWINGF

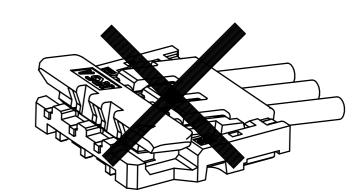


Unmating


① Hook the lever with finger nail. (Possible with one side)

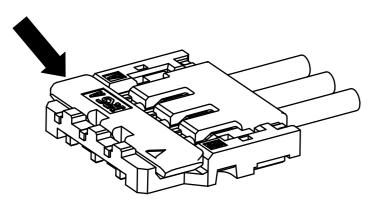

② Lift up to the upper difrection and friction lock

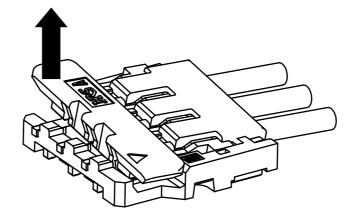

③ Lift it up to the upper direction more. and removal completes.

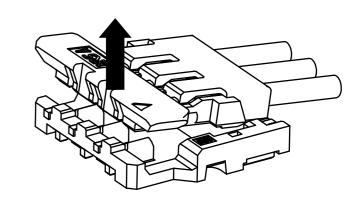

]		DRAWING NO.	EDC-371175-00-00		
	HR5	PART NO.	DF58-*P-1.2V(21)	)	
		CODE NO.	CL666-	$\Lambda$	3/3
			0		