

Starter Selection

Table 1: In Delta, 200 – 460 Volt starter ratings

	HP @ 200V	HP @ 230V	HP @ 460V	Rated Current (Amps)	Overload Range (Amps)	Current Limit Range (Amps)	Manufacturer Catalog Number
In Delta Configuration	5	7.5	15	22	7 - 27	26 - 94	72EG34AFP
	7.5	10	25	35	12 - 44	41 - 148	72GG34AFP
	10	15	30	42	14 - 53	49 - 179	72HG34AFP
	15	20	40	55	18 - 69	64 - 234	72JG34AFP
	20	25	50	68	22 - 85	79 - 289	72KG34AFP
	25	30	60	80	26 - 100	93 - 340	72LG34AFP
	30	40	75	105	35 - 131	121 - 447	72MG34AFP
	40	50	100	130	43 - 163	151 - 553	72NG34AFP
	50	60	125	156	52 - 196	181 - 663	72PG34AFP
	75	100	-	252	83 - 315	292 - 1071	72RG32AFP

Table 2: In Delta, 460 - 575 Volt starter ratings

	HP @ 460V	HP @ 575V	Rated Current (Amps)	Overload Range (Amps)	Current Limit Range (Amps)	Manufacturer Catalog Number
In Delta Configuration	15	20	22	7 - 27	26 - 94	72EG35AFP
	25	30	35	12 - 44	41 - 148	72GG35AFP
	30	40	42	14 - 53	49 - 179	72HG35AFP
	40	50	55	18 - 69	64 - 234	72JG35AFP
	50	60	68	22 - 85	79 - 289	72KG35AFP
	60	75	80	26 - 100	93 - 340	72LG35AFP
	75	100	105	35 - 131	121 - 447	72MG35AFP
	100	125	130	43 - 163	151 - 553	72NG35AFP
	125	150	156	52 - 196	181 - 663	72PG35AFP

Starter Selection


Table 3: In Line, 200 – 460 Volt starter ratings

	HP @ 200V	HP @ 230V	HP @ 460V	Rated Current (Amps)	Overload Range (Amps)	Current Limit Range (Amps)	Manufacturer Catalog Number
In Line Configuration	-	5	10	18	6 – 25	24 – 85	72GG34AFP
	5	7.5	15	22	8 – 30	28 – 103	72HG34AFP
	7.5	10	20	28	10 – 39	36 – 135	72JG34AFP
	7.5	10	25	35	13 – 49	45 – 166	72KG34AFP
	10	15	30	42	15 – 57	53 – 196	72LG34AFP
	15	20	40	55	20 – 75	70 – 257	72MG34AFP
	20	25	50	68	24 – 93	87 – 319	72NG34AFP
	25	30	60	80	29 – 112	104 – 382	72PG34AFP
	40	50	-	130	48 – 181	168 – 618	72RG32AFP

Table 4: In Line, 460 - 575 Volt starter ratings

	HP @ 460V	HP @ 575V	Rated Current (Amps)	Overload Range (Amps)	Current Limit Range (Amps)	Manufacturer Catalog Number
In Line Configuration	10	15	18	6 – 25	24 – 85	72GG35AFP
	15	20	22	8 – 30	28 – 103	72HG35AFP
	20	25	28	10 – 39	36 – 135	72JG35AFP
	25	30	35	13 – 49	45 – 166	72KG35AFP
	30	40	42	15 – 57	53 – 196	72LG35AFP
	40	50	55	20 – 75	70 – 257	72MG35AFP
	50	60	68	24 – 93	87 – 319	72NG35AFP
	60	75	80	29 – 112	104 – 382	72PG35AFP

Starter Dimensions:

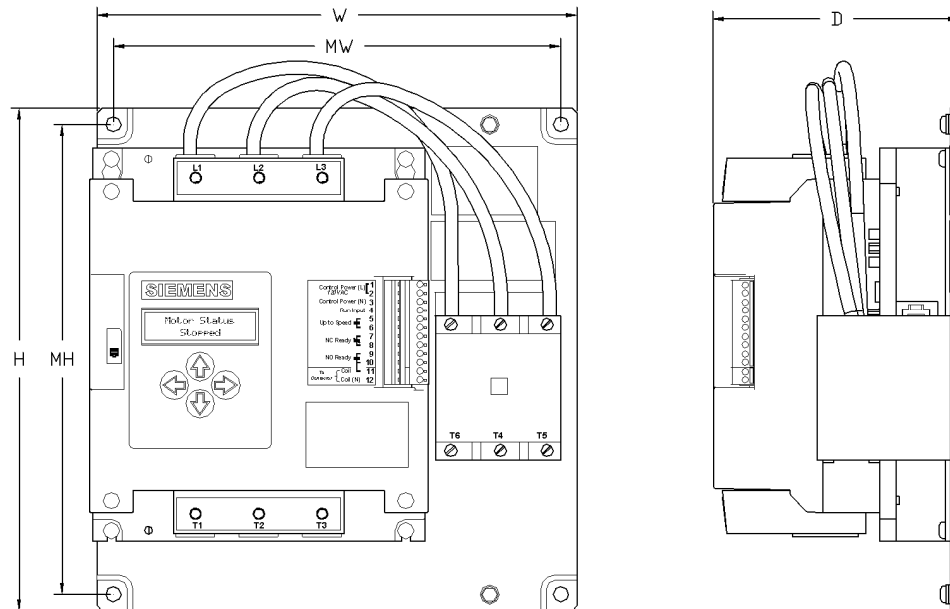

All dimensions are shown in inches

Catalog Number	H	W	D	MH	MW
72EG34AFP – 72KG34AFP	11.50	11.00	5.63	10.75	10.25
72LG34AFP – 72PG34AFP	11.50	11.00	7.13	10.75	10.25
72RG32AFP	12.00	16.75	7.16	11.00	15.75
72EG35AFP – 72KG35AFP	11.50	11.00	5.63	10.75	10.25
72LG35AFP	11.50	11.00	7.13	10.75	10.25
72MG35AFP – 72PG35AFP	12.00	16.75	7.13	11.00	15.75

Note: All panel mounting holes are 5/16". Starter and Fault contactor can extend up to 1/4" beyond the width of the mounting panel.