


## EVB8740/EVB8741 Evaluation Board User Manual

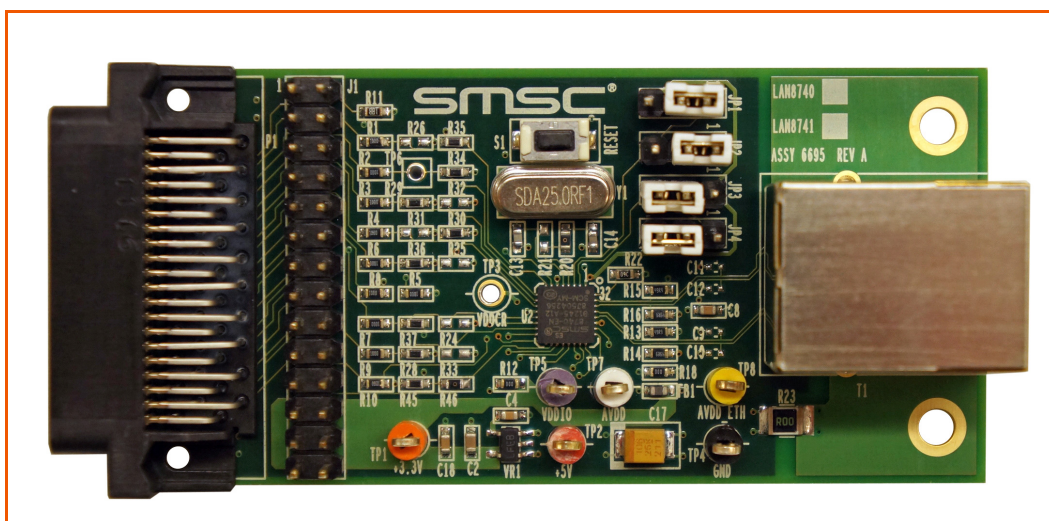

Copyright © 2013 SMSC or its subsidiaries. All rights reserved.

Circuit diagrams and other information relating to SMSC products are included as a means of illustrating typical applications. Consequently, complete information sufficient for construction purposes is not necessarily given. Although the information has been checked and is believed to be accurate, no responsibility is assumed for inaccuracies. SMSC reserves the right to make changes to specifications and product descriptions at any time without notice. Contact your local SMSC sales office to obtain the latest specifications before placing your product order. The provision of this information does not convey to the purchaser of the described semiconductor devices any licenses under any patent rights or other intellectual property rights of SMSC or others. All sales are expressly conditional on your agreement to the terms and conditions of the most recently dated version of SMSC's standard Terms of Sale Agreement dated before the date of your order (the "Terms of Sale Agreement"). The product may contain design defects or errors known as anomalies which may cause the product's functions to deviate from published specifications. Anomaly sheets are available upon request. SMSC products are not designed, intended, authorized or warranted for use in any life support or other application where product failure could cause or contribute to personal injury or severe property damage. Any and all such uses without prior written approval of an Officer of SMSC and further testing and/or modification will be fully at the risk of the customer. Copies of this document or other SMSC literature, as well as the Terms of Sale Agreement, may be obtained by visiting SMSC's website at <http://www.smssc.com>. SMSC is a registered trademark of Standard Microsystems Corporation ("SMSC"). Product names and company names are the trademarks of their respective holders.

The Microchip name and logo, and the Microchip logo are registered trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

**SMSC DISCLAIMS AND EXCLUDES ANY AND ALL WARRANTIES, INCLUDING WITHOUT LIMITATION ANY AND ALL IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE, AND AGAINST INFRINGEMENT AND THE LIKE, AND ANY AND ALL WARRANTIES ARISING FROM ANY COURSE OF DEALING OR USAGE OF TRADE. IN NO EVENT SHALL SMSC BE LIABLE FOR ANY DIRECT, INCIDENTAL, INDIRECT, SPECIAL, PUNITIVE, OR CONSEQUENTIAL DAMAGES; OR FOR LOST DATA, PROFITS, SAVINGS OR REVENUES OF ANY KIND; REGARDLESS OF THE FORM OF ACTION, WHETHER BASED ON CONTRACT; TORT; NEGLIGENCE OF SMSC OR OTHERS; STRICT LIABILITY; BREACH OF WARRANTY; OR OTHERWISE; WHETHER OR NOT ANY REMEDY OF BUYER IS HELD TO HAVE FAILED OF ITS ESSENTIAL PURPOSE, AND WHETHER OR NOT SMSC HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.**

## 1 Introduction

The LAN8740A/LAN8741A is a low-power, 10BASE-T/100BASE-TX physical layer (PHY) transceiver with variable I/O voltage that is compliant with the IEEE 802.3, 802.3u, and 802.3az (Energy Efficient Ethernet) standards. Energy Efficient Ethernet (EEE) support results in significant power savings during low link utilizations.

The EVB8740/EVB8741 is a PHY Evaluation Board (EVB) that interfaces a Media Independent Interface (MII) MAC controller to the LAN8740A/LAN8741A Ethernet MII PHY via a standard 40-pin MII connector. The LAN8740A/LAN8741A is connected to an RJ45 Ethernet jack with integrated magnetics for 10/100 connectivity. A simplified block diagram of the EVB8740/EVB8741 can be seen in [Figure 1.1](#).

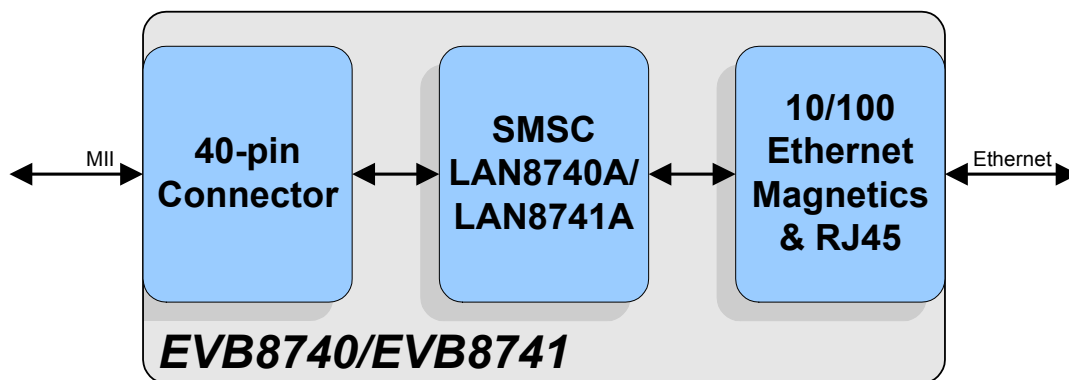


Figure 1.1 EVB8740/EVB8741 Block Diagram

**Note:** Though the LAN8740A/LAN8741A supports an RMII mode of operation, the EVB8740/EVB8741 evaluation board does not support this mode.

### 1.1 References

Concepts and material available in the following documents may be helpful when reading this document. Visit [www.smc.com](http://www.smc.com) for the latest documentation.

- SMSC LAN8740A/LAN8741A Datasheets
- AN 25.3 Migrating from the LAN8710A/LAN8720A to the LAN8740/LAN8741/LAN8742
- AN 8.13 Suggested Magnetics
- SMSC LAN8740A/LAN8741A Evaluation Board Schematics

## 2 Board Details

This section includes the following EVB8740/EVB8741 board details:

- [Power](#)
- [Configuration](#)
- [Mechanicals](#)

### 2.1 Power

#### 2.1.1 +5V Power

Power is normally supplied to the EVB8740/EVB8741's +3.3V regulator externally via the +5V power pins of the MII connector. If desired, the EVB8740/EVB8741 can be powered without +5V present on the MII connector by supplying +5V to the TP2 (red) test point with ground connected to the TP4 (black) test point.

**Note:** Before connecting an external power supply to TP2, ensure power is not present on the MII connector's +5V pins. Connecting +5V simultaneously via the MII connector and TP2 may result in permanent damage to the board.

#### 2.1.2 VDDIO Power

The LAN8740A/LAN8741A's VDDIO power may be supplied at a voltage other than +3.3V by depopulating resistor R12 and supplying +1.6V to +3.6V externally via test point TP5 (purple), with ground connected to the TP4 (black) test point.

**Note:** Before connecting an external power supply to TP5, ensure that resistor R12 has been removed. Connecting an external power supply to TP5 while resistor R12 is populated may result in permanent damage to the board.

#### 2.1.3 +1.2V Power

The LAN8740A/LAN8741A's internal +1.2V regulator can be optionally disabled. Refer to [Section 2.2.4, "Internal +1.2V Regulator Configuration \(REGOFF\)," on page 6](#) for additional information.

## 2.2 Configuration

The following sub-sections describe the various board features and configuration settings. A top view of the EVB8740/EVB8741 is shown in [Figure 2.1](#).

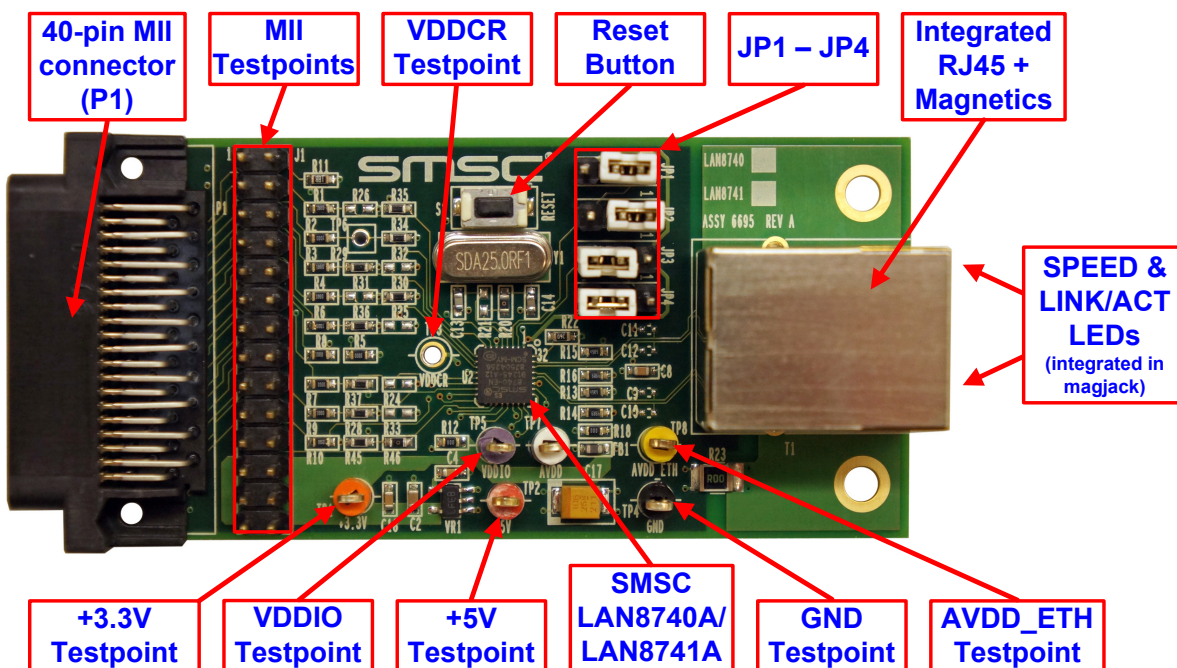


Figure 2.1 Top View of the EVB8740/EVB8741

### 2.2.1 PHY Address Configuration

The EVB8740/EVB8741 allows the user to configure the default PHY address at power-up via the PHYAD[2:0] configuration straps. [Table 2.1](#) details the proper configuration required for each PHY address value. By default, all EVB8740/EVB8741 PHY address straps are configured to a value of “0”.

Table 2.1 PHYAD[2:0] Resistor Configuration

| PHYAD[2:0]    | PHYAD[2:0] PULL-UP/DOWN RESISTORS |            |            |            |            |            |
|---------------|-----------------------------------|------------|------------|------------|------------|------------|
|               | PHYAD2                            |            | PHYAD1     |            | PHYAD0     |            |
|               | R26                               | R35        | R25        | R36        | R24        | R37        |
| 000 (Default) | Depopulate                        | Populate   | Depopulate | Populate   | Depopulate | Populate   |
| 001           | Depopulate                        | Populate   | Depopulate | Populate   | Populate   | Depopulate |
| 010           | Depopulate                        | Populate   | Populate   | Depopulate | Depopulate | Populate   |
| 011           | Depopulate                        | Populate   | Populate   | Depopulate | Populate   | Depopulate |
| 100           | Populate                          | Depopulate | Depopulate | Populate   | Depopulate | Populate   |
| 101           | Populate                          | Depopulate | Depopulate | Populate   | Populate   | Depopulate |

Table 2.1 PHYAD[2:0] Resistor Configuration (continued)

| PHYAD[2:0] | PHYAD[2:0] PULL-UP/DOWN RESISTORS |                   |          |                   |                   |                   |
|------------|-----------------------------------|-------------------|----------|-------------------|-------------------|-------------------|
|            | PHYAD2                            |                   | PHYAD1   |                   | PHYAD0            |                   |
|            | R26                               | R35               | R25      | R36               | R24               | R37               |
| 110        | Populate                          | <i>Depopulate</i> | Populate | <i>Depopulate</i> | <i>Depopulate</i> | Populate          |
| 111        | Populate                          | <i>Depopulate</i> | Populate | <i>Depopulate</i> | Populate          | <i>Depopulate</i> |

### 2.2.2 Reset Mode Configuration

The EVB8740/EVB8741 can be configured to reset into a specific mode of operation at power-up via the MODE[2:0] configuration straps. [Table 2.2](#) details the proper configuration required for each mode. By default, all EVB8740/EVB8741 MODE[2:0] straps are configured to a value of “1”.

**Note:** For additional details on each mode of operation, refer to the LAN8740A/LAN8741A datasheet.

Table 2.2 MODE[2:0] Resistor Configuration

| MODE[2:0]                                                    | MODE[2:0] PULL-UP/DOWN RESISTORS |                   |                   |                   |                   |                   |
|--------------------------------------------------------------|----------------------------------|-------------------|-------------------|-------------------|-------------------|-------------------|
|                                                              | MODE2                            |                   | MODE1             |                   | MODE0             |                   |
|                                                              | R28                              | R33               | R29               | R32               | R30               | R31               |
| <b>000</b><br>10BASE-T<br>Half Duplex<br>Auto-neg disabled   | <i>Depopulate</i>                | Populate          | <i>Depopulate</i> | Populate          | <i>Depopulate</i> | Populate          |
| <b>001</b><br>10BASE-T<br>Full Duplex<br>Auto-neg disabled   | <i>Depopulate</i>                | Populate          | <i>Depopulate</i> | Populate          | Populate          | <i>Depopulate</i> |
| <b>010</b><br>100BASE-TX<br>Half Duplex<br>Auto-neg disabled | <i>Depopulate</i>                | Populate          | Populate          | <i>Depopulate</i> | <i>Depopulate</i> | Populate          |
| <b>011</b><br>100BASE-TX<br>Full Duplex<br>Auto-neg disabled | <i>Depopulate</i>                | Populate          | Populate          | <i>Depopulate</i> | Populate          | <i>Depopulate</i> |
| <b>100</b><br>100BASE-TX<br>Half Duplex<br>Auto-neg enabled  | Populate                         | <i>Depopulate</i> | <i>Depopulate</i> | Populate          | <i>Depopulate</i> | Populate          |
| <b>101</b><br>Repeater mode                                  | Populate                         | <i>Depopulate</i> | <i>Depopulate</i> | Populate          | Populate          | <i>Depopulate</i> |
| <b>110</b><br>Power Down mode                                | Populate                         | <i>Depopulate</i> | Populate          | <i>Depopulate</i> | <i>Depopulate</i> | Populate          |
| <b>111 (Default)</b><br>All capable.<br>Auto-neg enabled     | Populate                         | <i>Depopulate</i> | Populate          | <i>Depopulate</i> | Populate          | <i>Depopulate</i> |

### 2.2.3 nINT/TXER/TXD4 Pin Configuration (nINTSEL)

The nINT, TXER, and TXD4 functions share a common LAN8740A/LAN8741A pin. This pin can operate in two functional modes: nINT (Interrupt) Mode and TXER/TXD4 Mode. TXER is also used in EEE mode as TXER when TXEN = 1, and LPI when TXEN = 0. The nINTSEL configuration strap is used to select one of these two modes. The EVB8740/EVB8741 must be properly configured for each mode as follows:

#### **nINT Mode**

- Depopulate R46.
- Depopulate the 2-3 positions of JP3 and JP4.
- Populate the 1-2 positions of JP3 and JP4 to pull-up the nINTSEL strap (nINT mode).

#### **TXER/TXD4 Mode (Default EVB8740/EVB8741 Mode)**

- Depopulate the 1-2 positions of JP3 and JP4.
- Populate the 2-3 positions of JP3 and JP4 to pull-down the nINTSEL strap (TXER/TXD4 mode).
- Populate R46.

**Note:** The nINTSEL configuration strap shares functionality with LED2. Therefore, LED2 may function active-high or active-low depending on the nINTSEL configuration. For additional information on the functionality of the nINT/TXER/TXD4 and LED2/nINTSEL pins, refer to the LAN8740A/LAN8741A Datasheet and LAN8740A/LAN8741A schematics.

### 2.2.4 Internal +1.2V Regulator Configuration (REGOFF)

The LAN8740A/LAN8741A provides the ability to disable the internal +1.2V regulator. When the regulator is disabled, an external +1.2V must be supplied to the VDDCR pin (via TP3). Configuration of the internal regulator is controlled by the REGOFF configuration strap. The EVB8740/EVB8741 must be properly configured for each mode as follows:

#### **Internal +1.2V Regulator Enabled (Default EVB8740/EVB8741 Mode)**

- Depopulate the 2-3 positions of JP1 and JP2.
- Populate the 1-2 positions of JP1 and JP2 to pull-down the REGOFF strap (enable regulator).

#### **Internal +1.2V Regulator Disabled**

- Depopulate the 1-2 positions of JP1 and JP2.
- Populate the 2-3 positions of JP1 and JP2 to pull-up the REGOFF strap (disable regulator).

**Note:** The REGOFF configuration strap shares functionality with LED1. Therefore, LED1 may function active-high or active-low depending on the REGOFF configuration. For additional information on the LED1/REGOFF pin and the disabling of the internal 1.2V regulator (power sequencing requirements, etc.), refer to the LAN8740A/LAN8741A Datasheet and LAN8740A/LAN8741A schematics.

### 2.2.5 Clock Configuration

The EVB8740/EVB8741 can be clocked via the onboard crystal oscillator or an optional external clock.

#### **Crystal Oscillator (Default)**

The 25 MHz crystal Y1 is connected to the internal oscillator of the LAN8740A/LAN8741A. A PLL circuit in the LAN8740A/LAN8741A generates all the timing required by the PHY.

### External Clock

The EVB8740/EVB8741 can be configured to use an external clock by removing crystal Y1 and resistor R20. A 25MHz +3.3V signal may then be applied to pin 1 of Y1 (which connects to pin 5 of the LAN8740A/LAN8741A). Pin 2 of Y1 (which connects to pin 4 of the LAN8740A/LAN8741A) should be left floating when using an external clock.

## 2.2.6 LEDs

**Table 2.3 LEDs**

| REFERENCE | COLOR  | INDICATION                                                                                                                                |
|-----------|--------|-------------------------------------------------------------------------------------------------------------------------------------------|
| LED1      | Green  | Link/Activity<br>Active when the PHY has established a valid link with a link partner and blinks when activity is detected.               |
| LED2      | Yellow | Speed<br>Active when a 100BASE-TX link has been established. Inactive when a 10BASE-T link has been established or during line isolation. |

**Note:** LED1 and LED2 are located inside the RJ45 connector. LED1 and LED2 may function active-high or active-low depending on the configuration of the REGOFF and nINTSEL straps, respectively. Refer to the LAN8740A/LAN8741A Datasheet and LAN8740A/LAN8741A schematics for additional information.

## 2.2.7 Test Points

**Table 2.4 Test Points**

| TEST POINT | DESCRIPTION                                                       | CONNECTION                         |
|------------|-------------------------------------------------------------------|------------------------------------|
| TP1        | +3.3V Test Point (Orange)                                         | +3.3V                              |
| TP2        | +5.0V Test Point (Red)                                            | +5.0V                              |
| TP3        | +1.2V VDDCR Test Point (Unpopulated) ( <a href="#">Note 2.1</a> ) | +1.2V                              |
| TP4        | Ground Test Point (Black)                                         | Ground                             |
| TP5        | VDDIO Test Point (Purple)                                         | +3.3V ( <a href="#">Note 2.2</a> ) |
| TP6        | nPME Test Point (Unpopulated)                                     | nPME (RXD2/nPME/RMIISEL)           |
| TP7        | AVDD Test Point (White)                                           | AVDD                               |
| TP8        | AVDD_ETH Test Point (Yellow)                                      | AVDD_ETH                           |

**Note 2.1** VDDCR is the internal +1.2V regulated output. When REGOFF is enabled, the internal 1.2V regulator is disabled. In this case, an external 1.2V regulator must be supplied to test point TP3.

**Note 2.2** The LAN8740A/LAN8741A's VDDIO power may be supplied externally at a voltage other than +3.3V as described in [Section 2.1, "Power," on page 3](#).



## 2.2.8 System Connections

**Table 2.5 System Connections**

| PLUG/HEADER | DESCRIPTION                                                                                        | PART                 |
|-------------|----------------------------------------------------------------------------------------------------|----------------------|
| T1          | RJ45 with Integrated LEDs                                                                          | Pulse J0011D01BNL    |
| J1          | 2x14 MII Header<br><b>Note:</b> Refer <a href="#">Table 2.6</a> to for a full pin list             | Adam Tech PH2-28-U-A |
| P1          | 40-pin Female MII Connector<br><b>Note:</b> Refer <a href="#">Table 2.7</a> to for a full pin list | Tyco 5173278-2       |

**Table 2.6 J1 - 2x14 MII Header Pinout**

| HEADER PIN | DESCRIPTION                            | HEADER PIN | DESCRIPTION                       |
|------------|----------------------------------------|------------|-----------------------------------|
| 1          | nRST                                   | 15         | TXD1                              |
| 2          | MDIO ( <a href="#">Note 2.3</a> )      | 16         | TXD2                              |
| 3          | MDC                                    | 17         | TXD3                              |
| 4          | RXD3/ <u>PHYAD2</u>                    | 18         | CRS_DV/ <u>COL/</u> <u>MODE2</u>  |
| 5          | RXD2/ <u>RMIISEL</u>                   | 19         | CRS                               |
| 6          | RXD1/ <u>MODE1</u>                     | 20         | Ground                            |
| 7          | RXD0/ <u>MODE0</u>                     | 21         | nINT ( <a href="#">Note 2.4</a> ) |
| 8          | RXDV                                   | 22         | VDDIO                             |
| 9          | RXCLK/ <u>PHYAD1</u>                   | 23         | +3.3V                             |
| 10         | RXER/RXD4/ <u>PHYAD0</u>               | 24         | Ground                            |
| 11         | TXER/TXD4 ( <a href="#">Note 2.4</a> ) | 25         | Ground                            |
| 12         | TXCLK                                  | 26         | Ground                            |
| 13         | TXEN                                   | 27         | Ground                            |
| 14         | TXD0                                   | 28         | Ground                            |

**Note 2.3** Resistor R11 acts as a pull-up on the MDIO pin. In most situations, the MAC circuitry provides this pull-up and R11 is not required.

**Note 2.4** Pins 11 and 21 of the J1 header must be configured to properly connect to the nINT/TXER/TXD4 pin of the LAN8740A/LAN8741A. Depending on the configured mode, nINT or TXER/TXD4, R46 must be depopulated or populated. Refer to [Section 2.2.3](#), "[nINT/TXER/TXD4 Pin Configuration \(nINTSEL\)](#)," on page 6 for additional information.



Table 2.7 P1 - 40-Pin Female MII Connector Pinout

| PIN | DESCRIPTION | PIN | DESCRIPTION                     | PIN | DESCRIPTION | PIN | DESCRIPTION |
|-----|-------------|-----|---------------------------------|-----|-------------|-----|-------------|
| 1   | +5V         | 11  | TXER <a href="#">(Note 2.5)</a> | 21  | +5V         | 31  | GND         |
| 2   | MDIO        | 12  | TXCLK                           | 22  | GND         | 32  | GND         |
| 3   | MDC         | 13  | TXEN                            | 23  | GND         | 33  | GND         |
| 4   | RXD3        | 14  | TXD0                            | 24  | GND         | 34  | GND         |
| 5   | RXD2        | 15  | TXD1                            | 25  | GND         | 35  | GND         |
| 6   | RXD1        | 16  | TXD2                            | 26  | GND         | 36  | GND         |
| 7   | RXD0        | 17  | TXD3                            | 27  | GND         | 37  | GND         |
| 8   | RXDV        | 18  | COL                             | 28  | GND         | 38  | GND         |
| 9   | RXCLK       | 19  | CRS                             | 29  | GND         | 39  | GND         |
| 10  | RXER        | 20  | +5V                             | 30  | GND         | 40  | +5V         |

**Note 2.5** To use the TXER signal from the MAC, the nINT/TXER/TXD4 pin and R46 must be configured properly. Refer to [Section 2.2.3, "nINT/TXER/TXD4 Pin Configuration \(nINTSEL\)," on page 6](#) for additional information.

## 2.2.9 Switches

Table 2.8 Switches

| SWITCH | DESCRIPTION  | FUNCTION                              |
|--------|--------------|---------------------------------------|
| S1     | Reset switch | When pressed, triggers a board reset. |

## 2.3 Mechanicals

Figure 2.2 details the EVB8740/EVB8741 mechanical dimensions.

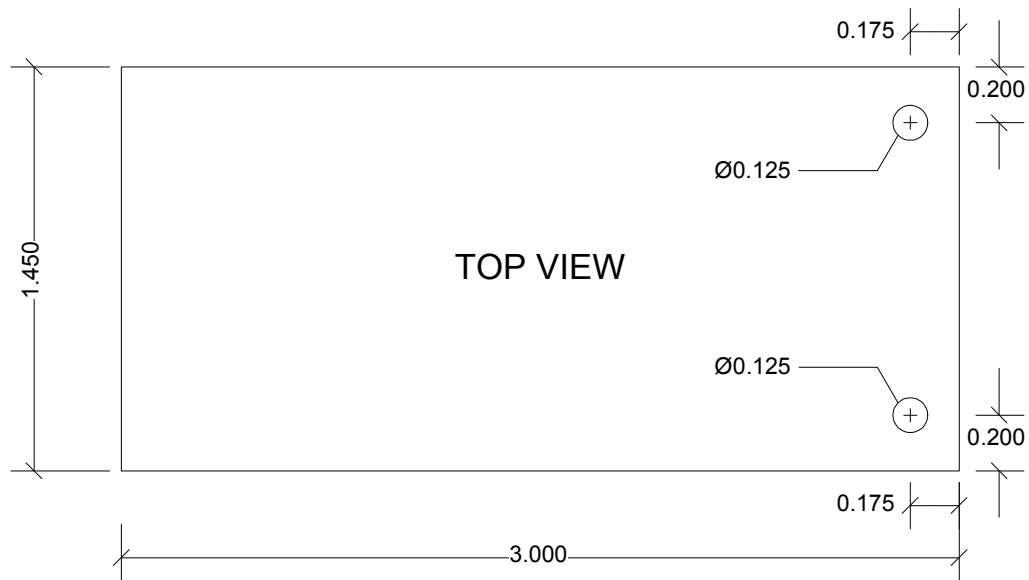


Figure 2.2 EVB8740/EVB8741 Mechanicals

### 3 User Manual Revision History

**Table 3.1 Customer Revision History**

| REVISION LEVEL & DATE | SECTION/FIGURE/ENTRY | CORRECTION       |
|-----------------------|----------------------|------------------|
| Rev. 1.0 (04-29-13)   | All                  | Initial release. |