

Manual Switches

Incandescent Lamp Assemblies

MML91/93 Series

MML91 LAMP/PWB RECEPTACLE ORDER GUIDE

Lamp Type	Use To Illuminate	Voltage	Catalog Listing Incl. Lamp & PWB Receptacle	Industry Lamp No.
T-1 ① (unbased)	Rectangular button lens	5 28	MML91C MML91DC	715 6838
T-1 ② (bi-pin)	Square button lens and MML24 rocker lens	5 28	MML91E MML91DE	7715 7839

Notes:
① To order PWB receptacle separately, specify **MML93H**.
② To order PWB receptacle separately, specify **MML93G**.

MML91 LAMP/SOLDER RECEPTACLE ORDER GUIDE

Lamp Type	Use To Illuminate	Voltage	Catalog Listing Incl. Lamp & Solder Receptacle	Industry Lamp No.
T-1 ③ (bi-pin)	Rectangular button lens	5 28	MML91D MML91DD	7715 7839

Lamp Type	Use To Illuminate	Voltage	Catalog Listing ④ Solder Receptacle	T-1 (Unbased) Lamp Only	Industry Lamp No.
T-1 (unbased)	Square button lens	5 28	MML93L MML93L	MML91A MML91DA	715 6838
T-1 (unbased)	MML24 rocker lens	5 28	MML93R MML93R	MML91A MML91DA	715 6838

Notes:
③ To order solder receptacles separately, specify **MML93J**.
④ Order solder receptacles and T-1 lamp listings for complete assembly.

Manuals

Manual Switches

LED/Incandescent Lamp Receptacles

MML93 Series

User installed. Certain MML switches and indicators will accept incandescent lamps, where specified in the order guides.


LAMP INSTALLATION

These lamps are ordered separately and installed by the user, per the procedures described below.

- 1. With Printed Wiring Board Receptacle for MML93G and MML93H only.**
Use PWB receptacles to permit lamps to be added or replaced from behind the printed wiring board, without soldering.



1. Insert the PWB receptacle/incandescent lamp assembly through a hole in the printed wiring board.

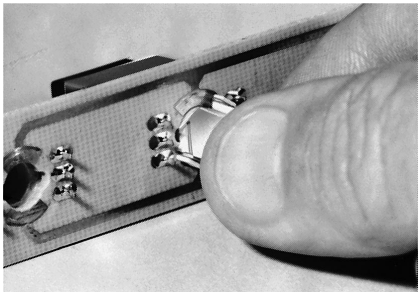


2. A 1/8-turn applied clockwise to the receptacle locks it in the printed wiring board and establishes the electrical connection.


These receptacles are for use with rectangular pushbuttons, square pushbuttons and MML24 rocker lens only.

Printed wiring boards are not supplied.

- 2. With Solder Terminal Receptacle for MML93J bi-pin only**
This receptacle attaches directly to the rear of panel-mounted units. It enables lamps to be added or replaced without rewiring.

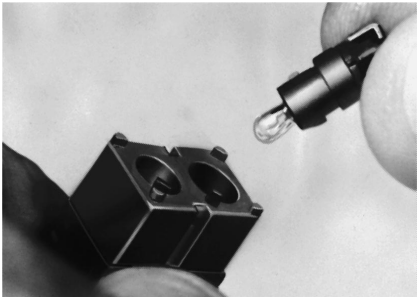



1. Insert solder terminal receptacle into hole in base of panel mount unit.

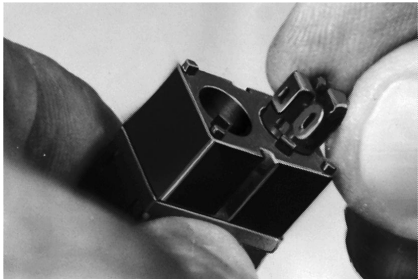

2. A 1/8-turn clockwise applied to the receptacle locks it in the base.

This receptacle is for use with all rectangular pushbuttons and MML41 or MML46 rectangular indicators only.

- 3. With Solder Terminal Receptacles for MML93L/93R Unbased Only or T-1 LED.**
Use the receptacles shown at right to install T-1 LEDs or T-1 unbased lamps in panel-mounted MML21 square pushbutton switches and MML24 rocker switches.

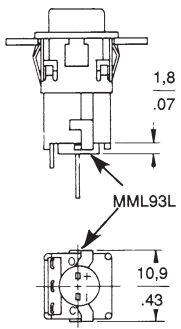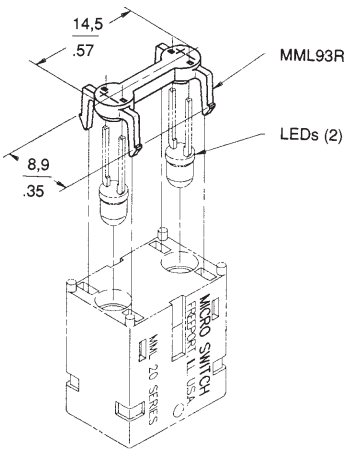

- Procedure:**
1. Assemble LEDs or lamps to receptacles (leads first).
 2. Snap receptacle into slots in housing base.
 3. Solder directly to leads.