

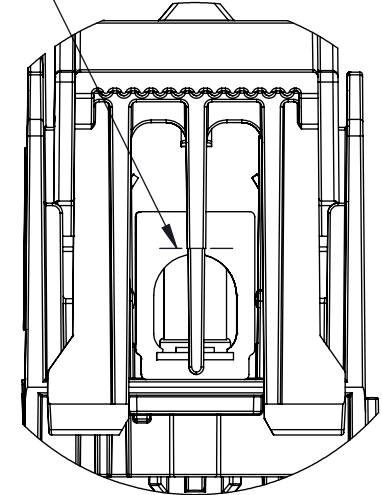
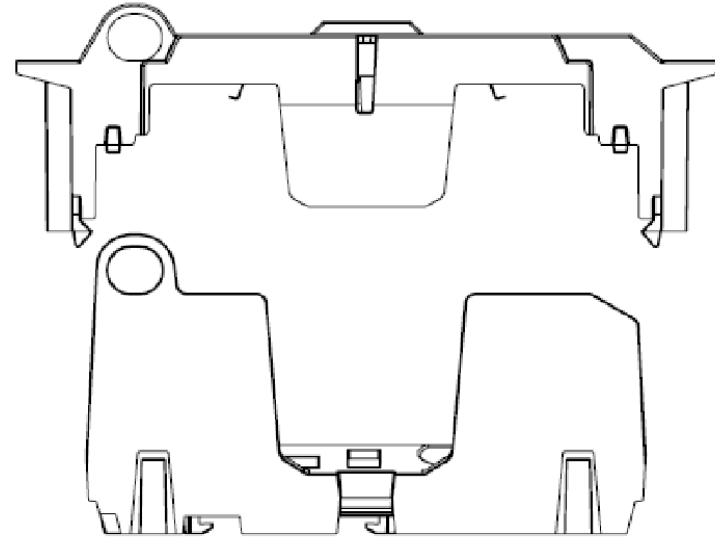


CUT COVER TAB  
AT NOTCH FOR  
USE WITH WIRES  
LARGER THAN  
8 AWG

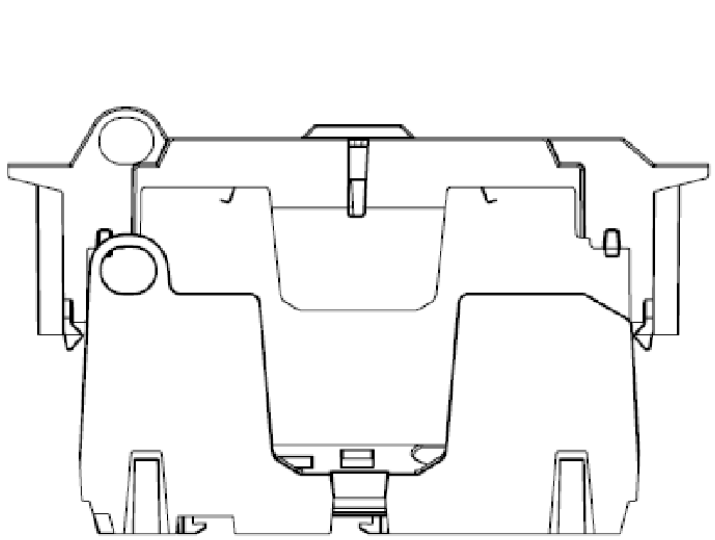


DETAIL A  
SCALE 4 : 3

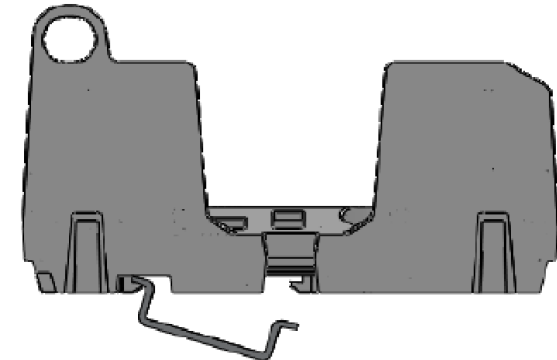


1. HOOK DIN RAIL SNAPS ON ONE SIDE OF THE DIN RAIL


2. PUSH DOWN TO DEFLECT THE SNAPS

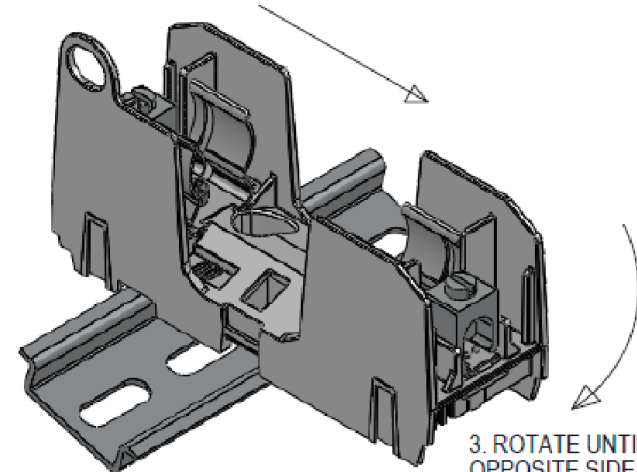

3. ROTATE UNTIL THE  
OPPOSITE SIDE SNAPS  
ONTO DIN RAIL

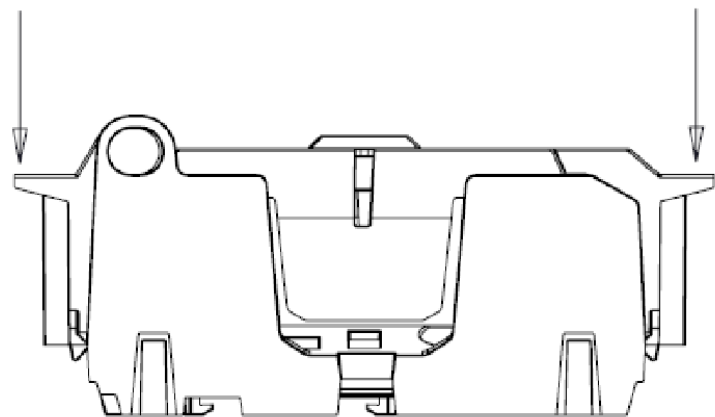


**CLOSING**  
PUSH STRAIGHT DOWN UNTIL SNAPS CLICK  
INTO PLACE

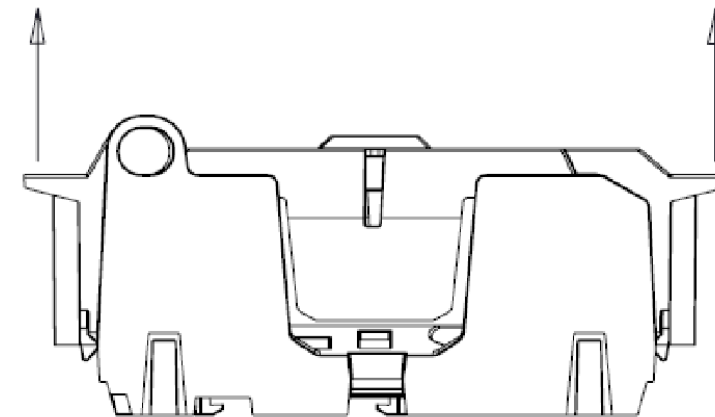

**OPENING**  
PULL STRAIGHT UP AT BOTH OUTSIDE  
HANDLES

**INSTALLATION ON DIN RAIL**  
END STOPS MAY BE NECESSARY FOR SOME  
ASSEMBLY CONDITIONS - SEE NOTE 7



BUSSMANN

SERIES

TITLE

250V / 60AMP CLASS R & H FUSE BLOCK

SIZE

A3

DWG NO.

RM25060-HM25060-CP

REV

B

SCALE:

2:3

SHEET

3 OF 3

SLA3\_BUSS\_MAL\_GENRL\_REV\_A