

F

E

D

C

B

A

F

E


D

C

B

A

SLA3_BUSSMAN_GENRRL_REV_A



BUSSMANN
SERIES

TITLE
600V / 30AMP CLASS R & H FUSE BLOCK

SIZE
A3



DWG NO.
RM60030-HM60030-SERIES-CP

REV
B



SCALE: 1:2

SHEET 2 OF 3

1

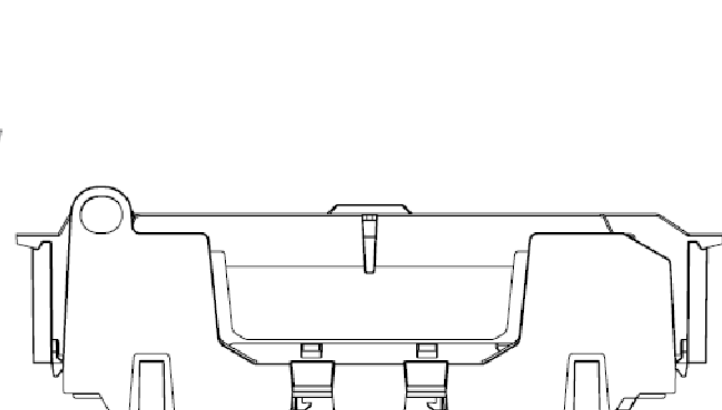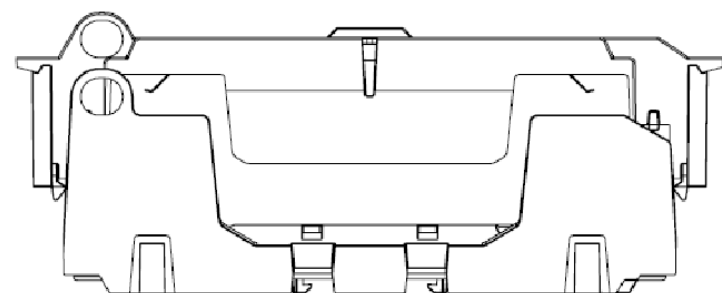


CLOSING
PUSH STRAIGHT DOWN UNTIL SNAPS CLICK INTO PLACE

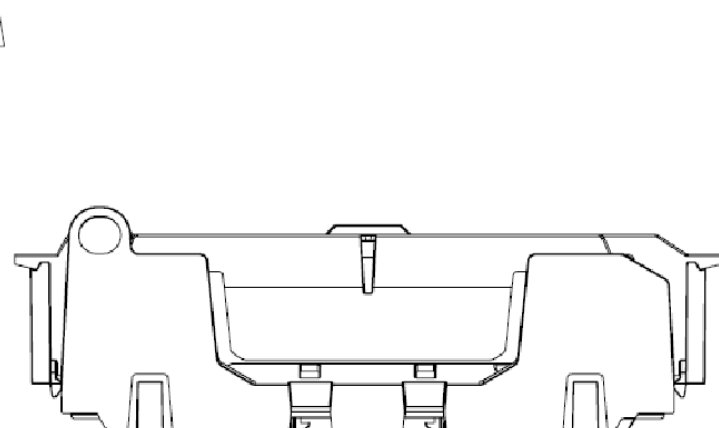
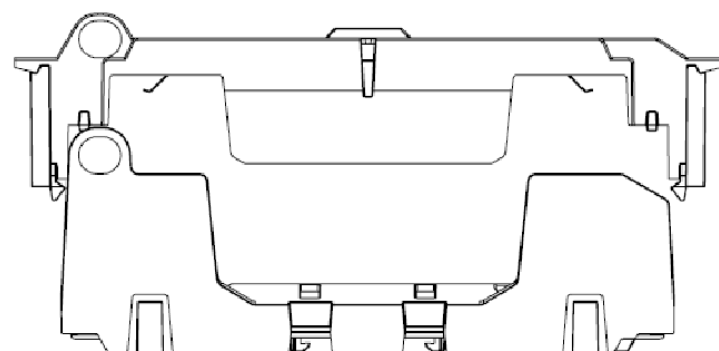


OPENING
PULL STRAIGHT UP AT BOTH OUTSIDE HANDLES

CUT COVER TAB AT NOTCH FOR WIRES LARGER THAN 8 AWG

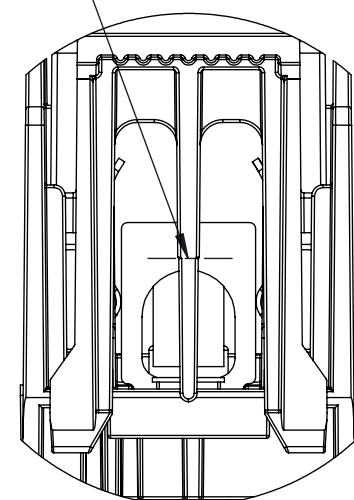


DETAIL A
SCALE 1.5 : 1

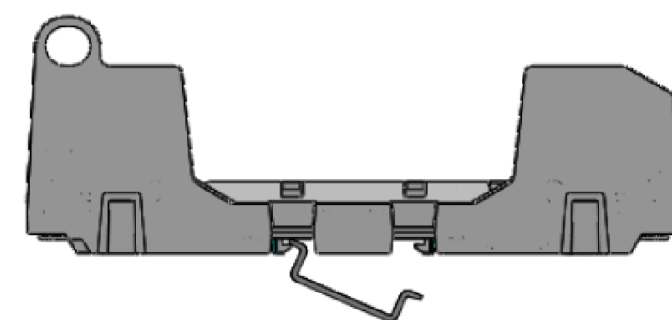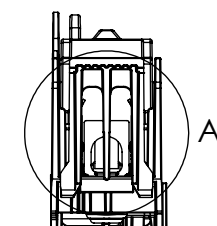

1. HOOK DIN RAIL SNAPS ON ONE SIDE OF THE DIN RAIL

2. PUSH DOWN TO DEFLECT THE SNAPS

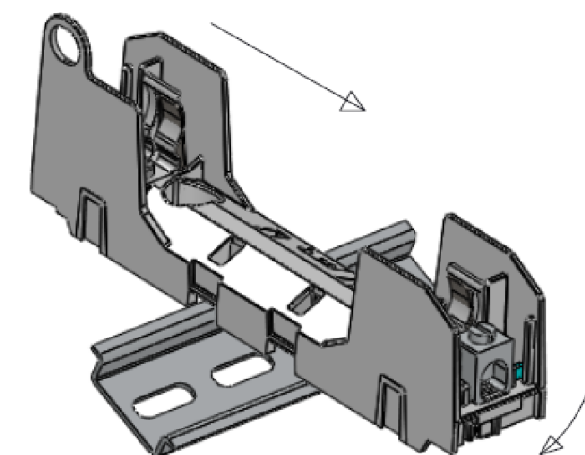

3. ROTATE UNTIL THE OPPOSITE SIDE SNAPS ONTO DIN RAIL

INSTALLATION ON DIN RAIL
END STOPS MAY BE NECESSARY FOR SOME ASSEMBLY CONDITIONS - SEE NOTE 7