

Datasheet

Dynamic NFC/RFID tag IC with up to two PWM outputs and 2-Kbit EEPROM





Features

Pulse width modulation outputs

- Two independent outputs: 1x PWM output on ST25DV02K-W1, 2x PWM outputs on ST25DV02K-W2
- From 488 Hz to 31250 Hz
- 62.5 ns pulse width resolution: from 15-bit resolution at 488 Hz to 9-bit resolution at 31.25 kHz
- Accuracy: ±10% over temperature range
- No need for external oscillator
- Supply voltage from 1.8 V to 5.5 V, independent from contactless interface
- · Independent push-pull outputs
 - Up to 4 mA drive capability per output
 - Adjustable output drive for low power and low noise application
- Live update of PWM parameters controlled by contactless interface

Contactless interface

- Based on ISO/IEC 15693 and NFC Forum Type 5 Tag
- Supports all ISO/IEC 15693 modulations, coding, sub-carrier modes and data rates
- · Single and multiple blocks read
- Internal tuning capacitance: 28.5 pF

Memory

- 2-kbit of EEPROM
- Accessible in blocks of 4x bytes
- 5 ms typical write time (one block)
- Data retention: 40 years
- Write cycles endurance: 100k write cycles at 85 °C

Data protection

- Up to four independent areas, including the PWM control area, with flexible protection mechanism based on 32/64-bits passwords
- System configuration: write protection by 32-bit password
- TruST25™ Digital signature mechanism for authentication

Temperature range

- From -40°C to +85°C (Contactless interface)
- From -40 °C to +105 °C (PWM interface)

Package

- SO8N and TSSOP8
- ECOPACK2 (RoHS compliant)

Product status link

ST25DV02K-W1

ST25DV02K-W2





1 Description

The ST25DV02K-W1/2 is an ISO 15693 and NFC Forum Type 5 tag, with one or two pulse width modulation (PWM) outputs and 2 Kbits of electrically erasable programmable memory (EEPROM).

It offers two interfaces. The first delivers up to 2x independent PWM output signals and the second is an RF link activated by the received carrier electromagnetic wave.


The PWM outputs are configured at boot time, and can be updated live through RF link. RF and PWM are independently powered and can work in stand-alone mode.

The ST25DV02K-W1/2 contains 256 bytes (64 blocks) of memory for User data. This memory is accessible through the RF interface, following ISO/IEC 15693 or NFC Forum Type 5 Tag recommendations.

The device is based on technology and design solutions for which there are pending patents.

1.1 Block diagram

Figure 1. Block diagram

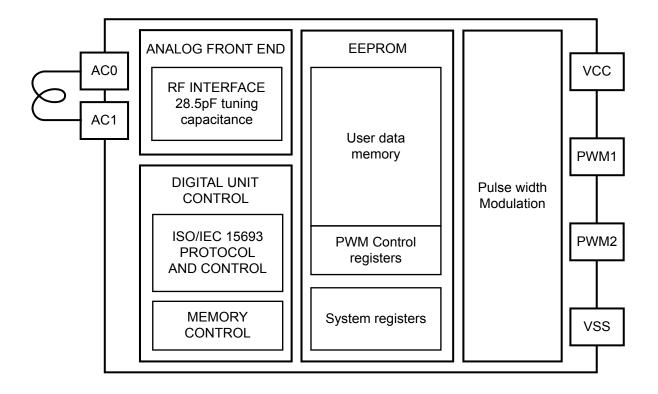

Note: PWM2 is available only on ST25DV02K-W2.

DS12114 - Rev 6 page 2/74



1.2 Package connections

ST25DV02K-W1/2 is provided in two different packages:


- SO8N
- TSSOP8

Table 1. Signal names

| Signal name | Function | Direction |
|-----------------|--------------------|-----------|
| AC0 | Antenna coils | I/O |
| AC1 | Antenna coils | I/O |
| V _{CC} | PWM supply voltage | Power |
| PWM1 | PWM output | Output |
| PWM2 (1) | PWM output | Output |
| V _{SS} | Ground | - |

^{1.} Available only on ST25DV02K-W2.

Figure 2. ST25DV02K-W1/2 8-pin package connections

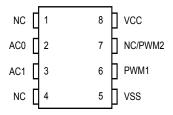

DS12114 - Rev 6 page 3/74



2 Signal description

2.1 Pulse width modulation output (PWM1)

This signal provides a pulse width modulation output. It is a push-pull output signal, driven between V_{SS} and V_{CC} . PWM1 output is in high impedance state, as long as it is disabled.

2.2 Pulse width modulation output (PWM2)

This signal provides a pulse width modulation output. It is a push-pull output signal, driven between V_{SS} and V_{CC} . PWM2 is independent from PWM1. PWM2 output is available on ST25DV02K-W2 only, and it is in high impedance state, as long as it is disabled.

2.3 PWM power supply (V_{CC})

This pin must be connected to an external DC supply voltage to have the PWM output(s) working. PWM power supply is independent from the RF NFC tag part: The RF NFC tag works whatever V_{CC} power supply state is. On the other side, PWM outputs work as soon as V_{CC} power is supplied, and whatever RF field state is.

2.4 PWM ground reference (V_{SS})

 V_{SS} is the reference for the V_{CC} and PWM pins.

2.5 Antenna coil (AC0, AC1)

These inputs are used exclusively to connect the ST25DV02K-W1/2 device to an external coil. It is advised not to connect any other DC or AC path to AC0 or AC1.

When correctly tuned, the coil is used to power and access the device using the ISO/IEC 15693 and ISO 18000-3 mode 1 protocols.

DS12114 - Rev 6 page 4/74



3 Power management

3.1 Wired interface

Operating supply voltage V_{CC}

A valid and stable V_{CC} voltage within the specified [V_{CC} (min), V_{CC} (max)] range must be applied to guarantee PWM outputs within expected range (clock stability, jitter). To maintain a stable DC supply voltage, it is recommended to decouple the V_{CC} line with a suitable capacitor (usually one ~10 nF capacitor plus one ~100 pF capacitor) close to the V_{CC}/V_{SS} package pins.

Power-up conditions

When the power supply is turned on, V_{CC} rises from V_{SS} to V_{CC} . The V_{CC} rise time must not vary faster than $1V/\mu s$.

At power-up (continuous rise of V_{CC}), the ST25DV02K-W enter PWM boot, as soon as V_{CC} reaches the power-on reset threshold voltage.


t boot PWM time applies to complete PWM boot and get valid PWM output signals.

In case of contactless interface access to EEPROM, the PWM boot is waiting for the end of EEPROM accesses to start.

Power-down conditions

At power-down (continuous decrease of V_{CC}), as soon as V_{CC} drops below the power-on reset threshold voltage, the PWM output states are not guaranteed anymore.

Figure 3. Power-up/down sequence

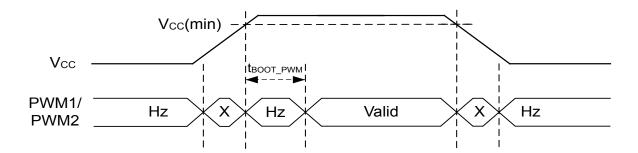

Note: Valid when RF interface is OFF, otherwise the priorities described in Section 3.3 RF and PWM boots priority apply.

DS12114 - Rev 6 page 5/74



3.2 Contactless interface


Device set in RF mode

To ensure a proper boot of the RF circuitry, the RF field must be turned ON without any modulation for a minimum period of time t_{RF_ON}. Before this time, ST25DV02K-W1/2 ignores all received RF commands (see Figure 4. RF power-up sequence).

Device reset in RF mode

To ensure a proper reset of the RF circuitry, the RF field must be turned off for a minimum t_{RF OFF} period of time.

Figure 4. RF power-up sequence

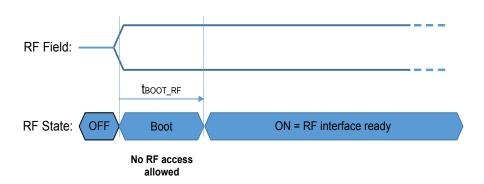

 Valid when PWM power supply (V_{CC}) is stable since t_boot_PWM, otherwise the priorities described in Section 3.3 RF and PWM boots priority apply.

3.3 RF and PWM boots priority

RF and PWM interfaces are independent, but the following boots priorities apply:

- If PWM boot (V_{CC} rising edge) occurs while RF is booting, or RF is in use, the PWM boot is delayed upon end of RF boot, or end of RF activity (EOF).
- If RF boot (Field On) occurs while PWMs are booting, the RF boot is delayed upon PWM boot completion.
- If RF boot (Field On) occurs while PWMs are running (valid PWM output signals), RF boot starts as described in Section 3.2 Contactless interface.

Note:

It is recommended to run RF sequences (RF Field On, set of RF commands, RF Field Off) either before PWM boot (V_{CC} power supply is OFF and stable), or after PWM boot is completed (V_{CC} power supply is ON and stable).

DS12114 - Rev 6 page 6/74



4 Memory management

4.1 Memory organization

The ST25DV02K-W1/2 memory is organized as follows:

- User memory: it is composed of four different areas, as described in Section 4.2 User memory. It contains areas for user's data, area for PWM control and area to store NFC T5 CC file if required.
- System configuration memory: it is composed of different configuration registers, among which the device configuration, the ISO15693 AFI & DSFID registers. It also contains the UID and different protection registers. Refer to Section 4.3 System configuration memory for more details

Figure 5. Memory organization

| | AREA0 (CC File) |
|----------------------|----------------------|
| | AREA1 |
| User memory | AREA2 ⁽¹⁾ |
| | PWM_CTRL |
| System configuration | CFG |

^{1.} Can be merged with AREA1

DS12114 - Rev 6 page 7/74



4.2 User memory

User memory is addressed as blocks (= pages) of 4 bytes, starting at address 0.

All the blocks of the user memory are initialized to 00h in the factory.

The ST25DV02K-W1/2 user memory areas are defines as follow:

- AREA0 starts at address 00h. It is composed of 1x block (4x bytes) which is always readable, and can be
 locked. AREA0 has been though for the CC file content according to NFC Type 5 formalism. However an
 application, which does not require to be NFC Type5 compliant, can do any other usage of this block.
- AREA1 starts at address 01h. It is composed of 31x blocks (124x bytes). It can be read and/or write-protected by dedicated 1x32-bit password. AREA1 is dedicated to user's data.
- AREA2 starts at address 20h. It is composed of 32x blocks (128x bytes). It can be read, and/or write-protected by dedicated 1x32-bit password. AREA2 is dedicated to user's data.

Note:

AREA1 and AREA2 can be merged in a single area of 63x blocks (252x bytes), which can be read - and/or - write-protected by 1x64-bit password.

 PWM CTRL area starts at address F8h. It is composed of 2x blocks, one per PWM, and is dedicated to PWM control (Enable, Period value and Pulse Width value). It can be individually read - and/or - writeprotected by 32-bit password.

Areas definition are fixed and can not be changed (expect the merge of AREA1 and AREA2)

Table 2 and Table 3 show the user area mode explained above.

Table 2. User memory 4x areas configuration

| Block addr. (hex) | Data bits [31:1] | Comment | RF command |
|-------------------|------------------------|---|---|
| 0 | User 0 (4x bytes) | AREA0 = CC file in case of NFC T5 application | |
| 1 | | | |
| 2 | | | Read Single Block Read Multiple Blocks Write Single Block |
| | User area (124x bytes) | AREA1 | |
| 1E | | | |
| 1F | - | | |
| 20 | User area (128x bytes) | AREA2 | |
| | | | |
| | | | |
| | | | |
| 3F | _ | | |
| - | - | - | |
| F8 | PWM1 control | PWM_CTRL | |
| F9 | PWM2 control | | |

DS12114 - Rev 6 page 8/74



Table 3. User memory 3x areas configuration

| Block addr. (hex) | Data bits [31:0] | Comment | RF command |
|-------------------|------------------------|---|---|
| 0 | User 0 (4x bytes) | AREA0 = CC file in case of NFC T5 application | |
| 1 | | | |
| 2 | | | |
| | | | |
| 1E | User area (252x bytes) | AREA1 merged with AREA2 | |
| 1F | | | |
| 20 | | | Read Single Block |
| | | | Read Multiple Blocks Write Single Block |
| | | | |
| | | | |
| 3F | | | |
| - | - | - | |
| F8 | PWM1 control | DIAMA CTDI | |
| F9 | PWM2 control | PWM_CTRL | |

DS12114 - Rev 6 page 9/74

Configuration security session password, 4 bytes



4.3 System configuration memory

In addition to user memory, ST25DV02K-W1/2 includes a set of registers located in the system configuration memory. Registers content is read during the boots sequences and define basic ST25DV02K-W1/2 behaviour. Some of those registers can be accessed via Read Configuration and Write Configuration commands, with an identifier acting as the register address.

Table 4. System configuration memory map shows the complete map of the system configuration registers, including their accessibility (Read / Write) and related conditions. More details are available in related registers table descriptions.

RF access Static Register Address Type Name **Function** 00h RW (1) Table 15. A1SA access AREA1 security attributes 01h $RW^{(1)}$ Table 17. A2SA access AREA2 security attributes 02h **RW**⁽¹⁾ Table 19. APSA access Area PWM_CTRL security attributes Table 9. PWM_CFG access 03hRW⁽¹⁾ PWM Configuration and coexistence with RF interface 04h RW⁽¹⁾ Table 21. LOCK CFG access Configuration registers permanent lock Table 23, LOCK BLOCK of AREA0/1/2 and NA R (2) W (3) Blocks Write protection (1x lock bit per block) PWM_CTRL access NA WO (4) Table 34. LOCK_DSFID access **DSFID lock status** WO (5) NA Table 36. LOCK_AFI access AFI lock status NA **RW**⁽⁴⁾ Table 38. DSFID access DSFID value NA **RW**⁽⁵⁾ Table 40. AFI access AFI value NA RO Table 42. IC_REF access IC reference value NA RO Table 44. UID access Unique identifier, 8 bytes NA WO (6) Table 25. PWD_PWM access PWM Control area security session password, 4 bytes WO⁽⁶⁾ NA Table 27. PWD_A1 access User AREA1 security session password, 4 bytes NA WO⁽⁶⁾ Table 29. PWD A2 access User AREA2 security session password, 4 bytes

Table 4. System configuration memory map

- Write access is granted if RF configuration security session is open and configuration is not locked (LOCK_CFG register equals to 0).
- 2. LOCK_BLOCK content is only readable through reading the Block Security Status of blocks.
- 3. Write access if the blocks are not already locked (=corresponding security session is open + block not already locked by a previous LOCK_BLOCK command).
- 4. Write access if DSFID is not already locked by a previous LOCK_DSFID command.
- 5. Write access if AFI is not already locked by a previous LOCK_AFI command.

Table 31. PWD CFG access

6. Write access only if corresponding security session is open.

NA

WO⁽⁶⁾

DS12114 - Rev 6 page 10/74



5 Specific features

ST25DV02K-W1/2 offers the following features:

- Pulse width modulation output
- Data protection
- TruST25 digital signature
- Device parameter registers

For some of them, the control registers are located in System Configuration area, and require the use of Read_Configuration or Write_Configuration commands. Update is only possible when the access right has been granted by presenting the configuration password (PWD_CFG), and if the system configuration was not previously locked (by LOCK_CFG=1).

After any valid write access to the configuration registers, the new configuration is immediately applied.

DS12114 - Rev 6 page 11/74



5.1 Pulse width modulation output

The chip provides up to 2x Pulse width modulation (PWM) outputs. This chapter describes how to configure and use each PWM.

5.1.1 Control and configuration registers

PWM control registers define the basic PWM settings for each PWM output: Enable, Period and Pulse width, as described in Section 5.1.2 Pulse width modulation feature description.

Table 5. PWM1_CTRL access

| RF | |
|--|--|
| Command | Туре |
| Read Single Block (cmd code 20h) @F8h | |
| Read Multiple Blocks (cmd code 23h) @F8h Read Multiple Blocks (cmd code 23h) @F8h | |
| Lock Single Block (cmd code 22h) @ F8h | on block lock status and on security session status (opened or closed) |
| Write Single Block (cmd code 21h) @F8h | · |

Table 6. PWM1_CTRL

| Bit | Name | Function | Factory Value |
|---------|---|-----------------------------|---------------|
| b14-b0 | b14-b0 PWM1_PERIOD PWM1_PERIOD PWM period value ⁽¹⁾ The period of the PWM1 output signal is calculated usi Period = 'PWM1_PERIOD' x PWMres (see Table 113. PWM1_PERIOD value must be within the [512 : 32767] | | 0000h |
| b15 | n RFU Reserved for future usage | | 0b |
| b30-b16 | PWM pulse width value ⁽¹⁾ : The pulse width duration of the PWM1 output signal is calculated using the following formula: Pulse width = 'PWM1_PULSEW' x PWMres (see Table 113. PWM characteristics). PWM1_PULSEW value must be within the [0 : 32767] range. | | 00000h |
| b31 | PWM1_ENABLE | Enable of PWM output signal | 0b |

Refer to Section 5.1.2 Pulse width modulation feature description for details on PWM1_PERIOD and PWM1_PULSEW values.

DS12114 - Rev 6 page 12/74



PWM2_CTRL register only applies with ST25DV02K-W2 chip version (2x PWM outputs). In case of single PWM output device version (ST25DV02K-W1), PWM2_CTRL register value has to be kept to its factory value (all bits = 0).

Table 7. PWM2_CTRL access

| RF | | |
|--|---|--|
| Command | Туре | |
| Read Single Block (cmd code 20h) @F9h | | |
| Read Multiple Blocks (cmd code 23h) @F9h | R & W protectable depending on APSA register content, on bloo | |
| Lock Single Block (cmd code 22h) @ F9h | | |
| Write Single Block (cmd code 21h) @F9h | | |

Table 8. PWM2_CTRL

| Bit | Name | Function | Factory Value |
|--------------------|-------------|--|---------------|
| b14-b0 PWM2_PERIOD | | PWM period value: (1) The period of the PWM2 output signal is calculated using following formula: Period = 'PWM2_PERIOD' x PWMres (see Table 113. PWM characteristics) PWM2_PERIOD value must be within the [512: 32767] range. | 0000h |
| b15 | RFU | Reserved for future usage | 0b |
| b30-b16 | PWM2_PULSEW | PWM pulse width value ⁽¹⁾ : The pulse width duration of the PWM2 output signal is calculated using the following formula: Pulse Width = 'PWM2_PULSEW' x PWMres (see Table 113. PWM characteristics) PWM2_PULSEW value must be within the [0 : 32767] range. | 00000h |
| b31 | PWM2_ENABLE | Enable of PWM output signal | 0b |

^{1.} Refer to Section 5.1.2 Pulse width modulation feature description for details on PWM2_PERIOD and PWM2_PULSEW values.

DS12114 - Rev 6 page 13/74



PWM Configuration register defines the expert PWM settings: Drive and coexistence parameters, as described in Section 5.1.2 Pulse width modulation feature description.

Table 9. PWM_CFG access

| RF | |
|--|----------|
| Command Type | |
| Read Configuration (cmd code A0h) @03h | R always |
| Write Configuration (cmd code A1h) @03h W if configuration security session is open and configuration not locked | |

Table 10. PWM_CFG

| Bit | Name | Function | Factory Value |
|-------|--------------|---|---------------|
| b1-b0 | PWM1_DRIVE | PWM output driver trimming: | 00b |
| b3-b2 | PWM2_DRIVE | 00: Full power output available 01: ¾ of full power output available 10: ½ of full power output available 11: ¼ of full power output available | 00b |
| b6-b4 | DUALITY_MNGT | PWM and RF interface coexistence (applies to both PWM): 000: Full coexistence of PWM output and RF interface 1xx: PWM output set in HiZ during RF commands ⁽¹⁾ 1xx: Power of PWM output reduced to ¼ of full power during RF commands (1) 2x1: PWM frequency reduced below Low_Freq ⁽²⁾ during RF commands ⁽¹⁾ , while keeping PWM duty cycle | 000Ь |
| b7 | RFU | Reserved for future usage | 0b |

^{1.} During RF command period starts from SOF (Start of Frame) and ends at the end of the Answer.

DS12114 - Rev 6 page 14/74

^{2.} Refer to Section 8 Device parameters.




5.1.2 Pulse width modulation feature description

A PWM output is characterized by two parameters:

- its period (or frequency)
- its duty cycle, representing the percentage of time the signal is in high state

Figure 6. PWM output

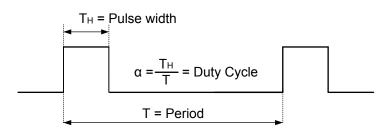

Period and pulse width are used to define and control the PWM output, in addition to an enable signal, allowing to put the PWM output in HiZ state.

PWM stage is supplied by V_{CC}/V_{SS} power pins. It is not supplied by RF interface. PWM works even when RF interface is OFF, as long as power is supplied through V_{CC}/V_{SS} pins. Similarly, RF interface works without V_{CC}/V_{SS} .

The PWM output stage is a push pull.

Refer to Section 3 Power management for details on V_{CC} Power-on/power-off and related PWM output states.

PWM control (PWM1_CTRL and PWM2_CTRL)

PWM control registers are located in a dedicated user area (PWM_CTRL), which is protected by a dedicated password (PWD_PWM) and its own access right register (APSA). Each PWM output is controlled by an independent register: PWM1_CTRL and PWM2_CTRL.

Each PWM control register provides user access to period value, pulse width value and an enable bit of the corresponding PWM output. Period and pulse width parameters are coded on 15 bits each: PWMx_PERIOD and PWMx_PULSEW.

PWM output state is defined from these three parameters as follows:

PWM EN PWMx PERIOD PWMx PULSEW Comments **PWM** output state 0 х HiZ Disabled Х 0 0 $< V_{OL}$ Р 0 < W < P PWM w. Duty Cycle [512:32767] > V_{OH} ≥ P 1

Table 11. PWM output parameters

An internal oscillator fixes the PWM resolution to PWMres (see Table 113. PWM characteristics). The PWM output period and pulse width are defined as multiples of this resolution value:

- Period = PWMres x PWMx PERIOD
- Pulse Width = PWMres x PWMx PULSEW

PWM output functionality is guaranteed over PWMx_PERIOD range from 512 to 32767, which implies a Period range from 32 to 2048 μ s (corresponding to a frequency from 31250 to 488.3 Hz). Over this range, the PWM output resolution is as follows:

DS12114 - Rev 6 page 15/74



| PWM output frequency | Number of bits used | PWM resolution |
|----------------------|---------------------|--|
| (Hz) | for PWMx_PERIOD | (number of bits available to code PWMx_PULSEW) |
| 31250 | 9 | 9 |
| 15625 | 10 | 10 |
| 7813 | 11 | 11 |
| 3906 | 12 | 12 |
| 1953 | 13 | 13 |
| 977 | 14 | 14 |
| 488 | 15 | 15 |

Table 12. PWM output resolution

When PWM_CTRL registers are updated by a successful RF command (Write Single Block @ F8h/F9h with response), the related PWM output change applies as follows:

RF SOF Write single block new setup @ PWM_CTRL EOF SOF ST25DV02K-W response EOF tpwm-UPD

Previous setup

New setup

Figure 7. PWM output change

There is no anti-tearing mechanism on PWM_CTRL registers. Write access to PWM_CTRL registers must be done with stable RF field and constant V_{CC} state (either ON or OFF). Otherwise the RF write operation may not complete properly, implying a loss/corruption of register content, requiring a new Write operation.

PWM Configuration (PWM_CFG)

PWM configuration register is located in System Configuration area.

It provides access to output driver level adjustment, in addition to extended coexistence modes between RF and PWM interfaces.

Configuration of PWM output driver trimming: the PWM push-pull output stage is able to drive up to I_{MAX} (refer to Section 8 Device parameters) by default. If the application does not require full power it is possible to reduce the output drive capability independently through PWM_CFG trimming registers (PWM_CFG bits b1-b0 for PWM1 and PWM_CFG bits b3-b2 for PWM2).

DS12114 - Rev 6 page 16/74



| ı | PWM_CFG[1:0]/PWM_CFG[3:2]/ | PWM1/PWM2 output drive capability (sink and source) |
|---|----------------------------|---|
| ľ | 00b | I _{MAX} (default setup) ⁽¹⁾ |
| l | 01b | 75% of I _{MAX} ⁽¹⁾ |
| l | 10b | 50% of I _{MAX} ⁽¹⁾ |
| ł | 11h | 25% IMAX ⁽¹⁾ |

Table 13. PWM output driver trimming

Configuration of PWM output coexistence with RF: a PWM_CFG Duality_Mngt register (PWM_CFG bits b6-b4) allows to reduce the impact of PWM noise over RF interface, and then help the coexistence. This register applies to both PWM outputs (when applicable).


Table 14. PWM output coexistence with RF interface

| PWM_CFG[6:4] | Coexistence setting |
|--------------|--|
| 000b | PWM and RF working normally and simultaneously (default setup) |
| 1xxb | Put PWM outputs in HiZ state during RF commands. |
| 01xb | Reduce PWM outputs drive to minimum power level (25% of the maximum output power level), during RF commands. |
| 0x1b | Reduce PWM outputs frequencies (while keeping duty cycles), in order to move them below a predefined value (Low_Freq, see Table 113. PWM characteristics), and then move out of the VCD RF sensitivity region. This option only applies if PWM output frequencies are above the predefined frequency value |

The option 1xxb = "Put PWM outputs in HiZ state" is exclusive option, whereas "Reduced PWM drive" and "Reduced frequency" options can be cumulated if needed.

Coexistence options only applies "during RF commands", in order to minimize impact on PWM output signals. "During RF commands" period is defined from Start-of-Frame of the request command, up to the End-of-Frame of the corresponding answer:

Figure 8. PWM answer

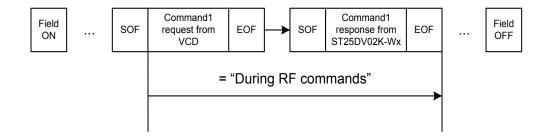


When PWM_CFG register is updated by a successful RF command (Write_Config @ 03h with response), PWM outputs change applies as follow:

DS12114 - Rev 6 page 17/74

^{1.} Refer to Section 8 Device parameters.



Figure 9. PWM output change

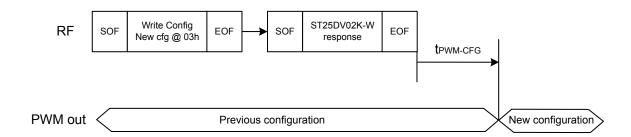

There is no anti-tearing mechanism on PWM_CFG register. Write access to PWM_CFG registers shall be done with stable RF field and constant VCC state (either ON or OFF). Otherwise the RF write operation may not complete properly, and could imply a loss/corruption of register content, requiring a new Write config operation.

DS12114 - Rev 6 page 18/74



5.2 Data protection

ST25DV02K-W1/2 provides a special data protection mechanism based on passwords that unlock security sessions. 4 x 32 bits passwords are stored in EEPROM, covering:

- Password for AREA1
- Password for AREA2 (If AREA1 and AREA2 are merged, the corresponding area will be protected by a 64 bits password),
- · Password for PWM control area
- Password for System Configuration area

User memory can be protected from read and/or write access. The system configuration is always protected from write access.

Other lock mechanisms are supported (lock block, lock AFI, lock DSFID), as described in the following sections.

5.2.1 Data protection registers

Registers described in this chapter are all located in System configuration memory. Refer to Table 4. System configuration memory map for more details.

Table 15. A1SA access

| RF | | |
|--|--|--|
| Command Type | | |
| Read Configuration (cmd code A0h) @00h R always | | |
| Write Configuration (cmd code A1h) @00h W if configuration security session is open and configuration not locked | | |

Table 16. A1SA

| Bit | Name | Function | Factory Value |
|-------|------------------|--|---------------|
| | | AREA1 access rights: | |
| | | 00: Read always is allowed / Write always allowed | |
| b1-b0 | RW_PROTECTION_A1 | 01: Read always is allowed / Write allowed only if AREA1 user security session is opened (= the proper AREA1 password has been presented) | 00b |
| | | 10: Read and Write is allowed only if AREA1 user security session is opened (the proper AREA1 password has been presented) | - 30 |
| | | 11: Read is only allowed if AREA1 user security session is opened (the proper AREA1 password has been presented) / Write always forbidden | |
| | | User memory split: | |
| | MEM_ORG | 0: user memory is split in four areas (AREA0/1/2 & PWM_CTRL) | |
| b2 | | 1: user memory is split in three areas (AREA0/1 & PWM_CTRL) = AREA1 & AREA2 are merged in a single AREA1. In case of merged areas, RW_PROTECTION_A1 register applies as access rights. | 1b |
| b7-b3 | RFU | - | 00000b |

DS12114 - Rev 6 page 19/74



Table 17. A2SA access

| RF | | |
|---|--|--|
| Command Type | | |
| Read Configuration (cmd code A0h) @01h | R always | |
| Write Configuration (cmd code A1h) @01h | W if configuration security session is open and configuration not locked | |

Table 18. A2SA

| Bit | Name | Function | Factory Value | |
|-------|------------------|--|---------------|--|
| | | AREA2 access rights: | | |
| | | 00: Read is always allowed / Write always allowed | | |
| | | 01: Read always is allowed. Write is only allowed if AREA2 user security session is opened (= the proper AREA2 password has been presented) | | |
| b1-b0 | RW_PROTECTION_A2 | 10: Read and Write is only allowedif AREA2 user security session is opened (the proper AREA2 password has been presented) | 00b | |
| | | 11: Read is only allowed if AREA2 user security session is opened (the proper AREA2 password has been presented), Write is always forbidden. | | |
| | | In case of merged AREA1 + AREA2 in a single AREA1, the RW_PROTECTION_A2 bits are not used. | | |
| b7-b2 | RFU | - | 00000b | |

Table 19. APSA access

| RF | | |
|--|----------|--|
| Command | Туре | |
| Read Configuration (cmd code A0h) @02h | R always | |
| Write Configuration (cmd code A1h) @02h W if configuration security session is open and configuration not locked | | |

Table 20. APSA

| Bit | Name | Function | Factory Value |
|-------|------------------|--|---------------|
| b1-b0 | RW_PROTECTION_AP | Area PWM_CTRL access rights: 00: Read and Write are always allowed. 01: Read is always allowed. Write is only allowed if Area PWM_CTRL user security session is opened (= the proper Area PWM_CTRL password has been presented) 10: Read and Write are only allowed if Area PWM_CTRL user security session is opened (the proper area PWM_CTRL password has been presented) 11: Read is only allowed if Area PWM_CTRL user security session is opened (the proper area PWM_CTRL password has been presented). Write is always forbidden. | 00ь |
| b7-b2 | RFU | - 00000b | |

DS12114 - Rev 6 page 20/74



Table 21. LOCK_CFG access

| RF | | |
|---|--|--|
| Command Type | | |
| Read Configuration (cmd code A0h) @04h | R always | |
| Write Configuration (cmd code A1h) @04h | W if configuration security session is open and configuration not locked | |

Table 22. LOCK_CFG

| Bit | Name | Function | Factory Value |
|-------------|---|--|---------------|
| | | Lock configuration register: | |
| | | 0: Configuration registers are unlocked | |
| b0 LOCK_CFG | 1: Configuration registers are permanently locked in write. | 0b | |
| | | It only concerns configuration registers accessible by Write_Config command. Passwords, AFI, DSFID, Block lock, AFI lock & DSFID lock are not concerned by this mechanism. | |
| b7-b1 | RFU | - | 0000000ь |

Table 23. LOCK_BLOCK of AREA0/1/2 and PWM_CTRL access

| RF RF | | |
|--|---|--|
| Command | Туре | |
| Read Block (cmd code 20h) @Block addr | | |
| Read Multi Block (cmd code 23h) @Block addr | R always | |
| Get Multi Block Security Status (cmd code 2Ch) @Block addr | W only if corresponding Block is not locked | |
| Lock single Block (cmd code 22h) @Block addr | | |

Table 24. LOCK_BLOCK of AREA0/1/2 and PWM_CTRL

| Bit | Name | Function | Factory Value | |
|-----|------------|---|---------------|----|
| | | Lock write access of corresponding block: | | |
| N/A | LOCK_BLOCK | 0: Block not locked in Write | | 0b |
| | | 1: Block permanently locked in write | | |

DS12114 - Rev 6 page 21/74



Table 25. PWD_PWM access

| RF | | |
|---|--|--|
| Command | Туре | |
| No Read | No Read | |
| Write password (cmd code B1h) with Pwd_Id = 00h | W only if PWM_CTRL Area security session is opened | |

Table 26. PWD_PWM

| Bit | Name | Function | Factory Value |
|----------|---------|----------------------------------|---------------|
| bit31-b0 | PWD_PWM | Password value for PWM_CTRL area | 00000000h |

Table 27. PWD_A1 access

| RF | | | |
|---|---|--|--|
| Command | Туре | | |
| No Read | No Read | | |
| Write password (cmd code B1h) with Pwd_ld = 01h | W only if AREA1 security session is opened. | | |

Table 28. PWD_A1

| Bit | Name | Function | Factory Value |
|--------|--------|--|---------------|
| b31-b0 | PWD_A1 | When MEM_ORG=0: Password value for user AREA1 When MEM_ORG=1: LSB password value (32bits out of 64) for user AREA1 (merged with AREA2) | 00000000h |

Table 29. PWD_A2 access

| RF | | |
|---|---|--|
| Command | Туре | |
| No Read Write password (cmd code B1h) with Pwd_Id = 02h | No Read W only if: AREA2 security session is opened (when MEM_ORG=0) AREA1 security session is opened (when MEM_ORG=1, AREA1+AREA2 are merged) | |

Table 30. PWD_A2

| Bit | Name | Function | Factory Value |
|-------------|--------|--|---------------|
| b31-b0 | PWD A2 | When MEM_ORG = 0: Password value for user AREA2 | 00000000h |
| D31-D0 PVVD | _ | When MEM_ORG = 1: MSB password value (32 bits out of 64) for user area 1 (merged with AREA2) | 000000011 |

DS12114 - Rev 6 page 22/74



Table 31. PWD_CFG access

| RF | | | |
|---|---|--|--|
| Command | Туре | | |
| No Read | No Read | | |
| Write password (cmd code B1h) with Pwd_Id = 03h | W only if the System Configuration Area security session is opened. | | |

Table 32. PWD_CFG

| Bit | Name | Function | Factory Value |
|------------|---------|---------------------------------------|---------------|
| b31- b0 | PWD_CFG | Password value for configuration area | 00000000h |

5.2.2 Passwords and security sessions

ST25DV02K-W1/2 provides protection of user memory and system configuration registers. User can access to the protected data by opening security sessions thanks to the help of corresponding password.

There is two types of security sessions, as shown in Table 33:

Table 33. Security session type

| Security session | Open by presenting | Right granted when security session is open, and until it is closed |
|------------------|-----------------------|---|
| user | PWD_A1 PWD_A2 PWD_PWM | User can access to corresponding user memory as defined in AiSA registers User can update the password corresponding to the opened session. |
| configuration | PWD_CFG | User can write configuration registers (if not permanently locked) User can update PWM_CFG password |

If AREA1 and AREA2 are independent (MEM_ORG = 0b), each of the AREA1 and 2 passwords is 32-bit long. If AREA1 and AREA2 are merged in a single area (MEM_ORG = 1b), the merged area password is 64-bit long (made with 32-bit AREA1 password + 32-bit AREA2 password).

The ST25DV02K-W1/2 passwords management is based on two commands:

- Write Password (code B1h) (see Section 6.4.17 Write Password).
- Present Password (code B3h) (See Section 6.4.18 Present Password).

For any of the 4x passwords available, three actions are possible:

- Open Security Session: use Present_Password command, with password identifier (00h for PWD_PWM, 01h for PWD_A1, 02h for PWD_A2 and 03h for PWD_CFG) and the valid corresponding password.
- Write password: use Present_Password command, with password identifier (00h for PWD_PWM, 01h for PWD_A1, 02h for PWD_A2 and 03h for PWD_CFG) and the valid corresponding password. Then use Write_Password command, with same password identifier and the new password.
- Close Security Session: to close the current security session, user can choose one of the following options:
 - Remove tag from RF field
 - Use Present_Password command with a wrong password
 - Use Present_Password command to open security session of another Area (using a different password identifier). Opening a new security session (user or configuration) automatically close the previously opened one (even if the new opening fails)

Note: In case of merged AREA1 + AREA2 (MEM_ORG=1b), the Security session opening is different:


- The 64-bit password is presented with one Present_Password operation,
- Write_Password command still applies on 32-bit password, hence update of the 64-bit password must be done by 2x Write Password operations, with AREA1 password Id and with AREA2 password Id,

DS12114 - Rev 6 page 23/74



Figure 10 describes the mechanism to open/close the security sessions.

Figure 10. Security sessions management

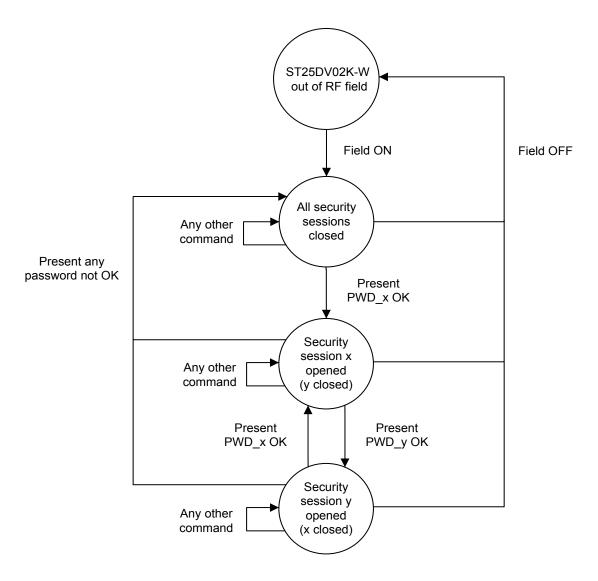

5.2.3 User memory protection

- AREA0 (composed of a single block= block0):
 - It is always readable,
 - It can only be individually write locked by issuing a Lock Single Block command. This lock is permanent,
 - User needs no password to lock block 0,
 - Locking block 0 is possible even if the configuration is locked (LOCK_CFG=1).
- AREA1, AREA2 and PWM CTRL areas:
 - Protections are independently defined by corresponding AiSA registers (A1SA, A2SA, APSA). See Table 15, Table 17 and Table 19 for details about available read and write protections.
 - When updating AiSA registers, the new protection value is effective immediately after the register write completion.
 - In addition to the password protection mechanism, each block composing AREA1, AREA2 & PWM_CTRL can be individually locked by issuing a Lock Single Block command (permanently lock the write access to the corresponding block).

DS12114 - Rev 6 page 24/74



On factory delivery, user areas protection are all disabled.

Retrieve the security status of a user memory block or byte

User can read a block security status by issuing following commands:

- Get Multiple Blocks Security Status command
- Read Single Block with option flag set to 1
- Read Multiple Blocks with option flag set to 1

ST25DV02K-W1/2will respond with a Block security status containing a Lock_bit flag as specified in ISO 15693 standard. This lock bit flag is set to one if block is locked against write.

Such lock against write can be obtained by different ways:

- Either the Lock Block bit of the block has been set (permanent)
- Or security session is closed with protection in Write (RW_PROTECTION_Ax = 01b or 10b or 11b)
- Or security session is opened with protection on Write always forbidden (RW PROTECTION Ax = 11b)

5.2.4 System configuration memory protection

By default, system memory is write protected.

To enable write access to system configuration registers, user must open the configuration security session by presenting a valid password PWD_CFG (Id=03h) and system configuration must not be permanently locked (LOCK CFG=00h).

By default, user can read every system configuration registers, except passwords, LOCK_DSFID and LOCK_AFI. Configuration lock:

- Write access to system configuration registers can be permanently locked by writing 01h in the LOCK_CFG register.
- User cannot unlock system configuration if LOCK_CFG=01h, even after opening configuration security session (Lock is definitive).
- When system configuration is locked (LOCK_CFG=01h), it is still possible to change passwords (PWD_A1, PWD_A2, PWD_PWM, PWD_CFG).
- When system configuration is locked (LOCK_CFG=01h), it is still possible to lock AFI & DSFID registers (as
 described here after).

Device identification registers:

- AFI and DFSID registers can be independently locked by user, issuing respectively a Lock AFI and a Lock DSFID command. Lock is definitive: once locked, AFI and DSFID registers cannot be unlocked.
- Other device identification registers (IC_REF, UID) are read only registers.

5.3 TruST25 digital signature

The ST25DV02K-W devices support the TruST25 digital signature feature, which allows the user to verify the authenticity of the device, thanks to a unique digital signature.

TruST25 solution encompasses secure industrialization processes and tools deployed by STMicroelectronics to generate, store and check the signature in the device.

Refer to "AN5149 – TruST25 digital signature for ST25DV02K-W series Dynamic NFC Tags", available under NDA, for more details on how to use it. Contact your STMicroelectronics sales office to get this document.

DS12114 - Rev 6 page 25/74



5.4 Device parameter registers

Registers described in this chapter are located in System configuration memory. Refer to Table 4. System configuration memory map for more details.

Table 34. LOCK_DSFID access

| RF | | |
|---------------------------|------------------------|--|
| Command | Туре | |
| Lock DSFID (cmd code 2Ah) | WO if DSFID not locked | |

Table 35. LOCK_DSFID

| Bit | Name | Function | Factory Value |
|-------|------------|---|---------------|
| b0 | LOCK_DSFID | 0: DSFID is not locked 1: DSFID is locked | 0b |
| b7-b1 | RFU | - | 0000000b |

Table 36. LOCK_AFI access

| RF | | |
|-------------------------|----------------------|--|
| Command | Туре | |
| Lock AFI (cmd code 28h) | WO if AFI not locked | |

Table 37. LOCK_AFI

| Bit | Name | Function | Factory Value |
|-------|----------|---------------------------------------|---------------|
| b0 | LOCK_AFI | 0: AFI is not locked 1: AFI is locked | 0b |
| b7-b1 | RFU | - | 0000000b |

Table 38. DSFID access

| RF | | |
|--------------------------------|-----------------------|--|
| Command | Туре | |
| Inventory (cmd code 01h) | R always | |
| Get System Info (cmd code 2Bh) | W if DSFID not locked | |
| Write DSFID (cmd code 28h) | W II DOFID HOLIOCKEU | |

Table 39. DSFID

| Bit | Name | Function | Factory Value |
|-------|-------|--|---------------|
| b7-b0 | DSFID | ISO/IEC 15693 Data Storage Format Identifier | 00h |

DS12114 - Rev 6 page 26/74



Table 40. AFI access

| RF | |
|--------------------------------|------------------------------|
| Command | Туре |
| Inventory (cmd code 01h) | Delwaye |
| Get System Info (cmd code 2Bh) | R always W if AFI not locked |
| Write AFI (cmd code 27h) | W II AFT HOLIOCKEU |

Table 41. AFI

| Bit | Name | Function | Factory Value |
|-------|------|---|---------------|
| b7-b0 | AFI | ISO/IEC 15693 Application Family Identifier | 00h |

Table 42. IC_REF access

| RF | |
|--------------------------------|------|
| Command | Туре |
| Get System Info (cmd code 2Bh) | RO |

Table 43. IC_REF

| Bit | Name | Function | Factory Value |
|-------|--------|----------------------------|-----------------------|
| b7-b0 | IC_REF | ISO/IEC 15693 IC Reference | 38/39h ⁽¹⁾ |

1. 38h applies to ST25DV02K-W1, 39h applies to ST25DV02K-W2.

Table 44. UID access

| RF | |
|--------------------------------|------|
| Command | Туре |
| Inventory (cmd code 01h) | RO |
| Get System Info (cmd code 2Bh) | RO . |

Table 45. UID

| Bit | Name | Function | Fac | tory Value |
|---------|------|---|-----|----------------------------|
| b7-b0 | | ISO/IEC 15693 UID byte 0 (LSB) | | |
| b15-b8 | | ISO/IEC 15693 UID byte 1 | | |
| b23-b16 | | ISO/IEC 15693 UID byte 2 | | ianufacturer ial number |
| b31-b24 | LUD | ISO/IEC 15693 UID byte 3 | | |
| b39-b32 | UID | ISO/IEC 15693 UID byte 4 | | |
| b47-b40 | | ISO/IEC 15693 UID byte 5: ST Product code | 3 | 8/39h ⁽¹⁾ |
| b55-b48 | | ISO/IEC 15693 UID byte 6: IC Mfg code | | 02h |
| b63-b56 | | ISO/IEC 15693 UID byte 7 (MSB) | | E0h |

1. 38h applies to ST25DV02K-W1, 39h applies to ST25DV02K-W2

DS12114 - Rev 6 page 27/74



6 RF operation

Contactless exchanges are performed as specified by ISO/IEC 15693 and NFC Forum Type 5 Tag. The device communicates via the 13.56 MHz carrier electromagnetic wave on which incoming data are demodulated from the received signal amplitude modulation (ASK: amplitude shift keying). The received ASK wave is 10% or 100% modulated with a data rate of 1.6 Kbit/s using the 1/256 pulse coding mode or a data rate of 26 Kbit/s using the 1/4 pulse coding mode.

Outgoing data are generated by the ST25DV02K-W1/2 load variation using Manchester coding with one or two subcarrier frequencies at 423 kHz and 484 kHz. Data are transferred from the ST25DV02K-W1/2 at 6.6 Kbit/s in low data rate mode and 26 Kbit/s in high data rate mode.

The device follows ISO/IEC 15693 and NFC Forum Type 5 Tag recommendation for radio-frequency power and signal interface and for anticollision and transmission protocol.

6.1 RF communication

6.1.1 Access to an ISO/IEC 15693 device

The dialog between the reader and the ST25DV02K-W1/2 takes place as follows:

- activation of the ST25DV02K-W1/2 by the operating field of the reader
- transmission of a command by the reader (ST25DV02K-W1/2 detects carrier amplitude modulation)
- transmission of a response by the ST25DV02K-W1/2 using load modulation.

These operations use the power transfer and communication signal interface described below. This technique is called RTF (reader talk first).

Operating field

The ST25DV02K-W1/2 operates continuously between the minimum and maximum values of the electromagnetic field H defined in Table 112. RF characteristics. The reader has to generate a field within these limits.

Power transfer

Power is transferred to the ST25DV02K-W1/2 by radio frequency at 13.56 MHz via coupling antennas in the ST25DV02K-W1/2 and the reader. The operating field of the reader is transformed on the ST25DV02K-W1/2 antenna to an AC voltage that is rectified, filtered and internally regulated. During communications, the amplitude modulation (ASK) on this received signal is demodulated by the ASK demodulator.

Frequency

The ISO 15693 standard defines the carrier frequency (f_C) of the operating field as 13.56 MHz ± 7 kHz.

DS12114 - Rev 6 page 28/74



6.2 RF protocol

6.2.1 Protocol description

The transmission protocol (or simply "the protocol") defines the mechanism used to exchange instructions and data between the VCD (vicinity coupling device) and the VICC (vicinity integrated circuit card) in both directions. It is based on the concept of "VCD talks first". The device acts as the VICC.

This means that a ST25DV02K-W1/2 does not start transmitting unless it has received and properly decoded an instruction sent by the VCD. The protocol is based on an exchange of:


- a request from the VCD to the ST25DV02K-W1/2
- a response from the ST25DV02K-W1/2 to the VCD.

Each request and each response are contained in a frame. The frames are delimited by a Start of Frame (SOF) and End of Frame (EOF).

The protocol is bit-oriented. The number of bits transmitted in a frame is a multiple of eight (8), that is an integer number of bytes.

A single-byte field is transmitted least significant bit (LSBit) first. A multiple-byte field is transmitted least significant byte (LSByte) first and each byte is transmitted least significant bit (LSBit) first.

Figure 11. ST25DV02K-W1/2 protocol timing

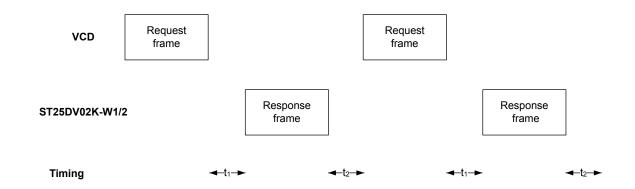

6.2.2 Supported states

- Power-off
- Ready
- Quiet
- Selected

Transitions between these states are specified in Figure 12. Device state transition diagram and Table 46. Device response depending on Request_flags.

Power-off state

The ST25DV02K-W1/2 is in RF Power-off state when it does not receive enough energy from the VCD.

Ready state

The ST25DV02K-W1/2 is in the Ready state when it receives enough energy from the VCD. When in the Ready state, the ST25DV02K-W1/2 answers any request where the Select_flag is not set.

Quiet state

When in the Quiet state, the ST25DV02K-W1/2 answers any request with the Address_flag set, except for Inventory requests.

DS12114 - Rev 6 page 29/74



Selected state


In the Selected state, the ST25DV02K-W1/2 answers any request in all modes (see Section 6.2.3 Modes):

- Request in Select mode with the Select_flag set
- Request in Addressed mode if the UID matches
- · Request in Non-Addressed mode as it is the mode for general requests

Table 46. Device response depending on Request_flags

| | Addı | ress_flag | Select_flag | |
|--|-----------|---------------|-------------|--------------|
| Flags | 1 | 0 | 1 | 0 |
| | Addressed | Non addressed | Selected | Non selected |
| ST25DV02K-W1/2 in Ready or Selected state (devices in Quiet state do not answer) | - | × | - | Х |
| ST25DV02K-W1/2 in Selected state | - | X | Х | - |
| ST25DV02K-W1/2 in Ready, Quiet or Selected state (the device matching the UID) | Х | - | - | Х |
| Error (03h) or no response (command dependent) | X | - | X | - |

Figure 12. Device state transition diagram

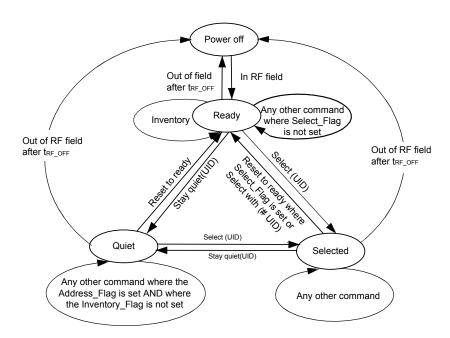

The ST25DV02K-W1/2 returns to the power-off state if the tag is out of the field for at least t_{RF OFF}.

The intention of the state transition method is that only one ST25DV02K-W1/2 must be in the Selected state at any given time.

When the Select_flag is set to 1, the request must NOT contain a unique ID.

When the Address_flag is set to 0, the request must NOT contain a unique ID.

DS12114 - Rev 6 page 30/74



6.2.3 Modes

The term "mode" refers to the mechanism used in a request to specify the set of ST25DV02K-W1/2 devices that must execute the request.

Addressed mode

When the Address_flag is set to 1 (Addressed mode), the request contains the UID (unique ID) of the addressed ST25DV02K-W1/2.

Any ST25DV02K-W1/2 receiving a request with the Address_flag set to 1 compares the received UID to its own. If it matches the device executes the request (if possible) and returns a response to the VCD as specified in the command description.

If the UID does not match the device remains silent.

Non-addressed mode (general request)

When the Address_flag is cleared to 0 (Non-Addressed mode), the request does not contain a UID.

Select mode

When the Select_flag is set to 1 (Select mode), the request does not contain a unique ID. The ST25DV02K-W1/2 in the Selected state that receives a request with the Select_flag set to 1 executes it and returns a response to the VCD as specified in the command description.

Only the ST25DV02K-W1/2 in the Selected state answers a request where the Select flag is set to 1.

The system design ensures that only one ST25DV02K-W1/2 can be in the Select state at a given time.

6.2.4 Request format

The request consists of:

- an SOF
- flags
- a command code
- parameters and data
- a CRC
- an EOF.

Table 47. General request format

| SC | Request_flags | Command code | Parameters | Data | 2 byte CRC | EOF | |
|----|---------------|--------------|------------|------|------------|-----|--|
|----|---------------|--------------|------------|------|------------|-----|--|

6.2.5 Request flags

In a request, the "flags" field specifies the actions to be performed by the ST25DV02K-W1/2 and whether corresponding fields are present or not.

The flags field consists of eight bits. Bit 3 (Inventory_flag) of the request flag defines the contents of the four MSBs (bits 5 to 8). When bit 3 is reset (0), bits 5 to 8 define the ST25DV02K-W1/2 selection criteria. When bit 3 is set (1), bits 5 to 8 define the ST25DV02K-W1/2 Inventory parameters.

DS12114 - Rev 6 page 31/74



Table 48. Definition of request flags 1 to 4

| Bit No | Flag | Level | Description |
|--------|--------------------------|-------|---|
| Bit 1 | Subcarrier flag (1) | 0 | A single subcarrier frequency is used by the ST25DV02K-W1/2 |
| DIL I | Subcarrier_liag (*/ | 1 | Two subcarriers are used by the ST25DV02K-W1/2 |
| Bit 2 | Data rate flog (2) | 0 | Low data rate is used |
| DIL Z | Bit 2 Data_rate_flag (2) | 1 | High data rate is used |
| Bit 3 | Inventory flag | 0 | The meaning of flags 5 to 8 is described in Table 49. Request flags 5 to 8 when inventory_flag, Bit 3 = 0 |
| DIC 3 | inventory_nag | 1 | The meaning of flags 5 to 8 is described in Table 50. Request flags 5 to 8 when inventory_flag, Bit 3 = 1 |
| Bit 4 | Protocol extension flag | 0 | No Protocol format extension |
| DIL 4 | FTOLOCOI_exterision_nag | 1 | Protocol format extension. Reserved for future use. |

^{1.} Subcarrier_flag refers to the ST25DV02K-W1/2-to-VCD communication.

Table 49. Request flags 5 to 8 when inventory_flag, Bit 3 = 0

| Bit nb | Flag | Level | Description |
|--------------------|-----------------|--|--|
| D:t 5 | 0 | The request is executed by any ST25DV02K-W1/2 according to the setting of Address_flag | |
| Bit 5 | Select flag (1) | 1 | The request is executed only by the ST25DV02K-W1/2 in Selected state |
| Dit 6 | | 0 | The request is not addressed. UID field is not present. The request is executed by all ST25DV02K-W1/2s. |
| Bit 6 Address flag | Address liag | 1 | The request is addressed. UID field is present. The request is executed only by the ST25DV02K-W1/2 whose UID matches the UID specified in the request. |
| Bit 7 | Ontion floa | 0 | Option not activated. |
| Bit 7 Option flag | Option liag | 1 | Option activated. |
| Bit 8 | RFU | 0 | - |

^{1.} If the Select_flag is set to 1, the Address_flag is set to 0 and the UID field is not present in the request.

Table 50. Request flags 5 to 8 when inventory_flag, Bit 3 = 1

| Bit nb | Flag | Flag Level Description | | | |
|-----------|---------------|------------------------|--------------------------|--|--|
| Bit 5 | AFI flag | 0 | AFI field is not present | | |
| ви э | AFI liag | 1 | AFI field is present | | |
| Bit 6 | Nb_slots flag | 0 | 16 slots | | |
| Bil 0 | | 1 | 1 slot | | |
| Bit 7 | Option flag | 0 | - | | |
| Bit 8 RFU | | 0 | - | | |

6.2.6 Response format

The response consists of:

- an SOF,
- flags,
- parameters and data,
- a CRC,
- an EOF.

DS12114 - Rev 6 page 32/74

^{2.} Data_rate_flag refers to the ST25DV02K-W1/2-to-VCD communication.



Table 51. General response format

| SOF Response_flags Parameters Data 2 byte CRC EOF | SOF | Response_flags | Parameters | Data | 2 byte CRC | EOF |
|---|-----|----------------|------------|------|------------|-----|
|---|-----|----------------|------------|------|------------|-----|

6.2.7 Response flags

Table 52. Definitions of response flags 1 to 8

| Bit Nb | Flag | Level | Description |
|----------------|------------|-------|---|
| Dit 1 | Error flog | 0 | No error |
| Bit 1 Error_fl | Error_flag | 1 | Error detected. Error code is in the "Error" field. |
| Bit 2 | RFU | 0 | - |
| Bit 3 | RFU | 0 | - |
| Bit 4 | RFU | 0 | - |
| Bit 5 | RFU | 0 | - |
| Bit 6 | RFU | 0 | - |
| Bit 7 | RFU | 0 | - |
| Bit 8 | RFU | 0 | - |

In a response, the flags indicate how actions have been performed by the ST25DV02K-W1/2 and whether corresponding fields are present or not. The response flags consist of eight bits.

6.2.8 Response and error code

If the Error_flag is set by the ST25DV02K-W1/2 in the response, the Error code field is present and provides information about the error that occurred.

Error codes not specified in Table 53. Response error code definition are reserved for future use.

Table 53. Response error code definition

| Error code | Meaning | | | |
|-------------|--|--|--|--|
| 01h | Command is not supported. | | | |
| 02h | Command is not recognized (format error). | | | |
| 03h | The option is not supported. | | | |
| 0Fh | Error with no information given. | | | |
| 10h | The specified block is not available. | | | |
| 11h | The specified block is already locked and thus cannot be locked again. | | | |
| 12h | The specified block is locked and its contents cannot be changed. | | | |
| 13h | The specified block was not successfully programmed. | | | |
| 14h | The specified block was not successfully locked. | | | |
| 15h | The specified block is protected in read. | | | |
| No response | It could indicate illegal programming. | | | |

DS12114 - Rev 6 page 33/74



6.3 Timing definition

t₁: VICC response delay

Upon detection of the rising edge of the EOF received from the VCD, the ST25DV02K-W1/2 waits for a t_{1nom} time before transmitting its response to a VCD request or switching to the next slot during an inventory process. Values of t_1 are given in Table 54. Timing values.

t2: VCD new request delay

 t_2 is the time after which the VCD may send an EOF to switch to the next slot when one or more ST25DV02K-W1/2 responses have been received during an Inventory command. It starts from the reception of the EOF from the ST25DV02K-W1/2s.

The EOF sent by the VCD may be either 10% or 100% modulated regardless of the modulation index used for transmitting the VCD request to the ST25DV02K-W1/2.

 t_2 is also the time after which the VCD may send a new request to the ST25DV02K-W1/2, as described in Figure 11. ST25DV02K-W1/2 protocol timing.

Values of t₂ are given in Table 54. Timing values.

t₃: VCD new request delay when no response is received from the VICC

 t_3 is the time after which the VCD may send an EOF to switch to the next slot when no ST25DV02K-W1/2 response has been received.

The EOF sent by the VCD may be either 10% or 100% modulated regardless of the modulation index used for transmitting the VCD request to the ST25DV02K-W1/2.

From the time the VCD has generated the rising edge of an EOF:

- If this EOF is 100% modulated, the VCD waits for a time at least equal to t_{3min} for 100% modulation before sending a new EOF.
- If this EOF is 10% modulated, the VCD waits for a time at least equal to t_{3min} for 10% modulation before sending a new EOF.

| | Minimu | m (min) values | Nominal (nom) values | Maximum (max) values | | |
|----------------|---|---------------------------|---|----------------------|--|--|
| | 100% modulation | 10% modulation | Nominal (nom) values | Maximum (max) values | | |
| t ₁ | 4320 / f _c = 318.6 µs | | $4320 / f_c = 318.6 \mu s$ $4352 / f_c = 320.9 \mu s$ | | | |
| t ₂ | 4192 / | f _c = 309.2 μs | No t _{nom} | No t _{max} | | |
| t ₃ | t _{1max} (2)+ t _{SOF} (3) | | No t _{nom} | No t _{max} | | |

Table 54. Timing values

- 1. VCD request will not be interpreted during the first milliseconds following the field rising.
- t_{1max} does not apply for write-alike requests. Timing conditions for write-alike requests are defined in the command description.
- 3. t_{SOF} is the time taken by the ST25DV02K-W1/2 to transmit an SOF to the VCD. t_{SOF} depends on the current data rate: High data rate or Low data rate.
- t_{NRT} is the nominal response time of the ST25DV02K-W1/2. t_{NRT} depends on VCD to ST25DV02K-W1/2 data rate and subcarrier modulation mode.

Note: The tollerance of specific timing is $\pm 32/f_C$.

DS12114 - Rev 6 page 34/74



6.4 RF commands

The ST25DV02K-W1/2 supports the following RF command set:

- Inventory, used to perform the anticollision sequence.
- Stay Quiet, used to put the ST25DV02K-W1/2 in quiet mode, where it does not respond to any inventory command.
- Read Single Block, used to output the 32 bit of the selected block and its locking status.
- Write Single Block, used to write and verify the new content for an update of a 32 bit block, provided that it
 is not in a locked memory area.
- Lock Block, used to write the blocks security status bits (protect against writing).
- Read Multiple Blocks, used to read the selected blocks in a unique area, and send back their value.
- Select, used to select the ST25DV02K-W1/2. After this command, the ST25DV02K-W1/2 processes all Read/Write commands with Select flag set.
- Reset to Ready, used to put the ST25DV02K-W1/2 in the ready state.
- Write AFI, used to write the 8-bit value in the AFI register.
- Lock AFI, used to lock the AFI register.
- Write DSFID, used to write the 8-bit value in the DSFID register.
- Lock DSFID, used to lock the DSFID register.
- Get System information, used to provide the standard system information values.
- Get multiple block security status, used to send the security status of the selected block.
- Read Configuration, used to read configuration registers.
- Write Configuration, used to write configuration registers.
- Write Password, used to change password of an opened security session.
- Present Password, used to present a password and to open a security session.

Their codes are given in Table 55. Command codes.

Table 55. Command codes

| Command code | Function | Command code | Function |
|--------------|-------------------------------------|--------------|------------------------------------|
| 01h | Inventory | 28h | Lock AFI |
| 02h | Stay Quiet 29h | | Write DSFID |
| 20h | Read Single Block | 2Ah | Lock DSFID |
| 21h | Write Single Block | 2Bh | Get System Info |
| 22h | Lock Block | 2Ch | Get Multiple Block Security Status |
| 23h | Read Multiple Blocks A0h Select A1h | | Read Configuration |
| 25h | | | Write Configuration |
| 26h | Reset to Ready | B1h | Write Password |
| 27h | Write AFI | B3h | Present Password |

Following paragraphs describe the expected behaviour for each valid command.

In case of an invalid command, in a general manner, the ST25DV02K-W1 ST25DV02K-W2 behaves as follow:

- If flag usage is incorrect, the error code 03h is issued only if the right UID is used in the command, otherwise no response will be issued.
- The code error 02h is issued if the custom command is used with the manufacturer code different from the ST one

DS12114 - Rev 6 page 35/74



6.4.1 Inventory

Upon receiving the Inventory request, the ST25DV02K-W1/2 runs the anticollision sequence. The Inventory_flag is set to 1. The meaning of flags 5 to 8 is shown in Table 50. Request flags 5 to 8 when inventory_flag, Bit 3 = 1.

- The Request flags
- the Inventory command code (001)
- AFI if the AFI flag is set
- Mask length
- · Mask value if mask length is different from 0
- the CRC

The ST25DV02K-W1/2 does not generate any answer in case of error.

Table 56. Inventory request format

| Request SOF | Request_flags | Inventory | Optional AFI | Mask length | Mask value | CRC16 | Request EOF |
|-------------|---------------|-----------|--------------|-------------|-------------|---------|-------------|
| - | 8 bits | 01h | 8 bits | 8 bits | 0 - 64 bits | 16 bits | - |

The response contains:

- · the flags
- the Unique ID

Table 57. Inventory response format

| Response SOF | Response_flags | DSFID | UID | CRC16 | Response EOF |
|--------------|----------------|--------|---------|---------|--------------|
| - | 8 bits | 8 bits | 64 bits | 16 bits | - |

During an Inventory process, if the VCD does not receive an RF ST25DV02K-W1/2 response, it waits for a time t_3 before sending an EOF to switch to the next slot. t_3 starts from the rising edge of the request EOF sent by the VCD.

- If the VCD sends a 100% modulated EOF, the minimum value of t₃ is:
 - t_3 min = 4384/ f_C (323.3 μ s) + t_{SOF}
- If the VCD sends a 10% modulated EOF, the minimum value of t₃ is:

$$t_3$$
min = 4384/ f_C (323.3 μ s) + t_{NRT} + t_{2min}

where:

- t_{SOF} is the time required by the ST25DV02K-W1/2 to transmit an SOF to the VCD,
- t_{NRT} is the nominal response time of the ST25DV02K-W1/2.

t_{NRT} and t_{SOF} are dependent on the ST25DV02K-W1/2-to-VCD data rate and subcarrier modulation mode.

Note: In case of error, no response is sent by ST25DV02K-W1 ST25DV02K-W2.

6.4.2 Stay Quiet

On receiving the Stay Quiet command, the ST25DV02K-W1/2 enters the Quiet state if no error occurs, and does NOT send back a response. There is NO response to the Stay Quiet command even if an error occurs. The Option_flag is not supported. The Inventory_flag must be set to 0.

When in the Quiet state:

- the ST25DV02K-W1/2 does not process any request if the Inventory_flag is set,
- the ST25DV02K-W1/2 processes any request with Address_flag set.

The ST25DV02K-W1/2 exits the Quiet state when:

DS12114 - Rev 6 page 36/74



- · it is reset (power off),
- receiving a Select request. It then goes to the Selected state,
- receiving a Reset to Ready request. It then goes to the Ready state.

Table 58. Stay Quiet request format

| Request SOF | Request flags | Stay Quiet | UID | CRC16 | Request EOF |
|-------------|---------------|------------|---------|---------|-------------|
| - | 8 bits | 02h | 64 bits | 16 bits | - |

The Stay Quiet command must always be executed in Addressed mode (Select_flag is reset to 0 and Address_flag is set to 1).

Figure 13. Stay Quiet frame exchange between VCD and ST25DV02K-W1/2

| VCD | SOF | Stay Quiet request | EOF |
|-----|-----|--------------------|-----|
|-----|-----|--------------------|-----|

ST25DV02K-W1/2

6.4.3 Read Single Block

On receiving the Read Single Block command, the ST25DV02K-W1/2 reads the requested block and sends back its 32-bit value in the response. The Option_flag is supported, when set response include the Block Security Status. The Inventory_flag must be set to 0.

Block number is coded on 1 Byte.

Table 59. Read Single Block request format

| Request SOF | Request_flags | Read Single Block | UID (1) | Block number | CRC16 | Request EOF |
|-------------|---------------|-------------------|---------|--------------|---------|-------------|
| - | 8 bits | 20h | 64 bits | 8 bits | 16 bits | - |

1. The field is optional.

Request parameters:

- Request flags
- UID (optional)
- Block number

Table 60. Read Single Block response format when Error_flag is NOT set

| Response SOF | Response_flags | Block security status (1) | Data | CRC16 | Response EOF |
|--------------|----------------|---------------------------|---------|---------|--------------|
| - | 8 bits | 8 bits | 32 bits | 16 bits | - |

1. The field is optional.

Response parameters:

- Block security status if Option_flag is set (see Table 61. Block security status)
- Four bytes of block data

DS12114 - Rev 6 page 37/74



Table 61. Block security status

| b ₇ | b ₆ | b ₅ | b ₄ | b ₃ | b ₂ | b ₁ | b ₀ |
|--------------------------|----------------|----------------|----------------|----------------|----------------|-----------------------------|----------------|
| Reserved for future use. | | | | | | 0: Current block not locked | |
| All at 0. | | | | | | 1: Current block locked | |

Table 62. Read Single Block response format when Error_flag is set

| Response SOF | Response_flags | Error code | CRC16 | Response EOF |
|--------------|----------------|------------|---------|--------------|
| - | - 8 bits | | 16 bits | - |

Response parameter:

- Error code as Error_flag is set
 - 03h: command option not supported
 - 0Fh: error with no information
 - 10h: the specified block is not available
 - 15h: the specified block is read-protected

Figure 14. Read Single Block frame exchange between VCD and ST25DV02K-W1/2



6.4.4 Write Single Block

On receiving the Write Single Block command, the ST25DV02K-W1/2 writes the data contained in the request to the targeted block and reports whether the write operation was successful in the response. When the Option_flag is set, wait for EOF to respond. The Inventory flag must be set to 0.

During the RF write cycle W_t , there should be no modulation (neither 100% nor 10%), otherwise the ST25DV02K-W1/2 may not program correctly the data into the memory. Block number is coded on 1 Byte.

Table 63. Write Single Block request format

| Request SOF | Request_flags | Write Single Block | UID (1) | Block number | Data | CRC16 | Request EOF |
|-------------|---------------|--------------------|---------|--------------|---------|---------|-------------|
| - | 8 bits | 21h | 64 bits | 8 bits | 32 bits | 16 bits | _ |

1. The field is optional.

Request parameters:

- Request flags
- UID (optional)
- Block number
- Data

DS12114 - Rev 6 page 38/74



Table 64. Write Single Block response format when Error_flag is NOT set

| Response SOF Response_flags | | CRC16 | Response EOF |
|-----------------------------|--------|---------|--------------|
| - | 8 bits | 16 bits | - |

No parameter. The response is sent back after the writing cycle.


Table 65. Write Single Block response format when Error_flag is set

| Response SOF Response_flags | | Error code | CRC16 | Response EOF |
|-----------------------------|--|------------|---------|--------------|
| - 8 bits | | 8 bits | 16 bits | - |

Response parameter:

- Error code as Error_flag is set⁽¹⁾
 - 03h: command option not supported
 - OFh: error with no information given
 - 10h: the specified block is not available
 - 12h: the specified block is locked or protected and its contents cannot be changed
 - 13h: the specified block was not successfully programmed
- 1. For more details, see Figure 5. Memory organization.

Figure 15. Write Single Block frame exchange between VCD and ST25DV02K-W1/2

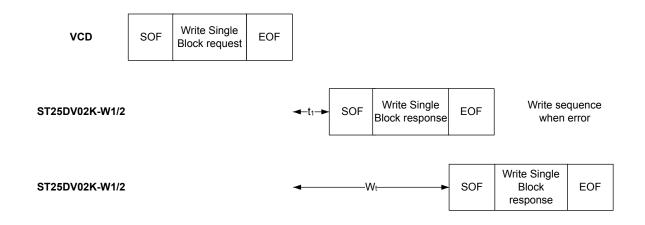

6.4.5 Lock Block

On receiving the Lock block request, the ST25DV02K-W1/2 locks the corresponding block value permanently and protects its content against new writing.

Lock block command is applicable and successful, if and only if the block is not protected in Write (ie, the block is not already locked, or protected in Write by password).

The Option_flag is supported, when set wait for EOF to respond. The Inventory_flag must be set to 0.

During the RF write cycle W_t , there should be no modulation (neither 100% nor 10%), otherwise the ST25DV02K-W1/2 may not lock correctly the block value in memory.

DS12114 - Rev 6 page 39/74



Table 66. Lock Block request format

| Request SOF | Request_flags | Lock block | UID (1) | block number | CRC16 | Request EOF |
|-------------|---------------|------------|---------|--------------|---------|-------------|
| - | 8 bits | 22h | 64 bits | 8 bits | 16 bits | - |

1. The field is optional.

Request parameter:

- Request Flags
- UID (optional)
- · Block number

Table 67. Lock block response format when Error_flag is NOT set

| Response SOF | Response SOF Response_flags | | Response EOF |
|--------------|-----------------------------|---------|--------------|
| - | 8 bits | 16 bits | - |

Response parameter:

No parameter


Table 68. Lock single block response format when Error_flag is set

| Response SOF Response_flags | | Error code | CRC16 | Response EOF |
|-----------------------------|--------|------------|---------|--------------|
| - | 8 bits | 8 bits | 16 bits | - |

Response parameter:

- Error code as Error_flag is set
 - 03h: command option not supported
 - 10h: block not available
 - 11h: the specified block is already locked and thus cannot be locked again
 - 14h: the specified block was not successfully locked

Figure 16. Lock single block frame exchange between VCD and ST25DV02K-W1/2

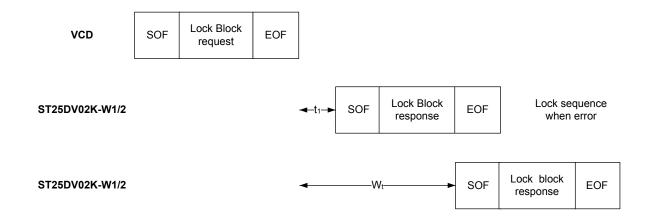

DS12114 - Rev 6 page 40/74



6.4.6 Read Multiple Blocks

When receiving the Read Multiple Block command, the ST25DV02K-W1/2 reads the selected blocks and sends back their value in multiples of 32 bits in the response. The blocks are numbered from 00h to FFh in the request and the value is minus one (-1) in the field. For example, if the "Number of blocks" field contains the value 06h, seven blocks are read. If the number of blocks overlaps areas, the ST25DV02K-W1/2 returns an error code. When the Option_flag is set, the response returns the Block Security Status. The Inventory_flag must be set to 0. Block number is coded on 1 byte.

Table 69. Read Multiple Block request format

| Request SOF | Request_flags | Read Multiple Block | UID (1) | First block number | Number of blocks | CRC16 | Request EOF |
|-------------|---------------|------------------------|---------|-----------------------|------------------|---------|-------------|
| - | 8 bits | 23h | 64 bits | 8 bits | 8 bits | 16 bits | - |

1. The field is optional.

Request parameters:

- Request flags
- UID (optional)
- First block number
- Number of blocks

Table 70. Read Multiple Block response format when Error_flag is NOT set

| Response SOF | Response_ flags | Block security status ⁽¹⁾ | Data | CRC16 | Response EOF |
|--------------|--------------------|--------------------------------------|------------------------|---------|--------------|
| - | 8 bits | 8 bits ⁽²⁾ | 32 bits ⁽²⁾ | 16 bits | - |

- 1. The field is optional.
- 2. Repeated as needed.

Response parameters:

- Block security status if Option_flag is set (see Table 71)
- · N blocks of data

Table 71. Block security status

| b ₇ | b ₆ | b ₅ | b ₄ | b ₃ | b ₂ | b ₁ | b ₀ | |
|--------------------------|----------------|----------------|----------------|----------------|----------------|-----------------------------|----------------|--|
| Reserved for future use. | | | | | | 0: Current block not locked | | |
| All at 0. | | | | | | 1: Current block locked | | |

Table 72. Read Multiple Block response format when Error_flag is set

| Response SOF | Response_flags | Error code | CRC16 | Response EOF |
|--------------|----------------|------------|---------|--------------|
| - | 8 bits | 8 bits | 16 bits | - |


Response parameter:

DS12114 - Rev 6 page 41/74



- Error code as Error_flag is set:
 - 03h: command option is not supported
 - OFh: error with no information given
 - 10h: the specified block is not available
 - 15h: the specified block is read-protected

Figure 17. Read Multiple Block frame exchange between VCD and ST25DV02K-W1/2

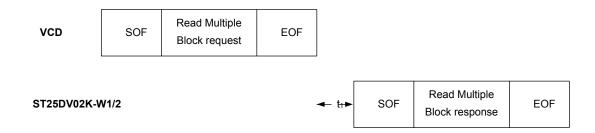

6.4.7 Select

When receiving the Select command:

- If the UID is equal to its own UID, the ST25DV02K-W1/2 enters or stays in the Selected state and sends a response.
- If the UID does not match its own UID, the selected ST25DV02K-W1/2 returns to the Ready state and does not send a response.

The ST25DV02K-W1/2 answers an error code only if the UID is equal to its own UID. If not, no response is generated. If an error occurs, the ST25DV02K-W1/2 remains in its current state. The Option_flag is not supported. The Inventory_flag must be set to 0.

Table 73. Select request format

| Request SOF | Request_flags | Select | UID | CRC16 | Request EOF |
|-------------|---------------|--------|---------|---------|-------------|
| - | 8 bits | 25h | 64 bits | 16 bits | - |

Request parameter:

- Request flags
- UID

Table 74. Select Block response format when Error_flag is NOT set

| Response SOF | Response_flags | CRC16 | Response EOF |
|--------------|----------------|---------|--------------|
| - | 8 bits | 16 bits | - |

Response parameter:

No parameter

DS12114 - Rev 6 page 42/74



Table 75. Select response format when Error_flag is set


| Response SOF | Response_flags | Error code | CRC16 | Response EOF |
|--------------|----------------|------------|---------|--------------|
| - | 8 bits | 8 bits | 16 bits | - |

Error code as Error_flag is set:

03h: the option is not supported

0Fh: error with no information given

Figure 18. Select frame exchange between VCD and ST25DV02K-W1/2

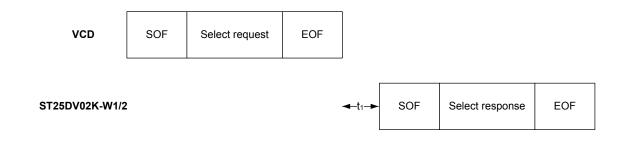

6.4.8 Reset to Ready

On receiving a Reset to Ready command, the ST25DV02K-W1/2 returns to the Ready state if no error occurs. In the Addressed mode, the ST25DV02K-W1/2 answers an error code only if the UID is equal to its own UID. If not, no response is generated. The Option_flag is not supported. The Inventory_flag must be set to 0.

Table 76. Reset to Ready request format

| Request SOF | Request_flags | Reset to Ready | UID ⁽¹⁾ | CRC16 | Request EOF |
|-------------|---------------|----------------|--------------------|---------|-------------|
| - | 8 bits | 26h | 64 bits | 16 bits | - |

1. The field is optional.

Request parameter:

- Request flags
- ID (optional)

Table 77. Reset to Ready response format when Error_flag is NOT set

| Response SOF | Response_flags | CRC16 | Response EOF |
|--------------|----------------|---------|--------------|
| - | 8 bits | 16 bits | - |

Response parameter:

No parameter

DS12114 - Rev 6 page 43/74



Table 78. Reset to ready response format when Error_flag is set

| Response SOF | Response_flags | Error code | CRC16 | Response EOF |
|--------------|----------------|------------|---------|--------------|
| - | 8 bits | 8 bits | 16 bits | - |

- Error code as Error_flag is set:
 - 03h: the option is not supported
 - 0Fh: error with no information given

Figure 19. Reset to Ready frame exchange between VCD and ST25DV02K-W1/2



6.4.9 Write AFI

On receiving the Write AFI request, the ST25DV02K-W1/2 programs the 8-bit AFI value to its memory. When the Option_flag is set, wait for EOF to respond. The Inventory_flag must be set to 0.

During the RF write cycle W_t , there should be no modulation (neither 100% nor 10%), otherwise the ST25DV02K-W1/2 may not write correctly the AFI value into the memory.

Table 79. Write AFI request format

| Request SOF | Request_flags | Write AFI | UID (1) | AFI | CRC16 | Request EOF |
|-------------|---------------|-----------|---------|--------|---------|-------------|
| - | 8 bits | 27h | 64 bits | 8 bits | 16 bits | - |

1. The field is optional.

Request parameter:

- Request flags
- UID (optional)
- AFI

Table 80. Write AFI response format when Error_flag is NOT set

| Response SOF | Response_flags | CRC16 | Response EOF |
|--------------|----------------|---------|--------------|
| - | 8 bits | 16 bits | - |

Response parameter:

No parameter

DS12114 - Rev 6 page 44/74

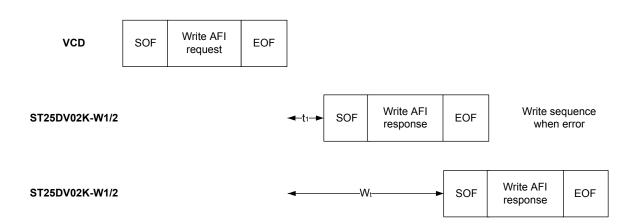


Table 81. Write AFI response format when Error_flag is set

| Response SOF | esponse SOF Response_ flags | | CRC16 | Response EOF |
|--------------|-----------------------------|--------|---------|--------------|
| - | 8 bits | 8 bits | 16 bits | - |

- Error code as Error_flag is set
 - 03h: command option is not supported
 - 0Fh: error with no information given
 - 12h: the specified block is locked and its contents cannot be changed
 - 13h: the specified block was not successfully programmed

Figure 20. Write AFI frame exchange between VCD and ST25DV02K-W1/2



6.4.10 Lock AFI

On receiving the Lock AFI request, the ST25DV02K-W1/2 locks the AFI value permanently. When the Option_flag is set, wait for EOF to respond.

During the RF write cycle W_t , there should be no modulation (neither 100% nor 10%), otherwise the ST25DV02K-W1/2 may not lock correctly the AFI value in memory. The Inventory_flag must be set to 0.

Table 82. Lock AFI request format

| Request SOF | Request_flags | Lock AFI | UID ⁽¹⁾ | CRC16 | 6 Request EOF | |
|-------------|---------------|----------|--------------------|---------|---------------|--|
| - | 8 bits | 28h | 64 bits | 16 bits | - | |

^{1.} The field is optional.

Request parameter:

- Request Flags
- UID (optional)

Table 83. Lock AFI response format when Error_flag is NOT set

| Response SOF | Response_flags | CRC16 | Response EOF | |
|--------------|----------------|---------|--------------|--|
| - | 8 bits | 16 bits | - | |

DS12114 - Rev 6 page 45/74



No parameter


Table 84. Lock AFI response format when Error_flag is set

| Response SOF | Response_flags | Error code | CRC16 | Response EOF | |
|--------------|----------------|------------|---------|--------------|--|
| - | 8 bits | 8 bits | 16 bits | - | |

Response parameter:

- Error code as Error_flag is set
 - 03h: command option is not supported
 - 0Fh: error with no information given
 - 11h: the specified block is already locked and thus cannot be locked again
 - 14h: the specified block was not successfully locked

Figure 21. Lock AFI frame exchange between VCD and ST25DV02K-W1/2

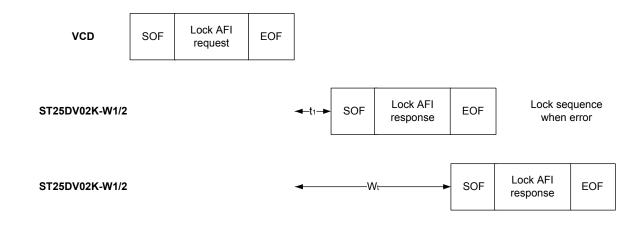

6.4.11 Write DSFID

On receiving the Write DSFID request, the ST25DV02K-W1/2 programs the 8-bit DSFID value to its memory. When the Option_flag is set, wait for EOF to respond. The Inventory_flag must be set to 0.

During the RF write cycle W_t , there should be no modulation (neither 100% nor 10%), otherwise the ST25DV02K-W1/2 may not write correctly the DSFID value in memory.

Table 85. Write DSFID request format

| Request SOF | Request_flags | Write DSFID | UID (1) | DSFID | CRC16 | Request EOF |
|-------------|---------------|-------------|---------|--------|---------|-------------|
| - | 8 bits | 29h | 64 bits | 8 bits | 16 bits | - |

1. The field is optional.

Request parameter:

- · Request flags
- UID (optional)
- DSFID

DS12114 - Rev 6 page 46/74



Table 86. Write DSFID response format when Error_flag is NOT set

| Response SOF | Response_flags | CRC16 | Response EOF | |
|--------------|----------------|---------|--------------|--|
| - | 8 bits | 16 bits | - | |

· No parameter


Table 87. Write DSFID response format when Error_flag is set

| Response SOF | Response_flags | Error code | CRC16 | Response EOF | |
|--------------|----------------|------------|---------|--------------|--|
| - | - 8 bits | | 16 bits | - | |

Response parameter:

- Error code as Error_flag is set
 - 03h: command option is not supported
 - 0Fh: error with no information given
 - 12h: the specified block is locked and its contents cannot be changed
 - 13h: the specified block was not successfully programmed

Figure 22. Write DSFID frame exchange between VCD and ST25DV02K-W1/2

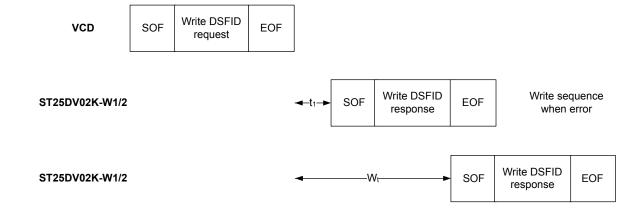

6.4.12 Lock DSFID

On receiving the Lock DSFID request, the ST25DV02K-W1/2 locks the DSFID value permanently. When the Option_flag is set, wait for EOF to respond. The Inventory_flag must be set to 0."

During the RF write cycle W_t , there should be no modulation (neither 100% nor 10%), otherwise the ST25DV02K-W1/2 may not lock correctly the DSFID value in memory.

Table 88. Lock DSFID request format

| Request SOF | Request_flags | Lock DSFID | OSFID UID (1) | | Request EOF |
|-------------|---------------|------------|---------------|---------|-------------|
| - | 8 bits | 2Ah | 64 bits | 16 bits | - |

1. The field is optional.

DS12114 - Rev 6 page 47/74



Request parameter:

- Request flags
- UID (optional)

Table 89. Lock DSFID response format when Error_flag is NOT set

| Response SOF | Response_flags | CRC16 | Response EOF | |
|--------------|----------------|---------|--------------|--|
| - | 8 bits | 16 bits | - | |

Response parameter:

No parameter.


Table 90. Lock DSFID response format when Error_flag is set

| Response SOF | sponse SOF Response_flags E | | CRC16 | Response EOF |
|--------------|-----------------------------|--------|---------|--------------|
| - | 8 bits | 8 bits | 16 bits | - |

Response parameter:

- Error code as Error flag is set:
 - 03h: command option is not supported
 - 0Fh: error with no information given
 - 11h: the specified block is already locked and thus cannot be locked again
 - 14h: the specified block was not successfully locked

Figure 23. Lock DSFID frame exchange between VCD and ST25DV02K-W1/2

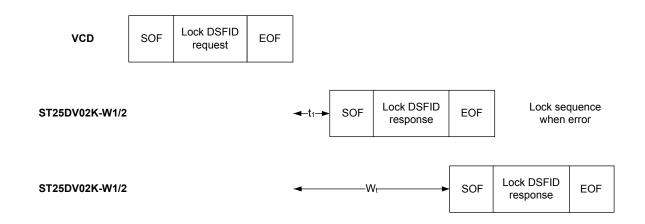

6.4.13 Get System Info

When receiving the Get System Info command, the ST25DV02K-W1/2 sends back its information data in the response. The Option_flag is not supported. The Get System Info can be issued in both Addressed and Non Addressed modes. The Inventory_flag must be set to 0.

DS12114 - Rev 6 page 48/74



Table 91. Get System Info request format

| Request SOF | Request_flags | Get System Info | UID (1) | CRC16 | Request EOF | |
|-------------|---------------|-----------------|---------|---------|-------------|--|
| - | 8 bits | 2Bh | 64 bits | 16 bits | - | |

1. The field is optional.

Request parameter:

- Request flags
- UID (optional)

Table 92. Get System Info response format Error_flag is NOT set

| Response SOF | Response flags | Information flags | UID | DSFID | AFI | Memory size | IC ref. | CRC16 | Response EOF |
|-----------------|-------------------|----------------------|---------|--------|--------|----------------|---------|---------|-----------------|
| - | 00h | 0Fh | 64 bits | 8 bits | 8 bits | 033Fh | 8 bits | 16 bits | - |

Response parameters:

- Information flags set to 0Fh. DSFID, AFI and IC reference fields are present.
- UID code on 64 bits
- DSFID value
- AFI value
- Memory Size on 16 bits:
 - 8-MSB = Block size in number of Bytes
 - 8-LSB = User Data size in number of Blocks
- ST25DV02K-W1/2 IC reference: the 8 bits are significant.

Table 93. Get System Info response format when Error_flag is set

| Response SOF | Response_flags | Error code | CRC16 | Response EOF | |
|--------------|----------------|------------|---------|--------------|--|
| - | 01h | 8 bits | 16 bits | - | |

Response parameter:

- Error code as Error_flag is set:
 - 03h: Option not supported
 - 0Fh: error with no information given

Figure 24. Get System Info frame exchange between VCD and ST25DV02K-W1/2

VCD SOF Get System info request EOF

ST25DV02K-W1/2

→ t₁→ SOF

Get System info response

EOF

DS12114 - Rev 6 page 49/74



6.4.14 Get Multiple Block Security Status

When receiving the Get Multiple Block Security Status command, the ST25DV02K-W1/2 sends back its security status for each address block: 0 when block is writable else 1 when block is locked for writing. The blocks security status are defined by the area security status (and the lock block status). The blocks are numbered from 00h up to the maximum memory block number in the request, and the value is minus one (–1) in the field. For example, a value of "06" in the "Number of blocks" field requests will return the security status of seven blocks. This command does not respond an error if number of blocks overlap areas.

The number of blocks is coded on 1 Byte. The Option_flag is not supported. The Inventory_flag must be set to 0.

Table 94. Get Multiple Block Security Status request format

| Request SOF | Request_flags | Get Multiple Block Security Status | UID (1) | First block number | Number of blocks | CRC16 | Request EOF |
|-------------|---------------|---------------------------------------|---------|-----------------------|------------------|---------|-------------|
| - | 8 bits | 2Ch | 64 bits | 8 bits | 8 bits | 16 bits | - |

1. The field is optional.

Request parameter:

- Request flags
- UID (optional)
- · First block number
- Number of blocks

Table 95. Get Multiple Block Security Status response format when Error_flag is NOT set

| Response SOF | Response_flags | Block security status | CRC16 | Response EOF |
|--------------|----------------|-----------------------|---------|--------------|
| - | 8 bits | 8 bits ⁽¹⁾ | 16 bits | - |

1. Repeated as needed.

Response parameters:

Block security status

Table 96. Block security status

| b ₇ | b ₆ | b ₅ b ₄ b ₃ b ₂ b ₁ | | b ₁ | b ₀ | | | |
|-------------------------|----------------|--|--|----------------|----------------|-----------------------------|--|--|
| Reserved for future use | | | | | | 0: Current block not locked | | |
| All at 0 | | | | | | 1: Current block locked | | |

Table 97. Get Multiple Block Security Status response format when Error_flag is set

| Response SOF | Response_flags | Error code | CRC16 | Response EOF | |
|--------------|----------------|------------|---------|--------------|--|
| - | 8 bits | 8 bits | 16 bits | - | |

Response parameter:

- Error code as Error_flag is set:
 - 03h: the option is not supported
 - 0Fh: error with no information given
 - 10h: the specified block is not available

DS12114 - Rev 6 page 50/74



Figure 25. Get Multiple Block Security Status frame exchange between VCD and ST25DV02K-W1/2

VCD

SOF Get Multiple Block Security request status

EOF

ST25DV02K-W1/2

SOF Get Multiple Block Security response status

EOF

6.4.15 Read Configuration

On receiving the Read Configuration command, the ST25DV02K-W1/2 reads the static system configuration register at the Pointer address and sends back its 8-bit value in the response.

The Option_flag is not supported. The Inventory_flag must be set to 0.

Table 98. Read Configuration request format

| Request SOF | Request_flags | Read Configuration | IC Mfg code | UID (1) | Pointer | CRC16 | Request EOF |
|-------------|---------------|--------------------|-------------|---------|---------|---------|-------------|
| - | 8 bits | A0h | 02h | 64 bits | 8 bits | 16 bits | - |

1. The field is optional.

Note:

Refer to Table 4. System configuration memory map for details on register addresses.

Request parameters:

- System configuration register pointer
- UID (optional)

Table 99. Read Configuration response format when Error_flag is NOT set

| Respo | nse SOF | Response_flags | Register value | CRC16 | Response EOF |
|-------|---------|----------------|----------------|---------|--------------|
| | - | 8 bits | 8 bits | 16 bits | - |

Response parameters:

One byte of data: system configuration register

Table 100. Read Configuration response format when Error_flag is set

| Response SOF | Response_flags | Error code | CRC16 | Response EOF | |
|--------------|----------------|------------|---------|--------------|--|
| - | 8 bits | 8 bits | 16 bits | - | |


Response parameter:

- Error code as Error_flag is set
 - 02h: command not recognized
 - 03h: the option is not supported
 - 10h: block not available
 - 0Fh: error with no information given

DS12114 - Rev 6 page 51/74



Figure 26. Read Configuration frame exchange between VCD and ST25DV02K-W1/2

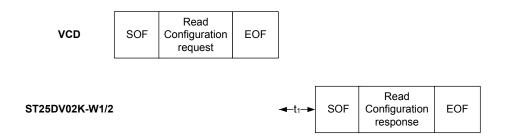

6.4.16 Write Configuration

The Write Configuration command is used to write system configuration register. The Write Configuration must be preceded by a valid presentation of the configuration password (03h) to open the configuration security session.

On receiving the Write Configuration command, the ST25DV02K-W1/2 writes the data contained in the request to the system configuration register at the Pointer address and reports whether the write operation was successful in the response or not.

When the Option_flag is set, wait for EOF to respond. The Inventory_flag is not supported.

During the RF write cycle W_t , there should be no modulation (neither 100% nor 10%), otherwise the ST25DV02K-W1/2 may not program correctly the data into the Configuration byte.

Table 101. Write Configuration request format

| Request SOF | Request_ flags | Write Configuration | IC Mfg code | UID (1) | Pointer | Register Value ⁽²⁾ | CRC16 | Request EOF |
|-------------|-------------------|------------------------|-------------|---------|---------|-------------------------------|---------|-------------|
| - | 8 bits | A1h | 02h | 64 bits | 8 bits | 8 bits | 16 bits | - |

- 1. The field is optional.
- 2. Before updating the register value, check the meaning of each bit in previous sections.

Request parameters:

- · Request flags
- · Register pointer
- Register value
- UID (optional)

Table 102. Write Configuration response format when Error_flag is NOT set

| Response SOF | Response_flags | CRC16 | Response EOF |
|--------------|----------------|---------|--------------|
| - | 8 bits | 16 bits | - |

Note: Please refer to Table 4. System configuration memory map for details on register addresses.

Response parameter:

• No parameter. The response is sent back after the writing cycle.

Table 103. Write Configuration response format when Error_flag is set


| Response SOF | Response_flags | Error code | CRC16 | Response EOF | |
|--------------|----------------|------------|---------|--------------|--|
| - | - 8 bits | | 16 bits | - | |

DS12114 - Rev 6 page 52/74



- · Error code as Error flag is set:
 - 02h: command not recognized
 - 03h: command option is not supported
 - 0Fh: error with no information given
 - 10h: block not available
 - 12h: block already locked, content can't change
 - 13h: the specified block was not successfully programmed

Figure 27. Write Configuration frame exchange between VCD and ST25DV02K-W1/2

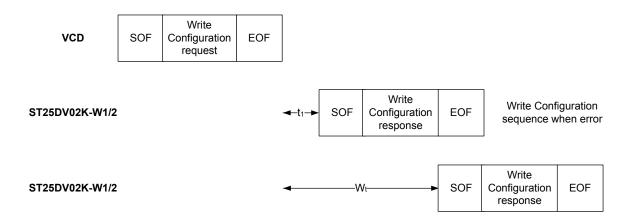

6.4.17 Write Password

On receiving the Write Password command, the ST25DV02K-W1/2 uses the data contained in the request to write the password and reports whether the operation was successful in the response. It is possible to modify a Password value only after issuing a valid Present password command (of the same password number). When the Option_flag is set, wait for EOF to respond. Refer to Section 5.2 Data protection for details on password Management. The Inventory_flag must be set to 0.

After a successful write, the new value of the selected password is automatically activated.

Write Password command always applies on 32-bits password. When Area1 & Area2 are merged, the corresponding password is 64-bits length. In that case 2x independent Write Password commands are required to update the 64-bits equivalent password. Such update can be done in any order. Moreover only one of the 2x 32-bits password can be changed, the other password keeping its previous value.

Note:

During the RF write cycle time, Wt, there must be no modulation (neither 100% nor 10%), otherwise the ST25DV02K-W1/2 may not correctly program the data into the memory.

There is no anti-tearing mechanism during Write_Password command. For this reason, the RF Field must be stable and V_{CC} state (either ON or OFF) remains constant, during the whole Write_Password command. If those conditions are not ensured, the command may not complete properly, and could imply a loss/corruption of password content, with no recovery capability.

It is recommended to use Write_Password command in Addressed or Selected modes, in order to improve the system robustness. This allows to ensure that Password change is only applied to the concerned tag/UID.

Table 104. Write Password request format

| Request SOF | Request_flags | Write password | IC Mfg code | UID (1) | Password number | Data | CRC16 | Request EOF |
|-------------|---------------|-------------------|-------------|---------|--------------------|---------|---------|-------------|
| - | 8 bits | B1h | 02h | 64 bits | 8 bits | 32 bits | 16 bits | - |

1. The field is optional.

DS12114 - Rev 6 page 53/74



Request parameter:

- Request flags
- UID (optional)
- Password number:
 - 00h = PWD_PWM
 - 01h = PWD_AREA1
 - 02h = PWD_AREA2
 - 03h = PWD CFG
 - other = Error
- Data

Table 105. Write Password response format when Error_flag is NOT set

| Response SOF | Response_flags | CRC16 | Response EOF |
|--------------|----------------|---------|--------------|
| - | 8 bits | 16 bits | - |

Response parameter:

no parameter.


Table 106. Write Password response format when Error_flag is set

| Response SOF | Response_flags | Error code | CRC16 | Response EOF |
|--------------|----------------|------------|---------|--------------|
| - | 8 bits | 8 bits | 16 bits | - |

Response parameter:

- Error code as Error_flag is set:
 - 02h: command not recognized
 - 03h: command option not supported
 - 10h: the password number is incorrect
 - 12h: right not granted, previous Present_Password command not successfully
 - 13h: the specified block was not successfully programmed

Figure 28. Write Password frame exchange between VCD and ST25DV02K-W1/2

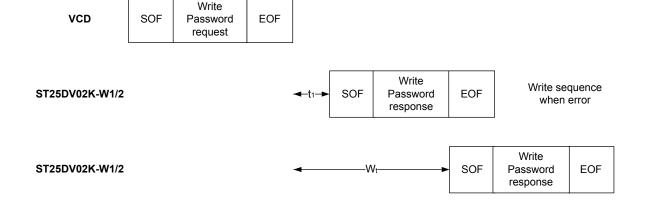

DS12114 - Rev 6 page 54/74



6.4.18 Present Password

On receiving the Present Password command, the ST25DV02K-W1/2 compares the requested password with the data contained in the request and reports if the operation has been successful in the response. Refer to Section 5.2 Data protection for details on password Management. After a successful command, the security session associated to the password is open as described in Section 5.2 Data protection. The Option_flag is not supported. The Inventory_flag must be set to.

Table 107. Present Password request format

| Request SOF | Request_flags | Present Password | IC Mfg code | UID (1) | Password number | Password | CRC16 | Request EOF |
|-------------|---------------|------------------|-------------|---------|-----------------|-------------------|---------|-------------|
| - | 8 bits | B3h | 02h | 64 bits | 8 bits | 32 or 64 bits (2) | 16 bits | - |

- 1. The field is optional.
- 2. 64 bits password length only applies when AREA1 & AREA2 are merged in a single AREA.

Request parameter:

- · Request flags
- UID (optional)
- Password Number:
 - 00h: PWD_PWM --> 32-bits password,
 - 01h: PWD AREA1 --> 32-bits password,
 - 01h: PWD 64 --> 64-bits password, in case of merged AREA1+AREA2,
 - 02h: PWD AREA2 --> 32-bits password,
 - 03h: PWD_CFG --> 32-bits password,
 - Other: Error
- Password

Table 108. Present Password response format when Error_flag is NOT set

| Response SOF | Response_flags | CRC16 | Response EOF |
|--------------|----------------|---------|--------------|
| - | 8 bits | 16 bits | - |

Response parameter:

No parameter. The response is sent back after the write cycle.

Table 109. Present Password response format when Error_flag is set

| Response SOF | Response_flags | Error code | CRC16 | Response EOF |
|--------------|----------------|------------|---------|--------------|
| - | 8 bits | 8 bits | 16 bits | - |


Response parameter:

- Error code as Error_flag is set:
 - 02h: command not recognized
 - 03h: command option not supported
 - 0Fh: the present password is incorrect
 - 10h: the password number is incorrect

DS12114 - Rev 6 page 55/74



Figure 29. Present Password frame exchange between VCD and ST25DV02K-W1/2

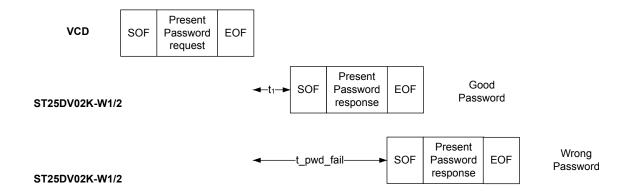

DS12114 - Rev 6 page 56/74



7 Unique identifier (UID)

The ST25DV02K-W1/2 is uniquely identified by a 64-bit unique identifier (UID). This UID complies with ISO/IEC 15963 and ISO/IEC 7816-6. The UID is a read-only code and comprises:

- 8-bits with a value of E0h,
- the IC manufacturer code "ST 02h" on 8 bits (ISO/IEC 7816-6/AM1),
- a unique serial number on 48 bits.

Table 110. UID format

| MSB | | | | | LSB |
|-----|----|------|----|---------------------|----------------------|
| 63 | 56 | 55 | 48 | 47 40 | 39 0 |
| 0xE | Ξ0 | 0x02 | | ST product code (1) | Unique serial number |

1. See Table 44. UID access for ST product code value definition.

With the UID, each ST25DV02K-W1/2 can be addressed uniquely and individually during the anticollision loop and for one-to-one exchanges between a VCD and an ST25DV02K-W1/2.

DS12114 - Rev 6 page 57/74



8 Device parameters

8.1 Maximum rating

Stressing the device above the rating listed in Table 111. Absolute maximum ratings may cause permanent damage to the device. These are stress ratings only and operation of the device, at these or any other conditions above those indicated in the operating sections of this specification, is not implied. Exposure to absolute maximum rating conditions for extended periods may affect the device reliability. Refer also to the STMicroelectronics SURE program and other relevant quality documents.

Symbol **Parameter** Min. Max. Unit Range 6 - 40 85 T_A Ambient operating temperature °C Range 8 - 40 105 SO8N, TSSOP8 °C T_{STG} -65 Storage temperature 150 (1) °C **T_{LEAD}** Lead temperature during soldering RF input voltage amplitude peak to peak between AC0 and AC1, V_{SS} pin left floating V_{MAX 1} (2) V_{AC0} - V_{AC1} 11 ٧ AC voltage between AC0 and VSS, or V_{AC0} - V_{SS} or V_{MAX_2} -0.5 5.5 V V_{AC1} - V_{SS} AC1 and V_{SS} Electrostatic discharge voltage (3) V_{ESD} All pins 15 kV (human body model) V_{CC} Power supply voltage range ٧ -0.5 6.0 V_{PWM} PWM output range -0.5 6.0 ٧

Table 111. Absolute maximum ratings

8.2 RF electrical parameters

This section summarizes the operating and measurement conditions, and the DC and AC characteristics of the device in RF mode.

The parameters in the DC and AC characteristics tables that follow are derived from tests performed under the measurement conditions summarized in the relevant tables. Designers should check that the operating conditions in their circuit match the measurement conditions when relying on the quoted parameters.

DS12114 - Rev 6 page 58/74

Compliant with JEDEC Std J-STD-020D (for small body, Sn-Pb or Pb assembly), the ST ECOPACK[®]
7191395 specification, and the European directive on Restrictions on Hazardous Substances (RoHS)
2002/95/EU.

^{2.} Based on characterization, not tested in production.

^{3.} ANSI/ESDA/JEDEC JS-001-2012, C = 100 pF, R = 1500 Ω , R2 = 500 Ω)



Table 112. RF characteristics

| Symbol | Parameter | Condition ⁽¹⁾⁽²⁾⁽³⁾ | Min | Тур | Max | Unit |
|---------------------------|---|--|---------|--------|--------|-------------------|
| f _{CC} | External RF signal frequency | - | 13.553 | 13.56 | 13.567 | MHz |
| f _{SH} | Subcarrier frequency high | f _{CC} /32 | - | 423.75 | - | kHz |
| f _{SL} | Subcarrier frequency low | f _{CC} /28 | - | 484.28 | - | kHz |
| MI | 10% carrier modulation index (4) | 150 mA/m < H < 5 A/m | 10 | - | 30 | % |
| MI _{CARRIER} | 100% carrier modulation index (5) | 150 IIIA/III < H < 5 A/III | 95 | - | 100 | 70 |
| t _{Boot_RF} | RF Boot time (minimum time from carrier generation to first data) | V _{CC} OFF, from H _{FIELD MIN} | - | - | 1 | ms |
| t _{RF_OFF} | RF OFF time | Chip reset | 2 | - | - | ms |
| t ₁ | Time for ST25DV02K-W1/2 response | - | 318.6 | 320.9 | 323.3 | μs |
| t ₂ | Time between commands | - | 309 | 311.5 | 314 | μs |
| t ₃ | Time before new EOF in case of no response | - | 323.3 | - | - | μs |
| W _t (6) | Time for Write operation (block/byte/bit) | 1 Block | - | 5.152 | - | ms |
| t _{PWD_FAIL} (6) | Waiting time in case of wrong password | - | 5.12 | - | - | ms |
| C _{TUN} (5) (7) | Input capacitance | SO8N, f = 13.56 MHz | 26.5 | 28.5 | 30.5 | pF |
| V _{BACK} | ISO Backscattering minimum voltage | - | 10 | - | - | mV |
| T _{A-RF} | RF ambient operating temperature | - | -40 | - | 85 | °C |
| V _{MIN_1} (4) | $(V_{AC0}-V_{AC1})_{Peak}$ = RF input voltage between AC0 and AC1. V_{SS} pin left floating | Write cmd, V _{CC} OFF | - | 2.8 | - | V _{PEAK} |
| V _{MIN_2} (4) | AC voltage between AC0 and $\ensuremath{\text{V}_{\text{SS}}}$ or between AC1 and $\ensuremath{\text{V}_{\text{SS}}}$ | Write cmd, V _{CC} OFF | - | 2.6 | - | V _{PEAK} |
| P _{MIN} (4) (8) | Minimum RF input power | Write cmd, V _{CC} OFF | - | 120 | - | μW |
| t _{RET} | Retention time | - | 40 | - | - | year |
| Cycling | Write cycles endurance | T _A ≤ 85 °C | 100 000 | - | - | cycle |

- 1. T_A = -40 to 85 °C. Characterized only.
- 2. All timing characterizations were performed on a reference antenna with the following characteristics:
 - ISO antenna class1
 - Tuning frequency = 13.7 MHz
- 3. Measured with PWM OFF.
- 4. Characterized on bench.
- 5. Characterized at room temperature only, on wafer at POR Level.
- 6. Applies from VCD request EOF to V_{ICC} response SOF.
- For design of reference antenna. Min and Max value are deduced from correlation with industrial tester limits.
- 8. Referenced at V_{SS}

8.3 PWM electrical parameters

This section summarizes the operating and measurement conditions, and the DC and AC characteristics of the device related to PWM output.

The parameters in the DC and AC characteristics tables that follow are derived from tests performed under the Measurement Conditions summarized in the relevant tables. Designers should check that the operating conditions in their circuit match the measurement conditions when relying on the quoted parameters.

DS12114 - Rev 6 page 59/74



Table 113. PWM characteristics

| Symbol | Parameter ⁽¹⁾ | Condition | Min | Тур | Max | Unit | | |
|--------------------------------------|--|---|------------------------------------|-----------------------|-------|------|-----|--|
| V _{CC} | PWM power supply range | | 1.8 | - | 5.5 | V | | |
| f _{PWM} | PWM output frequency | | 488.3 | - | 31250 | Hz | | |
| PWM ambient operating | | Range 6 | | -40 | - | 85 | 0.0 | |
| t _{A_PWM} | temperature | Range 8 | | -40 | - | 105 | °C | |
| \/ | 0.4 | V _{CC} = [1.8 V to 5.5 V], | | | | 0.4 | | |
| V _{OL} | Output low voltage level | I _O ≤ I _{DRIVE} | | - | - | 0.4 | | |
| V | Outrout high valtage lavel | V _{CC} = [1.8 V to 5.5 V], | | V 0.4 | | | V | |
| V _{OH} | Output high voltage level | I _O ≤ I _{DRIVE} | | V _{CC} - 0.4 | - | - | | |
| | | PWM_CFG/PWMx_DRIVE | = 00b | - | - | 100 | | |
| | | PWM_CFG/PWMx_DRIVE | = 01b | - | - | 130 | | |
| R _{ON} (3) | Output impedance | PWM_CFG/PWMx_DRIVE | = 10b | - | - | 200 | Ω | |
| | | PWM_CFG/PWMx_DRIVE | = 11b | - | - | 400 | | |
| | | When PWMx is disabled | HiZ | - | - | | | |
| | Operating supply current | | | V_{CC} = 5.5 V | - | - | 260 | |
| | | No PWM enabled | V _{CC} = 3.0 V | - | - | 210 | uA | |
| | | | V _{CC} = 1.8 V | - | - | 180 | | |
| | | 1x PWM enabled | V _{CC} = 5.5 V | - | - | 360 | | |
| I _{CC} | | | V _{CC} = 3.0 V | - | - | 310 | | |
| | | | V _{CC} = 1.8 V | - | - | 250 | | |
| | | | V _{CC} = 5.5 V | - | - | 380 | | |
| | | 2x PWM enabled (5) | V _{CC} = 3.0 V | - | _ | 330 | | |
| | | | V _{CC} = 1.8 V | - | _ | 270 | | |
| t _{BOOT_PWM} | PWM boot time | From 50% V _{CC} rising edge to pulse rising edge | to 90% PWM first | - | - | 3 | ms | |
| | | Upon valid RF command, | | | | | | |
| t _{PWM_UPD} | Time to update PWM output from RF | From EOF RX to 1st PWM r | ising | - | _ | 3 | ms | |
| | Catpat II Cili | edge of the new setup | | | | | | |
| t _{PWM_CFG} | Time to update PWM configuration from RF | Upon valid RF command, From EOF RX to new config | juration ready | - | - | 3 | ms | |
| PWM _{RES} | PWM resolution (LSB duration) | Across Process, V _{CC} and te with RF field ON | 56.25 | 62.5 | 68.75 | ns | | |
| f _{ACCURACY} | PWM frequency accuracy | Across Process, VCC & Ten with RF field ON | - | - | ±10 | % | | |
| α _{ACCURACY} ⁽²⁾ | Duty cycle accuracy | α = 5%, VCC = 5V5, f_{PWM} =3 RF field ON | 31.25kHz, C _L ≤ 150 pF, | - | - | 1 | % | |
| Low_Freq | Threshold frequency for PV | VM coexistence mode | | - | - | 1 | kHz | |


- 1. Measured at temperature range 6
- 2. Applies to ST25DV02K-W1 (ST25DV02K-W2 values coming soon).
- 3. Refer to Figure 30 for RON TYP variations across VCC & PWM_CFG/PWMx_DRIVE setting
- 4. Without output stage power consumption, accross whole temperature ranges, RF field OFF.
- 5. Applies to ST25DV02K-W2.

DS12114 - Rev 6 page 60/74



Figure 30. Variation of Typical values of RON, depending on V_{CC} and PWM_CFG/PWMx_DRIVE @ maximum temperature

Rontyp = f(Vcc, PWM_DRIVE) at max temperature

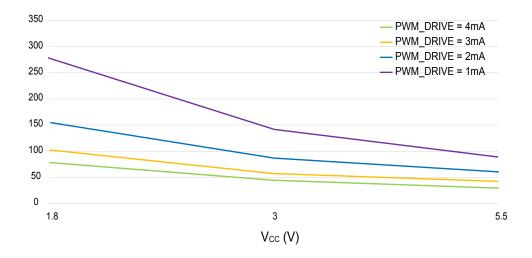

DS12114 - Rev 6 page 61/74




9 Package information

In order to meet environmental requirements, ST offers these devices in different grades of ECOPACK packages, depending on their level of environmental compliance. ECOPACK specifications, grade definitions and product status are available at: www.st.com.

9.1 SO8N package information

Figure 31. SO8N - 8 lead, 4.9 x 6 mm, plastic small outline, 150 mils body width, package outline

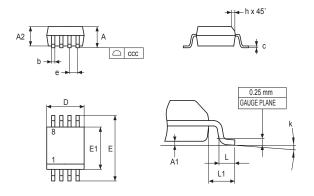

1. Drawing is not to scale.

Table 114. SO8N - 8 lead 4.9 x 6 mm, plastic small outline, 150 mils body width, package mechanical data

| Symbol | | millimeters | | inches ⁽¹⁾ | | | |
|--------|-------|-------------|-------|-----------------------|--------|--------|--|
| Symbol | Min. | Тур. | Max. | Min. | Тур. | Max. | |
| А | - | - | 1.750 | - | - | 0.0689 | |
| A1 | 0.100 | - | 0.250 | 0.0039 | - | 0.0098 | |
| A2 | 1.250 | - | - | 0.0492 | - | - | |
| b | 0.280 | - | 0.480 | 0.0110 | - | 0.0189 | |
| С | 0.170 | - | 0.230 | 0.0067 | - | 0.0091 | |
| D | 4.800 | 4.900 | 5.000 | 0.1890 | 0.1929 | 0.1969 | |
| E | 5.800 | 6.000 | 6.200 | 0.2283 | 0.2362 | 0.2441 | |
| E1 | 3.800 | 3.900 | 4.000 | 0.1496 | 0.1535 | 0.1575 | |
| е | - | 1.270 | - | - | 0.0500 | - | |
| h | 0.250 | - | 0.500 | 0.0098 | - | 0.0197 | |
| k | 0° | - | 8° | 0° | - | 8° | |
| L | 0.400 | - | 1.270 | 0.0157 | - | 0.0500 | |
| L1 | - | 1.040 | - | - | 0.0409 | - | |
| ccc | - | - | 0.100 | - | - | 0.0039 | |


^{1.} Values in inches are converted from mm and rounded to four decimal digits.

DS12114 - Rev 6 page 62/74



9.2 TSSOP8 package information

Figure 32. TSSOP8 - 8 lead thin shrink small outline, 3 x 6.4 mm, 0.65 mm pitch, package outline

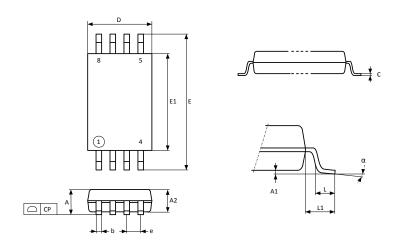

1. Drawing is not to scale.

Table 115. TSSOP8 - 8 lead thin shrink small outline, 3 x 6.4 mm, 0.65 mm pitch, package mechanical data

| Symbol | | millimeters | | inches ⁽¹⁾ | | |
|--------|-------|-------------|-------|-----------------------|--------|--------|
| Symbol | Min. | Тур. | Max. | Min. | Тур. | Max. |
| А | - | - | 1.200 | - | - | 0.0472 |
| A1 | 0.050 | - | 0.150 | 0.0020 | - | 0.0059 |
| A2 | 0.800 | 1.000 | 1.050 | 0.0315 | 0.0394 | 0.0413 |
| b | 0.190 | - | 0.300 | 0.0075 | - | 0.0118 |
| С | 0.090 | - | 0.200 | 0.0035 | - | 0.0079 |
| СР | - | - | 0.100 | - | - | 0.0039 |
| D | 2.900 | 3.000 | 3.100 | 0.1142 | 0.1181 | 0.1220 |
| е | - | 0.650 | - | - | 0.0256 | - |
| E | 6.200 | 6.400 | 6.600 | 0.2441 | 0.2520 | 0.2598 |
| E1 | 4.300 | 4.400 | 4.500 | 0.1693 | 0.1732 | 0.1772 |
| L | 0.450 | 0.600 | 0.750 | 0.0177 | 0.0236 | 0.0295 |
| L1 | - | 1.000 | - | - | 0.0394 | - |
| α | 0° | - | 8° | 0° | - | 8° |

1. Values in inches are converted from mm and rounded to four decimal digits.

DS12114 - Rev 6 page 63/74



10 Ordering information

ST25DV 02K -W1 R Example: S **Device type** ST25DV = NFC/RFID tag based on ISO 15693 and NFC T5T **Memory size** 02K = 2 Kbits **Features** W1 = 1x PWM outputW2 = 2x PWM outputs **Operating voltage** $R = V_{CC}$ from 1.8 to 5.5 V Device grade 8 = industrial: device tested with standard test flow over - 40 to 85 °C for RF and - 40 to 105 °C for PWM **Package** S = SO8NT = TSSOP8 Capacitance 3 = 28.5 pF

Table 116. Ordering information scheme

Note:

Parts marked as "ES" or "E" are not yet qualified and therefore not approved for use in production. ST is not responsible for any consequences resulting from such use. In no event will ST be liable for the customer using any of these engineering samples in production. ST's Quality department must be contacted prior to any decision to use these engineering samples to run a qualification activity.

DS12114 - Rev 6 page 64/74



11 List of acronyms

Table 117. List of acronyms

| Acronym | Description |
|---------|----------------------------------|
| AFI | Application family identifier |
| CMD | Command |
| CRC | Cyclic redundancy check |
| DSFID | Data storage format identifier |
| EOF | End of frame |
| HZ | High impedance |
| Id | Identifier |
| NA | Not applicable |
| NFC | Near field communication |
| POR | Power on reset |
| PWD | Password |
| PWM | Pulse width modulation |
| RF | Radio frequency |
| RFU | Reserved for future usage |
| RO | Read only |
| RW | Read and write |
| SOF | Start of frame |
| UID | Unique identifier |
| VCD | Vicinity coupling device |
| VICC | Vicinity integrated circuit card |
| WO | Write only |
| X | Unknown |

DS12114 - Rev 6 page 65/74



Revision history

Table 118. Document revision history

| Date | Revision | Changes | | | |
|-------------|----------|--|--|--|--|
| 14-Dec-2017 | 1 | Initial release. | | | |
| 12-Jun-2018 | 2 | Updated: Features Section 2.1 Pulse width modulation output (PWM1) Section 2.2 Pulse width modulation output (PWM2) Figure 8. PWM answer Section 5.2.2 Passwords and security sessions Section 6.4.17 Write Password Table 111. Absolute maximum ratings Table 112. RF characteristics Table 113. PWM characteristics Table 116. Ordering information scheme | | | |
| 25-Jun-2018 | 3 | Updated:Section 3.3 RF and PWM boots priorityTable 111. Absolute maximum ratings | | | |
| 10-Jul-2018 | 4 | Changed the document scope from ST Restricted to public | | | |
| 14-Dec-2018 | 5 | Updated: Section 5.2.1 Data protection registers Section 5.4 Device parameter registers Added: Section 11 List of acronyms | | | |
| 30-Aug-2019 | 6 | Updated document title, Section 1 Description and Section 5.1.2 Pulse width modulation feature description. Updated Figure 7. PWM output change and Figure 8. PWM answer. Updated Section 11 List of acronyms. Minor text edits across the whole document. | | | |

DS12114 - Rev 6 page 66/74



Contents

| 1 | Des | cription | 1 | 2 |
|---|------|-----------|--|----|
| | 1.1 | Block | diagram | 2 |
| | 1.2 | Packa | ge connections | 3 |
| 2 | Sign | al desc | cription | 4 |
| | 2.1 | Pulse | width modulation output (PWM1) | 4 |
| | 2.2 | Pulse | width modulation output (PWM2) | 4 |
| | 2.3 | PWM | power supply (VCC) | 4 |
| | 2.4 | PWM | ground reference (VSS) | 4 |
| | 2.5 | Anteni | na coil (AC0, AC1) | 4 |
| 3 | Pow | er man | agement | 5 |
| | 3.1 | Wired | interface | 5 |
| | 3.2 | Conta | ctless interface | 6 |
| | 3.3 | RF an | d PWM boots priority | 6 |
| 4 | Men | nory ma | anagement | 7 |
| | 4.1 | Memo | ry organization | 7 |
| | 4.2 | User n | memory | 8 |
| | 4.3 | Syster | m configuration memory | 10 |
| 5 | Spe | cific fea | atures | 11 |
| | 5.1 | Pulse | width modulation output | 12 |
| | | 5.1.1 | Pulse width modulation registers | 12 |
| | | 5.1.2 | Pulse width modulation feature description | 15 |
| | 5.2 | Data p | protection | 19 |
| | | 5.2.1 | Data protection registers | 19 |
| | | 5.2.2 | Passwords and security sessions | 23 |
| | | 5.2.3 | User memory protection | 24 |
| | | 5.2.4 | System configuration memory protection | 25 |
| | 5.3 | TruST | 25 digital signature | 25 |
| | 5.4 | Device | e parameter registers | 26 |
| 6 | RF C | Operatio | ons | 28 |



| 6.1.1 Access to an ISO/IEC 15693 device 6.2 RF protocol 6.2.1 Protocol description. 6.2.2 Supported states. 6.2.3 Modes. 6.2.4 Request format. 6.2.5 Request flags 6.2.6 Response format. 6.2.7 Response flags. 6.2.8 Response and error code 6.3 Timing definition | . 28 |
|---|------|
| 6.2.1 Protocol description. 6.2.2 Supported states. 6.2.3 Modes. 6.2.4 Request format. 6.2.5 Request flags. 6.2.6 Response format. 6.2.7 Response flags. 6.2.8 Response and error code. | . 28 |
| 6.2.2 Supported states. 6.2.3 Modes. 6.2.4 Request format. 6.2.5 Request flags 6.2.6 Response format. 6.2.7 Response flags. 6.2.8 Response and error code | . 29 |
| 6.2.3 Modes. 6.2.4 Request format. 6.2.5 Request flags 6.2.6 Response format. 6.2.7 Response flags 6.2.8 Response and error code | . 29 |
| 6.2.4 Request format 6.2.5 Request flags 6.2.6 Response format. 6.2.7 Response flags 6.2.8 Response and error code | . 29 |
| 6.2.5 Request flags 6.2.6 Response format. 6.2.7 Response flags 6.2.8 Response and error code | . 30 |
| 6.2.6 Response format. 6.2.7 Response flags. 6.2.8 Response and error code. | . 31 |
| 6.2.7 Response flags | . 31 |
| 6.2.8 Response and error code | . 32 |
| | . 33 |
| 6.3 Timing definition | . 33 |
| | . 34 |
| 6.4 RF commands | . 35 |
| 6.4.1 Inventory | . 36 |
| 6.4.2 Stay Quiet | . 36 |
| 6.4.3 Read Single Block | . 37 |
| 6.4.4 Write Single Block | . 38 |
| 6.4.5 Lock Block | . 39 |
| 6.4.6 Read Multiple Blocks | . 40 |
| 6.4.7 Select | . 42 |
| 6.4.8 Reset to Ready | . 43 |
| 6.4.9 Write AFI | . 44 |
| 6.4.10 Lock AFI | . 45 |
| 6.4.11 Write DSFID | . 46 |
| 6.4.12 Lock DSFID | . 47 |
| 6.4.13 Get System Info | . 48 |
| 6.4.14 Get Multiple Block Security Status | . 50 |
| 6.4.15 Read Configuration | . 51 |
| 6.4.16 Write Configuration | . 52 |
| 6.4.17 Write Password | . 53 |
| 6.4.18 Present Password | . 54 |
| Unique identifier (UID) | .57 |

7



| 8 | Devic | ce parameters | .58 |
|------|---------|----------------------------|------|
| | 8.1 | Maximum rating | . 58 |
| | 8.2 | RF electrical parameters | . 58 |
| | 8.3 | PWM electrical parameters | . 59 |
| 9 | Pack | age information | .62 |
| | 9.1 | SO8N package information | . 62 |
| | 9.2 | TSSOP8 package information | . 62 |
| 10 | Orde | ring information | .64 |
| 11 | List | of acronyms | .65 |
| Rev | ision h | nistory | .66 |
| Con | tents | | .67 |
| List | of tab | les | .70 |
| List | of figu | ures | .73 |



List of tables

| Table 1. | Signal names | |
|-----------|---|------|
| Table 2. | User memory 4x areas configuration | |
| Table 3. | User memory 3x areas configuration | 9 |
| Table 4. | System configuration memory map | . 10 |
| Table 5. | PWM1_CTRL access | . 12 |
| Table 6. | PWM1_CTRL | . 12 |
| Table 7. | PWM2_CTRL access | . 13 |
| Table 8. | PWM2_CTRL | . 13 |
| Table 9. | PWM_CFG access | . 14 |
| Table 10. | PWM_CFG | . 14 |
| Table 11. | PWM output parameters | . 15 |
| Table 12. | PWM output resolution | . 16 |
| Table 13. | PWM output driver trimming | . 17 |
| Table 14. | PWM output coexistence with RF interface | . 17 |
| Table 15. | A1SA access | . 19 |
| Table 16. | A1SA | . 19 |
| Table 17. | A2SA access | . 20 |
| Table 18. | A2SA | . 20 |
| Table 19. | APSA access | . 20 |
| Table 20. | APSA | . 20 |
| Table 21. | LOCK_CFG access | . 21 |
| Table 22. | LOCK_CFG | . 21 |
| Table 23. | LOCK_BLOCK of AREA0/1/2 and PWM_CTRL access | . 21 |
| Table 24. | LOCK_BLOCK of AREA0/1/2 and PWM_CTRL | . 21 |
| Table 25. | PWD_PWM access | . 22 |
| Table 26. | PWD_PWM | . 22 |
| Table 27. | PWD_A1 access | . 22 |
| Table 28. | PWD_A1 | . 22 |
| Table 29. | PWD_A2 access | . 22 |
| Table 30. | PWD_A2 | . 22 |
| Table 31. | PWD_CFG access | . 23 |
| Table 32. | PWD_CFG | . 23 |
| Table 33. | Security session type | . 23 |
| Table 34. | LOCK_DSFID access | . 26 |
| Table 35. | LOCK_DSFID | . 26 |
| Table 36. | LOCK_AFI access | |
| Table 37. | LOCK_AFI | |
| Table 38. | DSFID access | |
| Table 39. | DSFID | . 26 |
| Table 40. | AFI access | |
| Table 41. | AFI | . 27 |
| Table 42. | IC_REF access | |
| Table 43. | IC_REF | |
| Table 44. | UID access | . 27 |
| Table 45. | UID | |
| Table 46. | Device response depending on Request_flags | |
| Table 47. | General request format | |
| Table 48. | Definition of request flags 1 to 4 | |
| Table 49. | Request flags 5 to 8 when inventory_flag, Bit 3 = 0 | |
| Table 50. | Request flags 5 to 8 when inventory_flag, Bit 3 = 1 | |
| Table 51. | General response format | |
| Table 52. | Definitions of response flags 1 to 8 | . 33 |



| Table 53. | Response error code definition | |
|-------------------|---|----|
| Table 54. | Timing values | |
| Table 55. | Command codes | |
| Table 56. | Inventory request format | |
| Table 57. | Inventory response format | |
| Table 58. | Stay Quiet request format | |
| Table 59. | Read Single Block request format | |
| Table 60. | Read Single Block response format when Error_flag is NOT set | |
| Table 61. | Block security status | |
| Table 62. | Read Single Block response format when Error_flag is set | |
| Table 63. | Write Single Block request format | |
| Table 64. | Write Single Block response format when Error_flag is NOT set | |
| Table 65. | Write Single Block response format when Error_flag is set | 39 |
| Table 66. | Lock Block request format | |
| Table 67. | Lock block response format when Error_flag is NOT set | 40 |
| Table 68. | Lock single block response format when Error_flag is set | 40 |
| Table 69. | Read Multiple Block request format | |
| Table 70. | Read Multiple Block response format when Error_flag is NOT set | 41 |
| Table 71. | Block security status. | |
| Table 72. | Read Multiple Block response format when Error_flag is set | |
| Table 73. | Select request format | |
| Table 74. | Select Block response format when Error_flag is NOT set | |
| Table 75. | Select response format when Error_flag is set | |
| Table 76. | Reset to Ready request format | |
| Table 77. | Reset to Ready response format when Error_flag is NOT set. | |
| Table 78. | Reset to ready response format when Error_flag is set | |
| Table 79. | Write AFI request format | |
| Table 80. | Write AFI response format when Error_flag is NOT set | |
| Table 81. | Write AFI response format when Error flag is set | |
| Table 82. | Lock AFI request format | |
| Table 83. | Lock AFI response format when Error_flag is NOT set | |
| | | |
| Table 84. | Lock AFI response format when Error_flag is set | |
| Table 85. | Write DSFID request format | |
| Table 86. | Write DSFID response format when Error_flag is NOT set | |
| Table 87. | Write DSFID response format when Error_flag is set | |
| Table 88. | Lock DSFID request format | |
| Table 89. | Lock DSFID response format when Error_flag is NOT set | |
| Table 90. | Lock DSFID response format when Error_flag is set | |
| Table 91. | Get System Info request format | |
| Table 92. | Get System Info response format Error_flag is NOT set | |
| Table 93. | Get System Info response format when Error_flag is set | |
| Table 94. | Get Multiple Block Security Status request format | |
| Table 95. | Get Multiple Block Security Status response format when Error_flag is NOT set | |
| Table 96. | Block security status | |
| Table 97. | Get Multiple Block Security Status response format when Error_flag is set | 50 |
| Table 98. | Read Configuration request format | 51 |
| Table 99. | Read Configuration response format when Error_flag is NOT set | 51 |
| Table 100. | Read Configuration response format when Error_flag is set | 51 |
| Table 101. | Write Configuration request format | 52 |
| Table 102. | Write Configuration response format when Error_flag is NOT set | 52 |
| | Write Configuration response format when Error_flag is set | |
| | Write Password request format | |
| | Write Password response format when Error_flag is NOT set | |
| | Write Password response format when Error_flag is set | |
| | , = -3 | |

DS12114 - Rev 6 page 71/74







| Table 107. | Present Password request format | 55 |
|-------------------|---|----|
| Table 108. | Present Password response format when Error_flag is NOT set | 55 |
| Table 109. | Present Password response format when Error_flag is set | 55 |
| Table 110. | UID format | 57 |
| Table 111. | Absolute maximum ratings | 58 |
| Table 112. | RF characteristics | 59 |
| Table 113. | PWM characteristics | 60 |
| Table 114. | SO8N – 8 lead 4.9 x 6 mm, plastic small outline, 150 mils body width, package mechanical data | 62 |
| Table 115. | TSSOP8 – 8 lead thin shrink small outline, 3 x 6.4 mm, 0.65 mm pitch, package mechanical data | 63 |
| Table 116. | Ordering information scheme | 64 |
| Table 117. | List of acronyms | 65 |
| Table 118. | Document revision history | 66 |

DS12114 - Rev 6 page 72/74



List of figures

| rigure 1. | Block diagram | 2 |
|------------|---|------|
| Figure 2. | ST25DV02K-W1/2 8-pin package connections | 3 |
| Figure 3. | Power-up/down sequence | 5 |
| Figure 4. | RF power-up sequence | 6 |
| Figure 5. | Memory organization | 7 |
| Figure 6. | PWM output | 15 |
| Figure 7. | PWM output change | 16 |
| Figure 8. | PWM answer | 17 |
| Figure 9. | PWM output change | 18 |
| Figure 10. | Security sessions management | 24 |
| Figure 11. | ST25DV02K-W1/2 protocol timing | 29 |
| Figure 12. | Device state transition diagram | |
| Figure 13. | Stay Quiet frame exchange between VCD and ST25DV02K-W1/2 | 37 |
| Figure 14. | Read Single Block frame exchange between VCD and ST25DV02K-W1/2 | 38 |
| Figure 15. | Write Single Block frame exchange between VCD and ST25DV02K-W1/2 | 39 |
| Figure 16. | Lock single block frame exchange between VCD and ST25DV02K-W1/2 | 40 |
| Figure 17. | Read Multiple Block frame exchange between VCD and ST25DV02K-W1/2 | 42 |
| Figure 18. | Select frame exchange between VCD and ST25DV02K-W1/2 | 43 |
| Figure 19. | Reset to Ready frame exchange between VCD and ST25DV02K-W1/2 | 44 |
| Figure 20. | Write AFI frame exchange between VCD and ST25DV02K-W1/2 | 45 |
| Figure 21. | Lock AFI frame exchange between VCD and ST25DV02K-W1/2 | 46 |
| Figure 22. | Write DSFID frame exchange between VCD and ST25DV02K-W1/2 | 47 |
| Figure 23. | Lock DSFID frame exchange between VCD and ST25DV02K-W1/2 | 48 |
| Figure 24. | Get System Info frame exchange between VCD and ST25DV02K-W1/2 | 49 |
| Figure 25. | Get Multiple Block Security Status frame exchange between VCD and ST25DV02K-W1/2 | 51 |
| Figure 26. | Read Configuration frame exchange between VCD and ST25DV02K-W1/2 | 52 |
| Figure 27. | Write Configuration frame exchange between VCD and ST25DV02K-W1/2 | 53 |
| Figure 28. | Write Password frame exchange between VCD and ST25DV02K-W1/2 | 54 |
| Figure 29. | Present Password frame exchange between VCD and ST25DV02K-W1/2 | 56 |
| Figure 30. | Variation of Typical values of RON, depending on V _{CC} and PWM_CFG/PWMx_DRIVE @ maximum temperate | ture |
| | | 61 |
| Figure 31. | SO8N – 8 lead, 4.9 x 6 mm, plastic small outline, 150 mils body width, package outline | 62 |
| Figure 32. | TSSOP8 – 8 lead thin shrink small outline, 3 x 6.4 mm, 0.65 mm pitch, package outline | 63 |

DS12114 - Rev 6 page 73/74



IMPORTANT NOTICE - PLEASE READ CAREFULLY

STMicroelectronics NV and its subsidiaries ("ST") reserve the right to make changes, corrections, enhancements, modifications, and improvements to ST products and/or to this document at any time without notice. Purchasers should obtain the latest relevant information on ST products before placing orders. ST products are sold pursuant to ST's terms and conditions of sale in place at the time of order acknowledgement.

Purchasers are solely responsible for the choice, selection, and use of ST products and ST assumes no liability for application assistance or the design of Purchasers' products.

No license, express or implied, to any intellectual property right is granted by ST herein.

Resale of ST products with provisions different from the information set forth herein shall void any warranty granted by ST for such product.

ST and the ST logo are trademarks of ST. For additional information about ST trademarks, please refer to www.st.com/trademarks. All other product or service names are the property of their respective owners.

Information in this document supersedes and replaces information previously supplied in any prior versions of this document.

© 2019 STMicroelectronics - All rights reserved

DS12114 - Rev 6 page 74/74