# **Guard Lock Safety-door Switch/Slide key**

# D4JL/D4JL-SK40

CSM D4.II D4.II -SK40 DS F 7 1

# Holding Force of 3,000 N

- Two safety circuits and two monitor contacts provide an array of monitoring patterns.
- Standard gold-clad contacts enable use with ordinary loads and microloads.
- Models with trapped keys prevent workers from being locked in hazardous work areas.
- Models with rear release buttons allow people to unlock the Switch and escape if they are locked into hazardous areas.
- IP67 degree of protection



Be sure to read the "Safety Precautions" on page 24.



Guard Lock Safety-door Switch

For the most recent information on models that have been certified for safety standards, refer to your OMRON website.

#### **Features**


# Plastic Guard Lock Safety-door Switches Rank Among the Strongest in the World

A holding force of 3,000 N makes these Switches suitable for large, heavy doors.



# Two Safety Circuits and Two Monitor Contacts

The D4JL has two safety circuits. It also has two contacts to separately monitor the open/closed status of the door and the status of the lock.




# Wide variations to protect workers who enter hazardous areas.

Models with Trapped Keys (mechanical lock models only)
 As long as a person has the trapped key when he enters a
 hazardous area, he does not have to worry about somebody
 locking the door and trapping him inside.


The door can be opened only by supplying power to the solenoid and then turning the trapped key to unlock the D4JL.

There are thirty different types of trapped keys available for use in applications with adjacent hazardous areas.

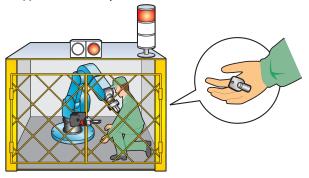

#### • Models with Rear Release Buttons

A rear release button allows the door to be unlocked from inside a hazardous area in an emergency.

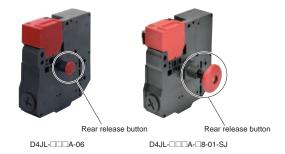

#### · Special Slide Key

A special Slide Key shortens the lead time for mounting design. The padlock that can be attached to the disable-prevention cover prevents other workers from restarting machines. (See page 5 for details.)

#### **Model Number Structure**

## Model Number Legend Switches (Standard type)



1. Conduit Size

2: G1/2

4: M20

2. Built-in Switch

N: 2NC/1NO + 2NC/1NO (slow-action contacts)

P: 2NC/1NO + 3NC (slow-action contacts)

Q: 3NC + 2NC/1NO (slow-action contacts)

R: 3NC + 3NC (slow-action contacts)

3. Head Material

F: Plastic

4. Door Lock and Release

A: Mechanical lock/24 VDC solenoid release

G: 24 VDC Solenoid lock/Mechanical release

5. Indicator

C: 24 VDC (green LED indicator)

D: 24 VDC (orange LED indicator)

6. Release Key Type

5: Special release key \*1

6: Special release key + rear release button \*1

7: Trapped key

7. Trapped Key Type

01 to 30: 30 types \*2

Note: A 24 VDC solenoid lock cannot be combined with a trapped key. A 24 VDC solenoid lock cannot be combined with a special release key and rear release button.

**\*1.** Release keys are provided.

\*2. Thirty types of trapped keys can be manufactured. Specify the trapped key type in numerical order starting from 01 when ordering.

#### Switches (Connector type)

# D4JL-2RFA-D5N-X

1 2 3 4 5 6 7 8

1. Conduit Size

2: G1/2

2. Built-in Switch

R: 3NC + 3NC (slow-action contacts)

3. Head Material

F: Plastic

4. Door Lock and Release

A: Mechanical lock/24 VDC solenoid release

5. Indicator

C: 24 VDC (green LED indicator)

D: 24 VDC (orange LED indicator)

6. Release Key Type

5: Standard release key

7. Connection Method

N: Connector type

8. Cover Mounting Screws

T: Standard screws

X: Special screws

**Note:** For more information about connector types, contact your OMRON sales representative.

#### Switches (Trapped key + Rear release buttons type)

**D4JL-**1 2 3 4 5 6 7

1. Conduit Size

2: G1/2

4: M20

2. Built-in Switch

N: 2NC/1NO + 2NC/1NO (slow-action contacts)

P: 2NC/1NO + 3NC (slow-action contacts)

Q: 3NC + 2NC/1NO (slow-action contacts)

R: 3NC + 3NC (slow-action contacts)

3. Head Material

F: Plastic

4. Door Lock and Release

A: Mechanical lock/24 VDC solenoid release

5. Indicator

C: 24 VDC (green LED indicator)

D: 24 VDC (orange LED indicator)

6. Release Key Type

8: Trapped key + Rear release buttons

7. Trapped Key Type

01: 1 type

#### **Operation Keys**

D4JL-K

1. Operation Key Type

1: Horizontal mounting

2: Vertical mounting

3: Adjustable mounting (horizontal)

# **Ordering Information**

# **Switches (Operation Keys are sold separately.)**Consult with your OMRON representative when ordering any models that are not listed in this table.

#### **Standard Models**

: Models with certified direct opening contacts.

Release key type	Indicator	Lock and release types	Contact configuration (door open/closed detection switch and lock monitor switch contacts)	Conduit opening	Model
			0110/4110 - 0110/4110	G1/2	D4JL-2NFA-C5
			2NC/1NO+2NC/1NO	M20	D4JL-4NFA-C5
			0110/4110 - 0110	G1/2	D4JL-2PFA-C5
		Mechanical lock Solenoid release	2NC/1NO+3NC	M20	D4JL-4PFA-C5
		Soleriold release	010.010/410	G1/2	D4JL-2QFA-C5
			3NC+2NC/1NO	M20	D4JL-4QFA-C5
			010.010	G1/2	D4JL-2RFA-C5
	0		3NC+3NC	M20	D4JL-4RFA-C5
	Green		210/410 210/410	G1/2	D4JL-2NFG-C5
			2NC/1NO+2NC/1NO	M20	D4JL-4NFG-C5
		Solenoid lock Mechanical release	210/410 210	G1/2	D4JL-2PFG-C5
			2NC/1NO+3NC	M20	D4JL-4PFG-C5
			3NC+2NC/1NO	G1/2	D4JL-2QFG-C5
				M20	D4JL-4QFG-C5
			3NC+3NC	G1/2	D4JL-2RFG-C5
				M20	D4JL-4RFG-C5
pecial release key		Mechanical lock	2NC/1NO+2NC/1NO	G1/2	D4JL-2NFA-D5
				M20	D4JL-4NFA-D5
			2NC/1NO+3NC	G1/2	D4JL-2PFA-D5
				M20	D4JL-4PFA-D5
		Solenoid release		G1/2	D4JL-2QFA-D5
			3NC+2NC/1NO	M20	D4JL-4QFA-D5
			01/0 - 01/0	G1/2	D4JL-2RFA-D5
	0		3NC+3NC	M20	D4JL-4RFA-D5
	Orange		0110(4110) 0110(4110)	G1/2	D4JL-2NFG-D5
			2NC/1NO+2NC/1NO	M20	D4JL-4NFG-D5
			010(410.010	G1/2	D4JL-2PFG-D5
		Solenoid lock	2NC/1NO+3NC	M20	D4JL-4PFG-D5
		Mechanical release	010-010/410	G1/2	D4JL-2QFG-D5
			3NC+2NC/1NO	M20	D4JL-4QFG-D5
			01/0 - 01/0	G1/2	D4JL-2RFG-D5
			3NC+3NC	M20	D4JL-4RFG-D5

#### **Models with Rear Release Buttons**

: Models with certified direct opening contacts.

Release key type	Indicator	Lock and release types	Contact configuration (door open/closed detection switch and lock monitor switch contacts)	Conduit opening	Model
			2NC/1NO+2NC/1NO	G1/2	D4JL-2NFA-C6
			ZNC/ INOTZNC/ INO	M20	D4JL-4NFA-C6
			2NC/1NO+3NC	G1/2	D4JL-2PFA-C6
	Green		ZNC/ MO+SNC	M20	D4JL-4PFA-C6
	Green	Mechanical lock Solenoid release	3NC+2NC/1NO	G1/2	D4JL-2QFA-C6
			3NC+2NC/INO	M20	D4JL-4QFA-C6
			3NC+3NC	G1/2	D4JL-2RFA-C6
Canadal relegge key				M20	D4JL-4RFA-C6
Special release key			2NC/1NO+2NC/1NO	G1/2	D4JL-2NFA-D6
				M20	D4JL-4NFA-D6
			2NC/1NO+3NC	G1/2	D4JL-2PFA-D6
	0			M20	D4JL-4PFA-D6
	Orange		3NC+2NC/1NO	G1/2	D4JL-2QFA-D6
			3NC+2NC/TNO	M20	D4JL-4QFA-D6
			3NC+3NC	G1/2	D4JL-2RFA-D6
			SINCTOINC	M20	D4JL-4RFA-D6

#### **Models with Trapped Keys**

: Models with certified direct opening contacts.

Release key type	Indicator	Lock and release types	Contact configuration (door open/closed detection switch and lock monitor switch contacts)	Conduit opening	Model
			2NC/1NO+2NC/1NO	G1/2	D4JL-2NFA-C7-01
			ZNC/TNO+ZNC/TNO	M20	D4JL-4NFA-C7-01
			2NC/1NO+3NC	G1/2	D4JL-2PFA-C7-01
	Green		ZNC/ INO+SNC	M20	D4JL-4PFA-C7-01
	Gleen	Mechanical lock Solenoid release	3NC+2NC/1NO	G1/2	D4JL-2QFA-C7-01
			SNC+ZNC/TNO	M20	D4JL-4QFA-C7-01
			3NC+3NC	G1/2	D4JL-2RFA-C7-01
Transad kay #1				M20	D4JL-4RFA-C7-01
Trapped key *1			2NC/1NO+2NC/1NO	G1/2	D4JL-2NFA-D7-01 *2
				M20	D4JL-4NFA-D7-01
			2NC/1NO+3NC	G1/2	D4JL-2PFA-D7-01 *2
	0			M20	D4JL-4PFA-D7-01
	Orange		2NC - 2NC /4NO	G1/2	D4JL-2QFA-D7-01 *2
			3NC+2NC/1NO	M20	D4JL-4QFA-D7-01
			2NC - 2NC	G1/2	D4JL-2RFA-D7-01 *2
			3NC+3NC	M20	D4JL-4RFA-D7-01

**<sup>\*1.</sup>** Thirty types of trapped keys can be manufactured. Specify the trapped key type in numerical order starting from 01 when ordering.

#### Trapped Key + Rear Release Button type

: Models with certified direct opening contacts.

		oo Batton typo	. IVIOGE	eis with certified direc	opening contacts.
Release key type	Indicator	Lock and release types	Contact configuration (door open/closed detection switch and lock monitor switch contacts)	Conduit opening	Model
			2NC/1NO+2NC/1NO	G1/2	D4JL-2NFA-C8-01-SJ
			ZNC/TNO+ZNC/TNO	M20	D4JL-4NFA-C8-01-SJ
			010/410 : 010	G1/2	D4JL-2PFA-C8-01-SJ
	0		2NC/1NO+3NC	M20	D4JL-4PFA-C8-01-SJ
	Green	Mechanical lock Solenoid release	3NC+2NC/1NO	G1/2	D4JL-2QFA-C8-01-SJ
				M20	D4JL-4QFA-C8-01-SJ
			3NC+3NC	G1/2	D4JL-2RFA-C8-01-SJ
Towns address				M20	D4JL-4RFA-C8-01-SJ
Trapped key			2NC/1NO+2NC/1NO	G1/2	D4JL-2NFA-D8-01-SJ
				M20	D4JL-4NFA-D8-01-SJ
			010/410 : 010	G1/2	D4JL-2PFA-D8-01-SJ
	0		2NC/1NO+3NC	M20	D4JL-4PFA-D8-01-SJ
	Orange		and another	G1/2	D4JL-2QFA-D8-01-SJ
			3NC+2NC/1NO	M20	D4JL-4QFA-D8-01-SJ
			ano ano	G1/2	D4JL-2RFA-D8-01-SJ
			3NC+3NC	M20	D4JL-4RFA-D8-01-SJ

Release key position	Front	Front and rear release button		Front	Front and rear release button	
Release key type	Special release key	Special release key		Trapped key	Trapped key	
Switch appearance		Front	Rear		Front	Rear

# **Operation Keys**

Туре		Model	Туре		Model
Horizontal mounting		D4JL-K1	Adjustable mounting (horizontal)		D4JL-K3
Vertical mounting		D4JL-K2			


**<sup>\*2.</sup>** Models with Korean S-mark certification.

## Slide Keys

Appearance Specifications		Contents	Model	Applicable Door Switch
	Weight: 3,400 g Mechanical durability: 20,000 operations min.	Slide Key: 1 D4JL mounting tool: 1 Inner lever: 1 Inner lever mounting screws: 2 Door Switch mounting one-way screws: 3 Switch protective cover: 1 Switch protective cover screws: 4 Disable-prevention cover (already mounted on Slide Key): 1	D4JL-SK40	D4JL-□□F□-□6 rear release button type

- Note: 1. The Door Switch is not included. Select the Door Switch depending on the necessary number of contacts and the conduit size.
  - 2. Perform risk assessment for the equipment in question, configure relay units and other safety circuits, and use properly.
  - 3. Ask your OMRON representative for information on the D4JL-SK30.

#### D4JL-SK40 Configuration

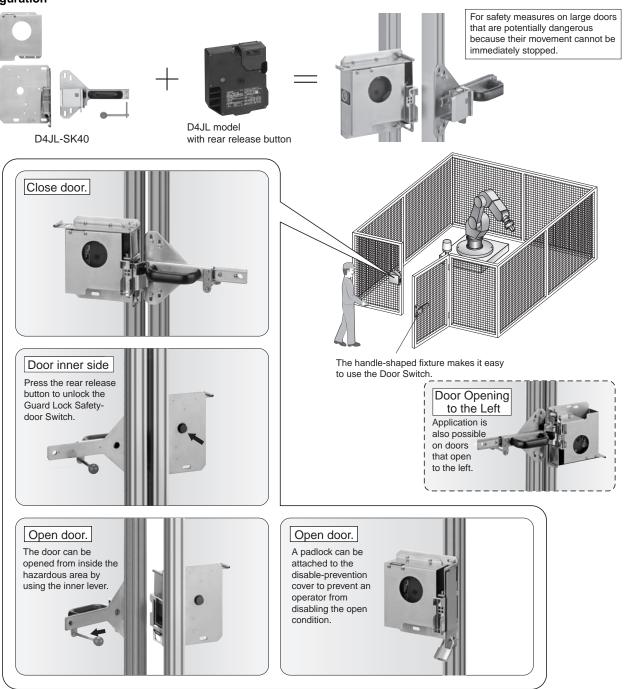

ANSI/RIA R15.06-1999 11.2.2 Interlocking portion

- b) The interlocking portion of the interlocked barrier shall be installed, applied, and maintained so that:
- 8) be capable of being easily unlocked from the inside of the safeguarded space with or without power available, when the possibility of full body access exists;

# **Specifications**

# Standards and EC Directives Conforms to the following EC Directives:

- Machinery Directive
- Low Voltage Directive
- EN 1088
- EN 60204-1
- GS-ET-19
- CCC

#### **Certified Standards**

Certification body	Standard	File No.
TÜV SÜD <b>*</b> 3	EN 60947-5-1 (certified direct opening)	Consult your OMRON representative for details.
UL <b>*</b> 1 <b>*</b> 3	UL 508, CSA C22.2 No.14	E76675
CQC (CCC) *3	GB14048.5	2005010305167533
KOSHA *2 *3	EN60947-5-1	Consult your OMRON representative for details.

<sup>\*1.</sup> CSA C22.2 No. 14 was certified by UL.

## Certified Standard Ratings TÜV (EN 60947-5-1)

Item	Utilization category	AC-15	DC-13
Rated o	perating current (le)	3 A	0.27 A
Rated o	perating voltage (Ue)	240 V	250 V

Note: Use a 10 A fuse type gI or gG that conforms to IEC60269 as a short-circuit protection device. This fuse is not built into the Switch.

#### UL/CSA (UL 508, CSA C22.2 No. 14) A300 (between terminals 12 and 41)

Rated	Carry	Curre	nt (A)	Volt-amperes (VA)	
voltage	current	Make	Break	Make	Break
120 VAC	10 A	60	6	7,200	720
240 VAC	10 A	30	3		

#### A300 (between all other terminals)

Rated	Carry	Curre	nt (A)	Volt-amperes (VA)		
voltage	current	Make	Break	Make	Break	
240 VAC	3 A	30	3	7,200	720	

#### Q300

Rated Carry		Curre	nt (A)	Volt-amperes (VA)	
voltage	current	Make	Break	Make	Break
125 VDC	2.5 A	0.55	0.55	69	69
250 VDC		0.27	0.27		

#### **Solenoid Coil Characteristics**

Item Type	24 VDC
Rated operating voltage (100% ED)	24 VDC +10% -15%
<b>Current consumption</b>	Approx. 200 mA
Insulation Class	Class B (130°C max.)

#### **Indicator Characteristics**

Item Typ	е	LED
Rated voltage	24 VDC	24 VDC
<b>Current consumption</b>	Approx. 1 mA	Approx. 8 mA
Color (LED)	Orange	Green

<sup>\*2.</sup> Only certain models have been certified.

**<sup>\*3.</sup>** D4JL-□□FA-□8-01-SJ will be certificated soon.

#### **Characteristics**


Degree of pro	tection *1		IP67 (EN60947-5-1)					
	Mechanical		1,000,000 operations min.					
		Trapped key	10,000 operations min.					
Durability *2 Rear release button			D4JL-□□FA-□7-□: 3,000 operations min. D4JL-□□FA-□8-01-SJ: 500 operations min.					
	Electrical		500,000 operations min. (3 A resistive load at 250 VAC) *3					
Operating spe	eed		0.05 to 0.5 m/s					
Operating free	quency		30 operations/minute max.					
Direct openin	g force *4		60 N min. (EN60947-5-1)					
Direct openin	g travel *4		15 mm min. (EN60947-5-1)					
Holding force	*5		3,000 N min.					
Contact resis	tance		25 m $Ω$ max. (per contact)					
Minimum app	licable load *6		1 mA resistive load at 5 VDC (N-level reference value)					
Rated insulati	ion voltage (U <sub>i</sub> )		300 V (EN60947-5-1)					
Rated frequer	псу		50/60 Hz					
Protection ag	ainst electric s	hock	Class II (double insulation)					
Pollution deg	ree (operating	environment)	3 (EN60947-5-1)					
	Between term polarity	inals of same	2.5 kV					
Impulse withstand voltage	Between term different pola		4 kV					
(EN60947-5- 1)	Between othe terminals and non-current c metallic parts	l arrying	6 kV					
Insulation res	istance		100 M $\Omega$ min. (at 500 VDC)					
Contact gap			$2 \times 2$ mm min.					
Vibration resistance	Malfunction		10 to 55 Hz, 0.75 mm single amplitude					
Shock	Destruction		1,000 m/s <sup>2</sup> min.					
resistance	Malfunction		80 m/s <sup>2</sup> min.					
Conditional short-circuit current			100 A (EN60947-5-1) *7					
Conventional free air thermal current (Ith)			10 A (between terminals 12 and 41), 3 A (between all other terminals) (EN60947-5-1)					
Ambient operating temperature			-10 to +55°C (with no icing)					
Ambient operating humidity			95% max.					
Weight			Approx. 650 g (D4JL-4NFA-C7-01)					

Note: The above values are initial values.


- \*1. The degree of protection is tested using the method specified by the standard (EN60947-5-1). Confirm that sealing properties are sufficient for the operating conditions and environment beforehand. Although the switch box is protected from dust or water penetration, do not use the D4JL in places where foreign material may enter through the key hole on the head, otherwise Switch damage or malfunctioning may occur.
- \*2. The durability is for an ambient temperature of 5 to 35°C and an ambient humidity of 40% to 70%. For further conditions, consult your OMRON sales representative.
- **\*3.** Do not pass a 3 A, 250 VAC load through more than two circuits.
- **\*4.** These figures are minimum requirements for safe operation.
- **\*5.** This figure is based on the GS-ET-19 evaluation method.
- **\*6.** This value will vary with the switching frequency, environment, and reliability level. Confirm that correct operation is possible with the actual load beforehand.
- **\*7.** Use a 10 A fuse type gI or gG that conforms to IEC 60269 as a short-circuit protection device.

#### **Connections**

# Internal Circuit Diagram Indicator




#### **Solenoid**



#### **Circuit Connection Example**

(Examples for the D4JL-□NF□-□)

 Terminals 11-42 and terminals 21-52 are connected internally and so connect terminals 12-41 and 22-51 for safety-circuit input (GS-ET-19).

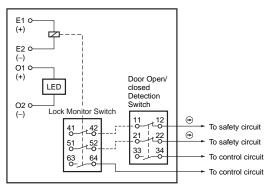


- - Terminals 11-12 and terminals 21-22 are direct opening contacts.
- Do not connect the indicator directly to direct opening contacts. If indicator is connected in parallel with direct opening contacts, a short-circuit current may flow in the event that the indicator is damaged, causing equipment to malfunction.
- Do not switch standard loads for more than 2 circuits. Otherwise, the level of insulation may decrease.
- The solenoid terminals have polarity (E1: + and E2: -). Confirm the polarity before wiring.

# **Operation Method**


# **Operation Principles Mechanical Lock Models**

#### Operation Key removed.

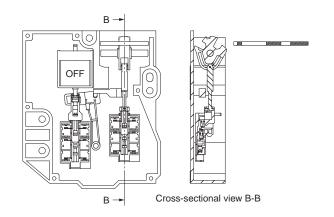


#### **Solenoid Lock Models**


#### Operation Key removed.

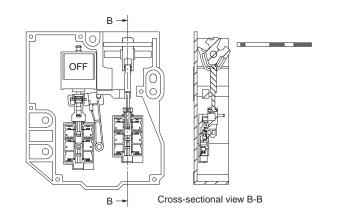


#### Operation Key inserted: Door locked.

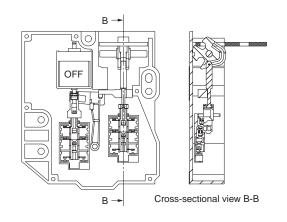


#### Operation Key inserted: Door unlocked.

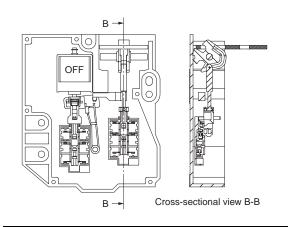

#### Solenoid ON: Door unlocked.

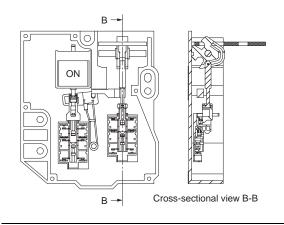


#### Solenoid ON: Door locked.

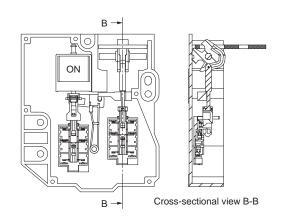


#### **Trapped Key Models**


(1) Operation Key removed, solenoid OFF, and trapped key removed

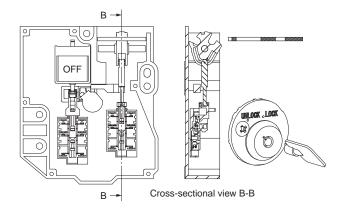


(4) Operation Key inserted, solenoid ON, and trapped key inserted. Status: Door locked and trapped key can be removed.

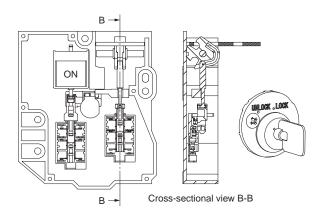


(2) Operation Key inserted, solenoid OFF, and trapped key removed. Status: Door unlocked.

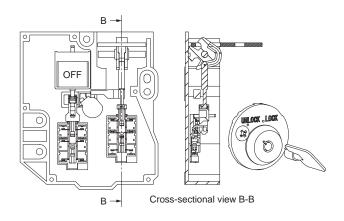


(5) Operation Key inserted, solenoid ON, and trapped key removed. Status: Door unlocked.

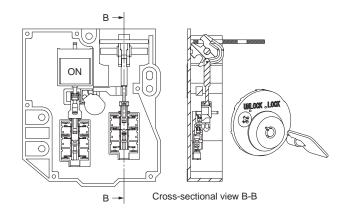

(3) Operation Key inserted, solenoid OFF, and trapped key inserted. Status: Door locked and trapped key cannot be removed.

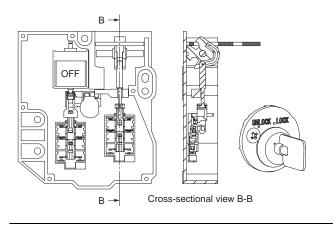


(6) Operation Key removed, solenoid ON, and trapped key removed.

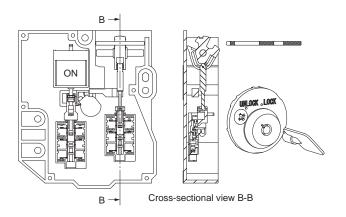

#### **Structure and Nomenclature**

## Structure (D4JL-□□□A-□5 and D4JL-□□□G-□5)

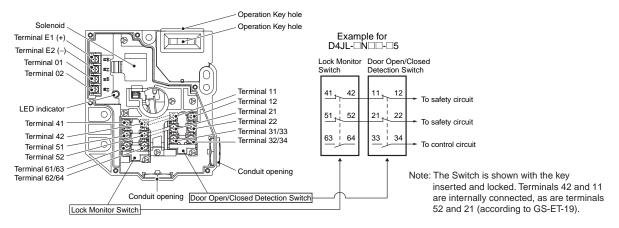


#### **Contact Forms**

Indicates conditions where the Key is inserted and the lock is applied. Terminals 42-11 and terminals 52-21 are connected internally (as per BIA GS-ET-19).

	Contact	Conta	ct form		
Model	(door open/closed detection and lock monitor)	Lock monitor	Door open/ closed detection	Operating pattern	Remarks
D4JL-□NF□-□	2NC/1NO+2NC/1NO	51 52	Door open/closed detection 11 12 21 22 33 34	Lock position  41-12 51-22 33-34 63-64 Stroke Operation Key insertion completion position  Extraction completion position	NC contacts 11-12 and 21-22 have a certified direct opening mechanism (⊝). The terminals 41-12, 51-22, 33-34, and 63-64 can be used as unlike poles.
D4JL-□PF□-□	2NC/1NO+3NC	51 52	Door open/ closed detection 11 12 21 22 33 34	Lock position  41-12 51-22 33-34 61-62 Stroke Operation Key insertion completion position  Extraction completion position	NC contacts 11-12 and 21-22 have a certified direct opening mechanism (⊕). The terminals 41-12, 51-22, 33-34, and 61-62 can be used as unlike poles.
D4JL-□QF□-□	3NC+2NC/1NO	51 52	Door open/ closed detection 11 12 21 22 31 32	Lock position  41-12 51-22 31-32 63-64 Stroke Operation Key insertion completion position  Extraction completion position	NC contacts 11-12, 21-22 and 31-32 have a certified direct opening mechanism (⊕). The terminals 41-12, 51-22, 31-32, and 63-64 can be used as unlike poles.
D4JL-□RF□-□	3NC+3NC	51 52	Door open/closed detection  11 12  21 22 31 32	Lock position  41-12 51-22 31-32 61-62 Stroke Operation Key insertion completion position  Extraction completion position	NC contacts 11-12, 21-22, and 31-32 have a certified direct opening mechanism (⊕). The terminals 41-12, 51-22, 31-32, and 61-62 can be used as unlike poles.


# **Operating Cycle**

#### Structure (D4JL-□□□A-□5 and D4JL-□□□G-□5)

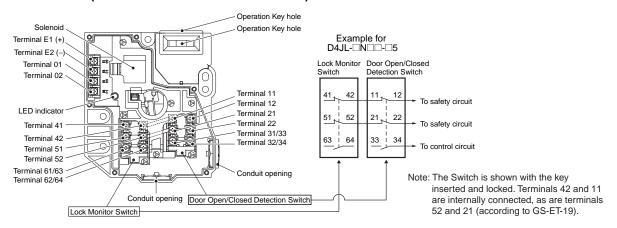

## **Operating Cycle Examples (for Standard Models)**

D4JL- A-5 (Mechanical Lock Models with Special Release Keys)

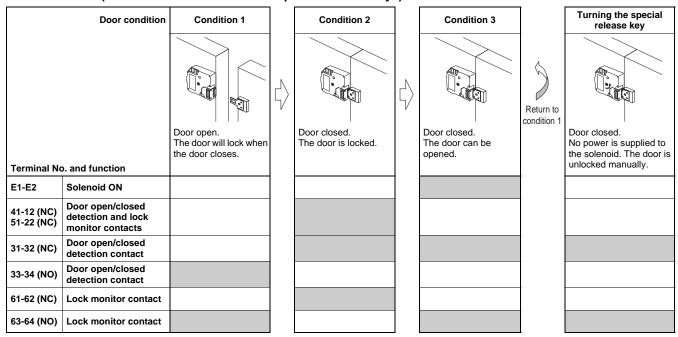

#### D4JL-UG-G-(Solenoid Lock Models with Special Release Keys)

Terminal No	Door condition	Even when the door is closed, it does not lock until power is supplied to the solenoid.	Door closed. The door is locked.	Door closed. The door can be opened.
E1-E2	Solenoid ON			
41-12 (NC) 51-22 (NC)	Door open/closed detection and lock monitor contacts			
31-32 (NC)	Door open/closed detection contact			
33-34 (NO)	Door open/closed detection contact			
61-62 (NC)	Lock monitor contact			
63-64 (NO)	Lock monitor contact			

The shaded areas indicate the contact is closed and power is supplied to the solenoid.

Door open/closed detection and lock monitor contacts: Door open/closed detection contact:

Door open/closed detection and lock monitor contacts: Can be used in safety circuits because of the direct opening mechanisms.

Can be used to confirm whether the key is inserted and to monitor the open/closed status


of a door.

Lock monitor contact:

Can be used to confirm whether power is supplied to the solenoid and to monitor whether or not a door can be opened or closed.

Note: The door open/closed detection and lock monitor contact configuration depends on the model.

#### Structure (D4JL-DDA-D6)

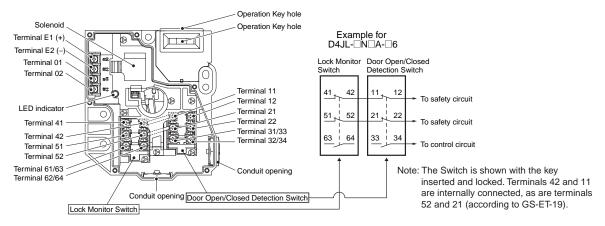

## **Operating Cycle Examples (for Models with Rear Release Buttons)**

D4JL-DDA-D6 (Mechanical Lock Models with Special Release Keys and Rear Release Buttons)

	Door condition	Condition 1	Condition 2	Condition 3		Turning the special release key		Pressing the rear release button
Terminal No	o. and function	Door open. The door will lock when the door closes.	\$ Door closed. The door is locked.	\$ Door closed. The door can be opened.	Return to condition 1	Door closed. No power is supplied to the solenoid. The door is unlocked manually.		Door closed. No power is supplied to the solenoid. The door is unlocked manually.
E1-E2	Solenoid ON					,	Ī	·
41-12 (NC) 51-22 (NC)	Door open/ closed detection and lock monitor contacts							
31-32 (NC)	Door open/ closed detection contact							
33-34 (NO)	Door open/ closed detection contact							
61-62 (NC)	Lock monitor contact						Ī	
63-64 (NO)	Lock monitor contact							

The shaded areas indicate the contact is closed and power is supplied to the solenoid.

Door open/closed detection and lock monitor contacts: Can be used in safety circuits because of the direct opening mechanisms.

Door open/closed detection contact:


Can be used to confirm whether the key is inserted and to monitor the open/closed status

of a door.
Lock monitor contact: Can be us

Can be used to confirm whether power is supplied to the solenoid and to monitor whether or not a door can be opened or closed.

Note: The door open/closed detection and lock monitor contact configuration depends on the model.

#### Structure (D4JL-□□□A-□7-□□)

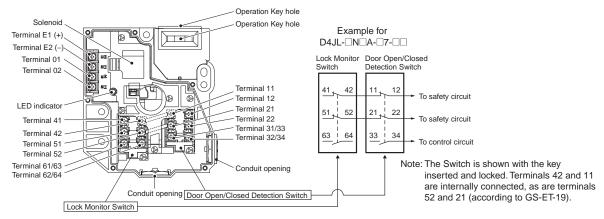

## **Operating Cycle Examples (for Models with Trapped Keys)**

D4JL- A-7- (Models with Trapped Keys)

		(woders with	• • •		1				1	1	ı		ı
Do	or condition	Condition 1		Condition 2		Condition 3		Condition 4		Condition 5		Condition 6	
			\$		\$		<b>\$</b>		\$		$\langle \rangle$		Return
Terminal No function	o. and	Door open. The Key is not inserted. The door will not lock when the door closes.		Door closed. The Key is not inserted. The door is not locked.		Door closed. The Key is inserted. The door is locked.		Door closed. The Key is inserted. The door remains locked.		Door closed. The Key is not inserted. The door can be opened.		Door open. The Key is not inserted. The door will not lock when the door closes.	conditio
E1-E2	Solenoid ON												
41-12 (NC) 51-22 (NC)	Door open/ closed detection and lock monitor contacts												
31-32 (NC)	Door open/ closed detection contact												
33-34 (NO)	Door open/ closed detection contact												
61-62 (NC)	Lock monitor contact												
63-64 (NO)	Lock monitor contact												

The shaded areas indicate the contact is closed and power is supplied to the solenoid.

Door open/closed detection contact:

Door open/closed detection and lock monitor contacts: Can be used in safety circuits because of the direct opening mechanisms.

Can be used to confirm whether the key is inserted and to monitor the open/closed status of a door.


Lock monitor contact:

Can be used to confirm whether power is supplied to the solenoid and to monitor whether or not a key can be removed.

Note: 1. Door open/closed detection and lock monitor contact configuration depends on the model.

2. If power is supplied to the solenoid, the door cannot be unlocked until the Key is turned to the left and removed. The Key cannot be removed unless it is in the UNLOCK position.

#### Structure (D4JL-UDA-D8-01-SJ)

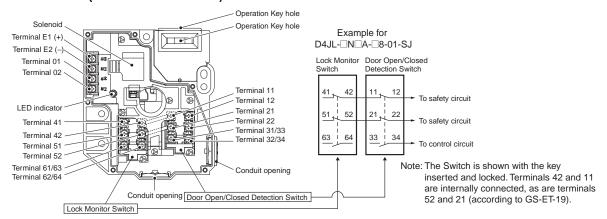

## Operating Cycle Examples (for Models with Trapped Keys + Rear Release Buttons)

D4JL- A-B-01-SJ (Models with Trapped Keys + Rear Release Buttons)

		Co (models w			ĺ				1				1	Pressing
Do	or condition	Condition 1		Condition 2		Condition 3		Condition 4		Condition 5		Condition 6		the rear release button
			<		\$		$\Diamond$		\$		$\Diamond$		Return to condition 1	
Terminal No	o. and	Door open. The Key is not inserted. The door will not lock when the door closes.		Door closed. The Key is not inserted. The door is not locked.		Door closed. The Key is inserted. The door is locked.		Door closed. The Key is inserted. The door remains locked.		Door closed. The Key is not inserted. The door can be opened.		Door open. The Key is not inserted. The door will not lock when the door closes.		Door closed. No power is supplied to the solenoid. The door is unlocked
function	Solenoid													manually.
E1-E2	ON													
41-12 (NC) 51-22 (NC)	Door open/ closed detection and lock monitor contacts													
31-32 (NC)	Door open/ closed detection contact													
33-34 (NO)	Door open/ closed detection contact													
61-62 (NC)	Lock monitor contact													
63-64 (NO)	Lock monitor contact													

Door open/closed detection and lock monitor contacts: Can be used in safety circuits because of the direct opening mechanisms.

Door open/closed detection contact: Can be used to confirm whether the key is inserted and to monitor the open/closed status

or not a key can be removed. Note: 1. Door open/closed detection and lock monitor contact configuration depends on the model.

Lock monitor contact:

2. If power is supplied to the solenoid, the door cannot be unlocked until the Key is turned to the left and removed. The Key cannot be removed unless it is in the UNLOCK position.

Can be used to confirm whether power is supplied to the solenoid and to monitor whether


The shaded areas indicate the contact is closed and power is supplied to the solenoid.


of a door.


Dimensions (Unit: mm)


# **Dimensions and Operating Characteristics**

#### **Switches**

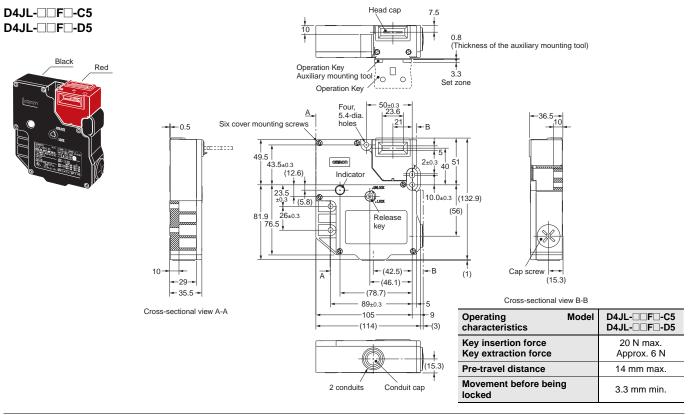


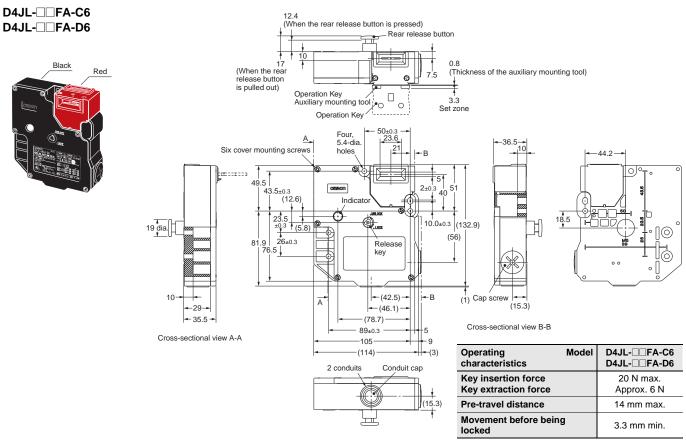

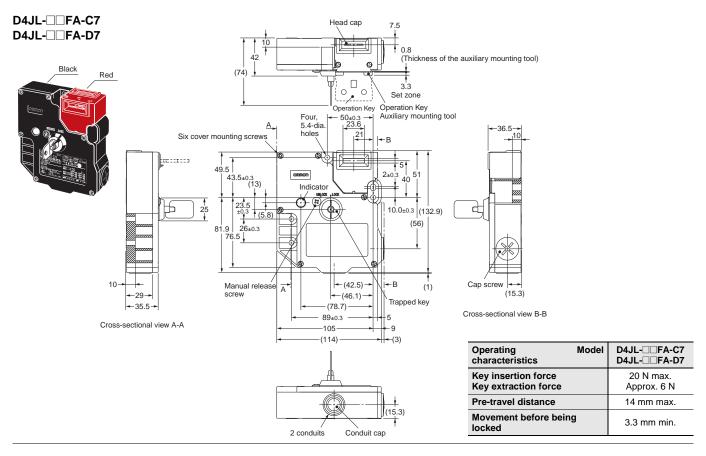

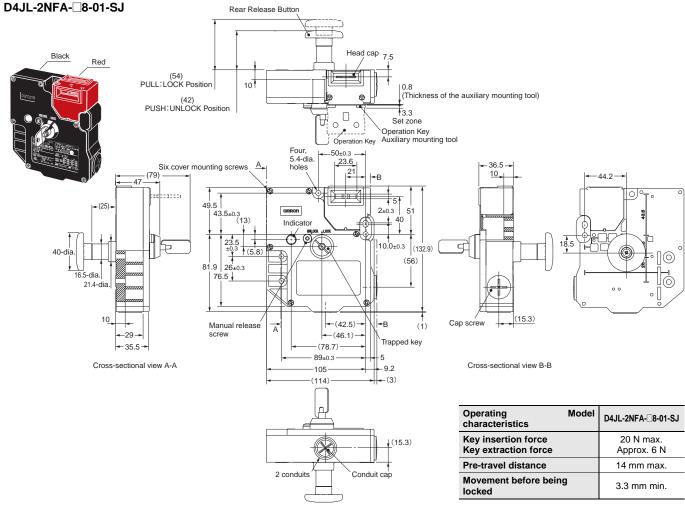

#### **Operation Keys**

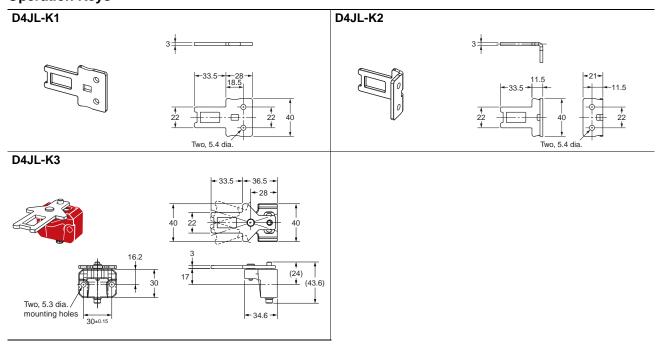


Note: Unless otherwise specified, a tolerance of ±0.8 mm applies to all Switch dimensions and a tolerance of ±0.4 mm applies to Operation Key dimensions.


#### Slide Keys

#### D4JL-SK40

#### **Open Door**

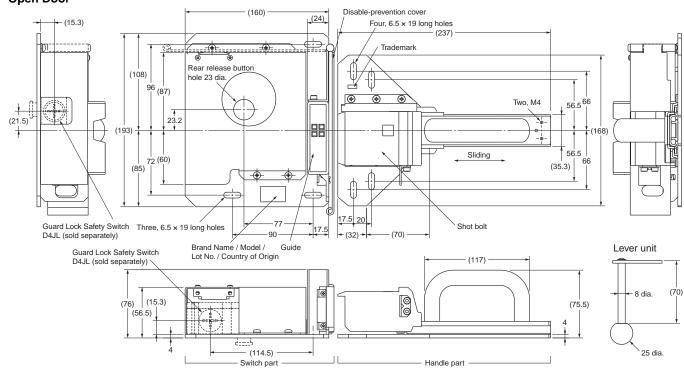

#### **Closed Door**

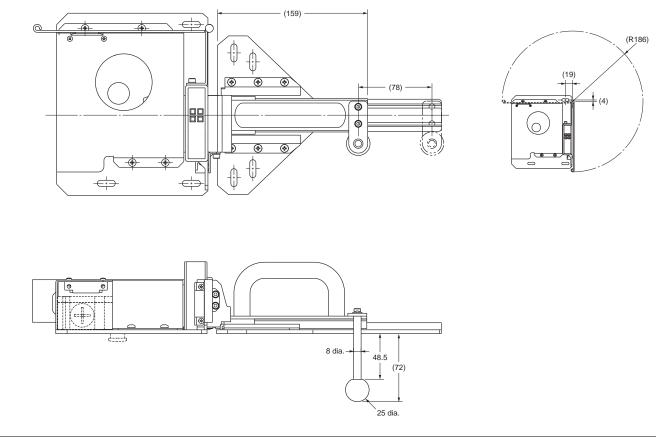

#### With Operation Key Inserted

# D4JL+D4JL-K1 (with Front-inserted Operation Key)

Key insertion position (55.8 min., 59.1 max.)

Horizontal insertion radius:
R ≥ 270


Vertical insertion radius:
R ≥ 270


Vertical insertion radius:
R ≥ 270

(40)


Center tolerance of key hole: ±0.8

D4JL+D4JL-K1 (with Top-inserted Operation Key)

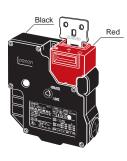


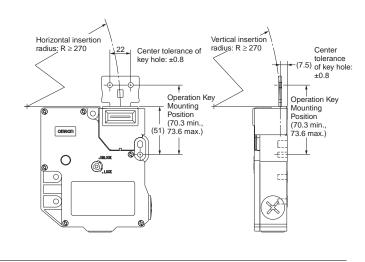


D4JL+D4JL-K2 (with Front-inserted Operation Key)

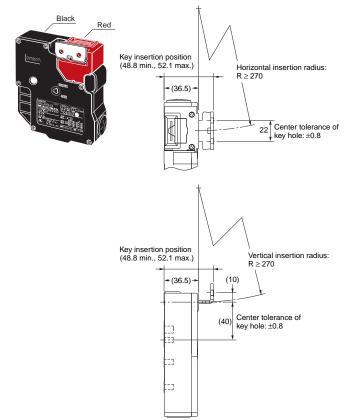

D4JL+D4JL-K2 (with Top-inserted Operation Key)

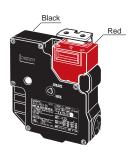

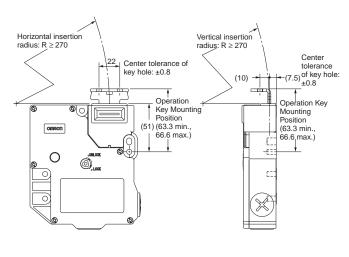

D4JL + D4JL-K3 (with Front-inserted Operation key)


Red radius: R≥ 160

(73.8 min., 77.1 max.)

Key insertion position (73.8 min., 77.1 max.)

(40)

D4JL + D4JL-K3 (with Top-inserted Operation key)

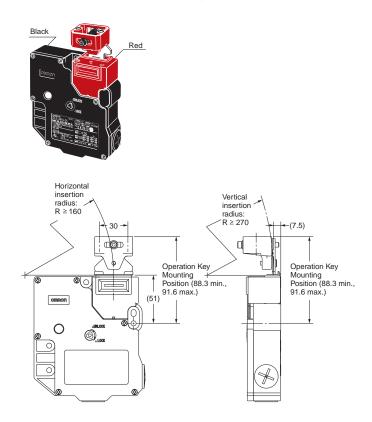


# **Application Examples**

PL/safety category	Model	Stop category	Reset
PLd/3 equivalent	Guard Lock Safety-door Switch D4JL-□□□A-□□ (Mechanical Lock Type) Safety Relay Unit G9SA-321-T□ (24 VAC/VDC)	1	Manual

Note: The above PL is only the evaluation result of the example. The PL must be evaluated in an actual application by the customer after confirming the usage conditions.

#### Application Overview

- The stop signal is sent to the motor controller.
- The power supply to the motor M is turned OFF after OFF-delay time.
- The lock release signal enables the guard 1 and guard 2 to be opened.
- The S1 and S2 monitor the guard 1, and the S3 and S4 monitor the guard 2. The power supply to the motor M is kept OFF while one of the guards is opened.
- The power supply to the motor M is turned ON again when the reset switch S5 is pressed while both guards are closed and locked.

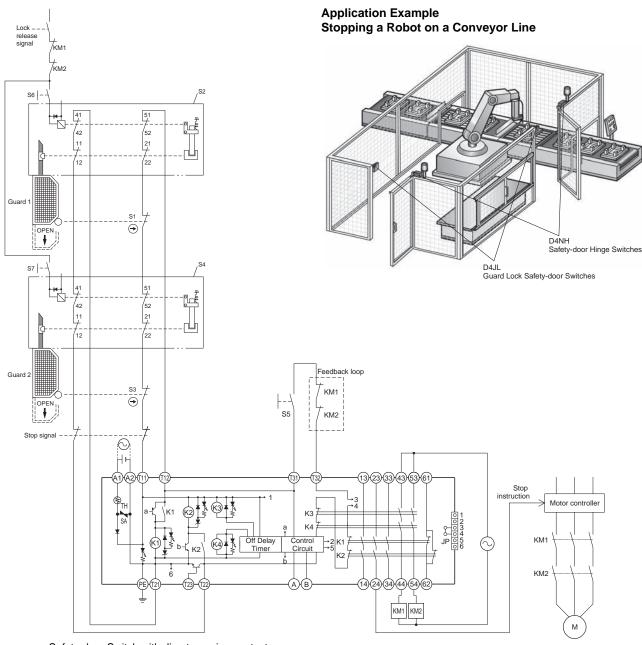

S1: Safety-door Switch with direct opening contact

S2: Guard Lock Safety-door Switch

S3: Safety-door Switch with direct opening contact

S4: Guard Lock Safety-door Switch

S5: Reset switch
S6 and S7: Lock release switches
KM1 and KM2: Magnetic contactors
M: 3-phase motor

Note: 1. When the release button is pressed on rear release models, the solenoid contacts are turned OFF.


2. With Trapped Key Models, the door will not lock when it is closed with the trapped key removed.

PL/safety category	Model	Stop category	Reset
PLe/4 equivalent	Guard Lock Safety-door Switch D4JL-□□□A-□□ (Mechanical Lock Type) Flexible Safety Unit G9SX-BC202 (24 VDC) Flexible Safety Unit G9SX-AD322-T15 (24 VDC)	1	Manual

Note: 1. The above PL is only the evaluation result of the example. The PL must be evaluated in an actual application by the customer after confirming the usage conditions. 2. The above PL is the evaluation result concerning the guard 1. The PL for emergency stop switch, guard 2, and other safety functions must be separately evaluated.

#### Application Overview

- The stop signal 1 is sent to the motor controller 1.
- The power supply to the motor M1 is turned OFF after OFF-delay time.
- The lock release signal 1 enables the guard 1 to be opened.
- The S3 and S4 monitor the guard 1, and the power supply to the motor M1 is kept OFF while the guard 1 is opened.
- The power supply to the motor M1 is turned ON when the reset switch S5 is pressed while the guard 1 is closed and locked.

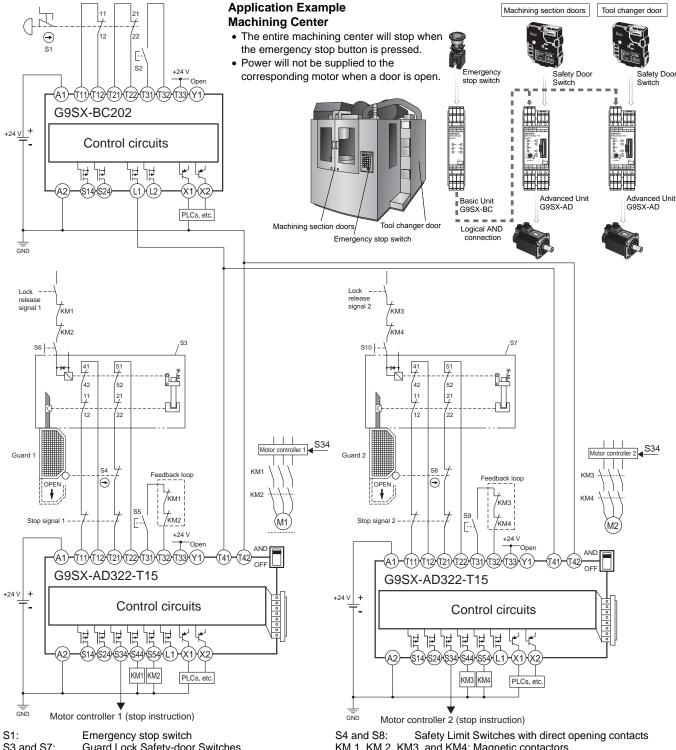

S3 and S7: Guard Lock Safety-door Switches S2, S5, and S9: Reset switches

Lock release switches

S6 and S10:

KM 1, KM 2, KM3, and KM4: Magnetic contactors M1 and M2: 3-phase motors

# **Safety Precautions**

Be sure to read the precautions for All Safety Door Switches in the website at:http://www.ia.omron.com/.

#### **Indication and Meaning for Safe Use**

<b>⚠</b> DANGER	Indicates an imminently hazardous situation which, if not avoided, is likely to result in serious injury or may result in death. Additionally there may be severe property damage.
	Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury or in property damage.
Precautions for Safe Use	Supplementary comments on what to do or avoid doing, to use the product safely.
Precautions for Correct Use	Supplementary comments on what to do or avoid doing, to prevent failure to operate, or undesirable effect on product performance.

#### <Guard Lock Safety-door Switch D4JL>

#### / DANGER

Injury may occasionally occur. Always check to make sure that the safety functions operate correctly before using the machine. The safety functions may not operate correctly because of wiring mistakes, setting mistakes, or Switch malfunction, causing some machines to continue operating in situations where they should be stopped.



Injury may occasionally occur. If the machine is used with the release key in the UNLOCK position, the electromagnetic lock may not operate, causing some machines to continue operating in situations where they should be stopped. Be sure to put the release key in the LOCK position before using the machine. Also, check the condition of the lock and safety circuits.



Injury may occasionally occur. When the electromagnetic lock function or Switch function is damaged, some machines may continue operating in situations where they should be stopped. Do not use the electromagnetic lock function of the Switch in place of a door lock. Always provide a lock separate from the Switch, attach a warning seal to prevent people from using excessive force to open the door when it is locked, or provide an indicator lamp to show the locked/unlocked status of the door.



#### **∕!**\CAUTION

Electric shock may occasionally occur. Do not use metal connectors or metal conduits.



Do not dismount the operation key from the door intentionally and insert it to the switch with the door open. Machine may start operating and injury or death may be caused.



#### **Precautions for Safe Use**

#### Installation Environment

 Do not use the Switch submersed in oil or water or in locations continuously subject to splashes of oil or water. Doing so may result in oil or water entering the Switch. (The IP67 degree of protection of the Switch specifies the amount of water penetration after the Switch is submerged in water for a certain period of time.)


#### Wiring

- Do not switch circuits for two or more standard loads (250 VAC, 3 A) at the same time. Doing so may adversely affect insulation performance.
- · Keep the electrical load below the rated value.
- Do not use screws longer than 9 mm when using metal connectors.
   Otherwise it may result in electric shock.
- Do not use metal conduits. Damage to the conduit opening may result in an improper seal or electric shock.
- Always attach the cover after completing wiring and before using the Switch. Do not supply power when the cover is not attached.
   Electric shock may occur if the Switch is used without the cover attached.

#### Installation

- Be careful not to drop the switch, or the switch will not fully exhibit its ability.
- Make sure the Switch is mounted securely to prevent it from falling off. Otherwise injury may result.
- Do not use the Switch as a stopper. Be sure to install a stopper as shown in the following illustration when mounting the Switch and adjust the stopper so that the Operation Key is within the setting zone.


Do not subject the Switch to a shock that exceeds the Switch's shock resistance of 1,000 m/s<sup>2</sup>.

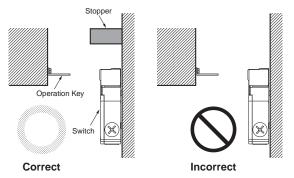

#### **Precautions for Correct Use**

#### Operation Key

- Use only the designated Operation Key. The Head has been designed so that operation is not possible with a screwdriver or other tools. Using anything other than the designated Operation Key may damage the Switch or affect machine safety.
- Do not operate the Switch with anything other than the special OMRON Operation Key, otherwise the Switch may break or the safety of the system may not be maintained.
- Do not impose excessive force on the Operation Key while the Key is inserted into the Switch or drop the Switch with the Operation Key inserted. Doing either of these may deform the Key or break the Switch.

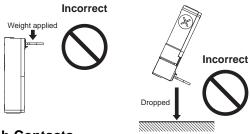


#### **Switch Contacts**

The Switch contacts can be used with either standard loads or microloads. Once the contacts have been used to switch a load, however, they cannot be used to switch smaller loads. The contact surfaces will become rough once they have been used and contact reliability for smaller loads may be reduced.

#### Release Key


- The release key is used to unlock the Switch in case of emergency or if the power supply to the Switch stops.
- opened (mechanical lock models only).




- · After setting the release key to UNLOCK to, for example, change the head direction or perform maintenance, be sure to return it to the LOCK setting before resuming operation.
- The release key is set in the unlock position at the factory for the D4JL-00A-05, D4JL-00A-06, D4JL-00A-07-00 and D4JL-UUA-U8-01-SJ and in the lock position for the D4JL-□□□G-□5.
- If the release key is set to UNLOCK when the Switch is used for the door of a machine room to ensure the safety of people performing adjustment work inside, the door will not be locked when the door is closed and no power will be supplied to the equipment.
- Do not use the release key to start or stop machines.
- The auxiliary lock must be released using the release key only by authorized personnel.
- Do not impose a force exceeding 1 N·m on the release key screws. The release key may be damaged and may not operate properly.
- To prevent the release key from being used by unauthorized personnel, set it to LOCK and seal it with sealing wax.


#### **Rear Release Button**

· The rear release button is used for emergency escapes when someone locks a worker in the work area (hazardous area).






- · After the rear release button is used to unlock the door, pull the button out to restore it to its original state. If the button is left pressed in, the door will not lock when the door is closed and power will not be supplied to the equipment.
- Mount the Switch so that the rear release button can be operated by a worker inside the work area (hazardous area).
- For the D4JL-DDA-B-01-SJ, attach the enclosed rear release button with the rear release button attachment screw. When you attach the rear release button, use a wrench to hold it in the specified position and tighten the screw to the applicable torque.

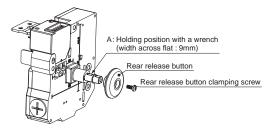


#### Trapped Key

**oUNLOCK** 

· The trapped key is released when power is supplied to the solenoid. Turn the trapped key to the UNLOCK position and remove the key to unlock the door.





As long as a worker has the trapped key with him when he enters the work area (hazardous area), he cannot be locked inside by another worker.

 Do not impose a force exceeding 1 N·m when operating the key. Otherwise, the Switch may be damaged and may not operate properly.

#### Attaching a Cover


- Make sure the release key is set to the LOCK position before covering the D4JL.
- When attaching a cover, be sure that the seal rubber is in place and that there is no foreign material present. If the cover is attached with the seal rubber out of place or if foreign material is stuck to the rubber, a proper seal will not be obtained.
- Do not use any screws to connect the cover other than the specified ones. The seal characteristics may be reduced.
- Use one of the following methods when covering a Trapped Key Switch. When the Operation Key is removed (door open):

Cover with the trapped key removed (UNLOCK).

When the Operation Key is inserted (door closed): Cover with the trapped key inserted (LOCK).

#### **Manual Release**

- Manual release is used to unlock the Switch when power cannot be supplied to the solenoid, such as when power is interrupted or the equipment is being repaired.
  - Use a Phillips screwdriver to remove the manual release screw.
     Use a precision screwdriver to press down the lever inside the Switch far enough to release the trapped key.
  - 2. The door is unlocked when the trapped key is turned to the UNLOCK position and removed.
- Do not use manual release to stop machines.
- After the Switch has been manually released, re-install the manual release screw in its proper position on the Switch using the specified torque.



#### **Hinged Doors**

If the Switch is mounted too close to the hinge, the force imposed on the lock will be much larger than for locations far from the hinge and the lock may be damaged. Mount the Switch close to the handle.

#### **Solenoid Lock Models**

The solenoid lock locks the door only when power is supplied to the solenoid. The door will be unlocked if the power supply to the solenoid stops. Therefore, do not use the solenoid lock models for machines that may be operating and dangerous even after the machine stops operating.

#### **Mounting Methods**

#### **Appropriate Tightening Torque**

Be sure to tighten each screw of the Switch properly. Loose screws may result in malfunction.

Туре	Appropriate tightening torque
Terminal screw	0.6 to 0.8 N·m
Cover mounting screw	0.7 to 0.9 N·m
Manual release screw	0.6 to 0.8 N·m
Operation Key mounting screw	2.4 to 2.8 N·m
Switch mounting screw	3.2 to 3.8 N·m
Connector	1.8 to 2.2 N⋅m
Cap screw	1.3 to 1.7 N·m
Rear release button clamping screw	1.1 to 1.3 N·m

#### **Switch and Operation Key Mounting**

 Mount the Switch and Operation Key securely to the applicable tightening torque with M5 screws and flat or spring washers.
 To ensure safety, use screws that cannot be easily removed or another means to prevent the Switch and Operation Key from easily being removed.


# Mounting Holes for Switches 50±0.1 Rear release button hole 43.5±0.1 Rear reference (50 dia.) 44.2±0.1 Three, M5 18.5±0.1

- Do not operate the Switch with anything other than the special OMRON Operation Key. Otherwise, the Switch may be damaged and the safety of the system may not be maintained.
- Ensure that the alignment offset between the Operation Key and the key hole does not exceed ±0.8 mm. If the Operation Key is offset or at an angle, accelerated wear or damage to the Switch may result.
- When inserting the Operation Key, install the provided mounting auxiliary tool in the key hole and use the tool to position the key in the key hole center and set zone.



mounting tool

- Remove the mounting auxiliary tool from the Switch after the Operation Key is properly inserted.
- Observe the specified insertion radius for the Operation Key and insert it in a direction perpendicular to the key hole.



- Do not impose excessive force on the Operation Key while the Key is inserted into the Switch or drop the Switch with the Operation Key inserted. Doing either of these may deform the Key or break the Switch.
- Attach the enclosed cap head to any Operation Key hole that is not used.


#### **Securing Doors**

When the door is closed (with the Operation Key inserted), the Operation Key may exceed the set zone because of, for example, the door's own weight, machine vibration, or the door cushion rubber. Then, when an attempt is made to open the door, it may result in damage or malfunction. Also, it may not be possible to unlock the Switch if there is weight placed on the Operation Key. Do not rely on the Switch to substitute for a door locking device. Secure the door with a stopper so that the Operation Key remains within the set zone.

#### Wiring

#### **Circuit Connection Example**

- Connect the indicators in parallel to the auxiliary circuits or terminals E1 and E2. Do not connect the indicators in parallel with the direct opening contact. If the indicators are broken, a short-circuit current may flow, causing equipment to malfunction.
- The 24 VDC solenoid terminals have polarity (E1: +, E2: -).
   Confirm the polarity before wiring.
- The contact ON/OFF timing for Switches is not synchronized.
   Confirm performance before application.

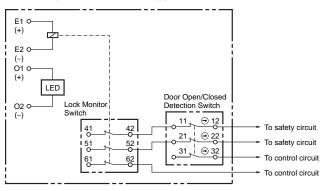

#### Wiring

- Do not wire the Switch while power is being supplied. Doing so may result in electric shock.
- Do not let particles, such as small pieces of lead wire, enter the switch body when wiring.
- Make sure that the wiring does not hide the LED indicator when wiring E1/E2 or O1/O2.
- When connecting to the terminals via insulating tube and M3.5 crimp terminals, arrange the crimp terminals so that they do not rise up onto the case or the cover.
- Applicable lead wire size: AWG22 to AWG18 (0.3 to 0.75 mm²).
   Use lead wires of an appropriate length. Not doing so may result in excess length causing the cover to rise and not fit properly.
- Do not pull on the lead wires with excessive force. Doing so may disconnect them.
- Do not push crimp terminals into gaps in the case interior. Doing so may cause damage or deformation of the case.

#### [Reference] Crimp Terminals

	Manufacturer	Model				
_	J.S.T. Mfg Co.	FN1.25-M4 (F Type) N1.25-M4 (Straight Type)				
	t: 0.8 r dz dia: 4.3 r D dia: 4.0 r B: 6.6 r L: 18.6 F: 6.3 r I: 9.0 r	nm mm nm nm				
	Co	rrect Incorrect	1			
	Terminal screw					
	Crimp terminal					

#### **Processing the Conduit Opening**

- Connect a recommended connector to the opening of the conduit and tighten the connector to the proper torque. The case may be damaged if excessive tightening torque is applied.
- Make sure that the outer diameter of the cable connected to the connector is correct.
- Attach a conduit cap to the unused conduit opening when wiring and tighten it to a suitable torque. The conduit cap is provided with the Switch.

#### **Recommended Connectors**

Use a connector with a screw section not exceeding 9 mm. Otherwise, the screws will protrude into the case interior. The connectors given in the following table have connectors with screw sections not exceeding 9 mm. Use the following connectors to ensure conformance to IP67.

Size	Manufacturer	Мос	del	Applicable cable diameter
G1/2	LAPP	ST-PF1/2	5380-1002	6.0 to 12.0 mm
M20	LAPP	ST-M20 × 1.5	5311-1020	7.0 to 13.0 mm

Use LAPP connectors together with Seal Packing (JPK-16 or GPM20), and tighten to the applicable torque. Seal Packing is sold separately.

• LAPP is a German manufacturer.

#### Other Precautions

• The solenoid will heat when it carries current. Do not touch it.

#### <Slide Keys D4JL-SK40>

## /!\ CAUTION

Incorrect operation may cause injury. Also, the product is designed to be mounted so that it slides horizontally. Do not mount the product in a vertically sliding configuration. (excluding the D4NS-SK01)



#### **Precautions for Safe Use**

- Do not drop the Switch. Doing so may prevent the Switch from functioning to full capacity.
- Mount the Switch securely to prevent it from falling. Otherwise, injuries may occur.
- Do not attempt to disassemble or modify the Switch. Doing so may cause the Switch to malfunction.
- Make sure that the gap between the short bolt and guide is (±3 mm. Otherwise, excessive wear or damage may cause malfunction.
- To ensure safety, do not operate the Switch with anything other than a Slide Key.
- Be careful to avoid pinching your hand when operating the Switch.
- Be sure to mount the Switch protective cover. Otherwise, your hand may be injured by being pinched between the shot bolt and Switch when closing the door with your hand on the Switch.
- When opening the door, be sure to lower the disable-prevention cover into position, attach a padlock, or take other steps to prevent other people from operating the Switch.
- The durability of the Switch is greatly influenced by the switching conditions. Always test the Switch under actual working conditions before application and use it in a switching circuit for which there are no problems with performance.
- The user must not maintain or repair equipment incorporating the Switch. Contact the manufacturer of the equipment for any maintenance or repairs required.
- Do not shut the door while the shot bolt is extended. The Switch may be damaged, preventing proper operation.
- Do not apply excessive force in the direction of the slide. This may damage the product and cause it to malfunction.

#### **Precautions for Correct Use**

 Insert the slide handle until the red operation indicator is completely displayed in the operation display window.





Normal

Insufficient insertion

Operation display window

Loose screws may result in malfunction. Use washers and tighten
the screws to the specified torques. Also, when mounting the
Switch to a door for disable-prevention purposes, purchase and
use tamper-resistant screws.

#### **Tightening Torque**

Slide Key mounting screw (M6)	6.0 to 7.0 N·m
Switch mounting screw (included with product)	3.2 to 3.8 N⋅m
Switch protective cover mounting screw (included with product)	1.2 to 1.4 N·m
Lever mounting screw (included with product)	1.2 to 1.4 N·m


#### **Technical Specifications**

	D4JL-SK40
Ambient operating temperature	-10 to 55°C (with no icing)
Ambient operating humidity	95% max.
Mechanical durability	20,000 operations min.
Weight	Approx. 3.4 kg (not including D4JL Guard Lock Safety-door Switch)

- Do not store the Switch where corrosive gases (e.g., H<sup>2</sup>S, SO<sup>2</sup>, NH<sup>3</sup>, HNO<sup>3</sup>, or CL<sup>2</sup>) or dust are present, or in locations subject to high temperature or humidity.
- Perform maintenance inspections periodically.
- This product is for use only with OMRON Safety-door Switches.
   Do not use it with door switches made by other manufacturers.


# **Mounting Holes**

#### D4JL-SK40

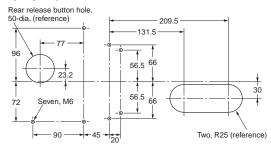


## Assembly Switch part D4JL-SK40

(Unit: mm)

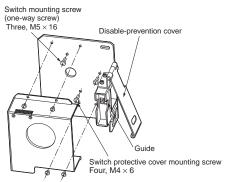

# Handle part D4JL-SK40

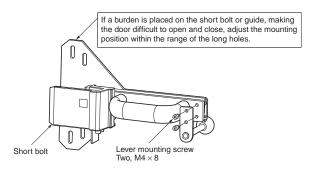

# Terms and Conditions of Sale

- Offer; Acceptance. These terms and conditions (these "Terms") are deemed part of all quotes, agreements, purchase orders, acknowledgments, price lists, catalogs, manuals, brochures and other documents, whether electronic or in catalogs, manuals, brochures and other documents, whether electronic or in writing, relating to the sale of products or services (collectively, the "Products") by Omron Electronics LLC and its subsidiary companies ("Omron"). Omron objects to any terms or conditions proposed in Buyer's purchase order or other documents which are inconsistent with, or in addition to, these Terms. Prices: Payment Terms. All prices stated are current, subject to change without notice by Omron. Omron reserves the right to increase or decrease prices on any unshipped portions of outstanding orders. Payments for Products are due net 30 days unless otherwise stated in the invoice. Discounts. Cash discounts, if any, will apply only on the net amount of invoices sent to Buyer after deducting transportation charges, taxes and duties, and will be allowed only if (i) the invoice is paid according to Omron's payment terms and (ii) Buyer has no past due amounts.

- and (ii) Buyer has no past due amounts.

  Interest. Omron, at its option, may charge Buyer 1-1/2% interest per month or the maximum legal rate, whichever is less, on any balance not paid within the
- Orders. Omron will accept no order less than \$200 net billing.

  Governmental Approvals. Buyer shall be responsible for, and shall bear all costs involved in, obtaining any government approvals required for the importation or sale of the Products.
- Taxes. All taxes, duties and other governmental charges (other than general real property and income taxes), including any interest or penalties thereon, imposed directly or indirectly on Omron or required to be collected directly or indirectly by Omron for the manufacture, production, sale, delivery, importation, consumption or use of the Products sold hereunder (including customs duties and sales, excise, use, turnover and license taxes) shall be charged to and remitted by Buyer to Omron.

  Financial. If the financial position of Buyer at any time becomes unsatisfactory
- <u>Financial</u>. If the financial position of Buyer at any time becomes unsatisfactory to Omron, Omron reserves the right to stop shipments or require satisfactory security or payment in advance. If Buyer fails to make payment or otherwise comply with these Terms or any related agreement, Omron may (without liability and in addition to other remedies) cancel any unshipped portion of Products sold hereunder and stop any Products in transit until Buyer pays all amounts, including amounts payable hereunder, whether or not then due, which are owing to it by Buyer. Buyer shall in any event remain liable for all unpaid accounts. unpaid accounts
- Cancellation: Etc. Orders are not subject to rescheduling or cancellation unless Buyer indemnifies Omron against all related costs or expenses.

  10. Force Majeure. Omron shall not be liable for any delay or failure in delivery
- resulting from causes beyond its control, including earthquakes, fires, floods, strikes or other labor disputes, shortage of labor or materials, accidents to machinery, acts of sabotage, riots, delay in or lack of transportation or the requirements of any government authority.

  11. Shipping: Delivery. Unless otherwise expressly agreed in writing by Omron:
  a. Shipments shall be by a carrier selected by Omron; Omron will not drop ship
- - except in "break down" situations.
    b. Such carrier shall act as the agent of Buyer and delivery to such carrier shall
  - constitute delivery to Buyer; c. All sales and shipments of Products shall be FOB shipping point (unless oth-
- c. All sales and shipments of Products shall be FOB shipping point (unless otherwise stated in writing by Omron), at which point title and risk of loss shall pass from Omron to Buyer; provided that Omron shall retain a security interest in the Products until the full purchase price is paid;
   d. Delivery and shipping dates are estimates only; and
   e. Omron will package Products as it deems proper for protection against normal handling and extra charges apply to special conditions.

  12. Claims. Any claim by Buyer against Omron for shortage or damage to the Products occurring before delivery to the carrier must be presented in writing to Omron within 30 days of receipt of shipment and include the original transportation bill signed by the carrier noting that the carrier received the Products. portation bill signed by the carrier noting that the carrier received the Products from Omron in the condition claimed.
- Warranties. (a) Exclusive Warranty. Omron's exclusive warranty is that the Products will be free from defects in materials and workmanship for a period of twelve months from the date of sale by Omron (or such other period expressed in writing by Omron). Omron disclaims all other warranties, express or implied.

  (b) <u>Limitations</u>. OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, ABOUT NON-INFRINGEMENT, MERCHANTABIL-

- ITY OR FITNESS FOR A PARTICULAR PURPOSE OF THE PRODUCTS. BUYER ACKNOWLEDGES THAT IT ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE. Omron further disclaims all warranties and responsibility of any type for claims or expenses based on infringement by the Products or otherwise of any intellectual property right. (c) Buyer Remedy. Omron's sole obligation hereunder shall be, at Omron's election, to (i) replace (in the form originally shipped with Buyer responsible for labor charges for removal or replacement thereof) the non-complying Product, (ii) repair the non-complying Product, or (iii) repay or credit Buyer an amount equal to the purchase price of the non-complying Product; provided that in no event shall Omron be responsible for warranty, repair, indemnity or any other claims or expenses regarding the Products unless Omron's analysis confirms that the Products were properly handled, stored, installed and maintained and not subject to contamination, abuse, misuse or inappropriate modification. Return of any Products by tion, abuse, misuse or inappropriate modification. Return of any Products by Buyer must be approved in writing by Omron before shipment. Omron Companies shall not be liable for the suitability or unsuitability or the results from the use of Products in combination with any electrical or electronic components, circuits, system assemblies or any other materials or substances or environments. Any advice, recommendations or information given orally or in writing, are not to be construed as an amendment or addition to the above warranty. See http://www.omron247.com or contact your Omron representative for published information.
- lished information.

  Limitation on Liability: Etc. OMRON COMPANIES SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, NEGLIGENCE OR STRICT LIABILITY. Further, in no event shall liability of Omron Companies exceed the individual price of the Product on which liability is asserted.
- Indemnities. Buyer shall indemnify and hold harmless Omron Companies and their employees from and against all liabilities, losses, claims, costs and expenses (including attorney's fees and expenses) related to any claim, investigation, litigation or proceeding (whether or not Omron is a party) which arises or is alleged to arise from Buyer's acts or omissions under these Terms or in any way with respect to the Products. Without limiting the foregoing, Buyer (at its own expense) shall indemnify and hold harmless Omron and defend or settle any action brought against such Companies to the extent based on a claim that any Product made to Buyer specifications infringed intellectual property rights of another party.
- rights of another party.

  <u>Property: Confidentiality.</u> Any intellectual property in the Products is the exclusive property of Omron Companies and Buyer shall not attempt to duplicate it in any way without the written permission of Omron. Notwithstanding any charges to Buyer for engineering or tooling, all engineering and tooling shall remain the exclusive property of Omron. All information and materials supplied by Omron to Buyer relating to the Products are confidential and proprietary, and Buyer shall limit distribution thereof to its trusted employees and strictly prevent disclosure to any third party.
- prevent disclosure to any third party.

  <u>Export Controls.</u> Buyer shall comply with all applicable laws, regulations and licenses regarding (i) export of products or information; (iii) sale of products to "forbidden" or other proscribed persons; and (ii) disclosure to non-citizens of
- "forbidden" or other proscribed persons; and (ii) disclosure to non-citizens of regulated technology or information.

  Miscellaneous. (a) Waiver. No failure or delay by Omron in exercising any right and no course of dealing between Buyer and Omron shall operate as a waiver of rights by Omron. (b) Assignment. Buyer may not assign its rights hereunder without Omron's written consent. (c) Law. These Terms are governed by the law of the jurisdiction of the home office of the Omron company from which Buyer is purchasing the Products (without regard to conflict of law principles). (d) Amendment. These Terms constitute the entire agreement between Buyer and Omron relating to the Products, and no provision may be changed or waived unless in writing signed by the parties. (e) Severability If any provior waived unless in writing signed by the parties. (e) <u>Severability</u> If any provision hereof is rendered ineffective or invalid, such provision shall not invalidate any other provision. (f) Setoff. Buyer shall have no right to set off any amounts against the amount owing in respect of this invoice. (g) <u>Definitions</u>. As used herein, "<u>including</u>" means "including without limitation"; and "<u>Omron Companies</u>" (or similar words) mean Omron Corporation and any direct or indirect subsidiary or affiliate thereof.

# Certain Precautions on Specifications and Use

- Suitability of Use. Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product. At Buyer's request. Omron will provide application of use of the Product. At Buyer's lequest, omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application, product or system. the particular Product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases but the following is a non-exhaustive list of applications for which particular attention must be given:

  (i) Outdoor use, uses involving potential chemical contamination or electrical interference, or conditions or uses not described in this document.

  (ii) Use in consumer products or any use in significant quantities.

  (iii) Energy control systems, combustion systems, railroad systems, aviation systems, medical equipment, amusement machines, vehicles, safety equipment, and installations subject and industrial consumers and consumers are consumers and status of the consumers and consumers.
  - ment, and installations subject to separate industry or government regulations. (iv) Systems, machines and equipment that could present a risk to life or prop erty. Please know and observe all prohibitions of use applicable to this Prod-
  - NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY OR IN LARGE QUANTITIES WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO

- ADDRESS THE RISKS, AND THAT THE OMRON'S PRODUCT IS PROP-ERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.
- Programmable Products. Omron Companies shall not be responsible for the user's programming of a programmable Product, or any consequence thereof. Performance Data. Data presented in Omron Company websites, catalogs and other materials is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of Omron's test conditions, and the user must correlate it to actual application requires ments. Actual performance is subject to the Omron's Warranty and Limitations
- Change in Specifications. Product specifications and accessories may be change in specifications. Product specifications and accessories may be changed at any time based on improvements and other reasons. It is our practice to change part numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the Product may be changed without any notice. When in doubt, special part numbers may be assigned to fix or establish key specifications for your application. Please consult with your Omron's representative at any time
- to confirm actual specifications of purchased Product.

  <u>Errors and Omissions.</u> Information presented by Omron Companies has been checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical or proofreading errors or omissions.



OMRON AUTOMATION AND SAFETY • THE AMERICAS HEADQUARTERS • Chicago, IL USA • 847.843.7900 • 800.556.6766 • www.omron247.com

**OMRON CANADA, INC. • HEAD OFFICE** 

Toronto, ON, Canada • 416.286.6465 • 866.986.6766 • www.omron247.com

**OMRON ELECTRONICS DE MEXICO • HEAD OFFICE** 

México DF • 52.55.59.01.43.00 • 01-800-226-6766 • mela@omron.com

OMRON ELECTRONICS DE MEXICO • SALES OFFICE

Apodaca, N.L. • 52.81.11.56.99.20 • 01-800-226-6766 • mela@omron.com

OMRON ELETRÔNICA DO BRASIL LTDA • HEAD OFFICE

São Paulo, SP, Brasil • 55.11.2101.6300 • www.omron.com.br

**OMRON ARGENTINA • SALES OFFICE** 

Cono Sur • 54.11.4783.5300

**OMRON CHILE • SALES OFFICE** 

Santiago • 56.9.9917.3920

OTHER OMRON LATIN AMERICA SALES 54.11.4783.5300

OMRON EUROPE B.V. • Wegalaan 67-69, NL-2132 JD, Hoofddorp, The Netherlands. • +31 (0) 23 568 13 00 • www.industrial.omron.eu

Authorized Distributor:

#### **Automation Control Systems**

- Machine Automation Controllers (MAC) Programmable Controllers (PLC)
- Operator interfaces (HMI) Distributed I/O Software

#### **Drives & Motion Controls**

• Servo & AC Drives • Motion Controllers & Encoders

#### **Temperature & Process Controllers**

• Single and Multi-loop Controllers

#### **Sensors & Vision**

- Proximity Sensors Photoelectric Sensors Fiber-Optic Sensors
- Amplified Photomicrosensors Measurement Sensors
- Ultrasonic Sensors Vision Sensors

#### **Industrial Components**

- RFID/Code Readers Relays Pushbuttons & Indicators
- Limit and Basic Switches Timers Counters Metering Devices
- Power Supplies

#### Safety

• Laser Scanners • Safety Mats • Edges and Bumpers • Programmable Safety Controllers • Light Curtains • Safety Relays • Safety Interlock Switches

5+) I-E-01 #0/1% Note: Specifications are subject to change.

© 2014 Omron Electronics LLC

Printed in U.S.A.

