

AW36099xSTR Synchronous Step-up Converter with Ultra Low Quiescent Current

Features

- Ultra Low Quiescent Current:
I_Q into VIN Pin: 200nA
I_Q into VOUT Pin: 800nA
- Operating Input Voltage Range: 0.75V~5.2V
- Adjustable Output Voltage from 1.9V~5.5V
- I_{OUT}≥0.5A at V_{OUT}=5V, V_{IN}≥3V
- Support Fixed Output Voltage Versions
- Operation Mode: Boost Mode, Down Mode, Pass-through Mode
- True Cutoff VIN to VOUT path During Shutdown
- Up to 80% Efficiency at 100μA Current Load with fixed output voltage versions
- Up to 93% Efficiency at 10mA~300mA Current Load
- Build-in OVP, OTP, UVLO Protection
- Available in SOT23-6L Package

Applications

Portable Products

Battery Powered Systems

Wearable Applications

Low Power Wireless Applications

Optical Heart Rate Monitor LED Bias

General Description

The AW36099xSTR is a high efficiency synchronous step-up converter with ultra-low quiescent current down to 1μA, it is optimized for battery-powered applications, such as alkaline battery, coin-cell battery, Li-ion or Li-Polymer battery, that requires long battery life and tiny solution size.


The AW36099xSTR uses a hysteretic current mode control scheme with typical 1.4A peak switch current limit when V_{OUT} voltage exceed 2.5V. It consumes 1μA quiescent current under light load condition and can achieve up to 80% efficiency at 100μA load with fixed output voltage versions. It supports up to 500mA output current when input voltage is above 3V, and achieve up to 93% efficiency at 200mA load.

The AW36099xSTR operates in down mode and pass-through mode when input voltage is close to or higher than output voltage. In the down mode, the AW36099xSTR will continue to regulate the output voltage even when the input voltage exceeds the output voltage. When V_{IN} > V_{OUT} + 0.37V, It enters pass-through mode and the device stops switching. The rectifying PMOS constantly turns on and low-side switch constantly turns off.


The AW36099xSTR build-in true shutdown function when it is disabled, which isolates the load from the input to reduce the current consumption. Also, the AW36099xSTR integrates OVP, OTP, UVLO protections.

The AW36099xSTR offers both adjustable output voltage version and fixed output voltage versions. It is available in SOT23-6L package.

Typical Application Circuit

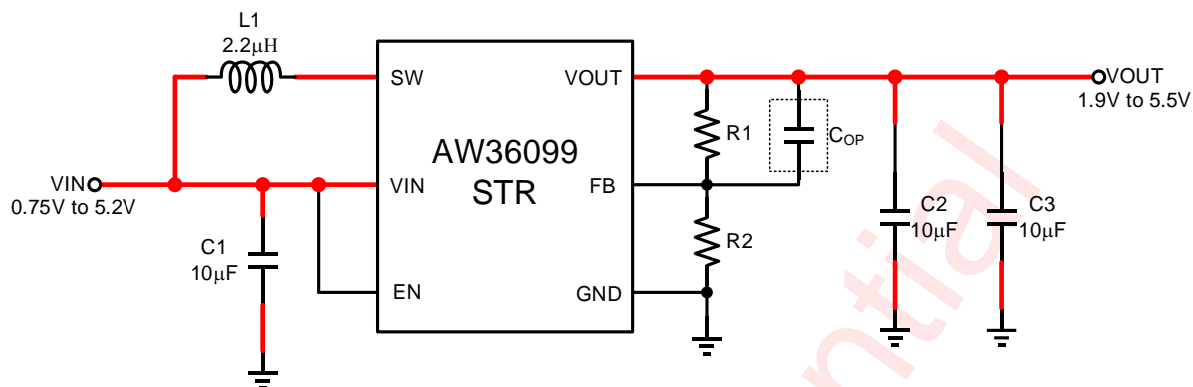

Typical Application Circuit of AW36099STR

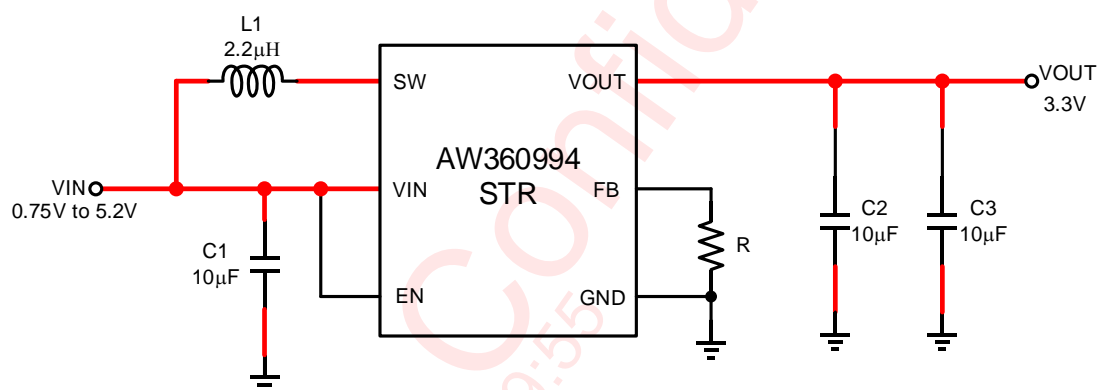

Typical Application Circuit of AW360994STR


For best output and input voltage filtering, low ESR X5R or X7R ceramic capacitors are recommended.

For fixed output voltage versions, the FB pin should be connected to the GND. For adjustable output voltage version, the FB pin should be connected to the resistance divider.

Device Comparison Table

PART No.	OUTPUT VOLTAGE
AW36099STR	Adjustable
AW360994STR	3.3 V

Pin Configuration And Top Mark

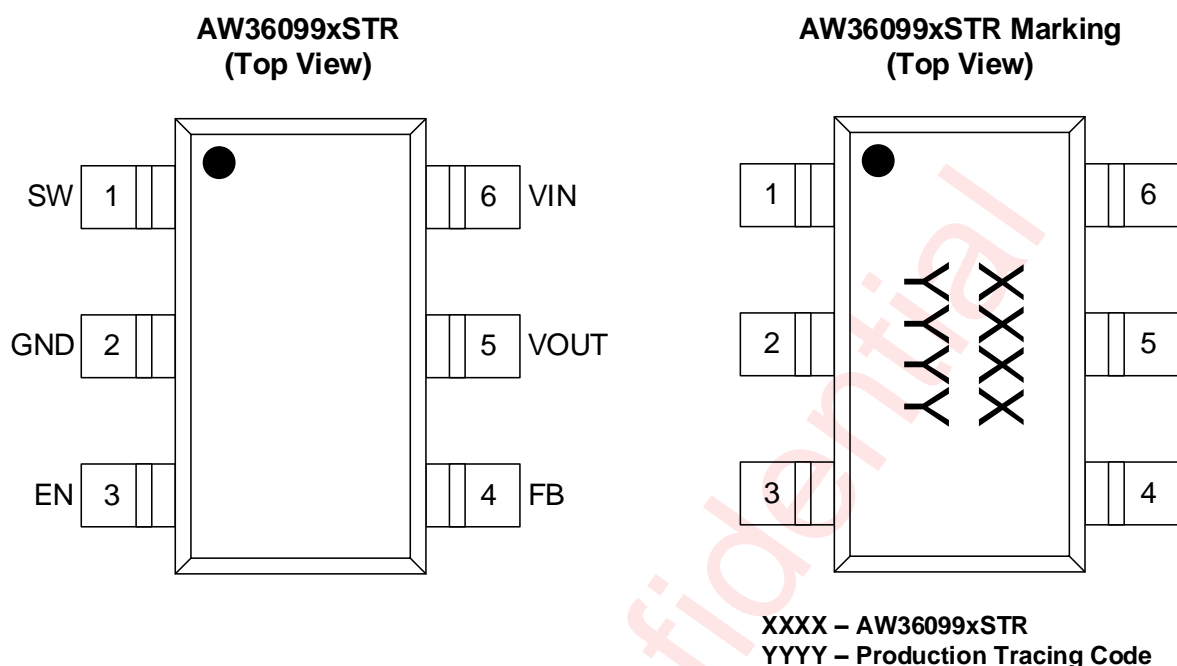


Pin Configuration and Top Mark

Pin Definition

Pin No.	NAME	DESCRIPTION
1	SW	Switch Pin of the Converter. It is connected to the inductor.
2	GND	Ground.
3	EN	Enable Logic Input. Logic high voltage enables the device; logic low voltage disables the device. Do not leave it floating.
4	FB	Voltage Feedback of Adjustable Output Voltage. Connect to the center tap of a resistor divider to program the output voltage. Connect to the GND pin or keep floating for fixed output voltage versions.
5	VOUT	Boost Converter Output.
6	VIN	Power Supply Input.

Functional Block Diagram

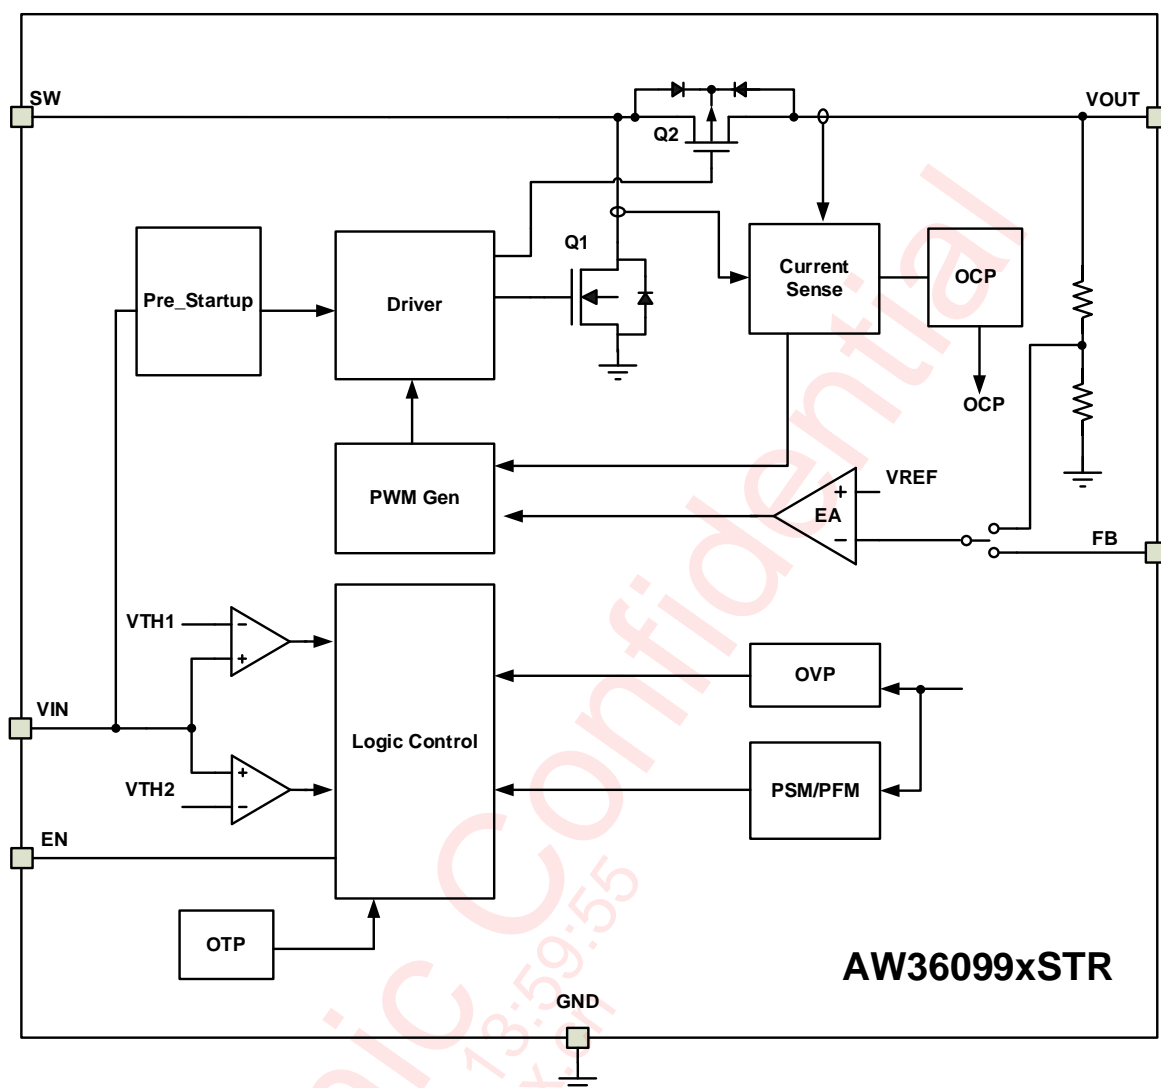

Functional Block Diagram

Ordering Information

Part Number	Temperature	Package	Marking	Moisture Sensitivity Level	Environmental Information	Delivery Form
AW36099STR	-40°C~85°C	SOT23-6L	YT1Y	MSL3	ROHS+HF	3000 units/ Tape and Reel
AW360994STR	-40°C ~ 85°C	SOT23-6L	NMLX	MSL3	ROHS+HF	3000 units/ Tape and Reel

awinic Confidential
2025-10-27 13:59:55
john.xu@startex.cn

Absolute Maximum Ratings^(NOTE1)

PARAMETERS		RANGE
Input voltage range	VIN, FB, EN	-0.3V to 6V
Output voltage range	SW, VOUT	-0.3V to 6V
Operating free-air temperature range		-40°C to 85°C
Maximum operating junction temperature T _{JMAX}		150°C
Storage temperature T _{STG}		-65°C to 150°C
Lead temperature (soldering 10 seconds)		260°C
ESD(Including CDM ^(NOTE 2) HBM ^(NOTE 3))		
HBM		±2kV
CDM		±1.5kV
Latch-Up		
Test condition: JESD78E		+IT: 200mA -IT: -200mA

NOTE1: Conditions out of those ranges listed in "absolute maximum ratings" may cause permanent damages to the device. In spite of the limits above, functional operation conditions of the device should within the ranges listed in "recommended operating conditions". Exposure to absolute-maximum-rated conditions for prolonged periods may affect device reliability.

NOTE2: Test method: ESDA/JEDEC JS-002;

NOTE3: The human body model is a 100pF capacitor discharged through a 1.5kΩ resistor into each pin. Test method: ESDA/JEDEC JS-001;

Recommended Operating Conditions

PARAMETERS	MIN	TYP	MAX	UNIT
Input Voltage Range VIN	0.75		5.2	V
Output Voltage Range VOUT	1.9		5.5	V
Inductor L	0.7	2.2	2.8	μH
Input Capacitor C _{IN}	1.0	10		μF
Output Capacitor C _{OUT}	10	20	100	μF

Electrical Characteristics


VIN = 0.75 V to 5.2 V. Typical values are at VIN = 3.7 V, TA = 25°C, unless otherwise noted.

PARAMETER		TEST CONDITION	MIN	TYP	MAX	UNIT
POWER SUPPLY						
VIN	UVLO threshold voltage	VIN rising		0.6		V
	Hysteresis for UVLO			0.1		V
	Input Voltage Range		0.75		5.2	V
IQ	Quiescent Current into VIN pin	EN=High, No load, no switching		0.2	0.6	μA
	Quiescent Current into VOUT pin	EN=High, No load, no switching		0.8	3	μA
ISD	Shutdown Current into VIN pin	IC disabled, VIN = 3.7 V, VOUT = 0 V, TA = -40 °C to 85 °C		0.2	1.8	μA
OUTPUT						
VOUT	Output Voltage Range		1.9		5.5	V
Output accuracy		AW360994STR, VIN < VOUT, PWM mode Iload=50mA	3.23	3.30	3.37	V
		AW360994STR, VIN < VOUT, PFM mode Iload=0		3.37		
VREF	Feedback reference voltage	VIN < VOUT, PWM mode	0.98	1.00	1.02	V
		VIN < VOUT, PFM mode	0.99	1.02	1.05	
VOVP	Output overvoltage protection threshold	VOUT rising	5.6	5.8	6.0	V
	OVP hysteresis			100	200	mV
IFB_LKG	Leakage current into FB pin			10	100	nA
POWER SWITCH						
RDS(on)_LS	Low side switch on resistance	VOUT=5.0V		190		mΩ
		VOUT =3.3V		250		
RDS(on)_HS	Rectifier on resistance	VOUT =5.0V		250		mΩ
		VOUT =3.3V		320		
ΔIL	Inductor current ripple	VOUT =5V, Guarantee by design		300		mA
ILIM	Peak Current limit threshold	VOUT ≥ 2.5 V, boost operation		1.4		A
		VOUT < 2.5 V, boost operation		0.75		
ISW_LKG	Leakage current into SW pin (from SW pin to GND)	VSW = 5.0 V, no switch			1	μA
CONTROL LOGIC						


PARAMETER		TEST CONDITION	MIN	TYP	MAX	UNIT
V _{IL}	EN input low voltage threshold	V _{IN} ≤ 1.5 V	0.2× V _{IN}			V
V _{IH}	EN input high voltage threshold	V _{IN} ≤ 1.5 V			0.8× V _{IN}	
V _{IL}	EN input low voltage threshold	V _{IN} > 1.5V	0.3			V
V _{IH}	EN input high voltage threshold	V _{IN} > 1.5V			0.9	
I _{EN_LKG}	Leakage current into EN pin	V _{EN} = 5.0 V			300	nA
Overtemperature protection				150		°C
Overtemperature hysteresis				25		

Typical Characteristics


$T_A=25^{\circ}\text{C}$, $C_{IN} = 10\mu\text{F}$, $C_{OUT} = 20\mu\text{F}$, $V_{IN}=3.7\text{V}$, unless otherwise noted.

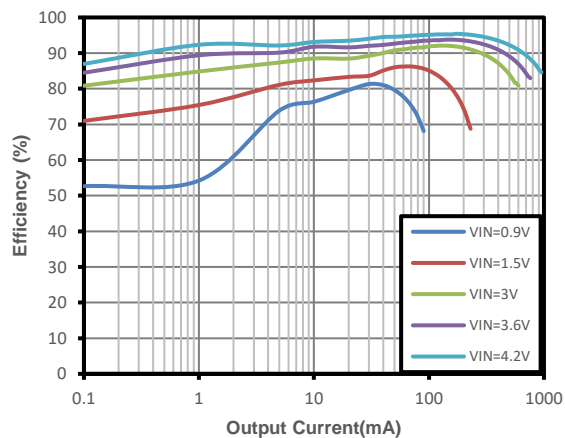


AW36099STR VOUT=5V
Load Efficiency with Different Inputs

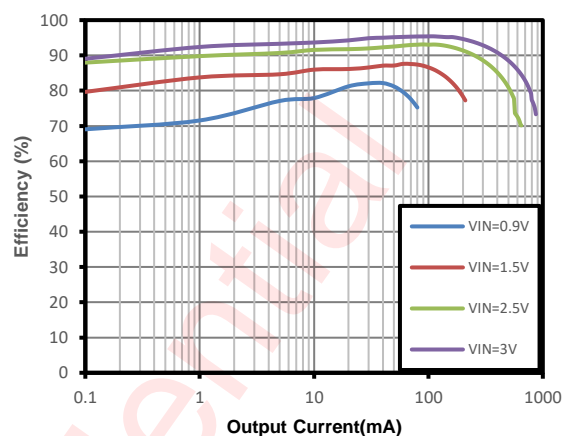


AW360994STR
Load Efficiency with Different Inputs

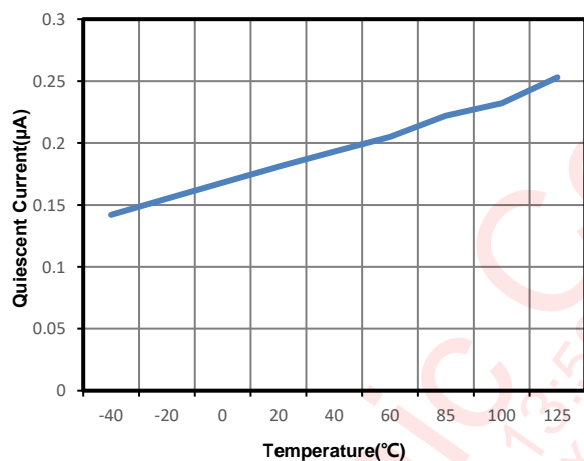


IQ_VIN vs TEMP

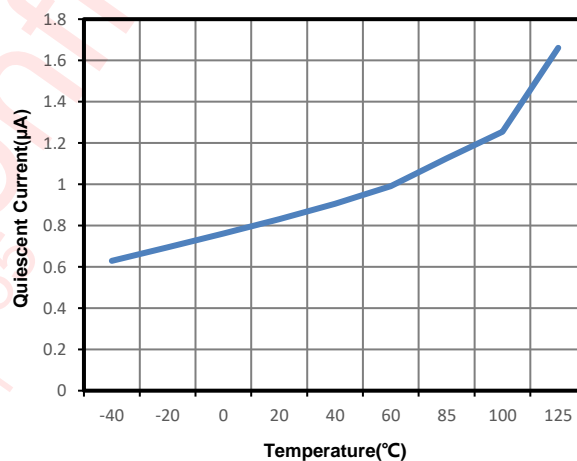







IQ_VOUT vs TEMP

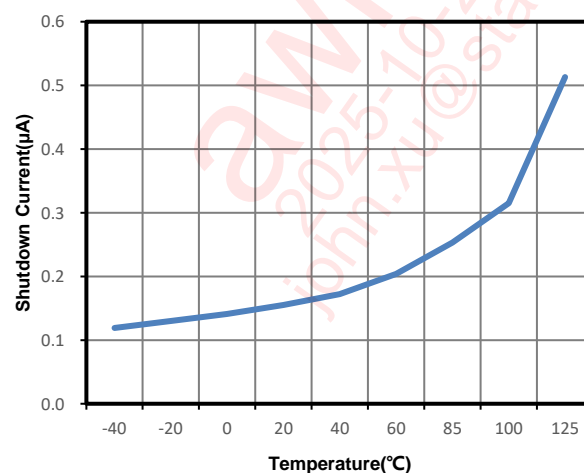


ISD vs TEMP

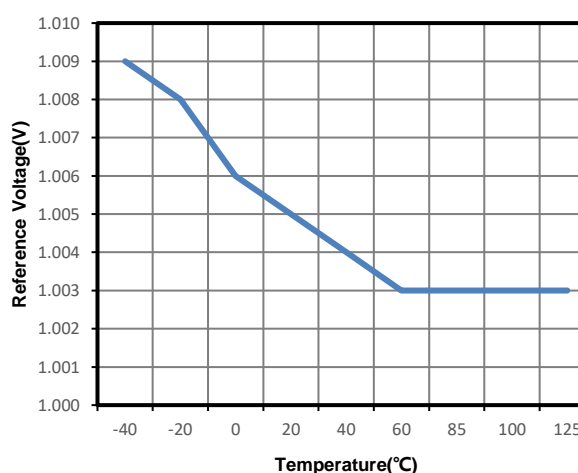

VREF vs TEMP

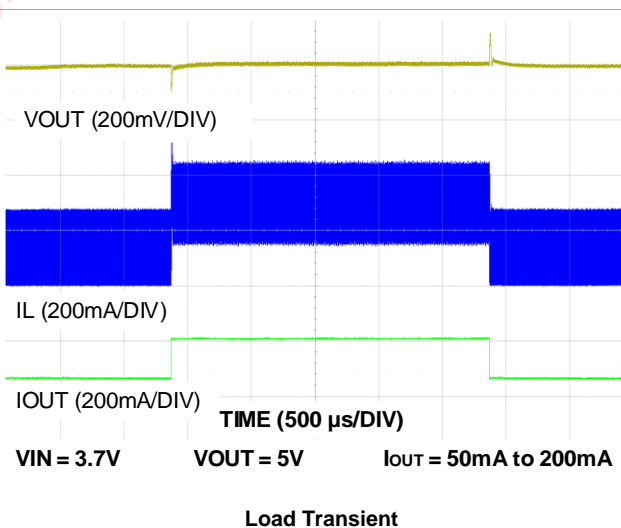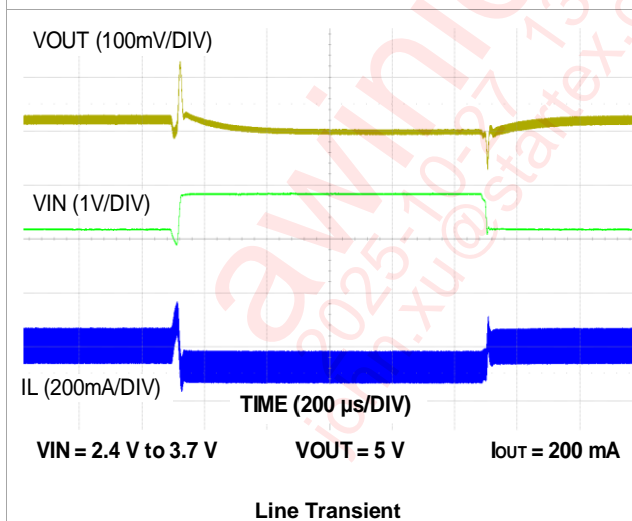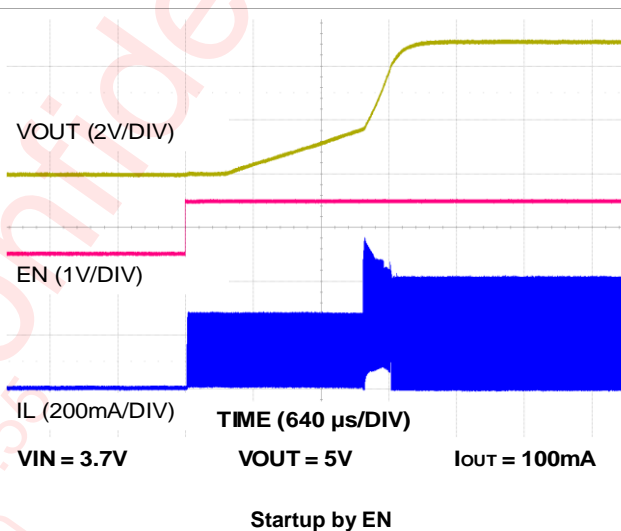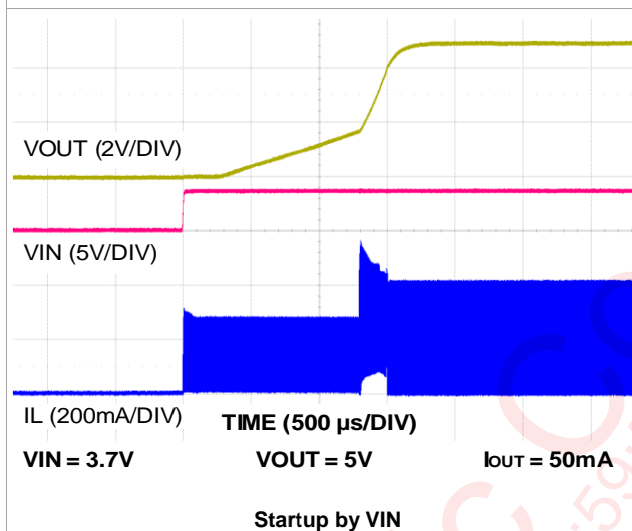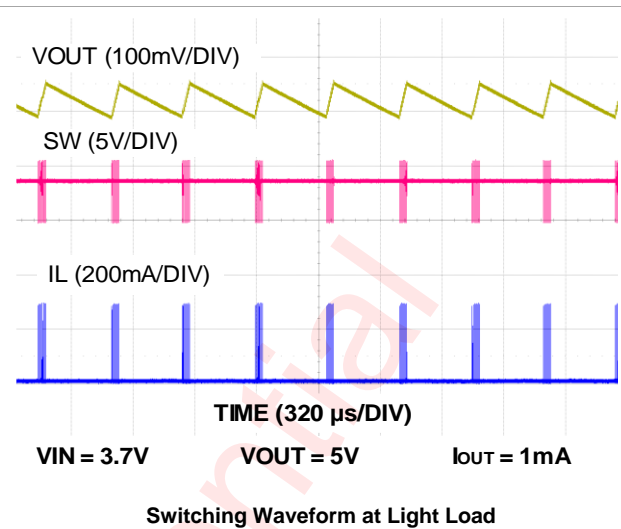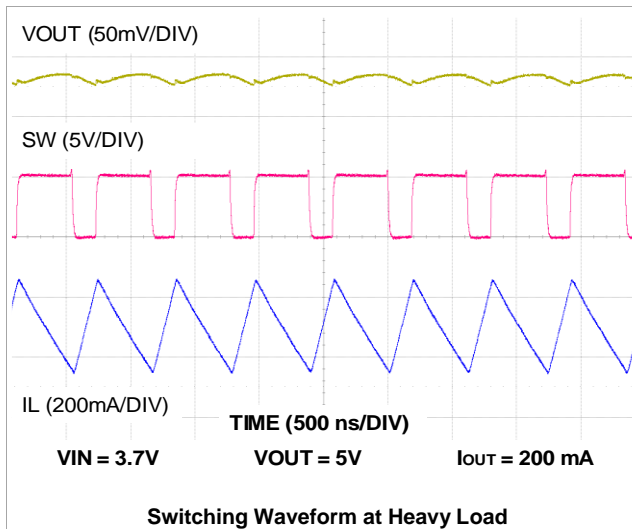

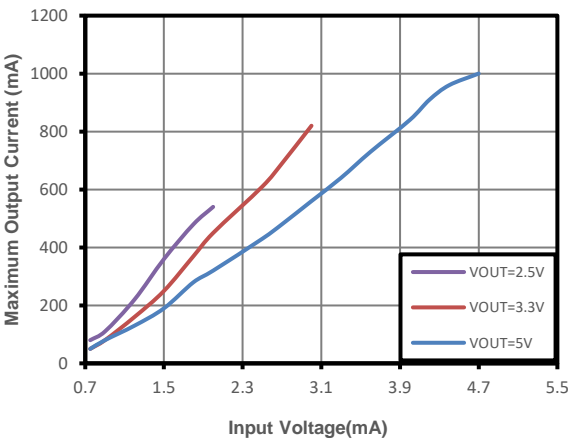

AW36099STR
Output Current with Different Inputs

Detailed Functional Description

The AW36099xSTR is a high efficiency synchronous step-up converter with ultra-low quiescent current down to 1 μ A, it is optimized for battery-powered applications, such as alkaline battery, coin-cell battery, Li-ion or Li-Polymer battery, that requires long battery life and tiny solution size. The AW36099STR can work with an input voltage as low as 0.75V to provide an output voltage from 1.9V to 5.5V.

The AW36099xSTR uses a hysteretic current mode control scheme with typical 1.4A peak switch current limit when the output voltage is above 2.5V. When the AW36099xSTR shuts down, the output is completely isolated from the input voltage, allowing the output to draw less than 0.2 μ A in shutdown mode. The AW36099xSTR works in Down Mode and Pass-Through operation when input voltage is close to or higher than the output voltage. The AW36099xSTR offers adjustable version and fixed output voltage versions. By adding a resistor divider at FB pin, the device can be set to any voltage level for flexible applications, while fixed versions offer minimal solution size and come up to 80% high efficiency under 100 μ A load.

Boost Controller Operation

The AW36099xSTR boost converter is controlled by a hysteretic current mode controller. There are three modes of operation depending on the output load. If the required average input current is lower than the average inductor current defined by this constant ripple, the converter goes into discontinuous current operation. In this operation, it keeps the efficiency high under light load condition. If the load current is reduced further, the boost converter enters into Power save Mode(PSM). In PSM mode, the boost converter ramps up the output voltage with several switching cycles until the output voltage exceeding the setting threshold, the device stops switching and goes into a sleep status. In sleep status, the device consumes less quiescent current. If the load current increases and output voltage is below the setting threshold. It exits the PSM mode and enters into continuous current operation. In this mode, the controller keeps the inductor ripple current at almost 300mA. The input voltage, output voltage and inductor value affect the rising and falling slopes of inductor ripple current.

The output voltage VOUT is detected via an external or internal feedback network which is connected to the voltage error amplifier. The voltage error amplifier compares this feedback voltage to the internal voltage reference and adjusts the output voltage at the target.

Under-Voltage Lockout

To avoid abnormal state of the device at low input voltage, under voltage lockout is implemented that shuts down the converter when input voltage lower than 0.5V. The device be enabled again until the input voltage goes up to 0.6V. A hysteresis of 100mV is added to shut down the converter when the input voltage is between 0.5V and 0.6V.

Enable and Disable

The AW36099xSTR operates when the input voltage is above UVLO rising threshold and the EN is high. In shutdown mode with a low EN voltage, the device stops switching and the rectifying PMOS turns off as well. This isolates the load from the input, so that the output voltage can drop below the input voltage during shutdown. In shutdown mode, input current is less than 0.5 μ A.

Soft Start

The internal Enable signal is high when the input voltage is above UVLO rising threshold, the device begins to startup. There are three steps for start-up. Firstly, VOUT is below 1.6V, the device operates at the boundary of DCM(Discontinuous Conduction Mode) and CCM(Continuous Conduction Mode), and the inductor current is

limited to about 200mA in this mode. When the output voltage rises to about 1.6V, the device switches to close-loop work mode with hysteretic current mode operation. The second stage, the inductor peak current is gradually increasing to $0.7 \cdot I_{LIM}$ within 500 μ s. The soft start function reduces the inrush current during startup. Finally, after VOUT reaches the target value, soft start stage ends and the peak current is determined by the output of an internal error amplifier which compares the feedback of the output voltage and the internal reference voltage.

The AW36099xSTR is able to start up with 0.75V input voltage with larger than 3k Ω load. If the load is too heavy, the output voltage can't rise to above 1.6V. The AW36099xSTR will stay in pre-soft start procedure until the output voltage is increased or the load current is reduced. The startup time depends on input voltage and load current.

Current Limit Operation

Current limit operation circuit senses the inductor current cycle-cycle. If the diagnostic circuit detects the inductor peak current exceeding the current limit threshold, the main switch turns off so as to stop further increase of the input current. In this condition the output voltage will decrease until the power balance between input and output is achieved. If the device goes into the down mode, the peak current is still limited by I_{LIM} cycle-by-cycle. If the output drops below 1.6V, the AW36099xSTR enters into startup process and limits the switch current to about 200mA. If the device goes into the pass-through operation, current limit function is not enabled.

Output Short-to-Ground Protection


In the event of a short-to-ground, the device first turns off the MOS when the sensed current reaches the current limit, inductor peak current is limited at 200mA. Once the short circuit is released, the AW36099xSTR begins to soft start and regulates the output voltage.

Over-Voltage Protection

AW36099xSTR features over-voltage protection(OVP) for maximum safety. When the output voltage of the AW36099STR exceeds the OVP threshold of 5.8V, the device stops switching. The device will start operating again until the output voltage falling to 5.7V.

Down Mode and Pass-Through Mode

The AW36099xSTR works in down mode or pass-through mode when VIN is close to VOUT. With VIN raising, the AW36099xSTR automatically switches from boost mode to down mode if VIN goes above the VOUT-50mV. It stays in down mode until $VIN > VOUT + 0.37V$ and then goes automatically into pass-through mode. During the pass-through mode, output voltage follows input voltage. The AW36099STR switches from pass-through mode to down mode when VIN ramps down to 101% of the target output voltage. It exits down mode when $VIN < VOUT - 100mV$, returning to boost operation.

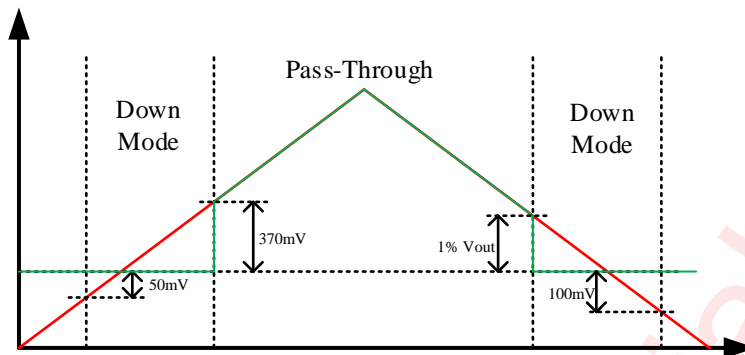

Down Mode and Pass-Through Mode

In the down mode, the AW36099xSTR will continue to regulate the output voltage even when the input voltage exceeds the output voltage. This is achieved by terminating the switching at the synchronous PMOS and applying a modulated voltage on its gate. Since the PMOS no longer acts as a low-impedance switch, a dropout voltage across the PMOS is introduced to increase the conduction loss which needs to be taken into account for thermal consideration.

In the pass-through operation, the device stops switching. The rectifying PMOS constantly turns on and low-side switch constantly turns off. The output voltage is the input voltage minus the voltage drop across the DC resistance (DCR) of the inductor and the on-resistance of the rectifying PMOS.

Thermal Shutdown

The AW36099xSTR has an integrated thermal protection. The protection circuit senses the internal temperature of the chip and stop switching when temperature reaches 150°C. After the temperature returns to a safe value 25°C below the shutdown temperature, the system starts operating again.

Application Information

Programming the Output Voltage

There are two ways to set the output voltage of the AW36099xSTR.

For fixed output voltage versions, the FB pin is suggested to be connected to GND.

For adjustable output voltage version, the output voltage could be adjusted by connecting FB to the tap of an external voltage divider from VOUT to ground, as shown in following Equation, and the typical voltage at the FB pin is V_{REF} of 1.0V.

$$V_{OUT} = V_{REF} \cdot \frac{R_1 + R_2}{R_2}$$

For the best accuracy and low quiescent current, R1 and R2 value usually are large. The current following through R2 should be 100 times larger than FB pin leakage current. Reducing the R2 value can improve the robustness against noise injection. Increasing the R2 value reduces the FB divider current for achieving the highest efficiency at low load current. For example, 1MΩ and 249kΩ resistors with 1% maximum tolerance are selected for R1 and R2.

Maximum Output Current

The maximum output current of the AW36099STR can be estimated by following Equation. It determined by the input to output ratio and the current limit of the step-up converter.

$$I_{OUT(MAX)} = \frac{VIN \cdot \left(I_{LIM} - \frac{\Delta I_L}{2}\right) \cdot \eta}{VOUT}$$

Where η is the conversion efficiency, using 85% for estimation; ΔI_L is the current ripple value and I_{LIM} is the switch current limit.

Typically, the maximum output current of the typical application circuit with 5V adjustable output voltage is as follows in this table.

VIN	2.5V	3.3V	3.7V	4.4V
Maximum output current	0.3A	0.4A	0.5A	0.7A

Voltage across the DCR decreases the effective voltage across the inductor, which will affects the maximum output current. Especially at low input voltage, the voltage across the DCR and the low-side switch become large enough that could not be ignored for the effect on maximum output current.

Inductor Selection

Inductor is the most important component in power regulator design. In order to ensure proper operation of the steady state, transient behavior, and loop stability, inductor value, saturation current, and dc resistance (DCR) deserve careful consideration.

The device is optimized to with inductor values between 1 μ H and 2.2 μ H. For best stability consideration, a 2.2 μ H inductor is recommended for $VOUT > 3.0V$ condition while choosing a 1 μ H inductor for applications under $VOUT \leq 3.0V$ condition. Inductors recommended for AW36099STR device are as follows in this table.

VOUT (V)	Inductance (μ H)	Saturation Current (A)	DC Resistance (m Ω)	Size (LxWxH)	Part number	Manufacturer
>3.0	2.2	2.4	116	2.0x1.6x1.2	DFE201612E-2R2M	muRata
	2.2	2.1	100	2.0x1.6x1.0	WPN201610U2R2MT	Sunlord
	2.2	1.95	80	2.5x2.0x1.2	74404024022	Würth
<3.0	1	2	80	2.0x1.6x0.9	LQM2MPN1R0MGH	muRata
	1	3.5	50	2.0x1.6x1.0	WPN201610U1R0MT	Sunlord
	1	2.6	37	2.5x2.0x1.2	74404024010	Würth

For the selected inductor, the operating frequency of the device in continuous current mode can be estimated by the following equation.

$$f = \frac{VIN \cdot (VOUT - VIN \cdot \eta)}{L \cdot VOUT \cdot \Delta I_L}$$

Where ΔI_L is the inductor ripple current, η is the conversion efficiency.

Capacitor Selection

For best output and input voltage filtering, low ESR X5R or X7R ceramic capacitors are recommended.

Low ESR input capacitors reduce input noise and voltage ripple. An input capacitor value of 10 μ F is normally recommended to improve transient behavior of the regulator and EMI behavior of the total power supply circuit. The input capacitor should be placed close to the VIN and GND pins of the device.

For the output capacitor of VOUT pin, small ceramic capacitor and a large one are recommended. The small capacitor value of 1 μ F should be placed as close as possible to the VOUT and GND pins of the device.


It's necessary to consider the ceramic capacitor's derating effect under bias carefully. Capacitors recommended for AW36099STR device are as follows in this table.

Part Number	Capacitance (μF)	Rated Voltage (V)	Size Code (inch)	Temperature Characteristics	Manufacturer
GRM188R60J106ME47	10	6.3	0603	X5R	muRata
GRM188R61A106MAAL	10	10	0603	X5R	muRata
C1608X5R0J106K080AB	10	6.3	0603	X5R	TDK
C1608X5R1A106K080AC	10	10	0603	X5R	TDK
CC0603KRX5R5BB106	10	6.3	0603	X5R	YAGEO


PCB Layout Consideration

AW36099STR is a boost convert, to obtain the optimal performance, PCB layout should be considered carefully. Here are some guidelines:


1. C1, C2, C3, C4, C5 and COP should be placed as close to chip as possible.
2. Wide and short traces should be used for main current path and the power ground paths.
3. Considering the problem of high current temperature rise, it is necessary to enlarge the area of copper floor around the chip to dissipate heat.
4. For Boost converter, the output capacitor's current loop from VOUT pin back to the GND pin should be as small as possible.

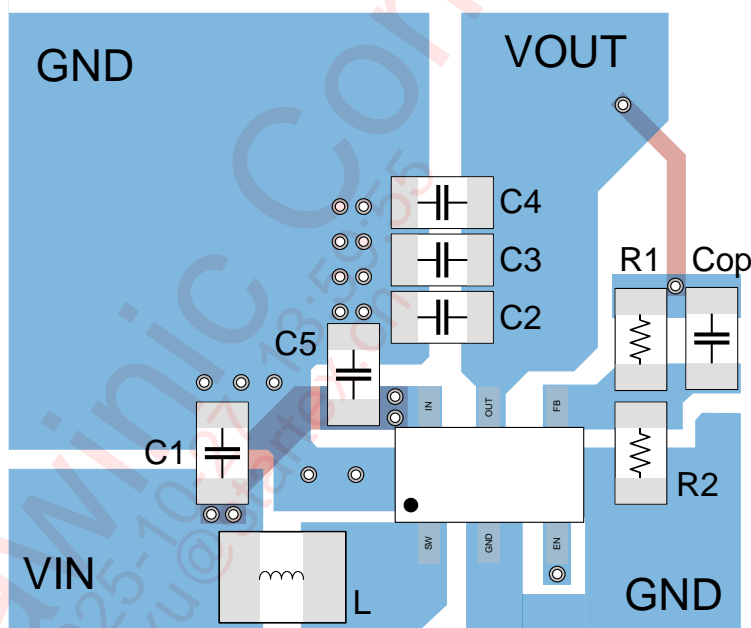

Tape And Reel Information

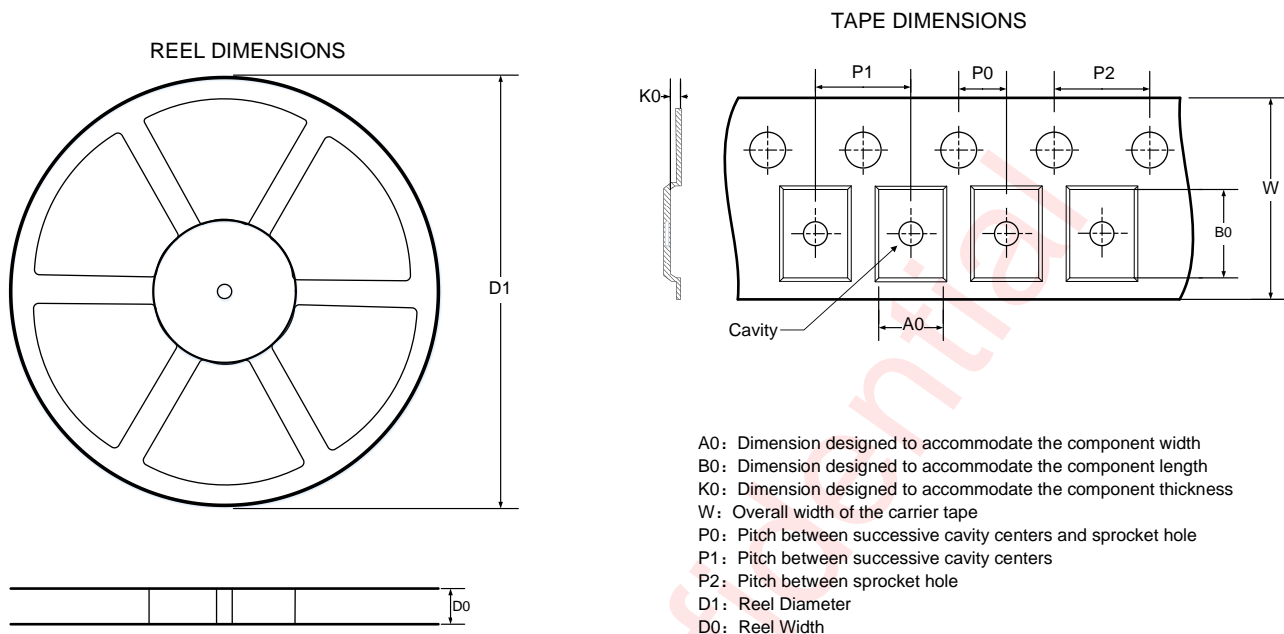

QUADRANT ASSIGNMENTS FOR PIN 1 ORIENTATION IN TAPE

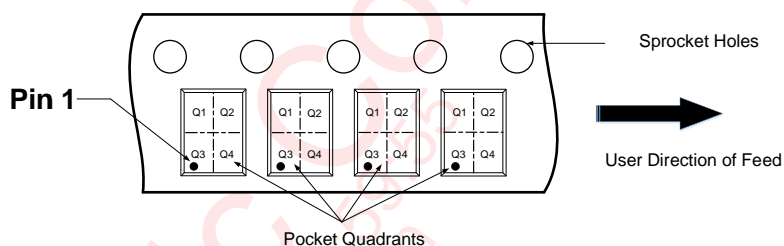


Note: The above picture is for reference only. Please refer to the value in the table below for the actual size

DIMENSIONS AND PIN1 ORIENTATION

D1 (mm)	D0 (mm)	A0 (mm)	B0 (mm)	K0 (mm)	P0 (mm)	P1 (mm)	P2 (mm)	W (mm)	Pin1 Quadrant
178	8.4	3.3	3.2	1.4	2	4	4	8	Q3



All dimensions are nominal

Package Description

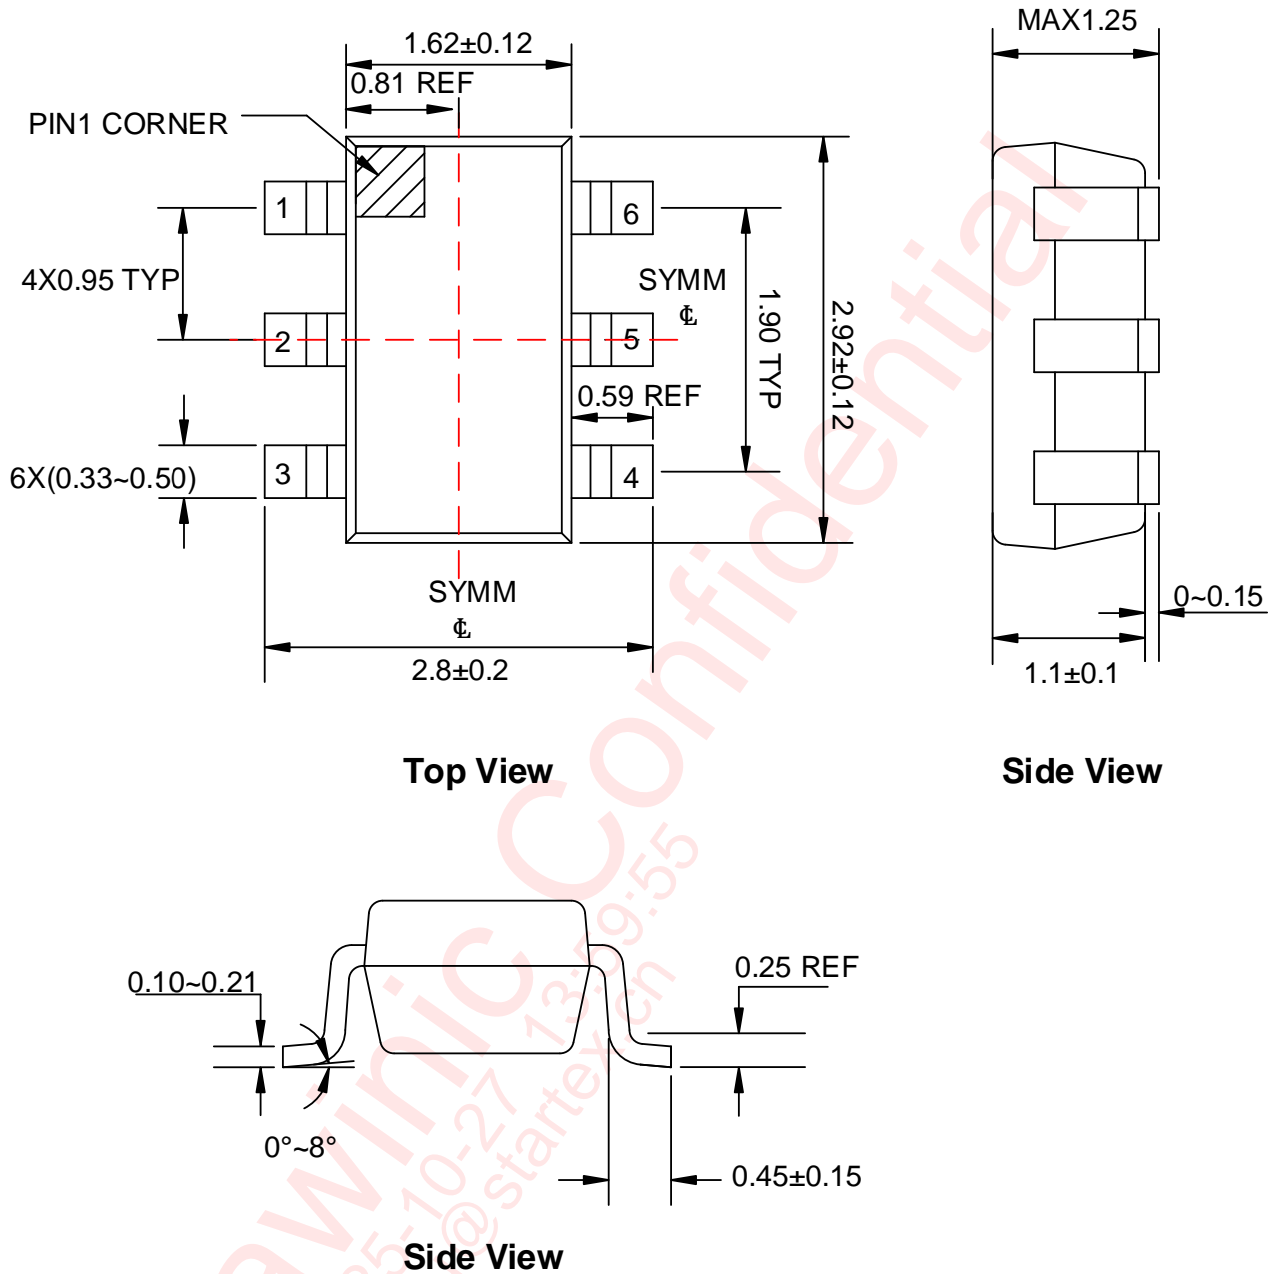


Unit: mm

Land Pattern Data

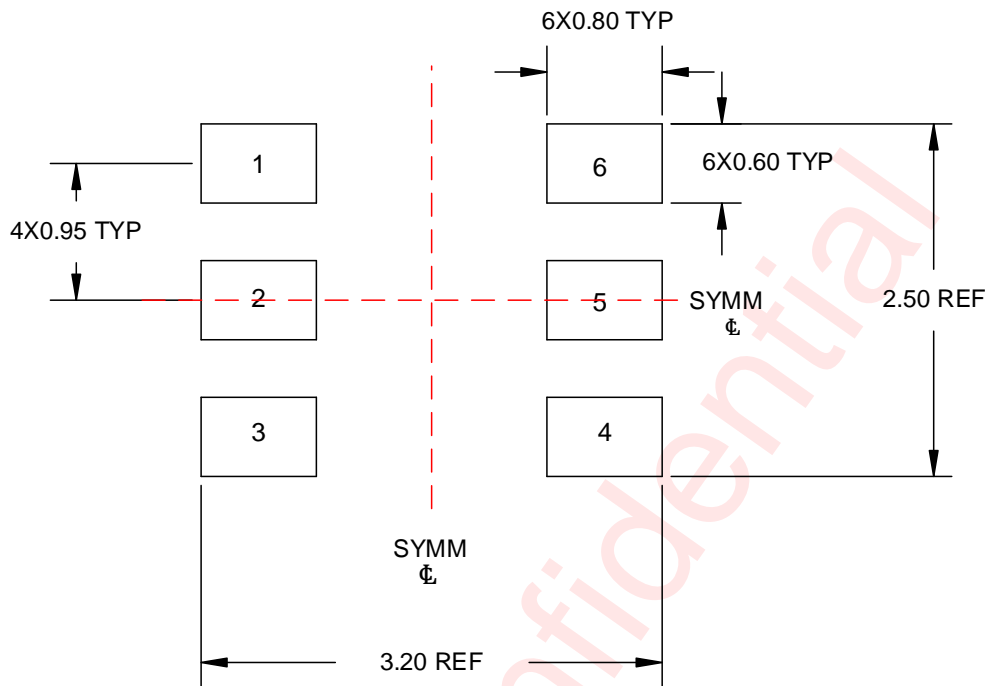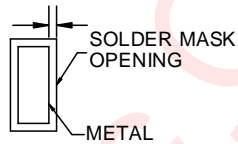0.05 MAX
All AROUND

NON SOLDER MASK DEFINED

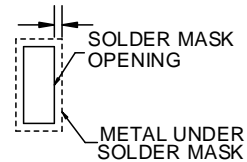0.05 MIN
All AROUND

SOLDER MASK DEFINED

Unit: mm

Revision History

Version	Date	Change Record
V1.0	Aug.2023	Officially released
V1.1	Sep.2023	Update the minimum output voltage from 2.5V to 1.9V.

awinic Confidential
2025-10-27 13:59:55
john.xu@startex.cn

Disclaimer

All trademarks are the property of their respective owners. Information in this document is believed to be accurate and reliable. However, Shanghai AWINIC Technology Co., Ltd (AWINIC Technology) does not give any representations or warranties, expressed or implied, as to the accuracy or completeness of such information and shall have no liability for the consequences of use of such information.

AWINIC Technology reserves the right to make changes to information published in this document, including without limitation specifications and product descriptions, at any time and without notice. Customers shall obtain the latest relevant information before placing orders and shall verify that such information is current and complete. This document supersedes and replaces all information supplied prior to the publication hereof.

AWINIC Technology products are not designed, authorized or warranted to be suitable for use in medical, military, aircraft, space or life support equipment, nor in applications where failure or malfunction of an AWINIC Technology product can reasonably be expected to result in personal injury, death or severe property or environmental damage. AWINIC Technology accepts no liability for inclusion and/or use of AWINIC Technology products in such equipment or applications and therefore such inclusion and/or use is at the customer's own risk.

Applications that are described herein for any of these products are for illustrative purposes only. AWINIC Technology makes no representation or warranty that such applications will be suitable for the specified use without further testing or modification.

All products are sold subject to the general terms and conditions of commercial sale supplied at the time of order acknowledgement.

Nothing in this document may be interpreted or construed as an offer to sell products that is open for acceptance or the grant, conveyance or implication of any license under any copyrights, patents or other industrial or intellectual property rights.

Reproduction of AWINIC information in AWINIC data books or data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and notices. AWINIC is not responsible or liable for such altered documentation. Information of third parties may be subject to additional restrictions.

Resale of AWINIC components or services with statements different from or beyond the parameters stated by AWINIC for that component or service voids all express and any implied warranties for the associated AWINIC component or service and is an unfair and deceptive business practice. AWINIC is not responsible or liable for any such statements.