

TMC5240

Click here to ask an associate for production status of specific part numbers.

36V 2A_{RMS}+ Smart Integrated Stepper Driver and Controller

General Description

The TMC5240 is a smart high-performance stepper motor controller and driver IC with serial communication interfaces (SPI, UART) and extensive diagnostic capabilities. It combines a flexible, jerk-optimized ramp generator for automatic target positioning with industries' most advanced stepper motor driver based on the 256 microsteps, built-in indexer and fully integrated 36V, 3.0A_{MAX} H-Bridges plus non-dissipative integrated current sensing (ICS).

ADI-Trinamic's sophisticated StealthChop2 chopper ensures absolutely noiseless operation combined with maximum efficiency and best motor torque.

High integration, high energy efficiency, and a small form factor enable miniaturized and scalable systems for cost-effective solutions. The complete solution reduces the learning curve to a minimum while giving best-in-class performance.

The H-Bridge field-effect transistors (FETs) have very low impedance resulting in high driving efficiency and minimal heat generated. The typical total R_{ON} (high side + low side) is 0.23Ω .

The maximum RMS current per H-Bridge is $I_{RMS} = 2.1A_{RMS}$ at room temperature assuming a four-layer PCB.

The maximum output current per H-Bridge is $I_{MAX} = 5.0A_{MAX}$ limited by the Overcurrent Protection (OCP).

Since this current is limited by thermal considerations, the actual maximum RMS current would depend on the thermal characteristics of the application (PCB ground planes, heatsinks, ventilation, etc).

The maximum full-scale current per H-Bridge is $I_{FS} = 3.0$ A and can be set by an external resistor connected to IREF. This current is defined as the maximum current setting of the embedded current drive regulation circuit.

The non-dissipative ICS eliminates the bulky external power resistors resulting in a dramatic space and power saving compared with mainstream applications based on external sense resistors while providing the same overall accuracy.

The TMC5240 features abundant diagnostics and protections such as short protection/OCP, thermal shutdown, and undervoltage lockout (UVLO).

During thermal shutdown and UVLO events, the driver is disabled.

Furthermore, the TMC5240 provides functions to measure the driver temperature, estimate the motor temperature, and measure one external analog input.

The TMC5240 is available in a small TQFN32 5mm x 5mm package and a thermally optimized TSSOP38 9.7mm x 4.4mm with an exposed pad.

Applications

- Textile, Sewing Machines, Knitting Machines
- Lab and Factory Automation
- 3D Printers, ID Printers/Card Printers
- Liquid Handling, Medical Applications
- Office Automation and Paper Handling
- POS, Massage Chairs
- ATM, Cash Recycler, Bill Validators, Cash Machines
- CCTV, Security
- Pumps and Valve Control
- Heliostat and Antenna Positioning

Benefits and Features

- Voltage Range 4.5V to 36V DC
- Low R_{DS(ON)} (HS + LS): 230 m Ω Typical (T_A = 25°C)
- Current Ratings per H-Bridge (Typical at 25°C):
 - I_{MAX} = 5.0A (Bridge Peak Current)
 - I_{RMS} = 2.1A_{RMS} (3A Sine Wave Peak)
- Fully Integrated Lossless Current Sensing
- Eight-Point Motion Controller for Minimum Jerk
- SPI and Single Wire UART
- Encoder Interface and 2x Reference Switch Input
- Highest Resolution 256 Microsteps per Full Step
- Flexible Wave Table and Phase Shift to Match Motor
- StealthChop2 Silent Motor Operation
- SpreadCycle Highly Dynamic Motor Control Chopper
- Jerk-Free Combination of StealthChop2 and SpreadCycle
- StallGuard2 and StallGuard4 Sensorless Motor Load Detection
- CoolStep Current Control for Energy Savings up to 75%
- Passive Braking and Freewheeling Mode
- Motor Phase Temperature Estimation
- Chip Temperature Measurement
- General Purpose Analog Input
- Full Protection and Diagnostics
 Output land Diagnostics
- Overvoltage Protection Output
- Compact 5mm x 5mm TQFN32 Package or 9.7mm x 4.4mm TSSOP38

Ordering Information appears at end of data sheet.

19-101625; Rev 0; 12/22

Simplified Block Diagram

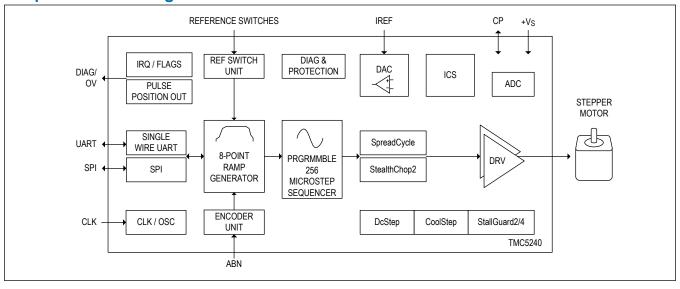


TABLE OF CONTENTS

General Description	
Applications	
Benefits and Features	
Simplified Block Diagram	
Absolute Maximum Ratings	
Package Information	
TQFN32 5mm x 5mm	
TSSOP38 9.7mm x 4.4mm EP	
Electrical Characteristics	
Pin Configurations	
TMC5240 TQFN Pin Configuration	
TMC5240 TSSOP Pin Configuration	
Pin Description	
Functional Diagrams	
TMC5240	
Detailed Description	
Principles of Operation	
Full Featured Motion Controller and Driver	
Key Concepts	
Control Interfaces	
Integrated Eight-Point Motion Controller	
Automatic Standstill Power Down	
StealthChop2 and SpreadCycle Driver	
StallGuard2/4 – Mechanical Load Sensing	
CoolStep – Load Adaptive Current Control	
Encoder Interface	
SPI Interface	
SPI Datagram Structure	
Selection of Write/Read (WRITE_notREAD)	
SPI Status Bits Transferred with Each Datagram Read Back	
Data Alignment	
SPI Signals	
SPI Timing	
UART Single-Wire Interface	
Datagram Structure	
Write Access	
Read Access	
CRC Calculation	27
C-Code Example for CRC Calculation	

TABLE OF CONTENTS (CONTINUED)

UART Signals	27
Addressing Multiple Nodes	28
StealthChop2	28
Automatic Tuning	29
StealthChop2 Options	29
StealthChop2 Current Regulator	31
Lower Current Limit	33
Velocity-Based Scaling	34
Combining StealthChop2 and SpreadCycle	35
Flags in StealthChop2	37
Open Load Flags	37
PWM_SCALE_SUM Informs about the Motor State	. 37
Freewheeling and Passive Braking	37
Parameters Controlling StealthChop2	38
SpreadCycle and Classic Chopper	39
SpreadCycle Chopper	41
Classic Constant Off Time Chopper	43
Integrated Current Sense	44
Setting the Motor Current	45
Setting the Full-Scale Current Range	45
Velocity-Based Mode Control	46
Ramp Generator	49
Real Word Unit Conversion	49
Motion Profiles	50
Ramp Mode	50
Eight Point Ramp	52
Velocity Mode	55
Early Ramp Termination	55
Application Example: Joystick Control	56
Velocity Thresholds	56
Reference Switches	57
Virtual Reference Switches	59
Ramp Generator Response Time	59
External STEP/DIR Driver	59
Position Compare Functions	60
StallGuard2 Load Measurement	60
Tuning StallGuard2 Threshold SGT	61
Variable Velocity Limits TCOOLTHRS and THIGH	62
Small Motors with High Torque Ripple and Resonance	63

TABLE OF CONTENTS (CONTINUED)

Temperature Dependence of Motor Coil Resistance	
Accuracy and Reproducibility of StallGuard2 Measurement	. 63
StallGuard2 Update Rate and Filter	. 63
Detecting a Motor Stall	. 63
Homing with StallGuard2	. 64
Limits of StallGuard2 Operation	. 64
StallGuard4 Load Measurement	. 64
Tuning StallGuard4	. 66
StallGuard4 Update Rate	. 66
Detecting a Motor Stall	
Limits of StallGuard4 Operation	. 67
CoolStep Load Adaptive Current Scaling	. 67
Setting Up for CoolStep	. 67
Tuning CoolStep	
Response Time	. 69
Low Velocity and Standby Operation	. 69
Diagnostic Outputs	. 69
DcStep	. 70
Designing-In DcStep	. 70
DcStep Integration with the Motion Controller	. 71
Stall Detection in DcStep Mode	. 72
Measuring Actual Motor Velocity in DcStep Operation	. 73
Sine Wave Lookup Table	. 73
Microstep Table	. 73
ABN Incremental Encoder Interface	. 75
Setting the Encoder to Match Motor Resolution	. 77
Reset, Disable/Stop and Power Down	. 77
Emergency Stop	. 77
External Reset and Sleep Mode	
Protections and Driver Diagnostics	. 78
Overcurrent Protection	. 78
Thermal Protection and Shutdown	. 78
Temperature Measurement	. 78
Chip Temperature Measurement	. 79
Motor Temperature Measurement	. 79
Overvoltage Protection and OV Pin	
Short Protection (Short to GND and Short to VS)	. 80
Open Load Diagnostics	. 80
Undervoltage Lockout Protection	. 80

TABLE OF CONTENTS (CONTINUED)

ESD Protection	81
External Analog Input AIN Monitoring	81
Clock Oscillator and Clock Input	81
Using the Internal Clock	81
Using an External Clock	81
General Register Mapping and Register Information	81
Register Map	83
TMC5240	83
Register Details	90
Typical Application Circuits	
Standard Application Circuit	156
High Motor Current	156
Driver Protection and EME Circuitry	156
Ordering Information	158
Revision History	159

LIST OF FIGURES

Figure 1. Block Diagram	19
Figure 2. Block Diagram with Typical External Components	20
Figure 3. Automatic Motor Current Control at Standstill and Ramp-Up	22
Figure 4. SPI Timing Diagram	25
Figure 5. UART Daisy-Chaining Example	28
Figure 6. StealthChop2 Automatic Tuning Procedure	30
Figure 7. StealthChop2: Good Setting for PWM_REG	31
Figure 8. StealthChop2: Too Small Setting for PWM_REG during AT#2	32
Figure 9. Successfully Determined PWM_GRAD(_AUTO) and PWM_OFS(_AUTO)	32
Figure 10. Example for Too Small PWM_GRAD Setting	33
Figure 11. Velocity-Based PWM Scaling (pwm_autoscale = 0)	35
Figure 12. TPWMTHRS for Optional Switching to SpreadCycle	36
Figure 13. Typical Chopper Decay Phases	40
Figure 14. SpreadCycle Chopper Scheme Showing Coil Current during a Chopper Cycle	42
Figure 15. Classic Constant Off-Time Chopper with Offset Showing Coil Current	43
Figure 16. Zero Crossing with Classic Chopper and Correction Using Sine Wave Offset	44
Figure 17. Choice of Velocity-Dependent Modes	47
Figure 18. Ramp Generator Velocity Trace Showing Second Move into Negative Direction	51
Figure 19. Illustration of Optimized Motor Torque Usage with the Ramp Generator	52
Figure 20. 8-Point Ramp with VMAX Not Reached Due to Too Low Distance	53
Figure 21. V2 Not Reached and No AMAX and DMAX Phase Due to Low Distance	53
Figure 22. V1 Not Reached Due to Low Distance	54
Figure 23. TVMAX Not Kept Due to Low Distance	54
Figure 24. 8-Point Ramp Examples with On-the-Fly Target Position Change	55
Figure 25. Ramp Generator Velocity Dependent Motor Control	57
Figure 26. Using Reference Switches (Example)	58
Figure 27. Virtual Stop Switches and Limit Visualization	59
Figure 28. Function Principle of StallGuard2	61
Figure 29. Example: Optimum SGT Setting and StallGuard2 Reading with an Example Motor	63
Figure 30. StallGuard4 Mode of Operation	65
Figure 31. CoolStep Adapts Motor Current to the Load	68
Figure 32. Diagnostic Outputs Configuration Options	70
Figure 33. DcStep Extended Application Operation Area	71
Figure 34. DcStep Velocity Profile with Overload Situation	72
Figure 35. LUT Programming Example	74
Figure 36. Shifting the Cosine Wave through OFFSET_SIN90	75
Figure 37. Outline of ABN Signals of an Incremental Encoder	76
Figure 38. Brake Chopper Circuit Example	80
Figure 39. Standard Application Circuit	156

LIST OF FIGURES (CONTINUED)	
Figure 40. Simple ESD Enhancement	157
Figure 41. Extended Motor Output Protection	158

LIST OF TABLES

Table 1. SPI Datagram Structure	23
Table 2. SPI Read/Write Example Flow	24
Table 3. SPI_STATUS – Status Flags Transmitted with Each SPI Access in Bits 39 to 32	24
Table 4. UART Write Access Datagram Structure	25
Table 5. UART Read Access Request Datagram Structure	26
Table 6. UART Read Access Reply Datagram Structure	26
Table 7. TMC5240 UART Interface Signals	27
Table 8. UART Example for Addressing up to 255 Nodes	28
Table 9. Constraints and Requirements for StealthChop2 Autotuning AT#1 and AT#2	29
Table 10. Choice of PWM Frequency for StealthChop2 (Bold Font = Recommended)	31
Table 11. Parameters Controlling StealthChop2	38
Table 12. Parameters Controlling SpreadCycle and Classic Constant Off Time Chopper	40
Table 13. SpreadCycle Mode Parameters	42
Table 14. Parameters Controlling Constant Off-Time Chopper Mode	44
Table 15. Parameters Controlling the Motor Current	45
Table 16. I _{FS} Full-Scale Peak Range Settings (Example for R _{REF} = 12kΩ)	46
Table 17. IFS Full-Scale RMS Current in Ampere (A RMS) Based on DRV_CONF Bits 10 Setting and Different	
R _{REF}	
Table 18. Velocity-Based Mode Control Parameters	
Table 19. Ramp Generator Parameters vs. Units	
Table 20. X_COMPARE_REPEAT Options and periodic Pulse Behavior	
Table 21. StallGuard2-Related Parameters	
Table 22. StallGuard4-Related Parameters	
Table 23. CoolStep Critical Parameters	
Table 24. CoolStep Additional Parameters and Status Information	68
Table 25. Encoder Example Settings for a 200 Fullstep Motor with 256 Microsteps	
Table 26. Overcurrent Protection Thresholds Based on the Full-Scale Current Setting	80
Table 27. Overview of Register Map	81

Absolute Maximum Ratings

V _S to GND0.3V to 41V	IREF, AIN to GND0.3V to min (2.2, V _{DD1V8} + 0.3)V
V_{DD1V8} to GND0.3V to min (2.2, $V_S + 0.3$)V	V _{CC IO} to GND0.3V to 5.5V
AGND to GND0.3V to +0.3V	Logic Input/Output Voltage to GND0.3V to V _{CC IO} + 0.3V
OUT1A, OUT2A, OUT1B, OUT2B0.3V to V _S + 0.3V	OV to GND
V_{CP} to GND	Operating Temperature Range40°C to 125°C
CPO to GND	Junction Temperature+165°C
CPI to GND0.3V to min (41, V _S + 0.3)V	Storage Temperature Range65°C to +150°C
SLEEPN to GND0.3V to V_S + 0.3V	Soldering Temperature (reflow)+260°C

Stresses beyond those listed under "Absolute Maximum Ratings" may cause permanent damage to the device. These are stress ratings only, and functional operation of the device at these or any other conditions beyond those indicated in the operational sections of the specifications is not implied. Exposure to absolute maximum rating conditions for extended periods may affect device reliability.

Package Information

TQFN32 5mm x 5mm

Package Code	T3255+5C
Outline Number	<u>21-0140</u>
Land Pattern Number	90-0013
Thermal Resistance, Single-Layer Board:	
Junction to Ambient (θ _{JA})	47°C/W
Junction to Case (θ _{JC})	1.7°C/W
Thermal Resistance, Four-Layer Board:	
Junction to Ambient (θ _{JA})	29°C/W
Junction to Case (θ _{JC})	1.7°C/W

TSSOP38 9.7mm x 4.4mm EP

Package Code	U38E+3C
Outline Number	<u>21-0714</u>
Land Pattern Number	90-0435
Thermal Resistance, Four-Layer Board:	
Junction to Ambient (θ _{JA})	25°C/W
Junction to Case (θ _{JC})	1°C/W

For the latest package outline information and land patterns (footprints), go to www.maximintegrated.com/packages. Note that a "+", "#", or "-" in the package code indicates RoHS status only. Package drawings may show a different suffix character, but the drawing pertains to the package regardless of RoHS status.

Package thermal resistances were obtained using the method described in JEDEC specification JESD51-7, using a four-layer board. For detailed information on package thermal considerations, refer to www.maximintegrated.com/thermal-tutorial.

Electrical Characteristics

 $(V_S$ = 4.5V to 36V, R_{REF} = from 12k Ω to 24k Ω , Typical Values assume T_A = 25°C and V_S = 24V, Limits are 100% tested at T_A = +25°C. Limits over the operating temperature range and relevant supply voltage range are guaranteed by design and characterization.)

PARAMETER	SYMBOL	CONDITIONS	MIN	TYP	MAX	UNITS
POWER SUPPLY						
Supply Voltage Range	V _S		4.5		36	V
Sleep Mode Current Consumption	I _{VS}	V(SLEEPN) = 0		4	18	μA

 $(V_S = 4.5 V \text{ to } 36 V, R_{REF} = \text{from } 12 k\Omega \text{ to } 24 k\Omega$, Typical Values assume $T_A = 25 ^{\circ}\text{C}$ and $V_S = 24 V$, Limits are 100% tested at $T_A = +25 ^{\circ}\text{C}$. Limits over the operating temperature range and relevant supply voltage range are guaranteed by design and characterization.)

PARAMETER	SYMBOL	CONDITIONS	MIN	TYP	MAX	UNITS
Quiescent Current Consumption	I _{VS}	V(SLEEPN) = 1, V(DRV_ENN) = 1		3.5	5	mA
1.8V Regulator Output Voltage	V _{VDD}	V _S = 4.5V		1.8		V
V _{DD} Current Limit	IV18 _{LIM}		20			mA
Charge Pump Voltage	V _{CP}			$V_{S} + 2.7$		V
Logic I/O Supply Voltage Range	V _{CC_IO}		2.2		5.5	٧
Sleep Mode Current Consumption	lvcc_io	V(SLEEPN) = 0		5	10	μA
Quiescent Current Consumption	lvcc_io	V(SLEEPN) = 1		35	60	μA
LOGIC LEVEL INPUTS-C	OUTPUTS					
Input Voltage Level - High	V _{IH}		0.7 x V _{CC_IO}			٧
Input Voltage Level - Low	V _{IL}				0.3 x V _{CC_IO}	٧
Input Hysteresis	V _{HYS}			0.15 x V _{CC_IO}		V
Internal Pullup/Pulldown Resistance	R _{PULL}	to GND or to V _{CC_IO}	60	100	140	kΩ
Input Leakage	In _{Leak}	Inputs without pullup/pulldown resistance	-1		+1	μA
Output Logic-Low Voltage	V _{OL}	I _{LOAD} = 5mA			0.4	٧
Push-Pull Output Logic- High Voltage	V _{OH}	I _{LOAD} = 5mA	V _{CC_IO} - 400mV			
Open-Drain Output Logic High Leakage Current	ІОН	V(PIN) = 5.5V	-1		+1	μΑ
SLEEPN Voltage Level High	VIH _{SLEEPN}		0.9			V
SLEEPN Voltage Level Low	VIL _{SLEEPN}				0.6	V
SLEEPN Pulldown Input Resistance	RPD _{SLEEPN}		0.8	1.5		МΩ
OUTPUT SPECIFICATIO	NS					
Output ON-Resistance	RON _{LS}	Full-scale bits = 10		0.11	0.2	Ω
Low Side	RONES	Full-scale bits = 01		0.15	0.28	22
Output ON-Resistance Low Side	RON _{LS}	Full-scale bits = 00		0.28	0.54	Ω
Output ON-Resistance High Side	RON _{HS}			0.12	0.22	Ω
Output Leakage	I _{LEAK}		-5		+5	μΑ

 $(V_S = 4.5 V \text{ to } 36 V, R_{REF} = \text{from } 12 k\Omega \text{ to } 24 k\Omega$, Typical Values assume $T_A = 25 ^{\circ}\text{C}$ and $V_S = 24 V$, Limits are 100% tested at $T_A = +25 ^{\circ}\text{C}$. Limits over the operating temperature range and relevant supply voltage range are guaranteed by design and characterization.)

PARAMETER	SYMBOL	CONDITIONS	MIN	TYP	MAX	UNITS
		Slew-rate bits = 00		100		
Output Claus Data	CD.	Slew-rate bits = 01		200		\//a
Output Slew Rate	SR	Slew-rate bits = 10		400		V/µs
		Slew-rate bits = 11	800			
PROTECTION CIRCUITS			•			
		Full-scale bits = 10	5.0			
Overcurrent Protection Threshold	OCP	Full-scale bits = 01	3.33			Α
THIOGHOIG		Full-scale bits = 00	1.67			
Overcurrent Protection Blanking Time	T _{OCP}		0.9	1.5	2.3	μs
UVLO Threshold on V _S	UVLO	V _S falling	3.75	3.9	4.05	V
UVLO Threshold on V _S Hysteris	UVLOHYS			0.12		V
UVLO Threshold on VCC_IO	UVLO	V _{CC_IO} falling	0.9	1.5	1.95	
V _{CC_IO} UVLO Hysteresis	UVLOVCCH			100		mV
Thermal Protection Threshold Temperature	TSD			165		°C
Thermal Protection Temperature Hysteresis				20		°C
CURRENT REGULATION	l .					
IREF Pin Resistor Range	R _{REF}		12		60	kΩ
IREF Output Voltage	V_{REF}		0.882	0.9	0.918	V
Full-Scale Current Constant	KIFS	IFS = 1A		11.75		Α χ kΩ
Full-Scale Current Constant	KIFS	IFS = 2A		24		A x kΩ
Full-Scale Current Constant	KIFS	IFS = 3A		36		A x kΩ
Regulation Accuracy	DITRIP1	Output current from 7% to 100% FS, R_{REF} = 12k Ω	-5		+5	%
FUNCTIONAL TIMINGS						
SLEEP Time	t _{SLEEP}	SLEEPN = 0 to OUT_ three state			50	μs
Wake-Up Time from Sleep	TWAKE	SLEEPN = 1 to normal operation			2.5	ms
Enable Time	TEN	Time from DRV_ENN pin falling edge to driver on			1.5	μs
Disable Time	TEN	Time from DRV_ENN pin rising edge to driver off			6	μs

 $(V_S = 4.5 V \text{ to } 36 V, R_{REF} = \text{from } 12 k\Omega \text{ to } 24 k\Omega$, Typical Values assume $T_A = 25 ^{\circ}\text{C}$ and $V_S = 24 V$, Limits are 100% tested at $T_A = +25 ^{\circ}\text{C}$. Limits over the operating temperature range and relevant supply voltage range are guaranteed by design and characterization.)


PARAMETER	SYMBOL	CONDITIONS	MIN	TYP	MAX	UNITS
CLOCK		•	•			
Internal Clock Frequency	fCLKOSC		11.9	12.5	13.2	MHz
External Clock Frequency	f _{CLK}		8	16	20	MHz
External Clock Duty- Cycle	tCLKL		40		60	%
External Clock Detection in Cycles			4		8	
External Clock Timeout Detection in Cycles of Internal f _{CLKOSC}			12		16	
External Clock Detection Lower Frequency Threshold	f _{CLKLO}		4			MHz
SPI TIMINGS						
SCK Valid Before or After Change of CSN	t _{CC}		T _{SCLK}			ns
CSN High Time	tcsh		4 x T _{CLK}			ns
SCK Low Time	t _{CL}		20			ns
SCK High Time	t _{CH}		20			ns
SCK Frequency	f _{SCK}				10	MHz
SDI Setup Time Before SCK Rising Edge	t _{DU}		10			ns
SDI Hold Time After SCK Rising Edge	t _{DH}		10			ns
Data Out Valid Time After SCK Falling Edge	t _{DO}	V _{CC_IO} = 3.3V		27	40	ns
SDI, SCK, and CSN Filter Delay Time	t _{FILT}	Rising and falling edge		10		ns
ENCODER TIMING						
Encoder Counting Frequency	f _{CNT}			< 2/3 f _{CLK}	f _{CLK}	
A/B/N Input Low Time	t _{ABNL}		3t _{CLK} + 20			ns
A/B/N Input High Time	t _{ABNH}		3t _{CLK} + 20			ns
A/B/N Spike Filtering Time	[†] FILTABN	Rising and falling edge		3t _{CLK}		
ADC/Analog Input/Tempe	erature					
ADC Resolution		12 bit + sign		13		Bit
Analog Input Voltage Range	V _{AIN}		0		1.25	V
Analog Input Leakage	I _{AIN,leak}		-1		+1	uA

 $(V_S = 4.5 V \text{ to } 36 V, R_{REF} = \text{from } 12 k\Omega \text{ to } 24 k\Omega$, Typical Values assume $T_A = 25 ^{\circ}\text{C}$ and $V_S = 24 V$, Limits are 100% tested at $T_A = +25 ^{\circ}\text{C}$. Limits over the operating temperature range and relevant supply voltage range are guaranteed by design and characterization.)


PARAMETER	SYMBOL	CONDITIONS	MIN	TYP	MAX	UNITS
Analog Input Frequency	f _{AIN}	Assuming undersampling at AIN is accepted, the AIN input frequency needs to be lower than the given max value for a meaningful ADC conversion for a single ADC channel.			70	kHz
Driver Temperature Accuracy	T _{DRIVER}			±10		°C
Supply Voltage Measurement Accuracy			-5		+5	%
ADC Sample Rate	f _{SAMPLE} , ADC			f _{CLK} /204	18	

Pin Configurations

TMC5240 TQFN Pin Configuration

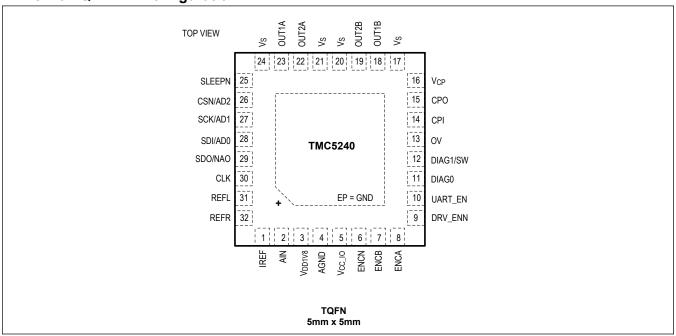

TMC5240 TSSOP Pin Configuration

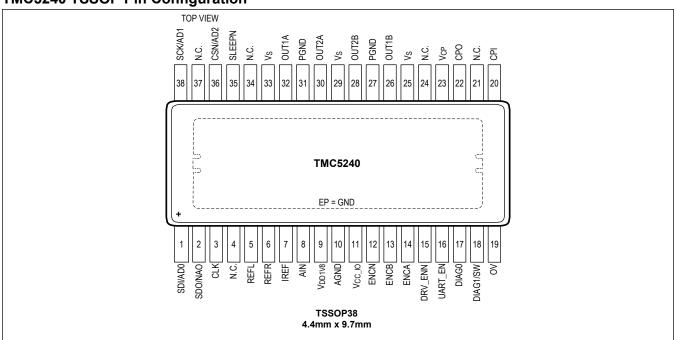

Pin Description

PI	N			REF	
TQFN32	TSSOP38	NAME	FUNCTION	SUPPLY	TYPE
4	10	AGND	Analog Ground. Connect to ground plane.		GND
_	27, 31	PGND	Power ground. Connect to ground plane.		GND
17, 20, 21, 24	25, 29, 33	Vs	Motor supply voltage. Provide filtering capacity near pin with shortest loop to GND plane/exposed pad.		Supply
3	9	V _{DD1V8}	Output of internal 1.8V regulator. Attach 2.2µF or larger ceramic capacitor to AGND near to pin for best performance.		Supply
16	23	V _{CP}	Charge pump voltage. Tie to V_S using 1.0 μ F capacitor. Connect positive end of capacitor close to V_S pin to avoid inductive peaks.		Analog Output
5	11	V _{CC_IO}	Digital IO supply voltage provided from external source to define circuit IO level. Required for proper voltage level settings on output pins.	V _{CC_IO}	Analog Input
15	22	CPO	Charge pump capacitor output.		Analog Output
14	20	CPI	Charge pump capacitor input. Tie to CPO using 22nF 50V capacitor.		Analog Output
30	3	CLK	CLK input. Tie to GND using short wire for internal clock or supply external clock. Internal clock-fail over circuit protects against loss of external clock signal.		Digital Input
31	5	REFL	Left reference input for internal ramp generator	V _{CC IO}	Digital Input
32	6	REFR	Right reference input for internal ramp generator	V _{CC_IO}	Digital Input
26	36	CSN/AD2	SPI chip select input (negative active) (UART_EN = 0) or Address input 2 (+4) in UART mode (UART_EN = 1).	V _{CC_IO}	Digital Input (pull up)
27	38	SCK/AD1	SPI serial clock input (UART_EN = 0) or address input 1 (+2) in UART mode (UART_EN = 1).	V _{CC_IO}	Digital Input (pull up)
28	1	SDI/AD0	SPI data input (UART_EN = 0) or address input 0 (+1) in UART mode (UART_EN = 1).	V _{CC_IO}	Digital Input (pull up)
29	2	SDO/NAO	SPI data output (three-state) (UART_EN = 0) or next address output (NAO) in UART mode (UART_EN = 1).	V _{CC_IO}	Digital Output
1	7	IREF	Analog reference current for current scaling. Provide external resistor to GND.	V _{CC_IO}	Analog Input
10	16	UART_EN	Interface selection pin. When tied low, the SPI interface is enabled. When tied high, the UART interface is enabled. Integrated pull-down resistor.	V _{CC_IO}	Digital Input (pull down)
7	13	ENCB	Encoder B-channel input.	V _{CC_IO}	Digital Input (pull up)

Pin Description (continued)

Р	IN			REF	T \(\(\text{D}\)\)	
TQFN32	TSSOP38	NAME	FUNCTION	SUPPLY	TYPE	
8	14	ENCA	Encoder A-channel input.	V _{CC_IO}	Digital Input (pull up)	
6	12	ENCN	Encoder N-channel input.	V _{CC_IO}	Digital Input (pull up)	
9	15	DRV_ENN	Enable input. The power stage becomes switched off (all motor outputs floating) when this pin becomes driven to a high level.	V _{CC_IO}	Digital Input (pull up)	
11	17 DIAG0		Diagnostics output DIAGO. Interrupt or STEP output from internal motion controller for external driver. Use external pullup resistor in open drain mode. In system reset state this pin is actively pulled low to indicate reset condition to external controller.	Vcc_io	Digital Output	
12	18	DIAG1/SW	Diagnostics output DIAG1. Position compare or DIR output from internal motion controller for external driver. Use external pullup resistor in open-drain mode. Single-wire I/O in UART mode.	Vcc_io	Digital IO	
25	35	SLEEPN	Low active power down input/reset input. Apply a continuous low level to bring the device to sleep mode. SLEEPN has an internal pull-down. If not used connect to V _S or V _{CC_IO} (this is a high voltage pin). Once the IC returns from sleep mode/reset, it must be reconfigured before being used again. Register content is not stored during sleep mode. While re-configuring the IC it is advised to still hold the bridge drivers disabled with DRV_ENN. Do not use while at high motor velocity!	Vs	Analog Input (pull down)	
19	28	OUT2B	Motor coil B output 2	V _S	Analog Output	
18	26	OUT1B	Motor coil B output 1	V _S	Analog Output	
22	30	OUT2A	Motor coil A output 2	V _S	Analog Output	
23	32	OUT1A	Motor coil A output 1	V _S	Analog Output	

Pin Description (continued)

Р	IN	NAME	FUNCTION	REF	TYPE
TQFN32	TSSOP38	NAME	FUNCTION	SUPPLY	ITPE
EP	EP	GND	Exposed die pad. Connect the exposed die pad to a GND plane. Provide as many as possible vias for heat transfer to GND plane. Serves as GND pin for power stage and internal circuitry.		GND
_	4, 21, 24, 34, 37	N.C.	No internal connection. Leave this pin open or tie it to GND for improved cooling.		N.C.
13	19	OV	Overvoltage indicator output (open-drain) with programmable threshold voltage. Attach external MOSFET with load resistor to limit supply voltage. External pullup resistor required. Updated by ADC with	Vcc_io	Digital Output (open drain)
2	8	AIN	General-purpose analog input measured with internal ADC with ^f CLK / 2048. Input range 0 to 1.25V. Value available via SPI/UART.	Vcc_lo	Analog Input

Functional Diagrams

TMC5240

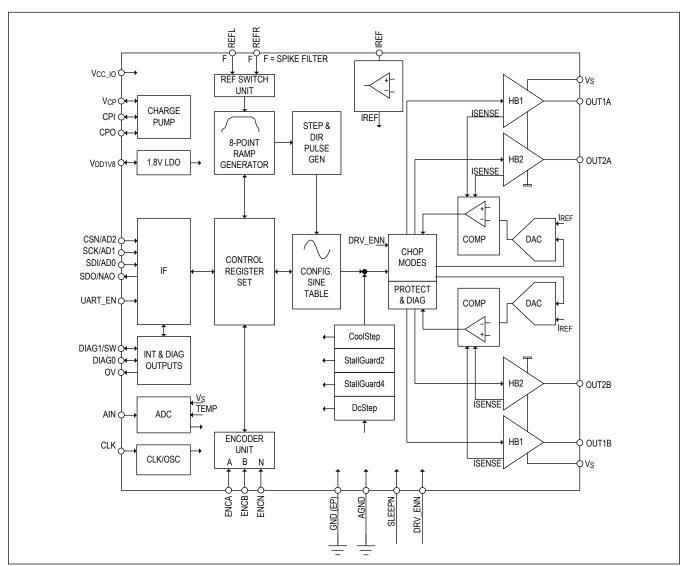


Figure 1. Block Diagram

Detailed Description

Principles of Operation

Full Featured Motion Controller and Driver

The TMC5240 motion controller and driver chip is an intelligent power component interfacing between CPU and stepper motor. All stepper motor logic is completely within the TMC5240. No software is required to control the motor—just provide target positions. The TMC5240 offers numerous unique enhancements which are enabled by the system-on-chip integration of driver and controller. The eight-point ramp generator of the TMC5240 automatically uses StealthChop, CoolStep, StallGuard, DcStep, and SpreadCycle to optimize every motor movement.

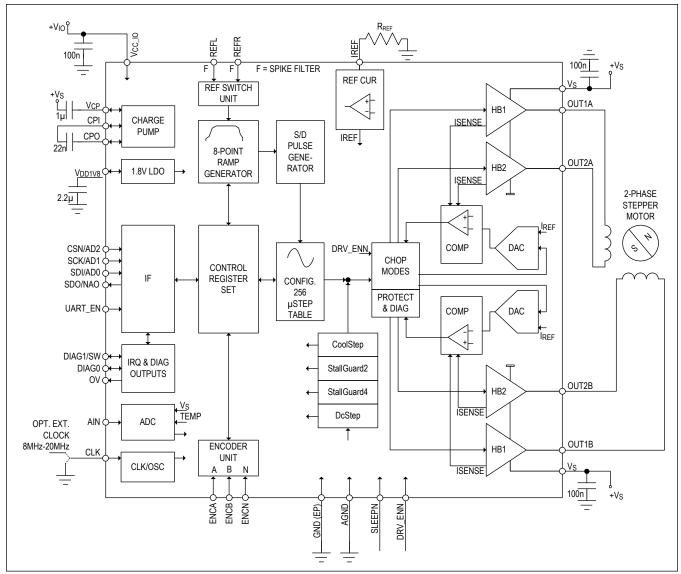


Figure 2. Block Diagram with Typical External Components

Key Concepts

The TMC5240 implements advanced features which are exclusive to ADI-Trinamic products. These features contribute toward greater precision, greater energy efficiency, higher reliability, smoother motion, and cooler operation in many stepper motor applications.

StealthChop2	No-noise, high-precision chopper algorithm for inaudible motion and inaudible standstill of the motor. Allows faster motor acceleration and deceleration than StealthChop and extends StealthChop to low standstill motor currents
SpreadCycle	High-precision cycle-by-cycle current control for highest dynamic movements
StallGuard2	Sensorless stall detection and mechanical load measurement for SpreadCycle
StallGuard4	Sensorless stall detection and mechanical load measurement for StealthChop
CoolStep	Uses StallGuard measurement in order to adapt the motor current for best efficiency and lowest heat-up of motor and driver

In addition to these performance enhancements, ADI-Trinamic motor drivers offer safeguards to detect and protect against shorted outputs, output open-circuit, overtemperature, and undervoltage conditions for enhancing safety and recovery from equipment malfunctions.

Control Interfaces

The TMC5240 supports both, an SPI interface and a UART-based single-wire interface with CRC checking. Selection of the actual interface combination is done through the UART_EN pin, which can be hardwired to GND or V_{CC_IO} depending on the desired interface selection.

The SPI interface is a bit-serial interface synchronous to a bus clock. For every bit sent from the bus controller to the bus peripheral, another bit is sent simultaneously from the peripheral back to the controller. Communication between an SPI controller (e.g., an MCU) and the peripheral always consists of sending one 40-bit command word and receiving one 40-bit status word.

The single-wire interface allows a bidirectional single-wire interfacing. It can be driven by any standard UART. No baud rate configuration is required.

Integrated Eight-Point Motion Controller

The integrated 32-bit motion controller automatically drives the motor to target positions or accelerates to target velocities. All motion parameters can be changed on the fly. The motion controller recalculates immediately. A minimum set of configuration data consists of acceleration and deceleration values and the maximum motion velocity. The start and stop velocities are supported as well as a second and third acceleration and deceleration setting selected by velocity thresholds resulting in an eight-point velocity profile. These settings allow adaptation of the motion profile to the motor torque profile as well as jerk reduction for near S-ramp performance. The integrated motion controller supports immediate reaction to mechanical reference switches and the sensorless stall detection StallGuard2 and StallGuard4.

Benefits

- Flexible ramp programming
- Efficient use of motor torque for acceleration and deceleration allows higher machine throughput
- Pseudo S-ramp for ierk reduction
- Immediate reaction to stop and stall conditions

Automatic Standstill Power Down

An automatic current reduction drastically reduces application power dissipation and cooling requirements. A reduction to half of the run current reduces standstill power dissipation to roughly 25%. Standstill current, delay time, and decay parameters can be configured through the serial control interfaces.

Automatic freewheeling and passive motor braking are provided as an option for standstill. Passive braking reduces motor standstill power consumption to zero, while still providing effective dampening and braking!

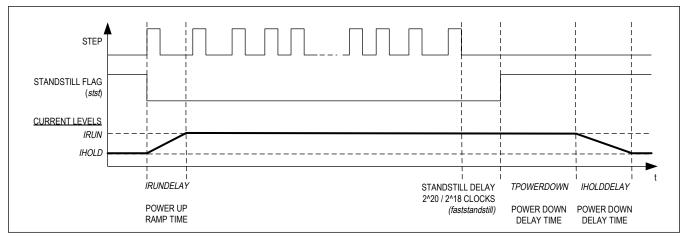


Figure 3. Automatic Motor Current Control at Standstill and Ramp-Up

StealthChop2 and SpreadCycle Driver

StealthChop2 is a voltage chopper-based principle. It especially guarantees that the motor is absolutely quiet in standstill and in slow motion, except for noise generated by ball bearings.

Unlike other voltage mode choppers, StealthChop2 does not require any configuration. It automatically learns the best settings during the first motion after power up and further optimizes the settings in subsequent motions.

An initial homing sequence is sufficient for learning. Optionally, initial learning parameters can be loaded to the register set. StealthChop2 allows high motor dynamics by reacting at once to a change of motor velocity.

For highest velocity applications, SpreadCycle is an alternative option to StealthChop2. StealthChop2 and SpreadCycle may even be used in a combined configuration for the best of both worlds: StealthChop2 for no-noise standstill, silent, and smooth performance, SpreadCycle at higher velocity for high dynamics and highest peak velocity at low vibration.

SpreadCycle is an advanced cycle-by-cycle chopper mode. It offers smooth operation and good resonance dampening over a wide range of speed and load. The SpreadCycle chopper scheme automatically integrates and tunes fast decay cycles to guarantee smooth zero-crossing performance.

Benefits

- Significantly improved microstepping with low-cost motors
- Motor runs smooth and quiet
- Absolutely no standby noise
- Reduced mechanical resonance improves torque output

StallGuard2/4 - Mechanical Load Sensing

StallGuard2 and StallGuard4 provide an accurate measurement of the load on the motor. It can be used for stall detection as well as other uses at loads below those which stall the motor, such as CoolStep load-adaptive current reduction.

This gives more information on the drive allowing functions like sensorless homing and diagnostics of the drive mechanics. While StallGuard2 combines with SpreadCycle chopper, StallGuard4 uses a different principle to combine with StealthChop2.

CoolStep - Load Adaptive Current Control

CoolStep drives the motor at the optimum current. It uses the StallGuard2 or StallGuard4 load measurement information to adjust the motor current to the minimum amount required in the actual load situation.

CoolStep results in energy savings and keeps the components cool. Due to driving the motor with the optimum current, CoolStep increases the motor efficiency compared to standard operation with ca. 50% torque reserve.

Benefits

- Highest energy efficiency, power consumption decreased by up to 75%
- Motor generates less heat
- Improved mechanical precision
- Less or no cooling
- Improved reliability
- Use of smaller motor is possible, less torque reserve required
- Less motor noise due to less energy exciting motor resonances

Encoder Interface

The TMC5240 provides an encoder interface for external incremental encoders. The encoder can be used for homing of the motion controller (alternatively to reference switches) and for consistency checks on-the-fly between encoder position and ramp generator position. A programmable prescaler allows the adaptation of the encoder resolution to the motor resolution. A 32-bit encoder counter is provided.

SPI Interface

SPI Datagram Structure

The TMC5240 uses 40-bit SPI datagrams for communication with a microcontroller. Microcontrollers which are equipped with hardware SPI are typically able to communicate using integer multiples of 8 bits. The CSN line of the device must stay active (= low) for the complete duration of the datagram transmission.

Each datagram sent to the device is composed of an address byte followed by four data bytes. This allows direct 32-bit data word communication with the register set. Each register is accessed through 32 data bits even if it uses less than 32 data bits.

For simplification, each register is specified by a one byte address:

- For a read access, the most significant bit of the address byte is 0.
- For a write access, the most significant bit of the address byte is 1.

All registers are readable, most of them are read write, some read only, and some write 1 to clear (e.g., GSTAT registers).

Table 1. SPI Datagram Structure

	MSB (TRAI	NSMITTED FII	RST)	40 BIT		MITTED LA	ST)					
				39 0								
	bit address bit SPI status	read/write 32 bit data										
	39 32	31 0										
write to RW + 7 read fro 8 bit SP	bit address om	8 bit	data	8 bit	data	8 bit o	data	8 bit	data			
39 / 38 32		31 .	31 24		23 16		. 8	7.	0			
W	3832	3128	2724	2320	1916	1512	118	74	30			

Selection of Write/Read (WRITE_notREAD)

The read and write selection is controlled by the MSB of the address byte (bit 39 of the SPI datagram). This bit is 0 for read access and 1 for write access. So, the bit named W is a WRITE_notREAD control bit. The active high write bit is the MSB of the address byte. So, 0x80 has to be added to the address for a write access. The SPI interface always delivers data back to the controller, independent of the W bit. The data transferred back is the data read from the address which was transmitted with the *previous* datagram, if the previous access was a read access. If the previous access was a write access, then the data read back mirrors the previously received write data. So, the difference between a read and a write access is that the read access does not transfer data to the addressed register but it transfers the address only and its

32 data bits are dummies, and, further the following read or write access delivers back the data read from the address transmitted in the preceding read cycle.

A read access request datagram uses dummy write data. Read data is transferred back to the controller with the subsequent read or write access. Hence, reading multiple registers can be done in a pipelined fashion.

Whenever data is read from or written to the TMC5240, the MSBs delivered back contain the SPI status. The SPI_STATUS is a number of eight selected status bits.

Example:

For a read access to the register (*XACTUAL*) with the address 0x21, the address byte has to be set to 0x21 in the access preceding the read access. For a write access to the register (*VACTUAL*), the address byte has to be set to 0x80 + 0x22 = 0xA2. For read access, the data bit might have any value (-). So, one can set them to 0.

Table 2. SPI Read/Write Example Flow

ACTION	DATA SENT TO TMC5240	DATA RECEIVED FROM TMC5240
read XACTUAL	0x2100000000	0xSS & unused data*
read XACTUAL	0x2100000000	0xSS & XACTUAL
write VMAX = 0x00ABCDEF	0xA700ABCDEF	0xSS & XACTUAL
write VMAX = 0x00123456	0xA700123456	0xSS00ABCDEF

^{*} SS: is a placeholder for the status bits SPI STATUS

SPI Status Bits Transferred with Each Datagram Read Back

New status information becomes latched at the end of each access and is available with the next SPI transfer.

Table 3. SPI_STATUS – Status Flags Transmitted with Each SPI Access in Bits 39 to 32

BIT	NAME	COMMENT
7	status_stop_r	RAMP_STAT[1] – 1: Signals stop right switch status (motion controller only)
6	status_stop_I	RAMP_STAT[0] – 1: Signals stop left switch status (motion controller only)
5	position_reached	RAMP_STAT[9] – 1: Signals target position reached (motion controller only)
4	velocity_reached	RAMP_STAT[8] – 1: Signals target velocity reached (motion controller only)
3	standstill	DRV_STATUS[31] – 1: Signals motor stand still
2	sg2	DRV_STATUS[24] – 1: Signals StallGuard flag active
1	driver_error	GSTAT[1] − 1: Signals driver driver error (clear by reading GSTAT)
0	reset_flag	GSTAT[0] – 1: Signals, that a reset has occurred (clear by reading GSTAT)

Data Alignment

All data are right aligned. Some registers represent unsigned (positive) values, some represent integer values (signed) as two's complement numbers, single bits or groups of bits are represented as single bits respectively as integer groups.

SPI Signals

The SPI bus on the TMC5240 has four signals:

- SCK bus clock input
- SDI serial data input
- SDO serial data output
- CSN chip select input (active low)

The SPI peripheral is enabled for an SPI transaction by a low on the chip select input CSN. Bit transfer is synchronous to the bus clock SCK, with the peripheral latching the data from SDI on the rising edge of SCK and driving data to SDO following the falling edge. The most significant bit is sent first. A minimum of 40 SCK clock cycles is required for a bus transaction with the TMC5240.

If more than 40 clocks are driven, the additional bits shifted into SDI are shifted out on SDO after a 40-clock delay through an internal shift register. This can be used for daisy chaining multiple chips.

The CSN must be low during the whole bus transaction. When CSN goes high, the contents of the internal shift register are latched into the internal control register and recognized as a command from the SPI controller to the SPI peripheral. If more than 40 bits are sent, only the last 40 bits received before the rising edge of CSN are recognized as the command.

SPI Timing

The SPI max frequency is at 10MHz. SCK is independent from the clock frequency of the system while the only parameter depending on the clock frequency is the minimum CSN high time. All SPI inputs are internally filtered to avoid triggering on pulses shorter than 10ns. The figure shows the timing parameters of an SPI bus transaction. Timing values are given in the EC table.

The SPI interface uses SPI MODE 3.

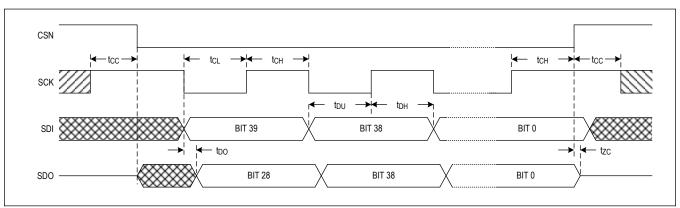


Figure 4. SPI Timing Diagram

UART Single-Wire Interface

The UART single-wire interface allows control of the TMC5240 with any microcontroller UART. It shares transmit and receive line like an RS485-based interface. Data transmission is secured using a cyclic redundancy check, so that increased interface distances (e.g., over cables between two PCBs) can be bridged without danger of wrong or missed commands even in the event of electromagnetic disturbance. The automatic baud rate detection makes this interface easy to use.

Datagram Structure

Write Access

Table 4. UART Write Access Datagram Structure

						EACH B	YTE IS L	SB	.MSB	, HIGH	IEST B	TE TR	RANSM	ITTED FIR	ST				
	0 63																		
	sync + reserved							8 bit node address		RW+	RW + 7 bit register addr.			32 bit data	ı		CRC	;	
				(07			815			1623			2455		5663		3	
1	0	0 1 0 Reserved (don't cares but included in CRC)				NC	NODEADDR		register address		1	data bytes 3, 2, 1, 0 (high to low byte)		0 (high to	O CRC		;		
0	1	2	3	4	5	6	7	8		15	16		23	24		55	56		63

A sync nibble precedes each transmission to and from the TMC5240 and is embedded into the first transmitted byte, followed by an addressing byte. Each transmission allows a synchronization of the internal baud rate divider to the UART

host clock. The actual baud rate is adapted and variations of the internal clock frequency are compensated. Thus, the baud rate can be freely chosen within the valid range. Each transmitted byte starts with a start bit (logic 0, low level on DIAG1/SW) and ends with a stop bit (logic 1, high level on DIAG1/SW). The bit time is calculated by measuring the time from the beginning of start bit (1 to 0 transition) to the end of the sync frame (1 to 0 transition from bit 2 to bit 3). All data is transmitted byte wise. The 32-bit data words are transmitted with the highest byte first.

A minimum baud rate of 9000 baud is permissible, assuming 20MHz clock (worst case for low baud rate). Maximum baud rate is $f_{CLK}/16$ due to the required stability of the baud clock.

The initial peripheral address NODEADDR is selected by CSN AD2, SCK AD1, SDI AD0 in the range 0 to 7.

The peripheral address is determined by the sum of the register *NODEADDR* and the pin selection given above. This means that a high level on SDI (with CSN low and SCK low) increments the *NODEADDR* setting by one.

Bit 7 of the register address identifies a Read (0) or a Write (1) access. Example: Address 0x10 is changed to 0x90 for a write access.

The communication becomes reset if a pause time of longer than 63 bit times between the start bits of two successive bytes occurs. This timing is based on the last correctly received datagram. In this case, the transmission needs to be restarted after a failure recovery time of minimum 12 bit times of bus idle time. This scheme allows the UART host to reset communication in case of transmission errors. Any pulse on an idle data line below 16 clock cycles is treated as a glitch and leads to a timeout of 12 bit times, for which the data line must be idle. Other errors like wrong CRC are also treated the same way. This allows a safe resynchronization of the transmission after any error conditions. Consider that due to this mechanism an abrupt reduction of the baud rate to less than 15% of the previous value is not possible.

Each accepted write datagram becomes acknowledged by the receiver by incrementing an internal cyclic datagram counter (8 bit). Reading out the datagram counter allows the UART host to check the success of an initialization sequence or single write accesses. Read accesses do not modify the counter.

Read Access

Table 5. UART Read Access Request Datagram Structure

					EACH E	SYTE IS LSE	BMSB, HIC	GHES	T BYTE	TRANS	MITTED F	IRST					
				syn	c + reserved	I		8 bit node address RW + 7 bit register address			CRC						
	07							815			1623				2431		
1	0	1	0	Reserved	(don't cares	but include	d in CRC)	٨	NODEADDR register address 0		0	CRC					
0	1	2	3	4	5	6	7	8		15	16		23	24		31	

The read access request datagram structure is identical to the write access datagram structure, but uses a lower number of user bits. Its function is the addressing of the UART node and the transmission of the desired register address for the read access. The TMC5240 responds with the same baud rate as the UART host uses for the read request.

In order to ensure a clean bus transition from the host to the node, the TMC5240 does not immediately send the reply to a read access, but it uses a programmable delay time after which the first reply byte becomes sent following a read request. This delay time can be set in multiples of eight bit times using SENDDELAY time setting (default = 8 bit times) according to the needs of the UART host. In a multi-node system, set SENDDELAY to min. 2 for all nodes. Otherwise a non-addressed node might detect a transmission error upon read access to a different node.

Table 6. UART Read Access Reply Datagram Structure

	EACH BYTE IS LSBMSB, HIGHEST BYTE TRANSMITTED FIRST																	
	0 63																	
	sync + reserved 8 bit node address RW + 7 bit register addr. 32 bit data CRC									,								
07				815			1623			2455		5	66	3				
1	1 0 1 0 reserved (0)			(0) b		0xFF		register	address	0	data bytes 3	, 2, 1, 0 (high	to low byte)		CRC	,		
0	1	2	3	4 :	5 6	3 7	8		15	16		23	24		55	56		63

The read response is sent to the UART host using address code %11111111. The transmitter becomes switched inactive four bit times after the last bit is sent.

Address %11111111 is reserved for read accesses going to the UART host. A node cannot use this address.

CRC Calculation

An 8-bit CRC polynomial is used for checking both read and write access. It allows detection of up to eight single-bit errors. The CRC8-ATM polynomial with an initial value of zero is applied LSB to MSB, including the sync and addressing byte. The sync nibble is assumed to be always correct. The TMC5240 responds only to correctly transmitted datagrams containing its own node address. It increases its datagram counter for each correctly received write access datagram.

$$CRC = x^8 + x^2 + x^1 + x^0$$

Serial calculation example

CRC = (CRC << 1) OR (CRC.7 XOR CRC.1 XOR CRC.0 XOR [new incoming bit])

C-Code Example for CRC Calculation

```
void swuart calcCRC(UCHAR* datagram, UCHAR datagramLength)
 int i,j;
 UCHAR* crc = datagram + (datagramLength-1); // CRC located in last byte of message
 UCHAR currentByte:
 *crc = 0:
 for (i = 0; i<(datagramLength-1); i++) { // Execute for all bytes of a message
  currentByte = datagram[i];
                                      // Retrieve a byte to be sent from Array
  for (j = 0; j < 8; j++) {
   if ((*crc >> 7) ^ (currentByte&0x01)) // update CRC based result of XOR operation
     *crc = (*crc << 1) ^ 0x07;
   }
   else
     *crc = (*crc << 1);
   currentByte = currentByte >> 1;
  } // for CRC bit
 } // for message byte
```

UART Signals

The UART interface on the TMC5240 comprises five signals. In UART mode, each node checks the single-wire pin DIAG1/SW for correctly received datagrams with its own address continuously. The pin is switched as input during this time. It adapts to the baud rate based on the sync nibble, as described earlier. In case of a read access, it switches on its output driver on DIAG1/SW and sends its response using the same baud rate.

Table 7. TMC5240 UART Interface Signals

SIGNAL	DESCRIPTION						
DIAG1/SW	Data input and output						
CSN/AD2	Bit 2 of UART address increment (+4)						
SCK/AD1	Bit 1 of UART address increment (+2)						
SDI/AD0	Bit 0 of UART address increment (+1), tie to NAO of previous IC in chain						
SDO/NAO	NAO pin for chained sequential addressing scheme (reset default = high)						

Addressing Multiple Nodes

If only one or up to eight TMC5240 are addressed by a host using a single UART bus interface, a simple hardware address selection can be used. The individual UART node addresses are set by connecting the UART address pins (SDI, SCK, CSN) to V_{CC} IO and GND.

If more than eight nodes need to be connected to the same UART bus, then a different approach must be used. This approach can address up to 255 nodes by using the output NAO (SDO) as a selection pin for the bit 0 address pin of the next device. Proceed as follows:

- Tie all address pins as well as SDI/AD0 of your first TMC5240 to GND.
- Connect SDO/NAO output of the first TMC5240 to the next node's address[0] pin (SDI/AD0). Connect further nodes
 in the same fashion.
- Now, the first node responds to address 0. Following nodes are set to address 1.
- Program the first TMC5240 to its specific node address. Note: Once a node is initialized with its node address, its SDO/NAO output which is tied to the next nodes' address[0] pin (SDI/AD0) has to be programmed to logic 0 in order to differentiate the next node from all following nodes.
- Now, the second node is accessible and can get its specific node address. Further nodes can be programmed to their specific node addresses sequentially.

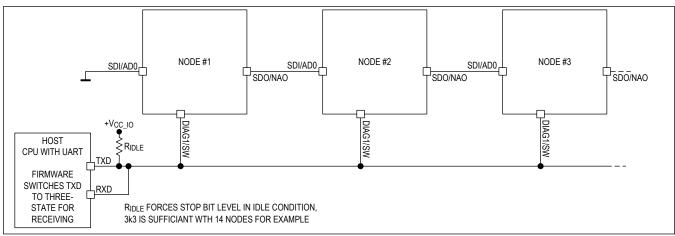


Figure 5. UART Daisy-Chaining Example

Table 8. UART Example for Addressing up to 255 Nodes

PHASE	NODE #1	NODE #2	NODE #3
Addressing phase 1	address 0, NAO is high	address 1	address 1
Addressing phase 2	program to address 254 & set NAO low	address 0, NAO is high	address 1
Addressing phase 3	address 254	program to address 253 & set NAO low	address 0
Addressing phase 4	address 254	address 253	program to address 252 & set NAO low
Addressing phase x	continue procedure		

StealthChop2

StealthChop2 is an extremely quiet mode of operation for stepper motors. It is based on a voltage mode PWM. In case of standstill and at low velocities, the motor is absolutely noiseless. Thus, StealthChop2-operated stepper motor applications are very suitable for indoor or home use. The motor operates absolutely free of vibration at low velocities.

With StealthChop, the motor current is applied by driving a certain effective voltage into the coil, using a voltage mode PWM. With the enhanced StealthChop2, the driver automatically adapts to the application for best performance. No more configurations are required. Optional configuration allows for tuning the setting in special cases, or for setting initial values for the automatic adaptation algorithm. For high velocity drives, SpreadCycle should be considered in combination with StealthChop2.

Operate the motor within your application when exploring StealthChop2. Motor performance often is better with a mechanical load because it prevents the motor from stalling due to mechanical oscillations which can occur without load.

Automatic Tuning

StealthChop2 integrates an automatic tuning (AT) procedure, which adapts the most important operating parameters to the motor automatically. This way, StealthChop2 allows high motor dynamics and supports powering down the motor to very low currents. Just two steps have to be taken into account for best results: Start with the motor in standstill, but powered with nominal run current (AT#1). Move the motor at a medium velocity, e.g., as part of a homing procedure (AT#2). The flowchart in the next figure shows the tuning procedure.

Table 9. Constraints and Requirements for StealthChop2 Autotuning AT#1 and AT#2

STEP	PARAMETER	CONDITIONS	REQUIRED DURATION
AT#1	PWM_ OFS_AUTO	 Motor in standstill and actual current scale (CS) is identical to run current (IRUN). If standstill reduction is enabled, an initial step pulse switches the drive back to run current, or set IHOLD to IRUN. Pin V_S at operating level. 	≤ 2 ²⁰ + 2 x 2 ¹⁸ t _{CLK} , ≤ 130ms (with internal clock)
AT#2	PWM_ GRAD_AUTO	Move motor at a velocity, where a significant amount of back EMF is generated and where the full run current can be reached. Conditions: 1.5 x PWM_OFS_AUTO x (IRUN+1)/32 < PWM_SCALE_SUM < 4 x PWM_OFS_AUTO x (IRUN+1)/32 PWM_SCALE_SUM < 255 Hint: A typical range is 60RPM to 300RPM.	8 fullsteps are required for a change of ±1. For a typical motor with <i>PWM_GRAD_AUTO</i> optimum at 50 or less, up to 400 fullsteps are required when starting from default value 0.

Hint:

Determine best conditions for automatic tuning with the evaluation board.

Use application-specific parameters for *PWM_GRAD* and *PWM_OFS* for initialization in firmware to provide initial tuning parameters.

Monitor PWM_SCALE_AUTO going down to zero during the constant velocity phase in AT#2 tuning. This indicates a successful tuning.

Attention:

Operating in StealthChop2 without proper tuning can lead to high motor currents during a deceleration ramp, especially with low resistive motors and fast deceleration settings. Follow the automatic tuning process and check optimum tuning conditions using the evaluation board. It is recommended to use an initial value for settings *PWM_OFS* and *PWM_GRAD* determined per motor type.

Modifying GLOBALSCALER or V_S voltage invalidates the result of the automatic tuning process. Motor current regulation cannot compensate significant changes until next AT#1 phase. Automatic tuning adapts to changed conditions whenever AT#1 and AT#2 conditions are fulfilled in the later operation.

StealthChop2 Options

In order to match the motor current to a certain level, the effective PWM voltage becomes scaled depending on the actual motor velocity. Several additional factors influence the required voltage level to drive the motor at the target current: The motor resistance, its back EMF (e.g., directly proportional to its velocity) as well as the actual level of the supply voltage. Two modes of PWM regulation are provided: The automatic tuning mode (AT) using current feedback (*pwm_autoscale* = 1, *pwm_autograd* = 1) and a feed forward velocity-controlled mode (*pwm_autoscale* = 0). The feed forward velocity-

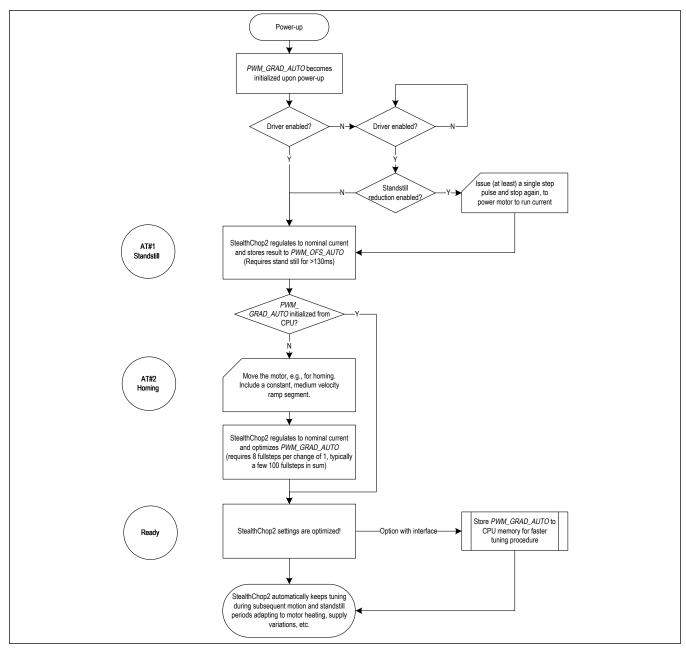


Figure 6. StealthChop2 Automatic Tuning Procedure

controlled mode does not react to a change of the supply voltage or to events like a motor stall, but it provides very stable amplitude. It does not use or require any means of current measurement. This is perfect when motor type and supply voltage are well known. Therefore, we recommend the automatic mode, unless current regulation is not satisfying in the given operating conditions.

It is recommended to use application-specific initial tuning parameters, fitting the motor type and supply voltage. Additionally, operate in automatic tuning mode in order to respond to parameter change, e.g., due to motor heat-up or change of supply voltage.

Non-automatic mode (*pwm_autoscale = 0*) should be taken into account only with well-known motor and operating conditions. In this case, careful programming via the interface is required. The operating parameters *PWM_GRAD* and *PWM_OFS* can be determined in automatic tuning mode initially.

The StealthChop2 PWM frequency can be chosen in four steps in order to adapt the frequency divider to the frequency of the clock source. A setting in the range of 20kHz–50kHz is good for most applications. It balances low current ripple and good higher velocity performance vs. dynamic power dissipation.

Table 10. Choice of PWM Fred	quency for StealthCho	p2 (Bold Font = Recommended)

CLOCK FREQUENCY fCLK	PWM_FREQ = %00 f _{PWM} = 2/1024 f _{CLK}	PWM_FREQ = %01 f _{PWM} = 2/683 f _{CLK}	PWM_FREQ = %10 f _{PWM} = 2/512 f _{CLK}	PWM_FREQ = %11 f _{PWM} = 2/410 f _{CLK}
20MHz	39.1kHz	58.1kHz	78.1kHz	97.6kHz
18MHz	35.2kHz	52.7kHz	70.3kHz	87.8kHz
16MHz	31.3kHz	46.9kHz	62.5kHz	78.0kHz
12.5MHz (internal)	24.4kHz	36.6kHz	48.8kHz	61.0kHz
10MHz	19.5kHz	29.3kHz	39.1kHz	48.8kHz
8MHz	15.6kHz	23.4kHz	31.2kHz	39.0kHz

StealthChop2 Current Regulator

In StealthChop2 voltage PWM mode, the autoscaling function (*pwm_autoscale* = 1, *pwm_auto_grad* = 1) regulates the motor current to the desired current setting. Automatic scaling is used as part of the AT process, and for subsequent tracking of changes within the motor parameters. The driver measures the motor current during the chopper on time and uses a proportional regulator to regulate *PWM_SCALE_AUTO* in order match the motor current to the target current. *PWM_REG* is the proportionality coefficient for this regulator. Basically, the proportionality coefficient should be as small as possible in order to get a stable and soft regulation behavior, but it must be large enough to allow the driver to quickly react to changes caused by variation of the motor target current (e.g., change of V_{REF}). During initial tuning step AT#2, *PWM_REG* also compensates for the change of motor velocity. Therefore, a high acceleration during AT#2 requires a higher setting of *PWM_REG*. With careful selection of homing velocity and acceleration, a minimum setting of the regulation gradient often is sufficient (*PWM_REG* = 1). *PWM_REG* setting should be optimized for the fastest required acceleration and deceleration ramp (compare the following two figures).

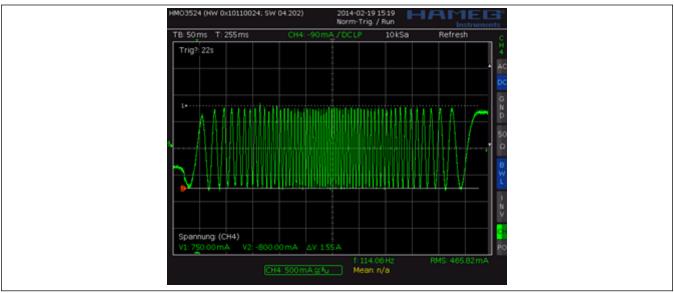


Figure 7. StealthChop2: Good Setting for PWM_REG

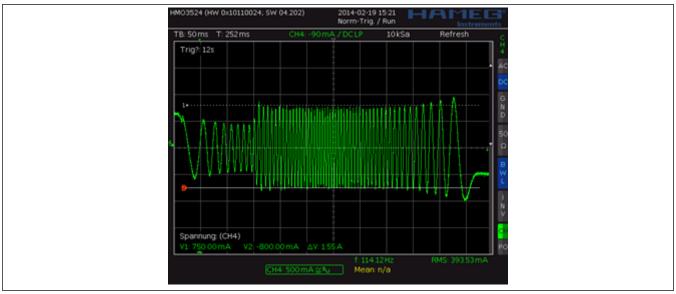


Figure 8. StealthChop2: Too Small Setting for PWM_REG during AT#2

The quality of the setting *PWM_REG* in phase AT#2 and the finished automatic tuning procedure (or non-automatic settings for *PWM_OFS* and *PWM_GRAD*) can be examined when monitoring motor current during an acceleration phase as shown in the next figure.

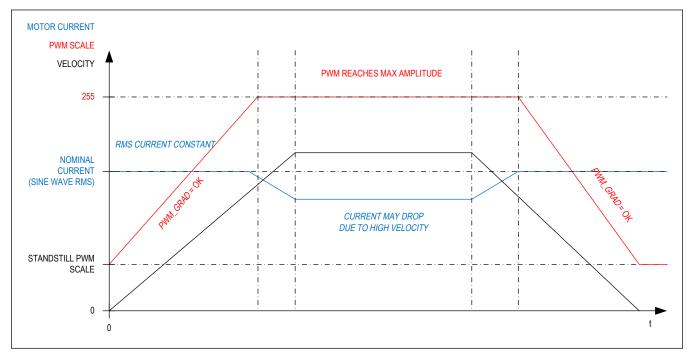


Figure 9. Successfully Determined PWM_GRAD(_AUTO) and PWM_OFS(_AUTO)

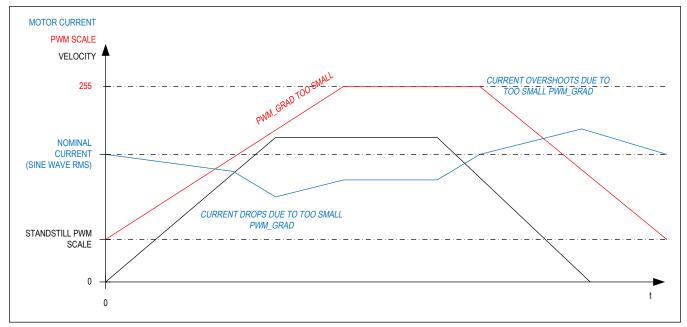


Figure 10. Example for Too Small PWM_GRAD Setting

Lower Current Limit

Depending on the setting of <code>pwm_meas_sd_enable</code>, the StealthChop2 current regulator principle imposes a lower limit for motor current regulation. As the coil current is measured during chopper on phase only <code>(pwm_meas_sd_enable = 0)</code>, a minimum chopper duty cycle allowing coil current regulation is given by the blank time as set by <code>TBL</code> and by the chopper frequency setting. Therefore, the motor-specific minimum coil current in StealthChop2 autoscaling mode rises with the supply voltage and with the chopper frequency. A lower blanking time allows a lower current limit. It is important for the correct determination of <code>PWM_OFS_AUTO</code>, that in AT#1 the run current, <code>GLOBALSCALER</code>, and <code>IRUN</code> is well within the regulation range. Lower currents (e.g., for standstill power down) are automatically realized based on <code>PWM_OFS_AUTO</code> and <code>PWM_GRAD_AUTO</code> respectively based on <code>PWM_OFS</code> and <code>PWM_GRAD</code> with non-automatic current scaling. The freewheeling option allows going to zero motor current.

Lower motor coil current limit for StealthChop2 automatic tuning (pwm_meas_sd_enable = 0) :

$$I_{\text{LowerLimit}} = t_{\text{BLANK}} \times f_{\text{PWM}} \times \frac{V_{\text{S}}}{R_{\text{COIL}}}$$

With V_S being the motor supply voltage and R_{COIL} the motor coil resistance.

 $I_{LowerLimit}$ can be treated as a rule-of-thumb value for the minimum nominal *IRUN* motor current setting. In case where the lower limit is not sufficient to reach the desired setting be sure to set $pwm_meas_sd_enable = 1$.

f_{PWM} is the chopper frequency as determined by setting *PWM_FREQ*.

Example: A motor has a coil resistance of 5Ω , the supply voltage is 24V. With TBL = %01 and $PWM_FREQ = \%00$, t_{BLANK} is 24 clock cycles, t_{PWM} is 2/(1024 clock cycles):

$$I_{\text{LowerLimit}} = 24t_{\text{CLK}} \times \frac{2}{1024t_{\text{CLK}}} \times \frac{24V}{5\Omega} = \frac{24}{512} \times \frac{24V}{5\Omega} = 225 \text{mA}$$

This means the motor target current for automatic tuning must be 225mA or more, taking into account all relevant settings. This lower current limit also applies for modification of the motor current through the *GLOBALSCALER*.

Attention:

For automatic tuning, a lower coil current limit applies.

IRUN ≥ 8: Current settings for IRUN below 8 do not work with automatic tuning.

I_{LOWERLIMIT}: Depending on the setting of bit *pwm_meas_sd_enable* (in register PWM_CONF[22]) for automatic tuning, a lower coil current limit applies. The motor current in automatic tuning phase AT#1 must exceed this lower limit. Calculate I_{LOWERLIMIT} or measure it using a current probe. Setting the motor run-current or hold-current below the lower current limit during operation by modifying *IRUN* and *IHOLD* is possible after successful automatic tuning. The lower current limit also limits the capability of the driver to respond to changes of *GLOBALSCALER*.

The lower current limit also limits the capability of the driver to respond to changes of GLOBALSCALER.

To overcome the lower limit set <code>pwm_meas_sd_enable = 1</code>. This allows the IC to additionally measure coil current in the slow decay phase.

Velocity-Based Scaling

Velocity-based scaling scales the StealthChop2 amplitude based on the time between every two steps, e.g., based on *TSTEP*, measured in clock cycles. This concept basically does not require a current measurement, because no regulation loop is necessary. A pure velocity-based scaling is available via programming, only, when setting *pwm_autoscale* = 0. The basic idea is to have a linear approximation of the voltage required to drive the target current into the motor. The stepper motor has a certain coil resistance and thus needs a certain voltage amplitude to yield a target current based on the basic formula I = U/R. With R being the coil resistance, U the supply voltage scaled by the PWM value, the current I results. The initial value for *PWM_OFS* can be calculated:

$$PWM_OFS = \frac{374 \times R_{COIL} \times I_{COIL}}{V_{S}}$$

With VS the motor supply voltage and ICOIL the target RMS current

The effective PWM voltage U_{PWM} (1/SQRT(2) x peak value) results considering the 8-bit resolution and 248 sine wave peak for the actual PWM amplitude shown as PWM_SCALE :

$$U_{\text{PWM}} = V_{\text{S}} \times \frac{\text{PWM_SCALE}}{256} \times \frac{248}{256} \times \frac{1}{\sqrt{2}} = V_{\text{S}} \times \frac{\text{PWM_SCALE}}{374}$$

With rising motor velocity, the motor generates an increasing back EMF voltage. The back EMF voltage is proportional to the motor velocity. It reduces the PWM voltage effective at the coil resistance and thus current decreases. The TMC5240 provides a second velocity dependent factor (*PWM_GRAD*) to compensate for this. The overall effective PWM amplitude (*PWM_SCALE_SUM*) in this mode automatically is calculated in dependence of the microstep frequency as:

$$PWM_SCALE_SUM = PWM_OFSx\Big(\frac{CS_ACTUAL + 1}{32}\Big) + PWM_GRAD \times \frac{256}{TSTEP}$$

CS_ACTUAL takes into account the actual current scaling as defined by IHOLD and IRUN or respectively by CoolStep.

With f_{STEP} being the microstep frequency for 256 microstep resolution equivalent and f_{CLK} the clock frequency supplied to the driver or the actual internal frequency.

As a first approximation, the back EMF subtracts from the supply voltage and thus the effective current amplitude decreases. This way, a first approximation for *PWM_GRAD* setting can be calculated:

PWM_GRAD =
$$C_{\text{BEMF}} \left[\frac{V_{\text{rad}}}{s} \right] \times 2\pi \times \frac{f_{\text{Clk}} \times 1.46}{V_M \times \text{MSPR}}$$

C_{BEMF} is the back EMF constant of the motor in Volts per radian/second.

MSPR is the number of microsteps per rotation related to 1/256 microstep resolution, e.g., 51200 = 256 microsteps multiplied by 200 fullsteps for a 1.8° motor.

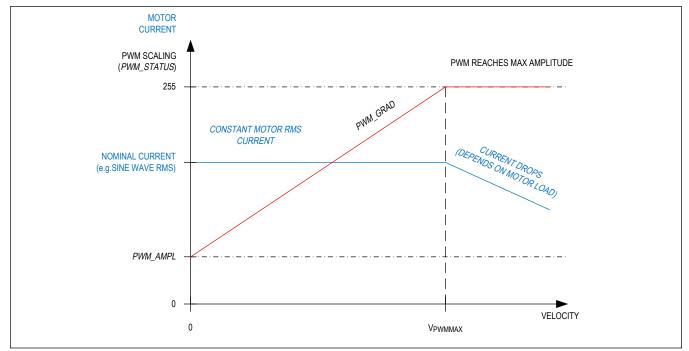


Figure 11. Velocity-Based PWM Scaling (pwm_autoscale = 0)

The values for *PWM_OFS* and *PWM_GRAD* can easily be optimized by tracing the motor current with a current probe on the oscilloscope. Alternatively, automatic tuning determines these values and they can be read out from *PWM_OFS_AUTO* and *PWM_GRAD_AUTO*.

Understanding the back EMF constant of a motor:

he back EMF constant is the voltage a motor generates when turned with a certain velocity. Often motor datasheets do not specify this value, as it can be deducted from motor torque and coil current rating. Within SI units, the numeric value of the back EMF constant C_{BEMF} has the same numeric value as the numeric value of the torque constant. For example, a motor with a torque constant of 1 Nm/A would have a C_{BEMF} of 1V/rad/s. Turning such a motor with 1rps (1rps = 1 revolution per second = 6.28 rad/s) generates a back EMF voltage of 6.28V. Thus, the back EMF constant can be calculated as:

$$C_{\mathsf{BEMF}} \begin{bmatrix} v \\ \frac{\mathsf{rad}}{\mathsf{s}} \end{bmatrix} = \frac{\mathsf{HoldingTorque[Nm]}}{2 \times l_{\mathsf{COILNOM}}[A]}$$

I_{COILNOM} is the motor's rated RMS phase current for the specified holding torque.

HoldingTorque is the motor specific holding torque, e.g., the torque reached at $I_{COILNOM}$ on both coils. The torque unit is [Nm] where 1Nm = 100Ncm = 1000mNm.

The voltage is valid as RMS voltage per coil, thus the nominal current is multiplied by 2 in this formula, since the nominal current assumes a fullstep position, with two coils operating.

Combining StealthChop2 and SpreadCycle

For applications requiring high velocity motion, SpreadCycle may bring more stable operation in the upper velocity range. To combine no-noise operation with highest dynamic performance, the TMC5240 allows combining StealthChop2 and SpreadCycle based on a velocity threshold. With this, StealthChop2 is only active at low velocities.

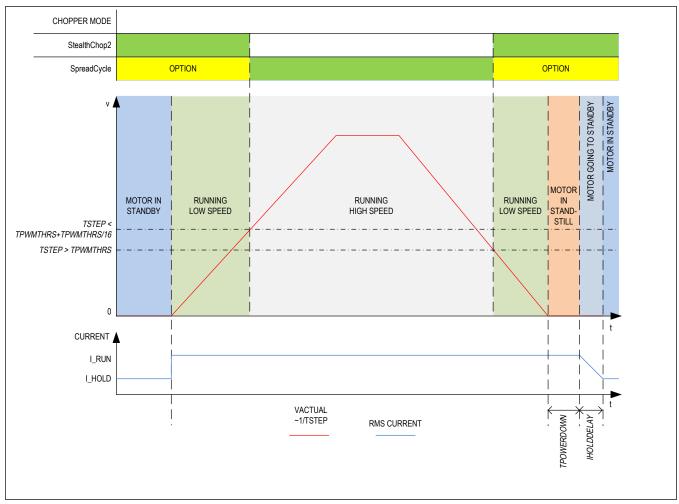


Figure 12. TPWMTHRS for Optional Switching to SpreadCycle

As a first step, both chopper principles should be parameterized and optimized individually.

In a next step, the switchover velocity has to be defined. For example, StealthChop2 operation is used for precise low speed positioning, while SpreadCycle shall be used for highly dynamic motion. TPWMTHRS determines this transition velocity. Read out TSTEP when moving at the desired velocity and program the resulting value to TPWMTHRS. Use a low transfer velocity to avoid a jerk at the switching point.

Jerkless switching to SpreadCycle:

A jerk occurs when switching at higher velocities, because the back-EMF of the motor (which rises with the velocity) causes a phase shift of up to 90° between motor voltage and motor current. So when switching at higher velocities between voltage PWM and current PWM mode, this jerk occurs with increased intensity. A high jerk may even produce a temporary overcurrent condition (depending on the motor coil resistance). At low velocities (e.g., 1 to a few 10RPM), it can be completely neglected for most motors. Therefore, consider the jerk when switching the driver between SpreadCycle and StealthChop2. With automatic switching controlled by TPWMTHRS, the driver can automatically eliminate the jerk by using StallGuard4 to determine the phase shift. It applies the same phase shift to SpreadCycle until the velocity falls back below the switching threshold. Set flag SG4 THRS.sg angle offset to enable this function.

Set TPWMTHRS zero if you want to work with StealthChop2 only.

Analog Devices | 36 www.analog.com

When enabling the StealthChop2 mode the first time using automatic current regulation, the motor must be at standstill in order to allow a proper current regulation. When the drive switches to SpreadCycle at a higher velocity, StealthChop2 logic stores the last current regulation setting until the motor returns to a lower velocity again. This way, the regulation has a known starting point when returning to a lower velocity, where StealthChop2 becomes re-enabled. Therefore, neither the velocity threshold nor the supply voltage must be considerably changed during the phase while the chopper is switched to a different mode because otherwise, the motor might lose steps or the instantaneous current might be too high or too low.

A motor stall or a sudden change in the motor velocity may lead to the driver detecting a short circuit or to a state of automatic current regulation, from which it cannot recover. Clear the error flags and restart the motor from zero velocity to recover from this situation.

Start the motor from standstill when switching on StealthChop2 the first time and keep it stopped for at least 128 chopper periods to allow StealthChop2 to do initial standstill current control.

Flags in StealthChop2

As StealthChop2 uses voltage mode driving, status flags based on current measurement respond slower, respectively the driver reacts delayed to sudden changes of back EMF, like on a motor stall.

A motor stall, or abrupt stop of the motion during operation in StealthChop2 can lead to an overcurrent condition. Depending on the previous motor velocity, and on the coil resistance of the motor, it significantly increases motor current for a time of several 10ms. With low velocities, where the back EMF is just a fraction of the supply voltage, there is no danger of triggering the short detection.

Switch the driver stage to the lowest current range (DRV_CONF.current_range) supporting your motor. This automatically adapts the overcurrent threshold in three steps and thus reduces peak currents in case of a sudden motor stall.

Open Load Flags

In StealthChop2 mode the status information is different compared to the cycle-by-cycle regulated SpreadCycle mode for the flags OLA and OLB.

- If OLA and OLB are not set, this indicates that the current regulation is reaching the nominal current on both coils.
- If constant OLA and OLB flags, this indicates an interrupted motor coil.
- If flickering OLA and OLB, this indicates differences in motor coil resistance exceeding roughly 5%.
- One or both flags are active, if the current regulation did not succeed in scaling up to the full target current within the last few fullsteps (because no motor is attached or a high velocity exceeds the PWM limit).

If desired, do an on-demand open load test using the SpreadCycle chopper as it delivers the safest result. With StealthChop2, *PWM_SCALE_SUM* can be checked to detect the correct coil resistance.

PWM_SCALE_SUM Informs about the Motor State

Information about the motor state is available with automatic scaling by reading out *PWM_SCALE_SUM*. As this parameter reflects the actual voltage required to drive the target current into the motor, it depends on several factors: motor load, coil resistance, supply voltage, and current setting. Therefore, an evaluation of the *PWM_SCALE_SUM* value allows checking the motor operation point. When reaching the limit (1023), the current regulator cannot sustain the full motor current, e.g., due to a permanent or temporary drop in supply voltage.

Freewheeling and Passive Braking

StealthChop2 provides different options for motor standstill. These options can be enabled by setting the standstill current *IHOLD* to zero and choosing the desired option using the *FREEWHEEL* setting. The desired option becomes enabled after a time period specified by *TPOWERDOWN* and *IHOLDDELAY*. Current regulation becomes frozen once the motor target current is at zero current in order to ensure a quick startup. With the freewheeling options, both freewheeling and passive braking can be realized. Passive braking is an effective eddy current motor braking, which consumes a minimum amount of energy because no active current is driven into the coils. However, passive braking allows slow turning of the motor when a continuous torque is applied.

Parameters Controlling StealthChop2

The following table contains all parameters related to the StealthChop2 chopper mode.

Table 11. Parameters Controlling StealthChop2

PARAMETER	DESCRIPTION	SETTING	COMMENT
en_pwm_ mode	General enable for use of StealthChop2 (register GCONF).	0	StealthChop2 disabled. SpreadCycle active.
	Default = 0	1	StealthChop2 enabled (depending on velocity thresholds). Enable only while in stand-still and at IHOLD=nominal IRUN current.
pwm_meas_sd_enable	Control of current measurement during slow decay phase. Default = 0		Current measured during on-phases only. Lower current limit applies.
		1	Current measured during slow decay phases additionally to overcome lower current limit.
pwm_dis_reg_stst	This option eliminates any regulation noise during standstill.	0	Current regulation always on.
	Default = 0	1	Disable current regulation when motor is in standstill and current is reduced (less than IRUN).
TPWMTHRS	Specifies the upper velocity for operation in StealthChop2. Enter the TSTEP reading (time between two microsteps) when operating at the desired threshold velocity. Default = 0	0 1048575	StealthChop2 is disabled if TSTEP falls under TPWMTHRS
PWM_LIM	Limiting value for limiting the current jerk when switching from SpreadCycle to StealthChop2. Reduce the value to yield a lower current jerk. Default = 12	0 15	Upper four bits of 8 bit amplitude limit
pwm_	Enable automatic current scaling using current measurement. If	0	Forward controlled mode
autoscale	off, use forward controlled velocity-based mode. Default = 1	1	Automatic scaling with current regulator
pwm_ autograd	Enable automatic tuning of PWM_GRAD_AUTO	0	disable, use PWM_GRAD from register instead
	Default = 1	1	enable
PWM_FREQ	PWM frequency selection. Use the lowest setting giving good	0	f _{PWM} = 2/1024 f _{CLK}
	results. The frequency measured at each of the chopper outputs is half of the effective chopper frequency f _{PWM} .	1	f _{PWM} = 2/683 f _{CLK}
	To hair of the effective effector frequency freem.	2	f _{PWM} = 2/512 f _{CLK}
	Default = 0	3	f _{PWM} = 2/410 f _{CLK}
PWM_REG	User defined PWM amplitude regulation loop P-coefficient. A higher value leads to a higher adaptation speed when pwm_autoscale = 1.	1 15	Results in 0.5 to 7.5 steps for PWM_SCALE_AUTO regulator per fullstep
	Default = 4		

Table 11. Parameters Controlling StealthChop2 (continued)

PWM_OFS	User defined PWM amplitude (offset) for velocity-based scaling and initialization value for automatic tuning of PWM_OFFS_AUTO.	0 255	PWM_OFS = 0 disables linear current scaling based on current setting
	Default = 0x1D		
PWM_GRAD	User defined PWM amplitude (gradient) for velocity-based scaling and initialization value for automatic tuning of PWM_GRAD_AUTO.	0 255	
	Default = 0		
PWM_SCALE_SUM	Actual PWM scaling as determined by the actual settings. This value is shown in higher precision (10 Bit) compared to 8 bit for PWM_GRAD/OFS_AUTO values.	0 1023	
	Default = 0		
FREEWHEEL	Standstill option when motor current setting is zero (I_HOLD =	0	Normal operation
	0). Only available with StealthChop2 enabled. The freewheeling option makes the motor easily movable, while both coil short options realize a passive brake.	1	Freewheeling
		2	Coil short via LS drivers
	Default = 0	3	Coil short via HS drivers
PWM_SCALE _AUTO	Read back of the actual StealthChop2 voltage PWM scaling correction as determined by the current regulator. Shall regulate close to 0 during tuning.	-255 255	(read-only) Scaling value becomes frozen when operating in SpreadCycle
	Default = 0		
PWM_GRAD_AUTO PWM_OFS_AUTO	Allow monitoring of the automatic tuning and determination of initial values for PWM_OFS and PWM_GRAD.	0 255	(read-only)
	Default = 0		
TOFF	General enable for the motor driver, the actual value does not	0	Driver off
	influence StealthChop2	1 15	Driver enabled
	Default = 0		
TBL	Comparator blank time. Choose a setting of 1 or 2 for typical	0	16 t _{CLK}
	applications. For higher capacitive loads, 3 may be required. Lower settings allow StealthChop2 to regulate down to lower coil current values.	1	24 t _{CLK}
		2	36 t _{CLK}
	Default = 2	3	54 t _{CLK}

SpreadCycle and Classic Chopper

While StealthChop2 is a voltage mode PWM controlled chopper, SpreadCycle is a cycle-by-cycle current control. Therefore, it can react extremely fast to changes in motor velocity or motor load. The currents through both motor coils are controlled using choppers. The choppers work independently of each other. In the following figure, the different chopper phases are shown.

Analog Devices | 39 www.analog.com

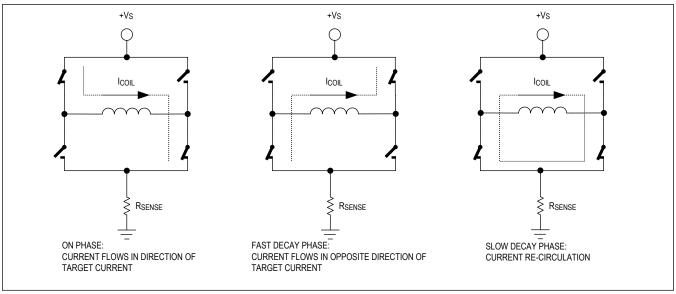


Figure 13. Typical Chopper Decay Phases

Although the current could be regulated using only on phases and fast decay phases, insertion of the slow decay phase is important to reduce electrical losses and current ripple in the motor. The duration of the slow decay phase is specified in a control parameter and sets an upper limit on the chopper frequency. The current comparator measures coil current during phases when the current flows through exactly one lowside transistor, but not during the slow decay phase. The slow decay phase is terminated by a timer. The on phase is terminated by the comparator when the current through the coil reaches the target current. The fast decay phase may be terminated by either the comparator or another timer.

When the coil current is switched, spikes in the $R_{DS(ON)}$ -based current measurement occur due to charging and discharging parasitic capacitance. During this time, typically one or two microseconds, the current cannot be measured. Blanking is the time when the input to the comparator is masked to block these spikes.

There are two cycle-by-cycle chopper modes available: a new high-performance chopper algorithm called SpreadCycle and a proven constant off-time chopper mode. The constant off-time mode cycles through three phases: on, fast decay, and slow decay. The SpreadCycle mode cycles through four phases: on, slow decay, fast decay, and a second slow decay.

The chopper frequency is an important parameter for a chopped motor driver. A too low frequency might generate audible noise. A higher frequency reduces current ripple in the motor, but with a too high frequency magnetic losses may rise. Also power dissipation in the driver rises with increasing frequency due to the increased influence of switching slopes causing dynamic dissipation. Therefore, a compromise needs to be found. Most motors are optimally working in a frequency range of 25kHz to 40kHz. The chopper frequency is influenced by a number of parameter settings as well as by the motor inductivity and supply voltage.

Hint: A chopper frequency in the range of 25kHz to 40kHz gives a good result for most motors when using SpreadCycle. A higher frequency leads to increased switching losses.

Table 12. Parameters Controlling SpreadCycle and Classic Constant Off Time Chopper

PARAMETER DESCRIPTION SETTING	COMMENT
-------------------------------	---------

Table 12. Parameters Controlling SpreadCycle and Classic Constant Off Time Chopper (continued)

TOFF	Sets the slow decay time (off time). This setting also limits the maximum	0	chopper off
	chopper frequency. For operation with StealthChop2, this parameter is not used, but it is required to enable the motor. In case of operation with StealthChop2 only, any setting is OK. Setting this parameter to zero completely disables all driver transistors and the motor can free-wheel. Default = 0	115	off time setting N _{CLK} = 24 + 32 x <i>TOFF</i> (1 works with minimum blank time of 24 clocks)
TBL	Selects the comparator <i>blank time</i> . This time needs to safely cover the switching event and the duration of the ringing. For most applications, a setting of 1 or 2 is good. For highly capacitive loads, e.g., when filter networks are used, a setting of 2 or 3 is required.		16 t _{CLK} Restriction: Use this setting only in combination with external clock oscillator <=8MHz
Default = 2	Default = 2	1	24 t _{CLK} Restriction: May be used with internal clock, or if external clock frequency <=13MHz is applied.
		2	36 t _{CLK}
		3	54 t _{CLK}
chm	Selection of the chopper mode	0	SpreadCycle
	Default = 0	1	classic const. off time

SpreadCycle Chopper

The SpreadCycle (patented) chopper algorithm is a precise and simple to use chopper mode which automatically determines the optimum length for the fast-decay phase. The SpreadCycle provides superior microstepping quality even with default settings. Several parameters are available to optimize the chopper to the application.

Each chopper cycle comprises an on phase, a slow decay phase, a fast decay phase and a second slow decay phase. The two slow decay phases and the two blank times per chopper cycle put an upper limit to the chopper frequency. The slow decay phases typically make up for about 30%–70% of the chopper cycle in standstill and are important for low motor and driver power dissipation.

Example calculation of a starting value for the slow decay time TOFF:

- Target Chopper frequency: 25kHz
 - $t_{OFF} = 1/25 \text{kHz} \times 50/100 \times 1/2 = 10 \,\mu \text{s}$
 - Assumption: Two slow decay cycles make up for 50% of overall chopper cycle time.
- For the *TOFF* setting this means: TOFF = $(t_{OFF} \times f_{CLK} 12)/32$
- With 12MHz clock this results in TOFF = 3.4, which would require a setting of TOFF = 3 or 4
- With 16MHz clock this results in TOFF = 4.6, which would require a setting of TOFF = 4 or 5

Hint: Highest motor velocities sometimes benefit from setting TOFF to 1 or 2 and a short TBL setting.

The hysteresis start setting forces the driver to introduce a minimum amount of current ripple into the motor coils. The current ripple must be higher than the current ripple which is caused by resistive losses in the motor in order to give best microstepping results. This allows the chopper to precisely regulate the current for both rising and falling target current. The time required to introduce the current ripple into the motor coil also reduces the chopper frequency. Therefore, a higher hysteresis setting leads to a lower chopper frequency. The motor inductance limits the ability of the chopper to follow a changing motor current. Further the duration of the on phase and the fast decay must be longer than the blanking

time, because the current comparator is disabled during blanking.

It is easiest to find the best setting by starting from a low hysteresis setting (e.g., *HSTRT* = 0, *HEND* = 0) and increasing *HSTRT*, until the motor runs smoothly at low velocity settings. This can best be checked when measuring the motor current with a current probe. Checking the sine wave shape near the zero transition shows a small ledge between both half waves in case the hysteresis setting is too small. At medium velocities (e.g., 100 fullsteps to 400 fullsteps per second), a too low hysteresis setting leads to increased humming and vibration of the motor. A too high hysteresis setting leads to reduced chopper frequency and increased chopper noise but does not yield any benefit for the wave shape.

As experiments show, the setting is quite independent of the motor because higher current motors typically also have a lower coil resistance. Therefore, choosing a low to medium default value for the hysteresis (for example, effective hysteresis = 4) normally fits most applications. The setting can be optimized by experimenting with the motor: A too low setting results in reduced microstep accuracy, while a too high setting leads to more chopper noise and motor power dissipation. When the fast decay time becomes slightly longer than the blanking time, the setting is optimum. You can reduce the off-time setting if this is hard to reach.

The hysteresis principle could in some cases lead to the chopper frequency becoming too low, e.g., when the coil resistance is high when compared to the supply voltage. This is avoided by splitting the hysteresis setting into a start setting (*HSTRT* + *HEND*) and an end setting (*HEND*). An automatic hysteresis decrementer (HDEC) interpolates between both settings, by decrementing the hysteresis value stepwise each 16 system clocks. At the beginning of each chopper cycle, the hysteresis begins with a value which is the sum of the start and the end values (*HSTRT* + *HEND*), and decrements during the cycle, until either the chopper cycle ends or the hysteresis end value (*HEND*) is reached. This way, the chopper frequency is stabilized at high amplitudes and low supply voltage situations, if the frequency gets too low. This avoids the frequency from reaching the audible range.

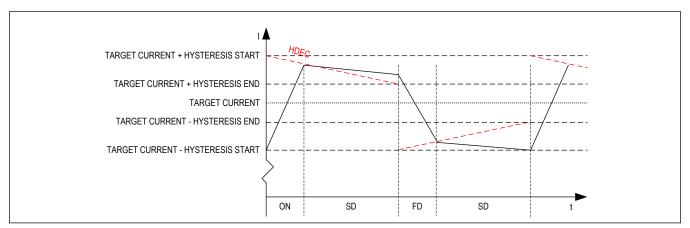


Figure 14. SpreadCycle Chopper Scheme Showing Coil Current during a Chopper Cycle

Table 13. SpreadCycle Mode Parameters

PARAMETER	DESCRIPTION	SETTING	COMMENT
HSTRT	Hysteresis start setting. This value is an offset from the hysteresis end value HEND. Default = 5	07	HSTRT = 18 This value adds to HEND.
HEND	Hysteresis end setting. Sets the hysteresis end value after a number of decrements. The sum HSTRT + HEND must be ≤16. At a current setting of max. 30 (amplitude reduced to 240), the sum is not limited.	02	-31: negative HEND
	Default = 2	3	0: zero HEND

Table 13. SpreadCycle Mode Parameters (continued)

	415	112: positive
		HEND

Even at HSTRT = 0 and HEND = 0, the TMC5240 sets a minimum hysteresis via analog circuitry.

Example:

A hysteresis of 4 has been chosen. You might decide to not use hysteresis decrement. In this case set:

HEND = 6 (sets an effective end value of 6 - 3 = 3) HSTRT = 0 (sets minimum hysteresis, e.g., 1: 3 + 1 = 4)

In order to take advantage of the variable hysteresis, we can set most of the value to the HSTRT, e.g., 4, and the remaining 1 to hysteresis end. The resulting configuration register values are as follows:

HEND = 0 (sets an effective end value of -3)

HSTRT = 6 (sets an effective start value of hysteresis end +7: 7 - 3 = 4)

Classic Constant Off Time Chopper

The classic constant off time chopper is an alternative to SpreadCycle. The constant off-time chopper uses a fixed-time fast decay following each on phase. While the duration of the on phase is determined by the chopper comparator, the fast decay time needs to be long enough for the driver to follow the falling slope of the sine wave, but it should not be so long that it causes excess motor current ripple and power dissipation. This can be tuned using an oscilloscope or evaluating motor smoothness at different velocities. A good starting value is a fast decay time setting similar to the slow decay time setting.

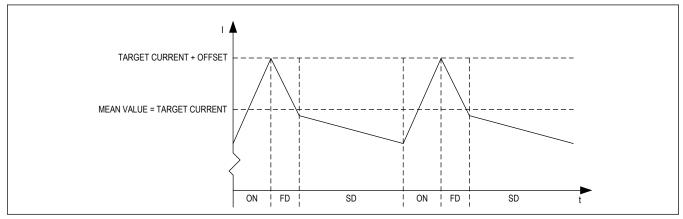


Figure 15. Classic Constant Off-Time Chopper with Offset Showing Coil Current

After tuning the fast decay time, the offset should be tuned for a smooth zero crossing. This is necessary because the fast decay phase makes the absolute value of the motor current lower than the target current (see Figures below). If the zero offset is too low, the motor stands still for a short moment during current zero crossing. If it is set too high, it makes a larger microstep. Typically, a positive offset setting is required for smoothest operation.

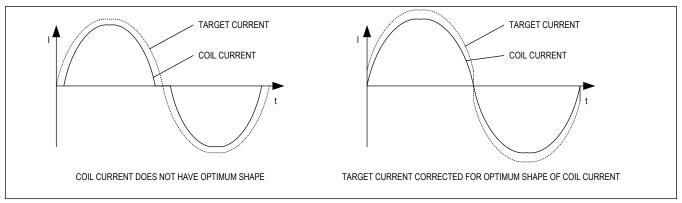


Figure 16. Zero Crossing with Classic Chopper and Correction Using Sine Wave Offset

Table 14. Parameters Controlling Constant Off-Time Chopper Mode

PARAMETER	DESCRIPTION	SETTING	COMMENT
TFD	Fast decay time setting. With CHM=1, these bits control the portion of fast decay		slow decay only
(fd3 & HSTRT)	for each chopper cycle. Default = 5	115	duration of fast decay phase
OFFSET (HEND)	Sine wave offset. With CHM=1, these bits control the sine wave offset. A positive offset corrects for zero crossing error.	02	negative offset: -31
	Default = 2	3	no offset: 0
	Delauit - 2	415	positive offset 112
current co	Selects usage of the <i>current comparator</i> for termination of the <i>fast decay</i> cycle. If current comparator is enabled, it terminates the fast decay cycle in case the current reaches a higher negative value than the actual positive value.		enable comparator termination of fast decay cycle
	Default = 0	1	end by time only

Integrated Current Sense

Non-dissipative current sensing is integrated in the TMC5240 (ICS). This feature eliminates the bulky external power resistors, which are normally required with external current sensing. The ICS results in a dramatic space and power saving compared with mainstream applications based on the external sense resistor. For optimum performance, the ICS individually measures $R_{DS(ON)}$ for each of the power MOSFETs taking into account individual MOSFET temperature to yield the best results.

Setting the Motor Current

The TMC5240 allows to set the motor phase current. The parameters given in the table below allow to adapt the current scaling as well as the current ramp up and ramp down.

Table 15. Parameters Controlling the Motor Current

PARAMETER	DESCRIPTION	SETTING	COMMENT
IRUN	Current scale when motor is running. Scales coil current values as taken from the internal sine wave table. For high precision motor operation, work with a current scaling factor in the range 16 to 31, because scaling down the current values reduces the effective microstep resolution by making microsteps coarser. This setting also controls the maximum current value set by CoolStep. Default = 31	031	scaling factor 1/32, 2/32, 32/32
11101.5			
IHOLD	Identical to IRUN, but for motor in standstill. Lower values <16 are OK with IHOLD in comparison to IRUN.		
	Default = 8		
controls the number of clock cycles for motor power down after TZERC	Allows smooth current reduction from run current to hold current. IHOLDDELAY controls the number of clock cycles for motor power down after TZEROWAIT in increments of 2 ¹⁸ clocks: 0 = instant power down, 115: Current reduction delay per	0	instant power down to IHOLD
	current step in multiple of 218 clocks.	115	1 x 2 ¹⁸ 15 x 2 ¹⁸
	Example: When using IRUN = 31 and IHOLD = 16, 15 current steps are required for hold current reduction. A IHOLDDELAY setting of 4 thus results in a power down time of $4 \times 15 \times 2^{18}$ clock cycles, e.g., roughly one second at 16MHz.		clocks per current decrement
	Default = 1		
IRUNDELAY	Controls the number of clock cycles for motor power up after start is detected.	0	instant power up to IRUN
	Allows smooth current increment upon start of a motion from hold current (IHOLD) to run current (IRUN). While a quick power-up is important to establish full motor torque, a small delay time helps to reduce acoustic noise and avoids a jump on the power supply current. Default = 4	115	Delay per current increment step in multiple of IRUNDELAY x 512 clocks

Setting the Full-Scale Current Range

The full scale current I_{FS} is a peak current setting.

The full-scale current is selected with an external reference resistor and 2 bits in the DRV CONF register.

A standard low-power resistor with 1% accuracy is sufficient.

Three different full-scale current ranges can be configured to adapt to different motor sizes and applications.

This is needed to benefit from a best possible current control resolution.

Therefore, connect a resistor from IREF to GND to set the full-scale chopping current IFS.

Bits 1..0 in DRV_CONF register define the typical ON resistance of the driver stage and further control the full-scale range based on the external resistor.

The equation below shows the full-scale current I_{FS} as a function of the R_{REF} resistor connected to pin I_{REF} and the DRV CONF register bit setting.

The proportionality constant K_{IFS} depends on the selected full-scale range setting (DRV_CONF register bits 1..0). The external resistor R_{REF} can range between $12k\Omega$ and $60k\Omega$.

 $I_{FS} = K_{IFS}(KV) / R_{REF}(k\Omega)$

Table 16. IFS Full-Scale Peak Range Settings (Example for $R_{RFF} = 12k\Omega$)

			• •	,
REGISTER CONFIG	K _{IFS}	MAX. FS SETTING TYPICAL		NOTES
DRV_CONF bits 10	(A x kΩ)	(PEAK)	R _{DS(ON)} (HS + LS)	NOTES
11	36	3A	0.23Ω	Optimized efficiency and extended operating range up to 3A _{FS} .
10	36	3A	0.23Ω	Optimized efficiency and extended operating range up to 3A _{FS} .
01	24	2A	0.27Ω	Reduced operating range up to 2A _{FS} . When high accuracy at lower current is required.
00 (default)	11.75	1A	0.40Ω	Reduced operating range up to 1A _{FS} . When high accuracy at low current is required.

The following table is a matrix of different reference resistor values (at pin IREF) versus the different pin configurations for the full-scale current. The resulting maximum RMS current is given in each cell.

Table 17. I_{FS} Full-Scale RMS Current in Ampere (A RMS) Based on DRV_CONF Bits 1..0 Setting and Different R_{REF}

	MAX FULL SCALE CURRENT (A RMS) BASED ON DRV_CONF BITS 10 SETTING AND K_{IFS} (A x $k\Omega$)			
R _{REF} (kΩ)	DRV_CONF BITS 10 = 11	DRV_CONF BITS 10 = 10	DRV_CONF BITS 10 = 01	DRV_CONF BITS 10 = 00
	K _{IFS} = 36	K _{IFS} = 36	K _{IFS} = 24	K _{IFS} = 11.75
12	2,12	2,12	1,41	0,69
15	1,70	1,70	1,13	0,55
18	1,41	1,41	0,94	0,46
22	1,16	1,16	0,77	0,38
27	0,94	0,94	0,63	0,31
33	0,77	0,77	0,51	0,25
39	0,65	0,65	0,44	0,21
47	0,54	0,54	0,36	0,18
56	0,45	0,45	0,30	0,15

Velocity-Based Mode Control

The TMC5240 allows the configuration of different chopper modes and modes of operation for optimum motor control. Depending on the motor load, the different modes can be optimized for lowest noise and high precision, highest dynamics, or maximum torque at highest velocity. Some of the features like CoolStep or StallGuard2 are useful in a limited velocity range. A number of velocity thresholds allow combining the different modes of operation within an application requiring a wide velocity range.

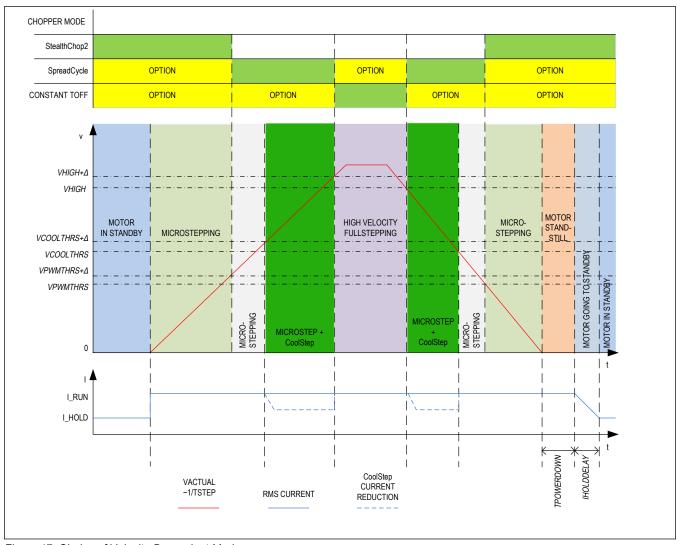


Figure 17. Choice of Velocity-Dependent Modes

The figure above shows all available thresholds and the required ordering. VPWMTHRS, VHIGH and VCOOLTHRS are determined by the settings *TPWMTHRS*, *THIGH* and *TCOOLTHRS*. The velocity is described by the time interval *TSTEP* between each two step pulses. This allows determination of the velocity when an external step source is used. *TSTEP* always becomes normalized to 256 microstepping. This way, the thresholds do not have to be adapted when the microstep resolution is changed. The thresholds represent the same motor velocity, independent of the microstep settings. *TSTEP* becomes compared to these threshold values. A hysteresis of 1/16 *TSTEP* resp. 1/32 *TSTEP* is applied to avoid continuous toggling of the comparison results when a jitter in the *TSTEP* measurement occurs. The upper switching velocity is higher by 1/16, resp. 1/32 of the value set as threshold (can be selected with configuration bit *small_hysteresis* in the GCONF register). The motor current can be programmed to a run and a hold level, dependent on the standstill flag *stst*.

Using automatic velocity thresholds allows tuning the application for different velocity ranges. Features like CoolStep integrate completely transparently in your setup. This way, once parameterized, they do not require any activation or deactivation via software.

Table 18. Velocity-Based Mode Control Parameters

	PERCENTION		22111515
PARAMETER	DESCRIPTION	SETTING	COMMENT
stst	Indicates motor stand still in each operation mode. Time is 2^{20} clocks after the last step pulse.	0/1	Status bit, read-only
	Default / reset: 0		
TPOWER DOWN	This is the delay time after stand still (stst) of the motor to motor current power down. Time range is about 0 to 4 seconds (with $f_{CLK} = 16 MHz$). Setting 0 is no delay, 1 is one clock cycle delay. Further increment is in discrete steps of 2^{18} clock cycles.	0255	Time in multiples of 2 ¹⁸ * ^t CLK
	Default: 0xA		
TSTEP	Actual measured time between two 1/256 microsteps derived from the step input frequency in units of 1/fCLK. Measured value is (2^{20}) - 1 in case of overflow or stand still.	0 1048575	Status register, read-only. Actual measured step time in multiple of t _{CLK}
	Default / reset: 0		
TPWMTHRS	TSTEP ≥ TPWMTHRS • StealthChop2 PWM mode is enabled, if configured • DcStep is disabled	0 1048575	Setting to control the upper velocity threshold for operation in StealthChop2
	Default: 0		
TCOOLTHRS	TCOOLTHRS ≥ TSTEP ≥ THIGH: • StallGuard2 and CoolStep are enabled, if configured • StealthChop2 voltage PWM mode is disabled	0 1048575	Setting to control the lower velocity threshold for operation with CoolStep and StallGuard2
	TCOOLTHRS ≥ TSTEP		
	 StallGuard2 stall output signal is enabled (if configured) for use with external controller 		
	Default: 0		
THIGH	TSTEP ≤ THIGH: CoolStep is disabled (motor runs with normal current scale) StealthChop2 voltage PWM mode is disabled If vhighchm is set, the chopper switches to chm = 1 with TFD = 0 (constant off time with slow decay, only). chopper sync is switched off (SYNC = 0) If vhighfs is set, the motor operates in fullstep mode and the stall detection becomes switched over to DcStep stall detection.	0 1048575	Setting to control the upper threshold for operation with CoolStep and StallGuard2 as well as optional high velocity step mode
amall .	Default: 0	0	Liveteracie in 1/16
small_ hysteresis	Hysteresis for step frequency comparison based on TSTEP (lower velocity threshold) and (TSTEP x 15/16) - 1 respectively (TSTEP x31/	0	Hysteresis is 1/16
	32) - 1 (upper velocity threshold) Default: 0	1	Hysteresis is 1/32
vhighfs	This bit enables switching to fullstep, when VHIGH is exceeded.	0	No switch to fullstep
90	Switching takes place only at 45° position. The fullstep target current uses the current value from the microstep table at the 45° position.	1	Fullstep at high velocities
	Default: 0		
		-	1

Table 18. Velocity-Based Mode Contr	ol Parameters (continued)
--	---------------------------

vhighchm	This bit enables switching to chm = 1 and fd = 0, when VHIGH is	0	No change of chopper mode
	exceeded. This way, a higher velocity can be achieved. Can be combined with vhighfs = 1. If set, the TOFF setting automatically becomes doubled during high velocity operation in order to avoid doubling of the chopper frequency. Default: 0		Classic const. Toff chopper at high velocities
	Delault. 0		
en_pwm_	StealthChop2 voltage PWM enable flag (depending on velocity	0	No StealthChop2
mode	thresholds). Switch from off to on state while in standstill, only. Default: 0	1	StealthChop2 active if configured and TSTEP > TPWMTHRS

Ramp Generator

The ramp generator allows motion based on target position or target velocity. It automatically calculates the motion profile taking into account acceleration and velocity settings. The TMC5240 integrates a new type of ramp generator, which offers faster machine operation compared to the classical linear acceleration ramps. The EightPoint ramp generator allows adapting the acceleration ramps to the torque curves of a stepper motor. It uses three different acceleration settings each for the acceleration phase and for the deceleration phase to allow for jerk minimized ramps.

Real Word Unit Conversion

The TMC5240 uses its internal or external clock signal as a time reference for all internal operations. Thus, all time, velocity and acceleration settings are referenced to f_{CLK} . For best stability and reproducibility, it is recommended to use an external quartz oscillator as a time base, or to provide a clock signal from a microcontroller.

v[TMC5240] and a[TMC5240] are internal units of TMC5240. These are the values that need to be written to the velocity/acceleration registers of TMC5240.

Calculator tools are available from the product website and evaluation tools.

Table 19. Ramp Generator Parameters vs. Units

PARAMETER / SYMBOL	UNIT	DESCRIPTION
f _{CLK}	[Hz]	Clock frequency of the TMC5240
S	[s]	Second
US	microstep	
FS	fullstep	
USC - microstep count	-	microstep resolution in number of microsteps (i.e. the number of microsteps between two fullsteps – normally 256)
FSC - fullstep count	-	motor fullsteps per rotation, e.g., 200
µstep velocity v[Hz]	microsteps / s	v[Hz] = v[TMC5240] * (f _{CLK} [Hz] / 2 ²⁴)
µstep acceleration a[Hz/ s]	microsteps / s ²	$a[Hz/s] = a[TMC5240] * f_{CLK}[Hz]^2 / 2^{42}$
rotations per second v[rps]	rotations / s	v[rps] = v[microsteps/s] / USC / FSC
rps acceleration a[rps/s ²]	rotations / s ²	a[rps/s ²] = a[microsteps/s ²] / USC / FSC
ramp steps[microsteps] = rs	microsteps	rs = (v[TMC5240]) ² / a[TMC5240] / 2 ⁸ microsteps during linear acceleration ramp (assuming acceleration from 0 to v)

TSTEP, Txxx_THRS	-	$\begin{split} & TSTEP = f_{CLK} / f_{256STEP} = f_{CLK} / (f_{STEP}^* 256 / USC) \\ & = 2^{24} / (VACTUAL^* 256 / USC) \end{split}$ The time reference for velocity thresholds is referred to the actual 1/256 microstep frequency $(f_{256STEP})$ of the step input respectively velocity v[Hz].
Ramp generator update rate	[Hz]	fUPDATE = f _{CLK} / 512 VACTUAL updates with this frequency.

In rare cases, the upper acceleration limit might impose a limitation to the application, e.g. when working with a reduced clock frequency or high gearing and low load on the motor. In order to increase the effective acceleration possible, the microstep resolution of the sequencer input may be decreased. Setting the *CHOPCONF* options *intpol* = 1 and *MRES* = %0001 double the motor velocity for the same speed setting and thus also double effective acceleration and deceleration. The motor has the same smoothness, but half position resolution with this setting.

Motion Profiles

Ramp Mode

The ramp generator delivers three phase acceleration and three phase deceleration ramps with additional programmable start and stop velocities.

Three different sets of acceleration and deceleration can be combined freely. The transition velocities *V1* and *V2* allow for velocity dependent switching between three acceleration and deceleration settings. A typical high velocity application uses lower acceleration and deceleration values at higher velocities, as the motors torque declines at higher velocity. When considering friction in the system, it becomes clear, that deceleration capability of the system is quicker than acceleration capability. Thus, deceleration values can be set higher in many applications. This way, operation speed of the motor in time critical applications is maximized.

As target positions and ramp parameters may be changed at any time during the motion, the motion controller always uses the optimum (fastest) way to reach the target, while sticking to the acceleration constraints set by the user. This way it might happen, that the motion becomes automatically stopped, crosses zero and drives back again. For example, when during a the final deceleration phase the target position is again changed and "pulled-in" to a closer position and the configured deceleration value does not allow to reach the new target position directly. This case is flagged by the special flag second move.

The ramp generator further supports automatic jerk-reduction, by smoothening the transition from acceleration phase to deceleration phase, and from deceleration phase to acceleration phase by enforcing a constant velocity segment of a minimum duration (*TVMAX*), as required by mechanical jerk response. The following graphs gives some examples on typical (corner) cases.

Note:

The start velocity can be set to zero, if not used.

The stop velocity can be set to a low value (1000 or down to 10), if not used. Background: if TSTOP = 0, the position might not precisely reach the configured microstep target position.

Take care to always set *VSTOP* identical to or above *VSTART*. This ensures that even a short motion can be terminated successfully at the target position.

Set TVMAX zero to disable jerk-reduction.

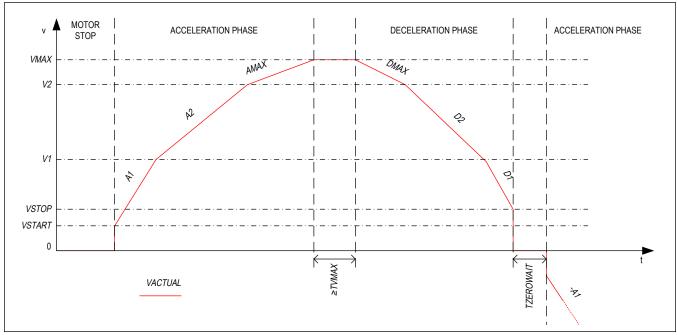


Figure 18. Ramp Generator Velocity Trace Showing Second Move into Negative Direction

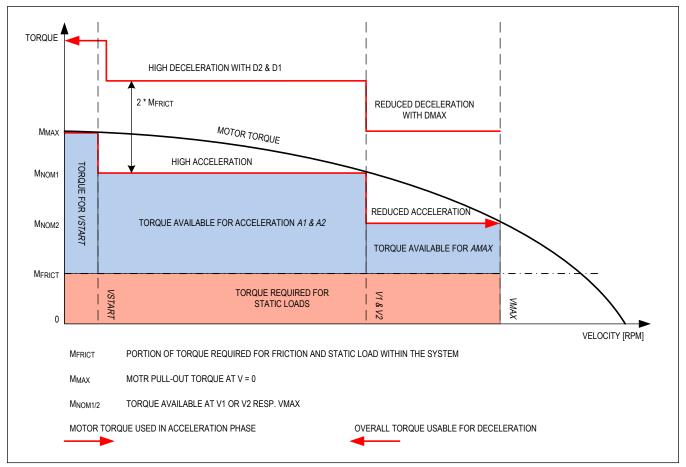


Figure 19. Illustration of Optimized Motor Torque Usage with the Ramp Generator

Eight Point Ramp Start and Stop Velocity

When using increased levels of start- and stop velocity, it becomes clear, that a subsequent move into the opposite direction would provide a jerk identical to VSTART+VSTOP, rather than only VSTART. As the motor probably is not able to follow this, you can set a time delay for a subsequent move by setting TZEROWAIT. An active delay time is flagged by the flag t_zerowait_active. Once the target position is reached, the flag position_reached becomes active.

The set of three acceleration and deceleration segments can be used in two ways: Either for adaptation to the motor torque curve, by using higher acceleration values at lower velocity, or to reduce the jerk (change of acceleration) when transitioning from one acceleration segment to the next. For jerk optimized ramps, typically A1, D1, AMAX, and DMAX are set to lower values than A2 and D2. The most critical points with regards to jerk are the transition from acceleration to deceleration with no constant velocity segment, as well as the transition from deceleration to acceleration in case of on-the-fly change of target position.

To address both, the 8-point motion profile generator allows to enforce a constant velocity segment based on a minimum segment duration (TVMAX). In case this duration could not be kept due to insufficient distance, a reduced VMAX (VMAX') becomes calculated and is used for the constant velocity segment. Minimum VMAX' is identical to VSTOP.

The following traces show the resulting velocity profiles based on different position distances for a pseudo-S-shaped configuration.

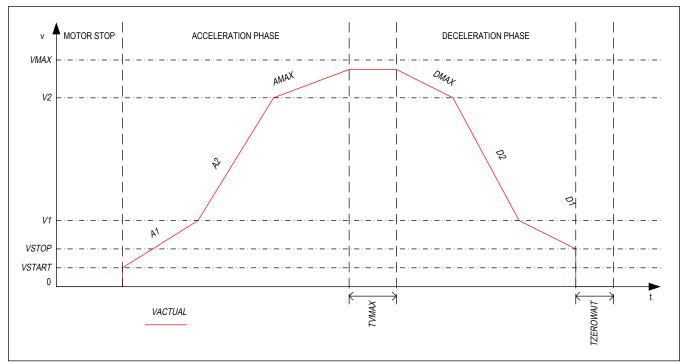


Figure 20. 8-Point Ramp with VMAX Not Reached Due to Too Low Distance

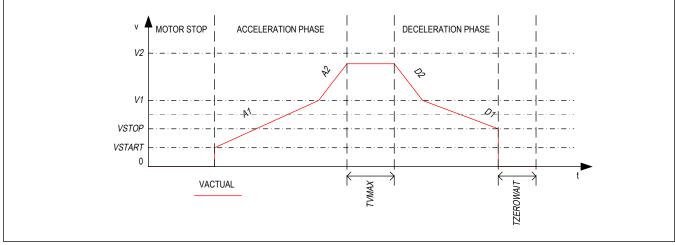


Figure 21. V2 Not Reached and No AMAX and DMAX Phase Due to Low Distance

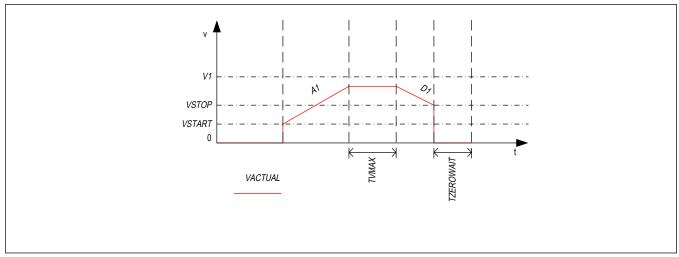


Figure 22. V1 Not Reached Due to Low Distance

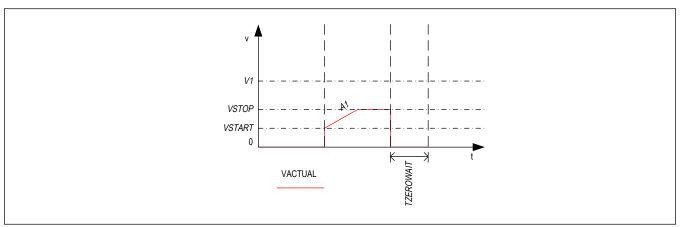


Figure 23. TVMAX Not Kept Due to Low Distance

If VSTOP will not be reached due to a too short travel distance, there will only be a very short linear acceleration using A1 and the ramp will terminate immediately when XTARGET is reached.

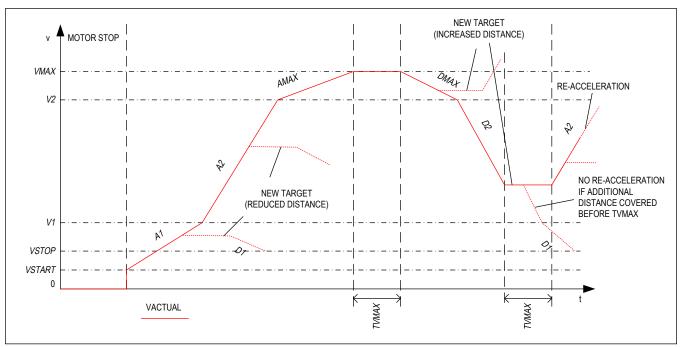


Figure 24. 8-Point Ramp Examples with On-the-Fly Target Position Change

Velocity Mode

For the ease of use, velocity mode movements do not use the different acceleration and deceleration settings. For velocity mode only AMAX and VMAX are relevant. The ramp generator always uses *AMAX* to accelerate or decelerate to *VMAX* in this mode.

In order to decelerate the motor to stand still, it is sufficient to set *VMAX* to zero. The flag *vzero* signals standstill of the motor. The flag *velocity_reached* always signals, that the target velocity has been reached.

Early Ramp Termination

In cases where users can interact with a system, some applications require terminating a motion by ramping down to zero velocity before the target position has been reached.

Options to Terminate Motion using Acceleration Settings:

- 1. Switch to velocity mode, set VMAX=0 and AMAX to the desired deceleration value. This stops the motor using a linear ramp.
- 2. For a stop in positioning mode, set *VSTART*=0 and *VMAX*=0. *VSTOP* is not used in this case. The driver uses AMAX, A1, and A2 (as determined by V1 and V2) for decelerating to zero velocity.
- 3. For a stop using *DMAX*, *D1*, *D2* and *VSTOP*, trigger the deceleration phase by copying *XACTUAL* to *XTARGET*. Set *TZEROWAIT* sufficiently to allow the CPU to interact during this time. The driver decelerates and eventually comes to a stop. Poll the actual velocity to terminate motion during *TZEROWAIT* time using option a) or b).
- 4. Activate a stop switch. This can be done by means of the hardware input, e.g., using a wired 'OR' to the stop switch input. If you do not use the hardware input and have tied the REFL and REFR to a fixed level, enable the stop function (stop_l_enable, stop_r_enable) and use the inverting function (pol_stop_l, pol_stop_r) to simulate the switch activation.
- 5. Utilize the virtual stop switches (VIRTUAL_STOP_L, VIRTUAL_STOP_R). The position comparison (X_ACTUAL vs. VIRTUAL_STOP_L/R) then triggers a stop accordingly.

Application Example: Joystick Control

Applications like surveillance cameras can be optimally enhanced using the motion controller: while joystick commands operate the motor at a user defined velocity, the target ramp generator ensures that the valid motion range never is left. Realize Joystick Control

- 1. Use positioning mode in order to control the motion direction and to set the motion limit(s). The limits might be used as the virtual stop switches for example (VIRTUAL_STOP_L and VIRTUAL_STOP_R).
- 2. Modify VMAX depending on the joystick input at any time in the range VSTART to your maximum value. With VSTART=0, you can also stop motion by setting CS_ACTUAL that takes into account the actual current scaling as defined by IHOLD and IRUN, respectively, by CoolStepMAX=0. The motion controller uses A1, A2, and AMAX as determined by V1 and V2 to adapt velocity for ramping up and ramping down.
- 3. In case you do not modify the acceleration settings, you do not need to rewrite XTARGET, just modify VMAX.
- 4. *DMAX, D1, D2,* and *VSTOP* can only be used when the ramp controller slows down due to reaching the target position, or when the target position has been modified to point to the other direction.

Velocity Thresholds

The ramp generator provides a number of velocity thresholds coupled with the actual velocity *VACTUAL*. The different ranges allow programming the motor to the optimum step mode, coil current and acceleration settings. Most applications do not require all of the thresholds, but in principle all modes can be combined. VHIGH and VCOOLTHRS are determined by the settings *THIGH* and *TCOOLTHRS* in order to allow determination of the velocity when an external step source is used. *TSTEP* becomes compared to these threshold values. A hysteresis of 1/16 *TSTEP* resp. 1/32 *TSTEP* (see bit small_hysteresis in GCONF register) is applied to avoid continuous toggling of the comparison results when a jitter in the *TSTEP* measurement occurs. The upper switching velocity is higher by 1/16, resp. 1/32 of the value set as threshold. The StealthChop threshold *TPWMTHRS* is not shown. VCOOLTHRS can either be used in StealthChop2 velocity range, or in SpreadCycle velocity range.

The velocity thresholds for the different chopper modes and sensorless operation features are coupled to the time between each two microsteps *TSTEP*.

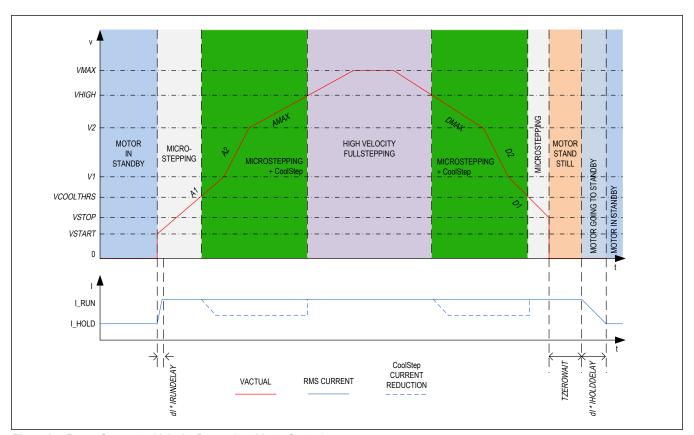


Figure 25. Ramp Generator Velocity Dependent Motor Control

Reference Switches

Prior to normal operation of the drive an absolute reference position must be set.

The reference position can be found using a mechanical stop which can be detected by StallGuard2, StallGuard4, or by a reference switch.

In case of a linear drive, the mechanical motion range must not be exceeded. This can be ensured also for abnormal situations by enabling the stop switch functions for the left and the right reference switch. Therefore, the ramp generator responds to a number of stop events as configured in the SW_MODE register. There are two ways to stop the motor:

- It can be stopped abruptly, when a switch is hit. This is useful in an emergency case and for StallGuard2 based homing.
- Or the motor can be softly decelerated to zero using deceleration settings (DMAX, V2, D2, V1, D1) using the soft stop function (bit *en_softstop = 1*).

Hint: Latching of the ramp position *XACTUAL* to the holding register *XLATCH* upon a switch event gives a precise snapshot of the position of the reference switch.

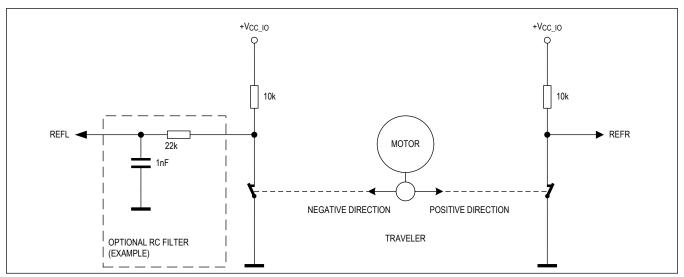


Figure 26. Using Reference Switches (Example)

Normally open or normally closed switches can be used by programming the switch polarity or selecting the pullup or pull-down resistor configuration. A normally closed switch is failsafe with respect to an interrupt of the switch connection. Switches which can be used are:

- mechanical switches,
- photo interrupters, or
- hall sensors.

Be careful to select reference switch resistors matching your switch requirements!

In case of long cables additional RC filtering might be required near the TMC5240 reference inputs. Adding an RC filter also reduces the danger of destroying the logic level inputs by wiring faults, but it adds a certain delay which should be considered with respect to the application.

Implementing a Homing Procedure:

- 1. Make sure, that the home switch is not pressed, e.g. by moving away from the switch.
- 2. Activate position latching upon the desired switch event and activate motor (soft) stop upon active switch. StallGuard2 based homing requires using a hard stop (*en_softstop*=0).
- 3. Start a motion ramp into the direction of the switch. (Move to a more negative position for a left switch, to a more positive position for a right switch). You may timeout this motion by using a position ramping command.
- 4. As soon as the switch is hit, the position becomes latched and the motor is stopped. Wait until the motor is in standstill again by polling the actual velocity *VACTUAL* or checking *vzero* or the *standstill* flag.
- 5. Switch the ramp generator to hold mode and calculate the difference between the latched position and the actual position. For StallGuard2 based homing or when using hard stop, *XACTUAL* stops exactly at the home position, so there is no difference (0).
- 6. Write the calculated difference into the actual position register. Now, homing is finished. A move to position 0 brings back the motor exactly to the switching point. In case StallGuard2 was used for homing, a read access to RAMP STAT clears the StallGuard2 stop event event stop sg and releases the motor from the stop condition.

Homing with a Third Switch:

Some applications use an additional home switch, which operates independently of the mechanical limit switches. The encoder functionality of the TMC5240 provides an additional source for position latching. It allows using the N channel input to snapshot *XACTUAL* with a rising or falling edge event, or both. This function also provides an interrupt output.

1. Activate the latching function (*ENCMODE*: Set *ignoreAB*, *clr_cont*, *neg_edge* or *pos_edge* and *latch_x_act*). The latching function can then trigger the interrupt output (check by reading *n_event* in *ENC_STATUS* when interrupt is

- signaled at DIAG0).
- 2. Move to the direction, where the N channel switch should be. In case the motor hits a stop switch (REFL or REFR) before the home switch is detected, reverse the motion direction.
- 3. Read out XLATCH once the switch has been triggered. It gives the position of the switch event.
- 4. After detection of the switch event, stop the motor, and subtract *XLATCH* from the actual position. (A detailed description of the required steps is in the homing procedure above.)

Virtual Reference Switches

The TMC5240 supports virtual reference switches to support applications that only have a single or no reference switch (StallGuard homing) to safely limit the physical motion range. The virtual stop switches become active when the actual motor position (*XACTUAL*) exceeds *VIRTUAL_STOP_R* during a movement into positive direction or falls below *VIRTUAL_STOP_L* during a movement in negative direction. Enable virtual stop switches by setting *en_virtual_stop_l* resp. *en_virtual_stop_r*. Each virtual stop switch blocks only motion into the respective direction.

Optionally, the virtual stops can be switched to monitor the encoder position (X_ENC). To select, set virtual_stop_enc.

Set the values of the virtual stops (*VIRTUAL_STOP_R*, *VIRTUAL_STOP_L*) with sufficient distance to the overflow/ underflow ranges of the signed 32-bit motion range to allow motor deceleration, in case of soft deceleration used.

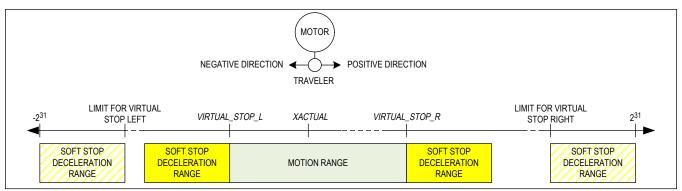


Figure 27. Virtual Stop Switches and Limit Visualization

Ramp Generator Response Time

The ramp generator is realized in hardware and executes commands in less than a microsecond, switching over to the desired mode and target values taking effect.

A velocity accumulator updates the velocities each 512 clock cycles, based on the actual acceleration setting, to give a smooth acceleration.

However, at low motion velocities and low acceleration settings, e.g., at the start of positioning ramp (VSTART) or it's stop (VSTOP), the actual step pulse rate is comparatively low.

Therefore, a significant delay can add for execution of the first and last steps, as determined by the selected microstep velocity.

For example, at a microstep velocity of 10Hz a time of 100ms expires in between of each two steps. As (at least a part) the last microstep of a ramp is executed with a velocity equal to VSTOP, this can cause significant delay to reach the target position. Set VSTOP in a range of minimum 100 to 1000 for quick ramp termination (100 yields roughly <10ms, 1000 roughly <1ms).

External STEP/DIR Driver

The TMC5240 allows using the internal ramp generator to control an external STEP/DIR driver like the ADI-Trinamic TMC262C, TMC2160, or TMC2240 for powerful stepper applications. In this configuration, the internal driver is normally not used, but it may be used in addition to the external driver, e.g., when two motors shall move synchronously.

The DIAG0 and DIAG1_SW outputs are enabled for STEP and DIR output by setting GCONF flags diag0_nint_step and

diag1_nposcomp_dir. Additional internal driver features like DcStep and automatic motor current control are not available in this mode because there is no feedback from the external driver to the TMC5240.

A low level on DIAG1_SW corresponds to a step in positive direction (XACTUAL increasing), a high level to a step into negative direction (XACTUAL decreasing).

Two options for the external STEP signal are selectable:

- 1. double edge (GCONF.length_step_pulse = 0). Each toggle of the STEP output corresponds to a step. DIR is valid at least one CLK cycle in advance. Enable the *dedge* function on the external driver to match.
- 2. single edge (GCONF.length_step_pulse > 0). Each positive pulse on the STEP output corresponds to a step. The pulse length is controlled by length_step_pulse in CLK cycles. The DIR signal only changes in between of step pulses and keeps a minimum setup time equal to the STEP pulse length in advance to the next step pulse.

The feature also can be used to provide a step-synchronous signal to external logic, e.g., to trigger a measurement.

Position Compare Functions

The position compare function allows triggering of external events synchronously to the motor motion. The function outputs an active high level, whenever XACTUAL = X_COMPARE. The duration of the pulse thus corresponds to the time that XACTUAL matches X_COMPARE, i.e. the duration of one microstep at the actual velocity.

A repetition function allows triggering a periodic compare pulse. Use $X_COMPARE_REPEAT$ to program the desired period (microstep distance) with up to 2^{24} - 1 steps.

Table 20. X_COMPARE_REPEAT Options and periodic Pulse Behavior

VALUE	DESCRIPTION
0	No repetition
>1	results in a continuous pulse train, once the first compare position has been passed until the motion direction is changed.
	Distance between compare pulses: 2 to 2 ²⁴ - 1 microsteps

Whenever the position compare condition XACTUAL = X_COMPARE goes from a true to a false state, X_COMPARE becomes automatically incremented resp. decremented by the value programmed to X_COMPARE_REPEAT. The decision to increment or decrement X_COMPARE is taken based on the actual motion direction. This way, the first compare event in a motion is given by the content of X_COMPARE, and the distance of subsequent events is programmed by X_COMPARE_REPEAT. When changing motion direction, or whenever the next pulse position shall be altered by software, be sure to first disable the repetition mechanism by setting X_COMPARE_REPEAT=0. In a next step, re-program X_COMPARE with the next desired pulse position, because the previously automatically generated next position still lies in the previous motion direction and would not be hit. Following the write access to X_COMPARE, the repetition mechanism can be enabled once again. The step to first disable the repetition mechanism is required, in case X_COMPARE is identical to X_ACTUAL during the write access to X_COMPARE, as it also would trigger the repetition mechanism.

StallGuard2 Load Measurement

To fit different motor control schemes, the TMC5240 offers two types of StallGuard sensorless load detection schemes, covering the two basic chopper modes. StallGuard2 works in SpreadCycle operation, while StallGuard4 is optimized for StealthChop2 operation.

StallGuard2 provides an accurate measurement of the load on the motor. It can be used for stall detection as well as other uses at loads below those which stall the motor, such as CoolStep load-adaptive current reduction. The StallGuard2 measurement value changes linearly over a wide range of load, velocity, and current settings. As the load on the motor increases, the StallGuard Value (SG_RESULT) decreases. Tuning is required in order to properly detect stalls. Set the StallGuard threshold (SGTHRS) such that SG_RESULT reaches 0 (or near to 0) when the motor becomes overloaded/stalls.

Hint: In order to use StallGuard2 and CoolStep, the StallGuard2 sensitivity should first be tuned using the SGT setting!

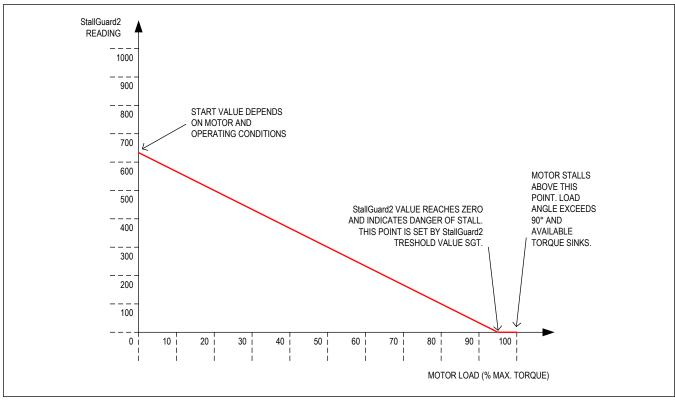


Figure 28. Function Principle of StallGuard2

Table 21. StallGuard2-Related Parameters

PARAMETER	DESCRIPTION	SETTING	COMMENT
SGT	This signed value controls the StallGuard2 threshold level for stall detection and sets the optimum measurement range for readout. A lower value gives a higher sensitivity. Zero is		indifferent value
	the starting value working with most motors. A higher value makes StallGuard2 less sensitive and requires more torque to indicate a stall.	+1+63	less sensitivity
		-164	higher sensitivity
sfilt	Enables the StallGuard2 filter for more precision of the measurement. If set, reduces the measurement frequency to one measurement per electrical period of the motor (4 fullsteps).	0	standard mode
		1	filtered mode
STATUS WORD	DESCRIPTION	RANGE	COMMENT
SG_RESULT	This is the StallGuard2 result. A higher reading indicates less mechanical load. A lower reading indicates a higher load and thus a higher load angle. Tune the SGT setting to show a SG_RESULT reading of roughly 0 to 100 at maximum load before motor stall.	01023	0: highest load low value: high load high value: less load

Tuning StallGuard2 Threshold SGT

The StallGuard2 value SG_RESULT is affected by motor-specific characteristics and application-specific demands on

load, velocity, supply voltage, and current level. Therefore the easiest way to tune the StallGuard2 threshold *SGT* for a specific motor type and operating conditions is interactive tuning in the actual application.

Initial procedure for tuning StallGuard SGT:

- 1. Operate the motor at the normal operation velocity, supply voltage, and current setting for your application and monitor SG RESULT.
- Apply slowly increasing mechanical load to the motor. If the motor stalls before SG_RESULT reaches zero, decrease SGT. If SG_RESULT reaches zero before the motor stalls, increase SGT. A good SGT starting value is zero. SGT is signed, so it can have negative or positive values.
- 3. Now enable sg_stop and make sure, that the motor is safely stopped whenever it is stalled. Increase SGT if the motor becomes stopped before a stall occurs. Restart the motor by disabling sg_stop or by clearing $event_stop_sg$ in the $RAMP_STAT$ register (write to clear).
- 4. The optimum setting is reached when *SG_RESULT* is between 0 and roughly 100 at increasing load shortly before the motor stalls, and *SG_RESULT* increases by 100 or more without load. *SGT* in most cases can be tuned for a certain motion velocity or a velocity range. Make sure, that the setting works reliable in a certain range (e.g. 80% to 120% of desired velocity) and also under extreme motor conditions (lowest and highest applicable temperature).

Optional procedure allowing automatic tuning of SGT:

The basic idea behind the SGT setting is a factor, which compensates the StallGuard measurement for resistive losses inside the motor. At standstill and very low velocities, resistive losses are the main factor for the balance of energy in the motor, because mechanical power is zero or near to zero. This way, SGT can be set to an optimum at near zero velocity. This algorithm is especially useful for tuning SGT within the application to give the best result independent of environment conditions, motor stray, etc.

- 1. Operate the motor at low velocity < 10 RPM (i.e. a few to a few fullsteps per second) and target operation current and supply voltage. In this velocity range, there is not much dependence of *SG_RESULT* on the motor load, because the motor does not generate significant back EMF. Therefore, mechanical load does not make a big difference on the result.
- 2. Switch on *sfilt*. Now increase *SGT* starting from 0 to a value, where *SG_RESULT* starts rising. With a high *SGT*, *SG_RESULT* rises up to the maximum value. Reduce again to the highest value, where *SG_RESULT* stays at 0. Now the *SGT* value is set as sensibly as possible. When you see *SG_RESULT* increasing at higher velocities, there is useful stall detection.
- SG_RESULT goes to zero when the motor stalls and the ramp generator can be programmed to stop the motor
 upon a stall event by enabling sg_stop in SW_MODE. Set TCOOLTHRS to match the lower velocity threshold where
 StallGuard delivers a good result in order to use sg_stop.

The upper velocity for the stall detection with this setting is determined by the velocity where the motor back EMF approaches the supply voltage and the motor current starts dropping when further increasing velocity.

The system clock frequency affects SG_RESULT . An external crystal-stabilized clock should be used for applications that demand the highest performance. The power supply voltage also affects SG_RESULT , so tighter regulation results in more accurate values. SG_RESULT measurement has a high resolution, and there are a few ways to enhance its accuracy, as described in the following sections.

Variable Velocity Limits TCOOLTHRS and THIGH

The *SGT* setting chosen as a result of the previously described *SGT* tuning can be used for a certain velocity range. Outside this range, a stall may not be detected safely, and CoolStep might not give the optimum result.

In many applications, operation at or near a single operation point is used most of the time and a single setting is sufficient. The driver provides a lower and an upper velocity threshold to match this. The stall detection is disabled outside the determined operation point, for example during acceleration phases preceding a sensorless homing procedure when setting *TCOOLTHRS* to a matching value. An upper limit can be specified by *THIGH*.

The velocity limits VHIGH and VCOOLTHRS are determined by the settings THIGH and TCOOLTHRS.

In some applications, a velocity dependent tuning of the *SGT* value can be expedient, using a small number of support points and linear interpolation.

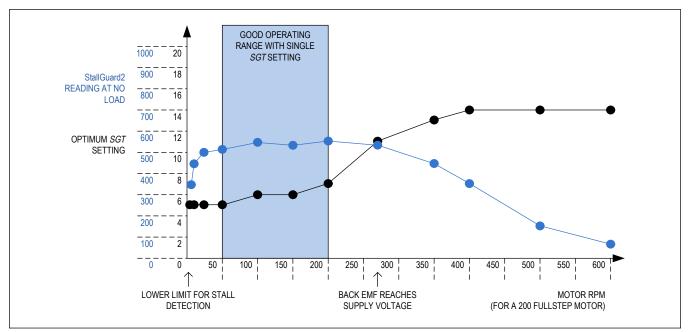


Figure 29. Example: Optimum SGT Setting and StallGuard2 Reading with an Example Motor

Small Motors with High Torque Ripple and Resonance

Motors with a high detent torque show an increased variation of the StallGuard2 measurement value SG_RESULT with varying motor currents, especially at low currents. For these motors, the current dependency should be checked for best result.

Temperature Dependence of Motor Coil Resistance

Motors working over a wide temperature range may require temperature correction, because motor coil resistance increases with rising temperature. This can be corrected as a linear reduction of *SG_RESULT* at increasing temperature, as motor efficiency is reduced.

Accuracy and Reproducibility of StallGuard2 Measurement

In a production environment, it may be desirable to use a fixed *SGT* value within an application for one motor type. Most of the unit-to-unit variation in StallGuard2 measurements results from manufacturing tolerances in motor construction. The measurement error of StallGuard2 – provided that all other parameters remain stable – can be as low as:

stallGuard2 measurement error = +/- max(1,|SGT|)

StallGuard2 Update Rate and Filter

The StallGuard2 measurement value *SG_RESULT* is updated with each fullstep of the motor. This is enough to safely detect a stall because a stall always means the loss of four fullsteps. In a practical application, especially when using CoolStep, a more precise measurement might be more important than an update for each fullstep because the mechanical load never changes instantaneously from one step to the next. For these applications, the *sfilt* bit enables a filtering function over four load measurements. The filter should always be enabled when high-precision measurement is required. It compensates for variations in motor construction, for example due to misalignment of the phase A to phase B magnets. The filter should be disabled when rapid response to increasing load is required and for best results of sensorless homing using StallGuard.

Detecting a Motor Stall

For best stall detection, work without StallGuard2 filtering (sfilt = 0). To safely detect a motor stall the stall threshold must

be determined using a specific *SGT* setting. Therefore, the maximum load needs to be determined, which the motor can drive without stalling. At the same time, monitor the *SG_RESULT* value at this load, e.g., some value within the range 0 to 100. The stall threshold should be a value safely within the operating limits, to allow for parameter stray. The response at an *SGT* setting at or near 0 gives some idea on the quality of the signal: Check the *SG_RESULT* value without load and with maximum load. They should show a difference of at least 100 or a few 100, which shall be largely compared to the offset. If you set the *SGT* value in a way, that a reading of 0 occurs at maximum motor load, the stall can be automatically detected to issue a motor stop. In the moment of the step resulting in a step loss, the lowest reading is visible. After the step loss, the motor vibrates and shows a higher *SG_RESULT* reading.

Homing with StallGuard2

The homing of a linear drive requires moving the motor into the direction of a hard stop. As StallGuard2 needs a certain velocity to work (as set by TCOOLTHRS), make sure that the start point is far enough away from the hard stop to provide the distance required for the acceleration phase. After setting up SGT and the ramp generator registers, start a motion into the direction of the hard stop and activate the stop on stall function (set sg_stop in SW_MODE). Once a stall is detected, the ramp generator stops motion and sets VACTUAL zero, stopping the motor. The stop condition also is indicated by the flag StallGuard in DRV_STATUS . After setting up new motion parameters in order to prevent the motor from restarting right away, StallGuard2 can be disabled, or the motor can be re-enabled by reading $RAMP_STAT$. The read and clear function of the $event_stop_sg$ flag in $RAMP_STAT$ would restart the motor after expiration of TZEROWAIT in case the motion parameters have not been modified.

Limits of StallGuard2 Operation

StallGuard2 does not operate reliably at extreme motor velocities: Very low motor velocities (for many motors, less than 1Rps) generate a low back EMF and make the measurement unstable and dependent on environment conditions (temperature, etc.). The automatic tuning procedure described earlier compensates for this. Other conditions also lead to extreme settings of *SGT* and poor response of the measurement value *SG_RESULT* to the motor load.

Very high motor velocities, in which the full sinusoidal current is not driven into the motor coils also leads to poor response. These velocities are typically characterized by the motor back EMF reaching the supply voltage.

StallGuard4 Load Measurement

StallGuard4 is optimized for operation with StealthChop2 while its predecessor StallGuard2 works with SpreadCycle.

Anyhow, the function is similar: Both deliver a load value, going from a high value at low load, to a low value at high load.

While StallGuard2 becomes tuned to show a "0"-reading for stall detection, StallGuard4 uses a comparison-value to trigger stall detection, rather than shifting the measurement result by applying an offset.

StallGuard4 provides an accurate measurement of the load on the motor and can be used for stall detection, load estimation as well as CoolStep load-adaptive current reduction. The StallGuard4 measurement value changes linearly over a wide range of load, velocity, and current settings, as shown in the next figure. When approaching maximum motor load, the value goes down to a motor-specific lower value. This corresponds to a load angle of 90° between the magnetic field of the coils and magnets in the rotor. This also is the most energy-efficient point of operation for the motor.

In order to use StallGuard4, check the sensitivity of the motor at border conditions.

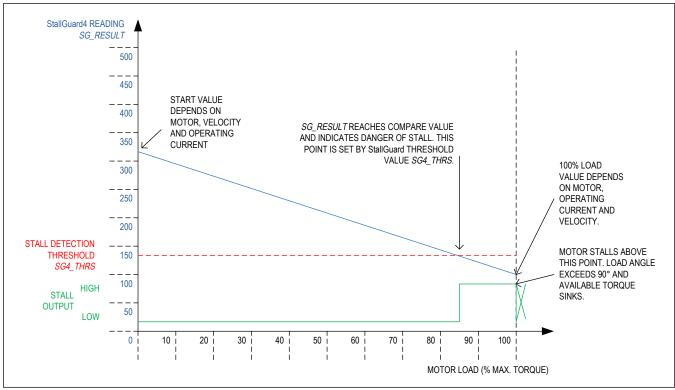


Figure 30. StallGuard4 Mode of Operation

Table 22. StallGuard4-Related Parameters

PARAMETER	DESCRIPTION	SETTING	COMMENT
SG4_THRS	This value controls the StallGuard4 threshold level for stall detection. It compensates for motor-specific characteristics and controls sensitivity. A higher value gives a higher sensitivity. A higher value makes StallGuard4 more sensitive and requires less torque to indicate a stall.	0 255	This value is compared to SG4_RESULT. The stall output becomes active if SG4_RESULT falls below this value.
STATUS WORD	DESCRIPTION	RANGE	COMMENT
SG4_RESULT	This is the <i>StallGuard4 result</i> . A higher reading indicates less mechanical load. A lower reading indicates a higher load and thus a higher load angle. This value becomes generated independent of the enabling conditions like the actual chopper mode and velocity thresholds like <i>VCOOLTHRS</i> . The result is calculated from <i>SG4_IND_x</i> measurements, adding one bit for higher precision and similar range as StallGuard2.	0510	Low value: highest load High value: low/no load
SG4_IND_3 SG4_IND_2 SG4_IND_1 SG4_IND_0	Individual measurements for motor phase A falling $(SG4_IND_0)$ / rising $(SG4_IND_1)$ transition resp. phase B falling $(SG4_IND_2)$ /rising $(SG4_IND_3)$ transition. Individual measurements are available in filtered mode, only $(sg4_filt_en = 1)$. $SG4_IND_0$ covers all cases in unfiltered mode $(sg4_filt_en = 0)$	0255	Low value: highest load High value: low/no load

Table 22. StallGuard4-Related Parameters (continued)

sg4_filt_en	0: Unfiltered operation, SG4_RESULT updates with each fullstep 1: Filtered operation, SG4_IND_03 available, SG4_RESULT gives the average of last four SG4_IND_x measurements	0	0: filter off 1: filtered operation, SG4_IND values available
sg_angle_offset	This flag enables optimized switching between StealthChop2 and SpreadCycle, by using the SG4_RESULT to determine the phase lag in StealthChop2 and compensate for the phase jump when switching from voltage-controlled to current-controlled operation in SpreadCycle. The phase offset becomes stored and is subtracted again when switching back to StealthChop2.	0	0: No angle correction 1: Optimized switching between StealthChop2 and SpreadCycle

Tuning StallGuard4

The StallGuard4 value *SG4_RESULT* is affected by motor-specific characteristics and application-specific demands on load, coil current, and velocity. Therefore, the easiest way to tune the StallGuard4 threshold *SG4_THRS* for a specific motor type and operating conditions is interactive tuning in the actual application.

The initial procedure for tuning StallGuard SG4 THRS is as follows:

- 1. Operate the motor at the normal operation velocity for your application and monitor SG4_RESULT.
- 2. Apply slowly increasing mechanical load to the motor. Check the lowest value of SG4_RESULT before the motor stalls. Use this value as starting value for SG4_THRS (apply half of the value).
- 3. Now, monitor the StallGuard output signal via DIAG output (also set *TCOOLTHRS* to match the lower velocity limit for operation) and stop the motor when a pulse is seen on the respective output. Make sure, that the motor is safely stopped whenever it is stalled. Increase *SG4_THRS* if the motor becomes stopped before a stall occurs.
- 4. The optimum setting is reached when a stall is safely detected and leads to a pulse at DIAG in the moment where the stall occurs. SG4_THRS in most cases can be tuned for a certain motion velocity or a velocity range. Make sure, that the setting works reliable in a certain range (e.g., 80% to 120% of desired velocity) and also under extreme motor conditions (lowest and highest applicable temperature).

DIAG is pulsed by StallGuard, when $SG4_RESULT$ falls below $SG4_THRS$. It is only enabled in StealthChop2 mode, and when $TCOOLTHRS \ge TSTEP > TPWMTHRS$.

The external motion controller should react to a single pulse by stopping the motor if desired. Set *TCOOLTHRS* to match the lower velocity threshold where StallGuard delivers a good result.

SG4_RESULT measurement has a high resolution, and there are a few ways to enhance its accuracy, as described in the following sections.

StallGuard4 Update Rate

The StallGuard4 measurement value *SG4_RESULT* is updated with each fullstep of the motor. This is enough to safely detect a stall because a stall always means the loss of four fullsteps.

StallGuard4 provides two options for measurement:

- 1. $sg4_filt_en$ = 0: A single measurement, updated after each fullstep, and valid for each one fullstep. This measurement allows quickest reaction to load variations, as $SG4_RESULT$ becomes fully updated with each zero transmission of a coil voltage. Therefore, it is optimum for stall detection with a hard obstacle.
- 2. $sg4_filt_en$ = 1: In this mode, four individual signals become generated: $SG4_IND_0$ upon falling 0-transition of the cosine wave (coil A); $SG4_IND_1$ upon rising 0-transition of the co-sine wave; $SG4_IND_2$ upon falling 0-transition of the sine wave (coil B); $SG4_IND_3$ upon rising 0-transition of the sine wave. The actual value for $SG4_RESULT$ is the mean value of all four measurements, becoming updated once each fullstep. With this, each fullstep has an influence of 25% only, on the overall result. This mode is perfect for detection of soft obstacles, or for usage of CoolStep on imprecise motors. In filtered mode, sensitivity to a sudden load increase (hard motor blockage) is reduced.

Detecting a Motor Stall

To safely detect a motor stall, the stall threshold must be determined using a specific SG4_THRS setting and a specific motor velocity or velocity range. Further, the motor current setting has a certain influence and should not be modified,

once optimum values are determined. Therefore, the maximum load needs to be determined, which the motor can drive without stalling for the given application. At the same time, monitor $SG4_RESULT$ at this load. The stall threshold should be a value safely within the operating limits, to allow for parameter stray. More refined evaluation may also react to a change of $SG4_RESULT$ rather than comparing to a fixed threshold. This rules out certain effects which influence the absolute value.

Limits of StallGuard4 Operation

StallGuard4 does not operate reliably at extreme motor velocities: Very low motor velocities (for many motors, less than 1Rps) generate a low back EMF and make the measurement unstable and dependent on environment conditions (temperature, etc.). Other conditions also lead to a poor response of the measurement value $SG4_RESULT$ to the motor load. Very high motor velocities, in which the full sinusoidal current is not driven into the motor coils also leads to poor response. These velocities are typically characterized by the motor back EMF exceeding the supply voltage.

CoolStep Load Adaptive Current Scaling

CoolStep is an automatic smart energy optimization for stepper motors based on the motor mechanical load, making them "green." Depending on the actual chopper mode, CoolStep automatically uses StallGuard4 load measurement result in StealthChop2, or StallGuard2 in SpreadCycle. Coolstep requires that either StallGuard2 or StallGuard4 (depending on the chopper mode being used) be tuned prior to use. A single tuning does not cover all operating points.

Setting Up for CoolStep

CoolStep is controlled by several parameters, but two are critical for understanding how it works:

Table 23. CoolStep Critical Parameters

PARAMETER	DESCRIPTION	RANGE	COMMENT
SEMIN	4-bit unsigned integer that sets a <i>lower threshold</i> . If <i>SG_RESULT</i> goes below this threshold (indicating a large load), CoolStep increases the current to both coils. The 4-bit <i>SEMIN</i> value is scaled by 32 to cover the lower half of the range of the 10-bit <i>SG_RESULT</i> value. (The name of this parameter is derived from smartEnergy, which is an earlier name for CoolStep.)		disable CoolStep
			threshold is SEMIN x 32
SEMAX	4-bit unsigned integer that controls an <i>upper threshold</i> . If <i>SG_RESULT</i> is sampled equal to or above this threshold enough times (indicating a light load), CoolStep decreases the current to both coils. The upper threshold is (<i>SEMIN</i> + <i>SEMAX</i> + 1) x 32.	015	threshold is (SEMIN + SEMAX + 1) x 32

The figure below shows the operating regions of CoolStep:

- The black line represents the SG RESULT measurement value.
- The blue line represents the mechanical load applied to the motor.
- The red line represents the current into the motor coils.

When the load increases, SG_RESULT falls below $SEMIN \times 32$, and CoolStep increases the current. When the load decreases, SG_RESULT rises above (SEMIN + SEMAX + 1) x 32, and the current is reduced.

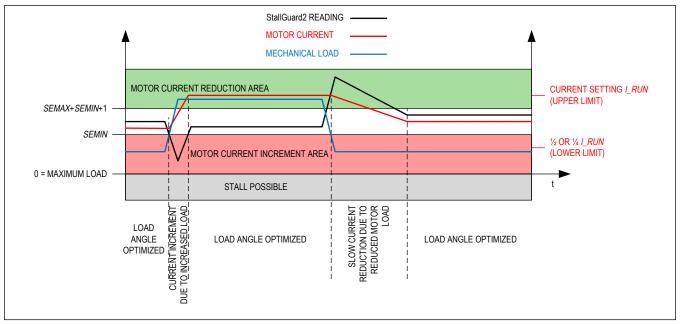


Figure 31. CoolStep Adapts Motor Current to the Load

Table 24. CoolStep Additional Parameters and Status Information

PARAMETER	DESCRIPTION	RANGE	COMMENT
SEUP	Sets the <i>current increment step</i> . The motor current becomes incremented by this setting whenever a new StallGuard2 or StallGuard4 value is measured that lies below the lower threshold as set by <i>SEMIN</i> .	03	step width of CS value CS_ACTUAL is 1, 2, 4, 8
SEDN	Sets the number of StallGuard2 / StallGuard4 readings above the upper threshold necessary for each <i>current decrement</i> of the motor current.	03	number of StallGuard2 measurements per decrement: 32, 8, 2, 1
SEIMIN	Sets the lower motor current limit for CoolStep operation by scaling the	0	0: 1/2 of IRUN
	IRUN current setting. When using StealthChop2, make sure to operate well above the minimum motor current as determined for StealthChop2 current regulation, especially when a reduction down to 25% is desired.	1	1: 1/4 of IRUN
TCOOLTHRS	Lower velocity threshold for switching on CoolStep. Below this velocity CoolStep becomes disabled. Adapt to the lower limit of the velocity range where StallGuard2 gives a stable result. Hint: May be adapted to disable CoolStep during acceleration and deceleration phase by setting VCOOLTHRS identical to VMAX.	1 2 ²⁰ - 1	Specifies lower CoolStep velocity by comparing the threshold value to <i>TSTEP</i>
THIGH	Upper velocity threshold value for CoolStep. Above this velocity CoolStep becomes disabled. Adapt to the velocity range where StallGuard2 / StallGuard4 gives a stable result.	1 2 ²⁰ - 1	Also controls additional functions like switching to fullstepping.
STATUS WORD	DESCRIPTION	RANGE	COMMENT
CS_ACTUAL	This status value provides the <i>actual motor current scale</i> as controlled by CoolStep. The value goes up to the <i>IRUN</i> value and down to the portion of <i>IRUN</i> as specified by <i>SEIMIN</i> .	031	1/32, 2/32, 32/32

Tuning CoolStep

Before tuning CoolStep in conjunction with SpreadCycle, first tune the StallGuard2 threshold level *SGT*, which affects the range of the load measurement value *SG_RESULT*. CoolStep uses *SG_RESULT* to operate the motor near the optimum load angle of +90°. In conjunction with StealthChop2, CoolStep uses *SG4_RESULT*. In this mode, the leveling is done via *SEMIN*.

The current increment speed is specified in *SEUP*, and the current decrement speed is specified in *SEDN*. They can be tuned separately because they are triggered by different events that may need different responses. The encodings for these parameters allow the coil currents to be increased much more quickly than decreased, because crossing the lower threshold is a more serious event that may require a faster response. If the response is too slow, the motor may stall. In contrast, a slow response to crossing the upper threshold does not risk anything more serious than missing an opportunity to save power.

CoolStep operates between limits controlled by the current scale parameter IRUN and the seimin bit.

Response Time

For fast response to increasing motor load, use a high current increment step *SEUP*. If the motor load changes slowly, a lower current increment step can be used to avoid motor oscillations. If the filter controlled by *sfilt* is enabled, the measurement rate and regulation speed are cut by a factor of four.

Advice: The most common and most beneficial use is to adapt CoolStep for operation at the typical system target operation velocity and to set the velocity thresholds according. As acceleration and decelerations normally shall be quick, they will require the full motor current, while they have only a small contribution to overall power consumption due to their short duration.

Low Velocity and Standby Operation

Because CoolStep is not able to measure the motor load in standstill and at very low RPM, a lower velocity threshold is provided in the ramp generator. It should be set to an application specific default value. Below this threshold the normal current setting via *IRUN* respectively *IHOLD* is valid. An upper threshold is provided by the *VHIGH* setting. The velocity limits *VHIGH* and *VCOOLTHRS* are determined by the settings *THIGH* and *TCOOLTHRS*.

Both thresholds can be set as a result of the StallGuard2 and StallGuard4 tuning process.

Diagnostic Outputs

The DIAG outputs deliver a position compare signal to allow exact triggering of external logic, and an interrupt signal in order to trigger software to certain conditions within the motion ramp. Either an open drain (active low) output signal can be chosen (default, GCONF register, bit $diag0_int_pushpull = 0$), or an active high push-pull output signal (GCONF register, bit $diag0_int_pushpull = 1$). When using the open drain output, multiple driver output signals can be ORed. An external pull up resistor in the range $4.7k\Omega$ to $100k\Omega$ is required. DIAG0 also becomes driven low upon a reset condition. However the end of the reset condition cannot be determined by monitoring DIAG0 in this configuration, because $event_pos_reached$ flag also becomes active upon reset and thus the pin stays actively low after the reset condition. In order to safely determine a reset condition, monitor the reset flag by SPI or read out any register to confirm that the chip is powered up.

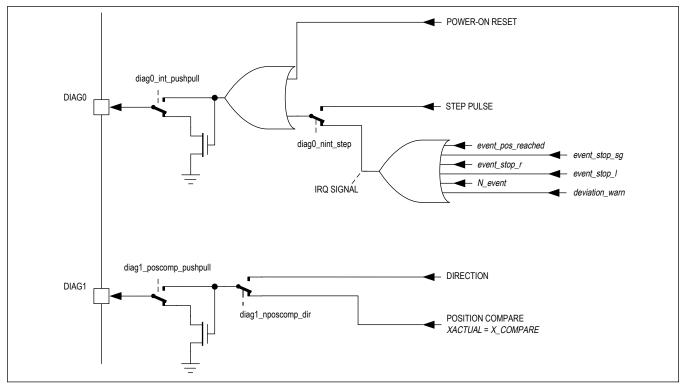


Figure 32. Diagnostic Outputs Configuration Options

DcStep

DcStep is an automatic commutation mode for the stepper motor. It allows the stepper to run with its target velocity as commanded by the ramp generator as long as it can cope with the load. In case the motor becomes overloaded, it slows down to a velocity where the motor can still drive the load. This way, the stepper motor never stalls and can drive heavy loads as fast as possible. Its higher torque available at lower velocity plus dynamic torque from its flywheel mass allow compensating for mechanical torque peaks. In case the motor becomes completely blocked, the stall flag becomes set.

Designing-In DcStep

In a classical application, the operation area is limited by the maximum torque required at maximum application velocity. A safety margin of up to 50% torque is required, in order to compensate for unforeseen load peaks, torque loss due to resonance and aging of mechanical components. DcStep allows using up to the full available motor torque. Even higher short time dynamic loads can be overcome using motor and application flywheel mass without the danger of a motor stall. With DcStep, the nominal application load can be extended to a higher torque only limited by the safety margin near the holding torque area (which is the highest torque the motor can provide). Additionally, maximum application velocity can be increased up to the actually reachable motor velocity.

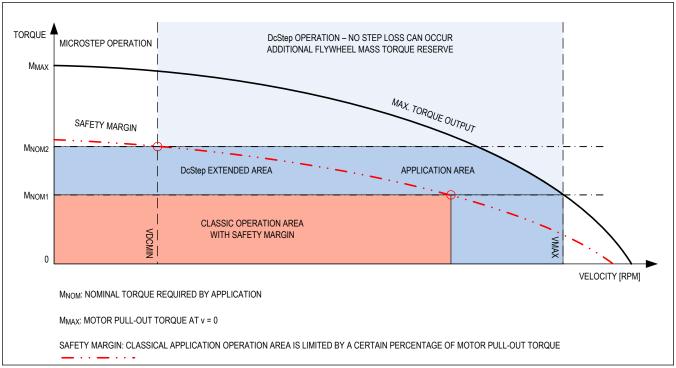


Figure 33. DcStep Extended Application Operation Area

DcStep Integration with the Motion Controller

DcStep requires only a few settings. It directly feeds back motor motion to the ramp generator, so that it becomes seamlessly integrated into the motion ramp, even if the motor becomes overloaded with respect to the target velocity. DcStep operates the motor using the constant Toff chopper in fullstep mode at the ramp generator target velocity VMAX or at reduced velocity if the motor becomes overloaded. It requires setting the minimum operation velocity VDCMIN. VDCMIN shall be set to the lowest operating velocity where DcStep gives a reliable detection of motor operation. The motor never stalls unless it becomes braked down to a velocity below VDCMIN. In case the velocity should fall below this value, the motor would restart once its load is released, unless the stall detection becomes enabled (set sg_stop). Stall detection is covered by StallGuard2 when the velocity goes below VDCMIN.

Attention: DcStep requires that the phase polarity of the sine wave is positive within the MSCNT range 768 to 255 and negative within 256 to 767. The cosine polarity must be positive from 0 to 511 and negative from 512 to 1023. A phase shift by 1 would disturb DcStep operation. Therefore, it is advised to work with the default wave. Please refer to the <u>Sine</u> Wave Lookup Table section for an initialization with the default table.

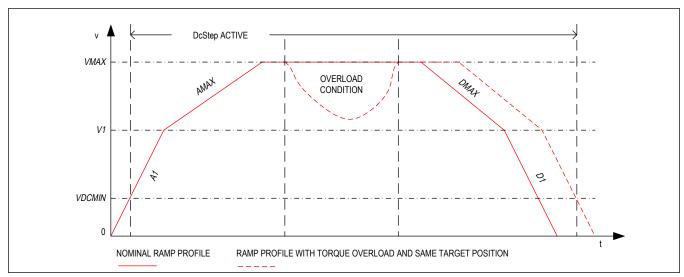


Figure 34. DcStep Velocity Profile with Overload Situation

Stall Detection in DcStep Mode

While DcStep is able to decelerate the motor upon overload, it cannot avoid a stall in every operation situation. Once the motor is blocked or it becomes decelerated below a motor-dependent minimum velocity where the motor operation cannot safely be detected any more, the motor may stall and lose steps. In order to safely detect a step loss and avoid restarting of the motor, the stop-on-stall can be enabled (set flag sg_stop). In this case, VACTUAL becomes set to zero once the motor is stalled. It remains stopped until reading the $RAMP_STAT$ status flags. The flag $event_stop_sg$ shows the active stop condition. It remains stopped until resetting the $event_sg_stop$ flag or disabling stop-on-stall. A StallGuard2 load value also is available during DcStep operation. The range of values is limited to 0 to 255 as DcStep only sees a load angle of 0° to 90°, which is mapped to 0 to 255. In certain situations, the load angle might slip temporarily to the 90° to 180° range, which is not stable but gives a read out of up to 511. In order to enable StallGuard2, also set TCOOLTHRS corresponding to a velocity slightly above VDCMIN or up to VMAX.

Stall detection in this mode may trigger falsely due to resonances, when flywheel loads are loosely coupled to the motor axis.

PARAMETER	DESCRIPTION	RANGE	COMMENT
vhighfs & vhighchm	These chopper configuration flags in <i>CHOPCONF</i> need to be set for DcStep operation. As soon as <i>VDCMIN</i> becomes exceeded, the chopper becomes switched to constant T _{OFF} chopper and fullstepping .	0/1	set to 1 for DcStep
TOFF	DcStep often benefits from an increased off time value in <i>CHOPCONF</i> . Settings >2 should be preferred.	215	Settings 815 do not make any difference to setting 8 for DcStep operation.
VDCMIN	This is the lower threshold for DcStep operation when using internal ramp generator. Below this threshold, the motor operates in normal microstep mode. In DcStep operation, the motor operates at minimum <i>VDCMIN</i> even when it is completely blocked. Tune together with <i>DC_TIME</i> setting. Activation of StealthChop also disables DcStep.	02 ²²	0: Disable DcStep Set to the lower velocity limit for DcStep operation.

DC_TIME	This setting controls the reference pulse width for DcStep load measurement. It must be optimized for robust operation with maximum motor torque. A higher value allows higher torque and higher velocity, a lower value allows operation down to a lower velocity as set by <i>VDCMIN</i> . Check best setting under nominal operation conditions, and re-check under extreme operating conditions (e.g., lowest operation supply voltage, highest motor temperature, and highest supply voltage, lowest motor temperature).	01023	Lower limit for the setting is: t_{BLANK} (as defined by TBL) in clock cycles + n with n in the range 1 to 100 (for a typical motor)
DC_SG	This setting controls stall detection in DcStep mode. Increase for higher sensitivity. A stall can be used as an error condition by issuing a hard stop for the motor. Enable <i>sg_stop</i> flag for stopping the motor upon a stall event. This way the motor is stopped once it stalls.	0255	Set slightly higher than <i>DC_TIME</i> / 16

Measuring Actual Motor Velocity in DcStep Operation

DcStep has the ability to reduce motor velocity in case the motor becomes slower than the target velocity due to mechanical load. *VACTUAL* shows the ramp generator target velocity. It is not influenced by DcStep. Measuring DcStep velocity is possible based on the position counter *XACTUAL*.

Therefore, take two snapshots of the position counter with a known time difference:

$$VACTUAL_{DCSTEP} = \frac{XACTUAL(time2) - XACTUAL(time1)}{time2 - time1} \times \frac{2^{24}}{f_{CLK}}$$

Example:

At 16.0MHz clock frequency, a 0.954s measurement delay would directly yield in the velocity value, a 9.54ms delay would yield in 1/100 of the actual DcStep velocity.

To get the time interval as precisely as possible, snapshot a timer each time the transmission of XACTUAL from the IC starts or ends. The rising edge of NCS for SPI transmission provides the most exact time reference.

Sine Wave Lookup Table

The TMC5240 provides a programmable look-up table for storing the microstep current wave. As a default, the table is pre-programmed with a sine wave, which is a good starting point for most stepper motors. Reprogramming the table to a motor specific wave allows drastically improved microstepping especially with low-cost motors. The user benefits are:

- Microstepping extremely improved with low cost motors
- Motor runs smooth and quiet
- Torque reduced mechanical resonances yields improved torque
- Low frequency motor noise reduced by adapting the sine and cosine wave shift for the actual motor's manufacturing tolerance

Microstep Table

In order to minimize required memory and the amount of data to be programmed, only a quarter of the wave becomes stored. The internal microstep table maps the microstep wave from 0° to 90°. It becomes symmetrically extended to 360°. When reading out the table the 10-bit microstep counter *MSCNT* addresses the fully extended wave table. The table is stored in an incremental fashion, using each one bit per entry. Therefore only 256 bits (ofs00 to ofs255) are required to store the quarter wave. These bits are mapped to eight 32 bit registers. Each ofs bit controls the addition of an inclination *Wx* or *Wx*+1 when advancing one step in the table. When *Wx* is 0, a 1 bit in the table at the actual microstep position means "add one" when advancing to the next microstep. As the wave can have a higher inclination than 1, the base inclinations *Wx* can be programmed to -1, 0, 1, or 2 using up to four flexible programmable segments within the quarter wave. This way even a negative inclination can be realized. The four inclination segments are controlled by the position registers *X1* to *X3*. Inclination segment 0 goes from microstep position 0 to *X1*-1 and its base inclination is controlled by *W0*, segment 1 goes from *X1* to *X2*-1 with its base inclination controlled by *W1*, etc.

When modifying the wave, care must be taken to ensure a smooth and symmetrical zero transition when the quarter wave becomes expanded to a full wave. The maximum resulting swing of the wave should be adjusted to a range of -248

to 248 in order to give the best possible resolution while leaving headroom for the hysteresis-based chopper to add an offset.

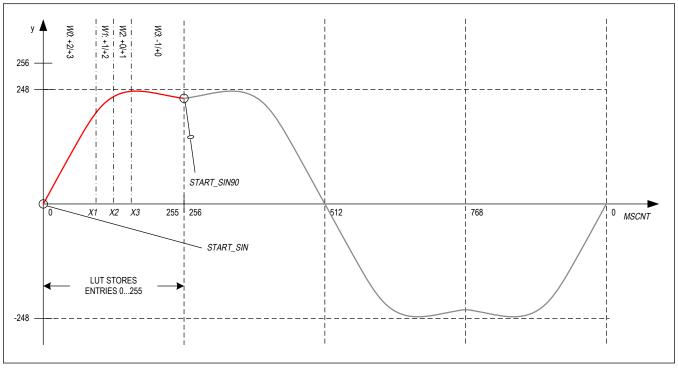


Figure 35. LUT Programming Example

When the microstep sequencer advances within the table, it calculates the actual current values for the motor coils with each microstep and stores them to the registers CUR_A and CUR_B . However, the incremental coding requires an absolute initialization, especially when the microstep table becomes modified. Therefore, CUR_A and CUR_B become initialized whenever MSCNT passes zero.

Matching the phase shift to the motor:

Two registers control the starting values of the tables.

- As the starting value at zero is not necessarily 0 (it might be 1 or 2), it can be programmed into the starting point register START_SIN.
- In the same way, the start of the second wave for the second motor coil needs to be stored in START_SIN90. This register stores the resulting table entry for a phase shift of 90° for a two-phase motor. To adapt for motor tolerances, the phase shift can be modified from 90° (256 microsteps) to anywhere between 45° and 135°, by adding a microstep offset in the range of -127 to +127 (register OFFSET_SIN90). Motor tolerance requires moderate adaptations of a few, to a few 10 steps, maximum. The required correction offset can be found out using StallGuard4 individual values SG4_IND and trimming the offset until both coils give a symmetrical result.

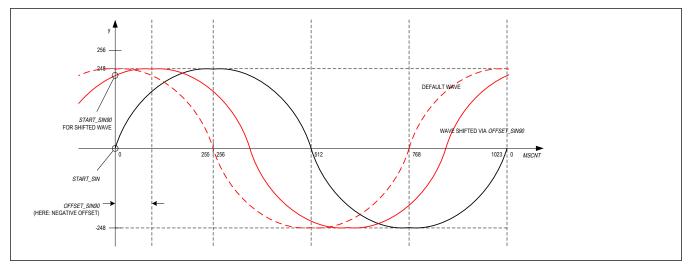


Figure 36. Shifting the Cosine Wave through OFFSET_SIN90

The default table is a good base for realizing an own table. This is an initialization example for the reset default microstep table:

```
MSLUT[0] = \%1010101010101010101010101010100 = 0xAAAAB554 MSLUT[1] = \%01001010101010101010101010101010 = 0x4A9554AA MSLUT[2] = \%0010010010010010010010010010010010 = 0x24492929 MSLUT[3] = \%0001000000010000010000100010 = 0x10104222 MSLUT[4] = \%11111011111111111111111111111111 = 0xFBFFFFF MSLUT[5] = \%101101011011101110111011110111101 = 0x49295556
```

MSLUT[7] = %0000000001000000100001000100010 = 0x00404222

MSLUTSEL = 0xFFFF8056: *X1* = 128, *X2* = 255, *X3* = 255 *W3* = %01, *W2* = %01, *W1* = %01, *W0* = %10

MSLUTSTART = 0x00F70000:

 $START_SIN_0 = 0$, $START_SIN90 = 247$

To optimize the motor phase shift, run the motor at a medium velocity in StealthChop2 and set $sg4_filt_en = 1$. Adapt the phase offset to match the StallGuard4 results for phase A $(SG4_IND_0+SG4_IND_1)$ to phase B $(SG4_IND_2+SG4_IND_3)$.

If phase A value is > phase B value, increment $OFFSET_SIN90$, otherwise decrement. Repeat until best match is found. Be sure to enter the correct value for $START_SIN90$. For an offset of -10 to +9 use $START_SIN90$ = 247; up to -17 or +17 use $START_SIN90$ = 246. $START_SIN$ is always 0.

ABN Incremental Encoder Interface

The TMC5240 is equipped with an incremental encoder interface for ABN encoders. The encoder gives positions through digital incremental quadrature signals (usually named A and B) and an index signal (usually named N for null, Z for zero, or I for index).

N Signal

The N signal can be used to clear the position counter or to take a snapshot. To continuously monitor the N channel and trigger clearing of the encoder position or latching of the position, where the N channel event has been detected, set the flag *clr_cont*. Alternatively, it is possible to react to the next encoder N channel event only, and automatically disable the clearing or latching of the encoder position after the first N signal event (flag *clr_once*). This might be desired because the encoder gives this signal once for each revolution.

Checking for encoder latched event

- Option 1: Check ENC_LATCH for change. It starts up with 0, and shows the encoder count where the N-event occurred, after starting motion for the first time. For consecutive rotations, it shows increased/decreased values and thus always changes.
- Option 2: Check for the interrupt output active and read the flag only following active interrupt output. DIAG0 pin needs to be configured for the interrupt lines using bit *diag0 nint step* from GCONF register.

Some encoders require a validation of the N signal by a certain configuration of A and B polarity. This can be controlled by *pol_A* and *pol_B* flags in the *ENCMODE* register. For example, when both *pol_A* and *pol_B* are set, an active N-event is only accepted during a high polarity of both A and B channels.

For clearing the encoder position *ENC_POS* with the next active N event set *clr_enc_x* = 1 and *clr_once* = 1 or *clr_cont* = 1.

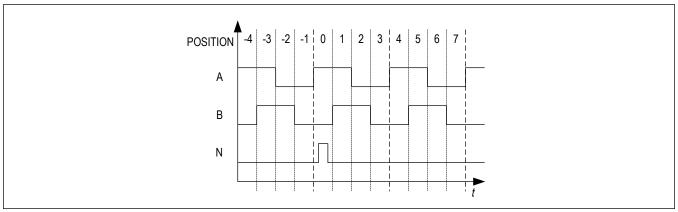


Figure 37. Outline of ABN Signals of an Incremental Encoder

The Encoder Counter X ENC

The encoder counter X_ENC holds the current encoder position ready for read out. Different modes concerning handling of the signals A, B, and N take into account active low and active high signals found with different types of encoders.

The Register ENC STATUS

The register *ENC_STATUS* holds the status concerning the event of an encoder clear upon an N channel signals. The register *ENC_LATCH* stores the actual encoder position on an N signal event always.

The Encoder Constant ENC CONST

The encoder constant (or encoder factor) *ENC_CONST* is added to or subtracted from the encoder counter on each polarity change of the quadrature signals AB of the incremental encoder. The encoder constant *ENC_CONST* represents a signed fixed point number (16.16) to facilitate the generic adaption between motors and encoders. In decimal mode, the lower 16 bits represent a number between 0 and 9999. For stepper motors equipped with incremental encoders the fixed number representation allows very comfortable parameterization. Additionally, mechanical gearing can easily be taken into account. Negating the sign of *ENC_CONST* allows inversion of the counting direction to match motor and encoder direction.

Examples:

- Encoder factor of 1.0: $ENC_CONST = 0x0001.0x00000 = FACTOR.FRACTION$ Encoder factor of -1.0: $ENC_CONST = 0xFFFF.0x00000$. This is the two's complement of 0x000100000. It equals (2¹⁶) - (FACTOR + 1)).(2¹⁶ - FRACTION)
- Decimal mode encoder factor 25.6: 00025.6000 = 0x0019.0x1770 = FACTOR.DECIMALS (DECIMALS = first 4 digits of fraction)
- Decimal mode encoder factor -25.6: $(2^{16} (25 + 1)) \cdot (10000 6000) = (2^{16} 26) \cdot (4000) = 0 \times FFE6.0 \times 0 FA0.$
- A negative encoder constant is calculated using the following equation: (2¹⁶ (FACTOR + 1)).(10000 DECIMALS)

Setting the Encoder to Match Motor Resolution

Encoder example settings for motor parameters:

- 1. USC = 256 microsteps
- 2. FSC = 200 fullstep motor
- 3. Factor = FSC x USC/encoder resolution

Table 25. Encoder Example Settings for a 200 Fullstep Motor with 256 Microsteps

ENCODER RESOLUTION	REQUIRED ENCODER FACTOR	COMMENT
200	256	
360	142.2222 = 9320675.5555/2 ¹⁶ = 1422222.2222/10000	No exact match possible!
500	102.4 = 6710886.4/2 ¹⁶ = 1024000/10000	Exact match with decimal setting
1000	51.2	Exact match with decimal setting
1024	50	
4000	12.8	Exact match with decimal setting
4096	12.5	
16384	3.125	

Example:

The encoder constant register shall be programmed to 51.2 in decimal mode. Therefore, set

ENC CONST = $51 \times 2^{16} + 0.2 \times 10000$

Reset, Disable/Stop and Power Down

Emergency Stop

The driver provides a negative active enable pin DRV ENN to safely switch off all power MOSFETs. This allows putting the motor into freewheeling. Further, it is a safe hardware function whenever an emergency stop not coupled to software is required. Some applications may require the driver to be put into a state with active holding current or with a passive braking mode. This is possible by programming the pin ENCA to act as a step disable function. Set GCONF flag stop_enable to activate this option. Whenever ENCA becomes pulled high and as long as it stays high, the motor stops abruptly and goes to the power down state, as configured through IHOLD, IHOLD DELAY, and StealthChop2 standstill options (in case StealthChop2 is in use).

External Reset and Sleep Mode

The reset and sleep mode are controlled with the SLEEPN pin.

A short pulse on SLEEPN with a duration >30µs results in a chip reset (also visible at the diagnostics outputs).

Very short pulses <30µs are filtered out and do not have an effect on operation.

If SLEEPN is kept at GND, the IC goes into low-power standby state (sleep mode). All internal supplies are switched off. In both cases, reset and standby, all internal register values and configurations are cleared and set to their defaults and

Analog Devices | 77 www.analog.com

power bridges are off.

After power-up or leaving sleep mode and reset condition the registers need to be reconfigured.

While reconfiguring the IC it is advised to still hold the bridge drivers disabled with DRV ENN.

Do not use during high motor velocity as energy fed back from the motor might damage the chip!

If not used, connect to V_S or $V_{CC\ IO}$ (this is a high-voltage pin).

Protections and Driver Diagnostics

The TMC5240 drivers supply a complete set of diagnostic and protection capabilities, like short to GND protection and undervoltage detection. A detection of an open load condition allows testing if a motor coil connection is interrupted. See the *DRV_STATUS* register table for details.

Besides the status flags the TMC5240 allows measurement and read out of the chip temperature as well as feedback on the motor phase winding temperature.

For improved system reliability and overall circuit protection, the TMC5240 contains an overvoltage comparator and a trigger output OV to control external switches in terms of excessive supply voltage increase.

Overcurrent Protection

Overcurrent protection (OCP) protects the device against short circuits to the rails (supply voltage and ground) and between the outputs (OUT1A, OUT2A, OUT1B, OUT2B).

The OCP threshold depends on the selected full-scale current range or see the Electrical Characteristics table for the respective threshold values.

The full-scale range is selected with the CURRENT_RANGE parameter in DRV_CONF register.

If the output current is greater than the OCP threshold for longer than the deglitch time (blanking time), then an OCP event is detected.

When an OCP event is detected, the H-bridge is immediately disabled.

The short protection is trying three times before a fault flag (s2ga, s2gb, s2vsa, s2vsb in DRV_STATUS register) is set and the bridge becomes continuously disabled.

The device is still alive and allows for configuration and status read out.

To re-enable the power bridge DRV_ENN pin must be cycled.

Another option is to disable the power bridge with TOFF = 0 in CHOPCONF and re-enable the bridges with TOFF > 0.

Thermal Protection and Shutdown

The TMC5240 has an internal thermal protection.

If the die temperature exceeds 165°C (typical value), a fault indication a fault flag (ot in DRV_STATUS) is raised and the driver is three-stated until the junction temperature drops below ca. 145°C (typical value). After that, the driver is reenabled.

In addition, the TMC5240 supports ADC-based configurable thermal pre-warning levels. This can be configured in register *OTW_OV_VTH* using parameter *OVERTEMPPREWARNING_VTH*. The ADC senses the chip average temperature, while the driver stages may be at a much higher temperature. This is only to specify that TMC5240 can go in thermal shutdown and the pre-warning may not be asserted, even if it is set at a low temperature.

Heat is mainly generated by the motor driver stages, and at increased voltage, by the internal voltage regulator. Most critical situations, where the driver MOSFETs could be overheated, are avoided when enabling the short to GND protection. For many applications, the overtemperature pre-warning indicates an abnormal operation situation and can be used to initiate user warning or power reduction measures like motor current reduction. The thermal shutdown is just an emergency measure and temperature rising to the shutdown level should be prevented by design.

Temperature Measurement

The TMC5240 offers functions to measure the internal chip temperature as well as the motor temperature.

These diagnostic functions can be helpful in applications to monitor the chip or PCB temperature and the motor

temperature development over time to increase system robustness or gather additional information for predictive maintenance.

Chip Temperature Measurement

Besides the overtemperature pre-warning and overtemperature flags the chip temperature itself can be determined using the *ADC TEMP* parameter in the *ADC TEMP* register.

The final temperature in degree Celsius can be calculated using the following formula:

ADC_TEMP =
$$7.7 \times \text{TEMP} + 2038$$

TEMP[°C] = $\frac{\text{ADC_TEMP} - 2038}{7.7}$

Motor Temperature Measurement

PWM_SCALE register shows the actual duty cycle in StealthChop2 operation. For a given motor current, the duty cycle depends on the phase resistance of the motor.

As the phase resistance is temperature dependent, *PWM_SCALE* can be used to estimate the actual motor temperature and monitor changes in the motor temperature over time.

This measurement is preferably done during motor standstill or slow movements.

Typically, the motor temperature does not change quickly.

Overvoltage Protection and OV Pin

A stepper motor application can generate significant overvoltage, especially when the motor becomes quickly decelerated from a high velocity, or when the motor stalls.

This voltage becomes fed back to the supply rails by the driver output stage.

For typical NEMA17 or larger motors, and also for smaller motors with sufficient flywheel mass, the energy fed back can be substantial, so that the power capacitors and circuit consumption will not be sufficient to keep the supply within its limits

To protect the driver as well as connected circuitry, the TMC5240 has an overvoltage detection and protection mechanism.

The OV output allows attaching an NPN or MOSFET with a power resistor (brake resistor) to dump the excess energy into the resistor.

The transistor chops with approximately 3kHz to 4kHz (depending on the clock frequency) to keep the supply within the limits.

The supply voltage is permanently monitored with the internal ADC.

The upper level for the supply voltage for a given application can be configured in register *OTW_OV_VTH* using parameter *OVERVOLTAGE_VTH*.

The actual ADC value for the supply voltage can be read via register ADC_VSUPPLY_AIN as parameter ADC_VSUPPLY.

Use the following equation to convert from the ADC value to V_S and vice versa:

```
V_S = ADC_VSUPPLY \times 9.732mV
```

The OV output pin shows the actual state of the overvoltage monitor.

As soon as and as long as ADC_VSUPPLY becomes greater or equal to OVERVOLTAGE_VTH the OV output pin changes to three-state/'Z'.

The OV output pin is an open-drain pin. The following diagram shows an example brake chopper circuit.

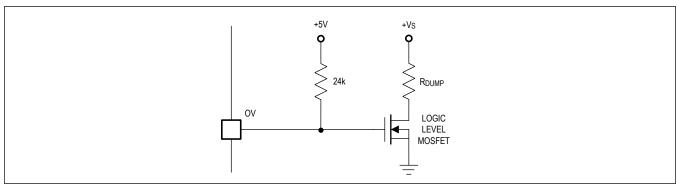


Figure 38. Brake Chopper Circuit Example

Short Protection (Short to GND and Short to VS)

The TMC5240 power stages are protected against a short-circuit condition by an additional measurement of the current flowing through the high-side MOSFETs. This is important, as most short circuit conditions result from a motor cable insulation defect, e.g., when touching the conducting parts connected to the system ground. The short detection is protected against spurious triggering, e.g., by ESD discharges, by retrying three times before switching off the motor.

Once a short condition is safely detected, the corresponding driver bridge becomes switched off, and the *s2ga* or *s2gb* flag becomes set. In order to restart the motor, the user must intervene by disabling and re-enabling the driver. It should be noted that the short to GND protection cannot protect the system and the power stages for all possible short events as a short event is rather undefined and a complex network of external components may be involved. Therefore, short circuits should basically be avoided.

Depending on the full-scale current setting, the low-side short protection triggers at different overcurrent protection thresholds.

Table 26. Overcurrent Protection Thresholds Based on the Full-Scale Current Setting

FULL-SCALE CURRENT SETTING (BITS)	OVERCURRENT PROTECTION THRESHOLD [A]						
10 (and 11)	5.0						
01	3.33						
00	1.67						

Open Load Diagnostics

Interrupted cables are a common cause for systems failing, e.g., when connectors are not firmly plugged. The TMC5240 detects open load conditions by checking if it can reach the desired motor coil current. This way, also undervoltage conditions, high motor velocity settings or short and overtemperature conditions may cause triggering of the open load flag. In motor stand still, open load cannot be measured as the coils might eventually have zero current.

To safely detect an interrupted coil connection, operate in SpreadCyle and check the open load flags following a motion of minimum four times the selected microstep resolution (= 4 fullsteps) into a single direction using low or nominal motor velocity operation only. However, the *ola* and *olb* flags have just informative character and do not cause any action of the driver.

Undervoltage Lockout Protection

The TMC5240 features an UVLO protection for V_S , $V_{CC\ IO}$, and the charge pump.

UVLO condition on VS is triggered below 4.05V (max).

UVLO condition on $V_{CC\ IO}$ is triggered below 1.95V (max).

UVLO condition on the charge pump is triggered is triggered in case of an error condition of the charge pump, e.g., due to a wrong capacitor value.

A V_S UVLO condition can be read from register *GSTAT* as flag vm_uvlo . This flag is a write-clear flag. It must be actively set to 1 to clear it.

During a V_{CC_IO} UVLO, no communication with the IC is possible and the driver is disabled. The DIAG0 pin is active low (open drain).

ESD Protection

The chip has internal ESD protection on every pin.

The TMC5240 motor phase output pins are protected up to 8kV HBM in the application when using a bypass capacitor of at least 1uF on the positive voltage supply (V_S pins).

This is not protection against hot plugging of a motor.

External Analog Input AIN Monitoring

TMC5240 offers an external analog input AIN, which is continuously sampled with the internal ADC.

The ADC sample value can be read out from parameter ADC_AIN in register ADC_VSUPPLY_AIN.

Use the following equation to convert from the ADC value to V_{AIN} and vice versa:

 $V_{AIN} = ADC_AIN \times 305.2uV$

The AIN input can be used to monitor external analog variables and parameters that may represent system level conditions and provide additional feedback on the system state.

Clock Oscillator and Clock Input

Using the Internal Clock

Directly tie the CLK input pin to GND close to the IC if the internal clock oscillator is to be used.

The internal clock is running at a typical frequency of 12.5MHz.

Using an External Clock

When an external clock is available, a frequency of 8MHz to 20MHz is recommended for optimum performance.

The required minimum and maximum duty cycle of the clock signal is defined in the *Electrical Characteristics*.

Especially at clock frequencies close to 20MHz, the clock's duty cycle requirements need to be satisfied.

Make sure that the clock source supplies clean CMOS output logic levels and steep slopes when using a high clock frequency.

The external clock input is enabled as soon as an external clock is provided at the CLK pin.

Reading out bit ext_c/lk in register IOIN gives feedback on which clock source is currently in use (1 = external clock).

In case the external clock fails or is switched off, the internal clocks takes over seamlessly and automatically to protect the driver from damage.

General Register Mapping and Register Information

This section gives some general information on the register map.

Details on all registers and their content are given in the Register Map section.

- All registers become reset to 0 upon power up, unless otherwise noted.
- Add 0x80 to the address Addr for write accesses!

Table 27. Overview of Register Map

REGISTERS	DESCRIPTION

Table 27. Overview of Register Map (continued)

General Configuration Registers	These registers contain global configuration global status flags interface configuration and I/O signal configuration
Ramp Generator Motion Control Register Set	This register set offers registers for
Velocity Dependent Driver Feature Control Register Set	This register set offers registers for
Direct Mode Registers	This register group offers registers used for the direct coil current control mode.
Encoder Register Set	The encoder register set offers all registers needed for proper ABN encoder operation.
ADC Registers	This register group offers registers to control and read the internal ADC.
Motor Driver Register Set	This register set offers registers for setting/reading out microstep table and counter chopper and driver configuration CoolStep and StallGuard configuration DcStep configuration reading out StallGuard values and driver error flags

Register Map

TMC5240

ADDRESS	NAME	MSB							LSB		
General Co	nfiguration Registers										
	GCONF[31:24]	_	_	_	_	_	_	_	_		
	GCONF[23:16]	_	_	_		length_step	_pulse[3:0]		direct_m ode		
0x00	GCONF[15:8]	stop_ena ble	small_hy steresis	diag1_po scomp_p ushpull	diag0_int _pushpul I	_	_	_	diag1_np oscomp_ dir		
	GCONF[7:0]	diag0_ni nt_step	-	-	shaft	-	en_pwm _mode	fast_stan dstill	-		
	GSTAT[31:24]	-	_	_	_	_	_	_	_		
	<u>GSTAT[23:16]</u>	_	_	_	_	_	_	_	_		
0x01	<u>GSTAT[15:8]</u>	_	_	_	_	_	_	_	_		
	<u>GSTAT[7:0]</u>	_	_	_	vm_uvlo	register_ reset	uv_cp	drv_err	reset		
	IFCNT[31:24]	_	_	_	_	_	_	_	_		
0.400	IFCNT[23:16]	-	_	-	_	-	-	-	-		
0x02	IFCNT[15:8]	-	_	_	_	_	-	-	-		
	IFCNT[7:0]				IFCN	T[7:0]					
	NODECONF[31:24]	-	_	_	_	_	-	-	-		
0x03	NODECONF[23:16]	-	-	-	_	-	-	-	-		
UXUS	NODECONF[15:8]	-	_	_	_		SENDDE	ELAY[3:0]			
	NODECONF[7:0]	NODEADDR[7:0]									
	IOIN[31:24]				VERSI	ON[7:0]					
	IOIN[23:16]	-	_	_	_	_	SIL	ICON_RV[2	2:0]		
0x04	IOIN[15:8]	ADC_ER R	EXT_CL K	EXT_RE S_DET	OUTPUT	COMP_ B1_B2	COMP_ A1_A2	COMP_ B	COMP_ A		
	IOIN[7:0]	reserved	UART_E N	ENCN	DRV_EN N	ENCA	ENCB	REFR	REFL		
	X_COMPARE[31:24]			•	X_COMPA	ARE[31:24]					
0.405	X_COMPARE[23:16]				X_COMPA	ARE[23:16]					
0x05	X_COMPARE[15:8]				X_COMP	ARE[15:8]					
	X_COMPARE[7:0]				X_COMF	PARE[7:0]					
	X_COMPARE_REPEAT [31:24]	_	_	_	_	_	_	_	_		
0.00	X_COMPARE_REPEAT [23:16]		•	X_C	OMPARE_	REPEAT[23	3:16]				
0x06	X_COMPARE_REPEAT [15:8]			X_0	COMPARE_	_REPEAT[1	5:8]				
	X_COMPARE_REPEAT [7:0]			X_	COMPARE	_REPEAT[7	':0]				
0.04	DRV_CONF[31:24]	_	_	_	_	_	_	_	_		
0x0A	DRV_CONF[23:16]	_	_	-	_	-	-	-	_		

ADDRESS	NAME	MSB							LSB			
	DRV_CONF[15:8]	_	_	_	_	_	_	_	_			
	DRV_CONF[7:0]	-	_		CONTROL[:0]	_	_		Γ_RANGE[0]			
	GLOBAL SCALER[31:24]	-	-	_	_	_	_	_	_			
0x0B	GLOBAL SCALER[23:16]	-	_	_	_	_	_	_	_			
	GLOBAL SCALER[15:8]	_	_	_	_	-	-	-	_			
	GLOBAL SCALER[7:0]			•	GLOBALS	CALER[7:0]						
Velocity De	pendent Configuration Re	gisters										
	IHOLD_IRUN[31:24]	_	_	_	_		IRUNDE	LAY[3:0]				
040	IHOLD_IRUN[23:16]	_	_	_	_		IHOLDDI	ELAY[3:0]				
0x10	IHOLD_IRUN[15:8]	_	_	_		1	IRUN[4:0]					
	IHOLD_IRUN[7:0]	_	_	_			IHOLD[4:0]					
	TPOWERDOWN[31:24]	_	_	_	_	_	_	_	_			
044	TPOWERDOWN[23:16]	_	_	_	_	_	_	-	_			
0x11	TPOWERDOWN[15:8]	_	_	_	_	_	_	_	_			
	TPOWERDOWN[7:0]		•		TPOWERDOWN[7:0]							
	TSTEP[31:24]	_	_	_	_	_	_	_	_			
040	TSTEP[23:16]	_	_	_	_		TSTEF	P[19:16]				
-	TSTEP[15:8]				TSTE	P[15:8]						
	TSTEP[7:0]				TSTE	P[7:0]						
	TPWMTHRS[31:24]	_	_	_	_	_	_	_	_			
040	TPWMTHRS[23:16]	_	_	_	_		TPWMTH	IRS[19:16]	•			
0x13	TPWMTHRS[15:8]	TPWMTHRS[15:8]										
	TPWMTHRS[7:0]				TPWMTI	HRS[7:0]						
	TCOOLTHRS[31:24]	_	_	_	_	_	_	_	_			
0.44	TCOOLTHRS[23:16]	_	_	_	_		TCOOLTH	HRS[19:16]				
0x14	TCOOLTHRS[15:8]		•		TCOOLTI	HRS[15:8]						
	TCOOLTHRS[7:0]				TCOOLT	HRS[7:0]						
	THIGH[31:24]	_	_	_	_	_	_	_	_			
0.45	THIGH[23:16]	_	_	_	_		THIGH	[19:16]	•			
0x15	THIGH[15:8]		•		THIGH	H[15:8]						
	THIGH[7:0]				THIG	H[7:0]						
Ramp Gene	erator Registers											
	RAMPMODE[31:24]	_	_	_	_	_	_	_	_			
0,00	RAMPMODE[23:16]	_	_	_	_	_	_	_	_			
0x20	RAMPMODE[15:8]	_	_	_	_	_	_	_	_			
	RAMPMODE[7:0]	_	_	_	_	_	_	RAMPM	ODE[1:0]			
	XACTUAL[31:24]			_	XACTUA	L[31:24]		•				
0.04	XACTUAL[23:16]					L[23:16]						
0x21	XACTUAL[15:8]					AL[15:8]						
	XACTUAL[7:0]					IAL[7:0]						

ADDRESS	NAME	MSB							LSB			
	VACTUAL[31:24]	_	_	_	_	_	_	_	_			
000	VACTUAL[23:16]	'		1	VACTU	AL[23:16]	'		'			
0x22	VACTUAL[15:8]				VACTU	AL[15:8]						
	VACTUAL[7:0]	VACTUAL[7:0]										
	VSTART[31:24]	-	_	_	_	_	_	_	_			
000	VSTART[23:16]	_	_	_	_	_	_	VSTAF	RT[17:16]			
0x23	VSTART[15:8]	VSTART[15:8]										
	VSTART[7:0]	VSTART[7:0]										
	A1[31:24]	-	_	_	_	_	_	_	_			
0.04	A1[23:16]	-	_	-	_	-	_	A1[17:16]			
0x24	A1[15:8]	A1[15:8]										
	A1[7:0]	A1[7:0]										
	V1[31:24]	-	_	_	_	_	_	_	_			
005	V1[23:16]	_	_	_	_		V1[1	9:16]				
0x25	V1[15:8]	'		1	V1[15:8]						
	V1[7:0]	V1[7:0]										
	AMAX[31:24]	_	_	_	_	_	_	_	_			
0.00	AMAX[23:16]	_	_	_	_	_	_	AMA	([17:16]			
0x26	AMAX[15:8]	'		1	AMA	X[15:8]	'					
	AMAX[7:0]				AMA	X[7:0]						
	VMAX[31:24]	-	_	_	_	_	_	_	_			
007	VMAX[23:16]	- VMAX[22:16]										
0x27	VMAX[15:8]	VMAX[15:8]										
	VMAX[7:0]	VMAX[7:0]										
	DMAX[31:24]	-	_	_	_	_	_	_	_			
000	DMAX[23:16]	_	_	_	_	_	_	DMAX	· ([17:16]			
0x28	DMAX[15:8]	'		•	DMA	X[15:8]						
	DMAX[7:0]				DMA	X[7:0]						
	TVMAX[31:24]	-	_	_	_	_	_	_	_			
0.20	TVMAX[23:16]	_	_	_	_	_	_	_	_			
0x29	TVMAX[15:8]	'		•	TVMA	X[15:8]						
	TVMAX[7:0]				TVMA	AX[7:0]						
	D1[31:24]	-	_	_	_	_	_	_	_			
004	D1[23:16]	_	_	_	_	_	_	D1[17:16]			
0x2A	D1[15:8]			•	D1[15:8]						
	D1[7:0]				D1	[7:0]						
	VSTOP[31:24]	_	_	_	_	_	_	_	_			
000	VSTOP[23:16]	_	_	_	_	_	_	VSTO	P[17:16]			
0x2B	VSTOP[15:8]			•	VSTO	P[15:8]	•	•				
	VSTOP[7:0]				VSTC	DP[7:0]						
0.00	TZEROWAIT[31:24]	_	_	_	_	_	_	_	_			
0x2C	TZEROWAIT[23:16]	_	_	_	_	_	_	_	_			

Analog Devices | 85 www.analog.com

ADDRESS	NAME	MSB							LSB			
	TZEROWAIT[15:8]				TZEROW	/AIT[15:8]						
	TZEROWAIT[7:0]					VAIT[7:0]						
	XTARGET[31:24]					 ET[31:24]						
	XTARGET[23:16]					T[23:16]						
0x2D	XTARGET[15:8]	XTARGET[15:8]										
	XTARGET[7:0]	XTARGET[7:0]										
	V2[31:24]	_	_	_	_	_	_	_	_			
00	V2[23:16]	_	_	_	_		V2[1	9:16]				
0x2E	V2[15:8]	V2[15:8]										
	<u>V2[7:0]</u>				V2[7:0]						
	A2[31:24]	_	_	_	_	_	_	_	_			
٥٠٠٥٢	A2[23:16]	_	_	_	_	_	-	A2[1	7:16]			
0x2F	A2[15:8]	A2[15:8]										
	A2[7:0]				A2	7:0]						
	D2[31:24]	_	_	_	_	_	_	_	_			
0x30	D2[23:16]	_	_	_	_	_	-	7:16]				
UXSU	D2[15:8]	D2[15:8]										
	<u>D2[7:0]</u>	D2[7:0]										
Ramp Gene	erator Driver Feature Co	ntrol Registe	ers									
0x33	<u>VDCMIN[31:24]</u>	_	_	_	_	_	_	_	_			
	<u>VDCMIN[23:16]</u>	-			V	DCMIN[14:	8]					
0,00	<u>VDCMIN[15:8]</u>	VDCMIN[7:0]										
	VDCMIN[7:0]	reserved[7:0]										
	SW_MODE[31:24]	_	_	_	_	_	_	-	_			
	<u>SW_MODE[23:16]</u>	_	_	_	_	_	_	_	_			
0x34	SW_MODE[15:8]	-	virtual_st op_enc	en_virtua l_stop_r	en_virtua I_stop_I	en_softst op	sg_stop	en_latch _encoder	latch_r_i nactive			
	SW_MODE[7:0]	latch_r_a ctive	latch_l_i nactive	latch_l_a ctive	swap_lr	pol_stop _r	pol_stop _l	stop_r_e nable	stop_l_e nable			
	RAMP_STAT[31:24]	_	-	-	_	-	-	-	_			
	RAMP_STAT[23:16]	_	_	_	_	_	_	_	_			
0x35	RAMP_STAT[15:8]	status_vi rtual_sto p_r	status_vi rtual_sto p_l	status_s g	second_ move	t_zerowa it_active	vzero	position_ reached	velocity_ reached			
	RAMP_STAT[7:0]	event_po s_reache d	event_st op_sg	event_st op_r	event_st op_l	status_la tch_r	status_la tch_l	status_st op_r	status_st op_l			
<u></u>	XLATCH[31:24]				XLATC	H[31:24]						
0x36	XLATCH[23:16]				XLATC	H[23:16]						
UXSU	XLATCH[15:8]				XLATC	:H[15:8]						
	XLATCH[7:0]				XLAT	CH[7:0]						
Encoder Re	egisters											
0x38	ENCMODE[31:24]	_	_	_	_	_	_	_				
UXOO	ENCMODE[23:16]	-	-	-	_	_	-	-				

Analog Devices | 86 www.analog.com

ADDRESS	NAME	MSB							LSB		
	ENCMODE[15:8]	-	_	_	_	_	enc_sel_ decimal	latch_x_ act	clr_enc_ x		
	ENCMODE[7:0]	pos_neg_	_edge[1:0]	clr_once	clr_cont	ignore_A B	pol_N	pol_B	pol_A		
	X_ENC[31:24]		X_ENC[31:24]								
0x39	X_ENC[23:16]					[23:16]					
07.00	<u>X_ENC[15:8]</u>		X_ENC[15:8]								
	X_ENC[7:0]					C[7:0]					
	ENC_CONST[31:24]					NST[31:24]					
0x3A	ENC_CONST[23:16]					NST[23:16]					
	ENC_CONST[15:8]					NST[15:8]					
	ENC_CONST[7:0]		I		ENC_CC	NST[7:0]	ı				
	ENC_STATUS[31:24]	_	_	_	_	_	_	_	_		
Ov3D	ENC_STATUS[23:16]	_	_	_	_	_	_	_	_		
0x3B	ENC_STATUS[15:8]		_	_	_	_	_	-	_		
	ENC_STATUS[7:0]	-	_	_	_	_	_	deviation _warn	n_event		
	ENC_LATCH[31:24]	ENC_LATCH[31:24]									
0x3C	ENC_LATCH[23:16]	ENC_LATCH[23:16] ENC_LATCH[15:8]									
	ENC_LATCH[15:8]										
	ENC_LATCH[7:0]		Г	1	ENC_LA	TCH[7:0]	I	ı			
	ENC_DEVIATION[31:24]	-	_	-	_	_	_	_	-		
0x3D	ENC_DEVIATION[23:16]	ENC_DEVIATION[19:16]									
	ENC_DEVIATION[15:8]				ENC_DEVI	ATION[15:8]]				
	ENC_DEVIATION[7:0]				ENC_DEV	ATION[7:0]					
	VIRTUAL_STOP_L[31:2 4]			V	IRTUAL_S	ΓΟΡ_L[31:2	4]				
0x3E	VIRTUAL_STOP_L[23:1 6]			V	'IRTUAL_S	ΓΟΡ_L[23:1	6]				
	VIRTUAL_STOP_L[15:8			\	/IRTUAL_S	TOP_L[15:8	3]				
	VIRTUAL STOP L[7:0]				VIRTUAL_S	STOP_L[7:0]					
	VIRTUAL_STOP_R[31: 24]					OP_R[31:2					
0x3F	VIRTUAL STOP R[23: 16]			V	IRTUAL_S	TOP_R[23:1	6]				
	VIRTUAL_STOP_R[15: 8]	VIRTUAL_STOP_R[15:8]									
	VIRTUAL_STOP_R[7:0]			,	VIRTUAL_S	STOP_R[7:0]				
ADC Regist	ters										
0.50	ADC_VSUPPLY_AIN[3 1:24]	-	_			A	DC_AIN[12	8]			
0x50	ADC_VSUPPLY_AIN[2 3:16]				ADC_A	AIN[7:0]					

ADDRESS	NAME	MSB							LSB				
	ADC_VSUPPLY_AIN[1 5:8]	-	_	_		ADC.	_VSUPPLY	[12:8]					
	ADC_VSUPPLY_AIN[7: 0]				ADC_VSU	PPLY[7:0]							
	ADC_TEMP[31:24]	-	_	-		RE	SERVED[1	2:8]					
0x51	ADC_TEMP[23:16]				RESER\	/ED[7:0]							
0.51	ADC_TEMP[15:8]	_	_	_		AD	C_TEMP[1	2:8]					
	ADC_TEMP[7:0]				ADC_TE	MP[7:0]							
	OTW_OV_VTH[31:24]	OVERTEMPPREWARNING_VTH[12:8]											
0x52	OTW_OV_VTH[23:16]			OVERT	EMPPREW	'ARNING_V	TH[7:0]						
0,02	OTW_OV_VTH[15:8]	_											
	OTW_OV_VTH[7:0]			0	VERVOLTA	GE_VTH[7:	0]						
Motor Drive	er Registers												
	MSLUT_0[31:24]				MSLUT_	0[31:24]							
0x60	MSLUT_0[23:16]				MSLUT_	0[23:16]							
0,00	MSLUT_0[15:8]				MSLUT	_0[15:8]							
	MSLUT_0[7:0]				MSLUT	_0[7:0]							
	MSLUT_1[31:24]				MSLUT_	1[31:24]							
0x61	MSLUT_1[23:16]				MSLUT_	1[23:16]							
0.01	MSLUT_1[15:8]				MSLUT	_1[15:8]							
	MSLUT_1[7:0]				MSLUT	_1[7:0]							
	MSLUT_2[31:24]	MSLUT_2[31:24]											
0x62	MSLUT_2[23:16]	MSLUT_2[23:16]											
0.02	MSLUT_2[15:8]	MSLUT_2[15:8]											
	MSLUT_2[7:0]				MSLUT	_2[7:0]							
	MSLUT_3[31:24]				MSLUT_	3[31:24]							
0x63	MSLUT_3[23:16]				MSLUT_	3[23:16]							
0,00	MSLUT_3[15:8]												
	MSLUT_3[7:0]		MSLUT_2[15:8] MSLUT_2[7:0] MSLUT_3[31:24] MSLUT_3[23:16] MSLUT_3[15:8] MSLUT_3[7:0]										
	MSLUT_4[31:24]				MSLUT_	4[31:24]							
0x64	MSLUT_4[23:16]				MSLUT_	4[23:16]							
OAO I	MSLUT_4[15:8]				MSLUT								
	MSLUT_4[7:0]				MSLUT	_4[7:0]							
	MSLUT_5[31:24]					5[31:24]							
0x65	MSLUT_5[23:16]				MSLUT_	5[23:16]							
0,100	MSLUT_5[15:8]					_5[15:8]							
	MSLUT_5[7:0]				MSLUT								
	MSLUT_6[31:24]					6[31:24]							
0x66	MSLUT_6[23:16]					6[23:16]							
	MSLUT_6[15:8]					_6[15:8]							
	MSLUT_6[7:0]					_6[7:0]							
0x67	MSLUT_7[31:24]					7[31:24]							
2	MSLUT_7[23:16]				MSLUT_	7[23:16]							

ADDRESS	NAME	MSB							LSB	
	MSLUT_7[15:8]				MSLUT	7[15:8]				
	MSLUT_7[7:0]				MSLU ⁻	Γ_7[7:0]				
	MSLUTSEL[31:24]				X3	[7:0]				
	MSLUTSEL[23:16]				X2	[7:0]				
0x68	MSLUTSEL[15:8]				X1	[7:0]				
	MSLUTSEL[7:0]	W3	[1:0]	W2[1:0]	W1	[1:0]	W)[1:0]	
	MSLUTSTART[31:24]			1	SIN90[7:0]		1			
0.00	MSLUTSTART[23:16]				START_S	SIN90[7:0]				
0x69	MSLUTSTART[15:8]	_	_	_	_	_	_	_	_	
	MSLUTSTART[7:0]			,	START_	SIN[7:0]				
	MSCNT[31:24]	_	_	_	_	_	_	_	_	
0.46.4	MSCNT[23:16]	_	_	-	_	_	-	-	_	
0x6A	MSCNT[15:8]	_	_	_	_	_	-	MSC	NT[9:8]	
	MSCNT[7:0]		MSCNT[7:0]							
	MSCURACT[31:24]	_	_	_	-	_	_	_	CUR_A[8]	
0x6B	MSCURACT[23:16]	CUR_A[7:0]								
UXUB	MSCURACT[15:8]	_	_	_	_	_	_	_	CUR_B[8]	
	MSCURACT[7:0]		CUR_B[7:0]							
	CHOPCONF[31:24]	diss2vs	diss2g	reserved	intpol		MRES	S[3:0]		
	CHOPCONF[23:16]		TPFD[3:0]			vhighch m	vhighfs	_	TBL[1]	
0x6C	CHOPCONF[15:8]	TBL[0]	chm	_	disfdcc	fd3	HEN	D_OFFSE	T[3:1]	
	CHOPCONF[7:0]	HEND_O FFSET[0	HST	RT_TFD210	0[2:0]		TOFF	- [3:0]		
	COOLCONF[31:24]	_	_	_	_	_	_	_	sfilt	
000	COOLCONF[23:16]	_				sgt[6:0]				
0x6D	COOLCONF[15:8]	seimin	sedr	n[1:0]	_		sema	x[3:0]		
	COOLCONF[7:0]	_	seup	[1:0]	_		semir	n[3:0]		
	DCCTRL[31:24]	_	_	-	_	-	_	_	_	
0x6E	DCCTRL[23:16]				DC_S	G[7:0]				
UXUE	DCCTRL[15:8]	-	_	_	-	_	_	DC_T	IME[9:8]	
	DCCTRL[7:0]				DC_TI	ME[7:0]			_	
	DRV_STATUS[31:24]	stst	olb	ola	s2gb	s2ga	otpw	ot	stallguar d	
0x6F	DRV_STATUS[23:16]	_	_	-		CS	_ACTUAL[4	1:0]		
	DRV_STATUS[15:8]	fsactive	stealth	s2vsb	s2vsa	_	_	SG_RE	SULT[9:8]	
	DRV_STATUS[7:0]				SG_RES	SULT[7:0]				
	PWMCONF[31:24]		PWM_I	_IM[3:0]			PWM_R	REG[3:0]		
0x70	PWMCONF[23:16]	pwm_dis _reg_stst	pwm_me as_sd_e nable	FREEWH	IEEL[1:0]	pwm_aut ograd	pwm_aut oscale PWM_FREQ[1:0]		REQ[1:0]	

ADDRESS	NAME	MSB							LSB		
	PWMCONF[7:0]				PWM_C	DFS[7:0]		•			
	PWM_SCALE[31:24]	_	_	_	_	_	_	_	PWM_S CALE_A UTO[8]		
0x71	PWM_SCALE[23:16]		PWM_SCALE_AUTO[7:0]								
	PWM_SCALE[15:8]	_	_	_	_	_	_		ALE_SUM[8]		
	PWM_SCALE[7:0]			•	PWM_SCAL	E_SUM[7:0)]	1			
	PWM_AUTO[31:24]	_	_	_	_	_	_	_	_		
0x72	PWM_AUTO[23:16]				PWM_GRAI	D_AUTO[7:0)]	•			
UX72	PWM_AUTO[15:8]	_	_	_	_	_	_	_	_		
	PWM_AUTO[7:0]				PWM_OFS	_AUTO[7:0]					
	SG4_THRS[31:24]	_	_	_	_	_	_	_	_		
	SG4_THRS[23:16]	_	_	_	_	_	_	_	_		
0x74	SG4_THRS[15:8]	_	_	_	_	_	_	sg_angle _offset	sg4_filt_ en		
	SG4_THRS[7:0]				SG4_TI	HRS[7:0]			,		
	SG4_RESULT[31:24]	_	_	_	_	_	_	_	-		
0x75	SG4_RESULT[23:16]	_	_	_	_	-	_	_	-		
0.75	SG4_RESULT[15:8]	_	_	_	_	-	_	SG4_RE	SULT[9:8]		
	SG4_RESULT[7:0]	SG4_RESULT[7:0]									
	SG4_IND[31:24]				SG4_IN	D_3[7:0]					
0x76	SG4_IND[23:16]				SG4_IN	D_2[7:0]					
0.70	SG4_IND[15:8]				SG4_IN	D_1[7:0]					
	SG4_IND[7:0]				SG4_IN	D_0[7:0]					

Register Details

GCONF (0x0)

Global Configuration Flags

BIT	31	30	29	28	27	26	25	24
Field	_	_	_	_	_	_	-	_
Reset	_	_	_	_	_	_	_	-
Access Type	_	_	-	-	-	-	_	_
BIT	23	22	21	20	19	18	17	16
Field	_	_	_		length_step	pulse[3:0]		direct_mode
Reset	_	_	-		0x0			0x0
Access Type	-	-	-	Write, Read Write, Re			Write, Read	

BIT	15	14	13	12		11	10	9	8
Field	stop_enable	small_hyste resis	diag1_posc omp_pushp ull	diag0_int_p ushpull		_	-	-	diag1_npos comp_dir
Reset	0x0	0x0	0x0	0x0		-	-	-	0x0
Access Type	Write, Read	Write, Read	Write, Read	Write, Read		_	-	-	Write, Read
BIT	7	6	5	4		3	2	1	0
Field	diag0_nint_ step	_	_	shaft		_	en_pwm_m ode	fast_standst ill	_
Reset	0x0	_	_	0x0		_	0x0	0x0	_
Access Type	Write, Read	-	-	Write, Read		_	Write, Read	Write, Read	-
BITEIEI D	RITS		DESCRIPTION				ח	ECODE	

BITFIELD	BITS	DESCRIPTION	DECODE
length_step_ pulse	20:17	cDriver only: length_step_pulse = 0: STEP output toggles upon each step; length_step_pulse = 115: STEP pin high time in number of clock cycles	
direct_mode	16	Enable direct motor phase current control via serial interface.	0x0: Normal operation 0x1: Motor coil currents and polarity directly programmed via serial interface: Register XTARGET (0x2D) specifies signed coil A current (bits 80) and coil B current (bits 2416). In this mode, the current is scaled by IHOLD setting. Velocity based current regulation of StealthChop2 is not available in this mode. The automatic StealthChop2 current regulation will work only for low stepper motor velocities.
stop_enable	15	Motor hard stop function enable.	0x0: Normal operation 0x1: Emergency stop: ENCA stops the sequencer when tied high (no steps become executed by the sequencer, motor goes to standstill state).
small_hyster esis	14		0x0: Hysteresis for step frequency comparison is 1/16 0x1: Hysteresis for step frequency comparison is 1/32
diag1_posco mp_pushpull	13	DIAG1 output type configuration.	0x0: DIAG1 is open collector output (active low) 0x1: Enable DIAG1 push pull output (active high)
diag0_int_pu shpull	12	DIAG0 output type configuration.	0x0: DIAG0_SW is open collector output (active low) 0x1: Enable DIAG0_SW push pull output (active high)
diag1_nposc omp_dir	8	DIAG1 output configuration, when not using UART.	0x0: DIAG1 outputs position compare signal 0x1: Enable DIAG1 as DIR output for external STEP/DIR driver
diag0_nint_st ep	7	DIAG0 output configuration.	0x0: DIAG0 outputs interrupt signal 0x1: Enable DIAG0 as STEP output (half frequency, dual edge triggered or frequency when length_step_pulse != 0) for external STEP/DIR driver
shaft	4	Change motor direction / direction sign	0x0: Default motor direction 0x1: Inverse motor direction

BITFIELD	BITS	DESCRIPTION	DECODE
en_pwm_mo de	2	Enable the StealthChop2 mode	0x0: no StealthChop2 0x1: StealthChop2 voltage PWM mode enabled (depending on velocity thresholds). Switch from off to on state while in stand-still and at IHOLD= nominal IRUN current, only.
fast_standstill	1	Timeout for step execution until standstill detection	0x0: Normal time: 2^20 clocks 0x1: Short time: 2^18 clocks

GSTAT (0x1)

Global Status Flags

(Re-Write with '1' bit to clear respective flags)

BIT	31	30	29	28	27	26	25	24
Field	_	-	_	-	-	-	_	_
Reset	_	_	_	_	_	_	_	_
Access Type	_	_	-	_	_	_	_	_
BIT	23	22	21	20	19	18	17	16
Field	_	_	_	_	_	_	_	_
Reset	_	_	_	_	_	_	_	_
Access Type	_	_	_	_	_	_	_	_
BIT	15	14	13	12	11	10	9	8
Field	_	-	-	_	-	-	-	_
Reset	_	_	-	_	_	_	_	_
Access Type	_	_	_	_	_	_	_	_
BIT	7	6	5	4	3	2	1	0
Field	_	-	_	vm_uvlo	register_res et	uv_cp	drv_err	reset
Reset	_	-	_	0x1	0x1	0x1	0x0	0x1
Access Type	_	-	-	Write 1 to Clear, Read				

BITFIELD	BITS	DESCRIPTION	DECODE
vm_uvlo	4	1: V _S undervoltage has occured since last reset. (Hint: will be active after initial bootup. Clear flag after bootup to detect fault when device is operating)	
register_rese t	3	Hint: will be active after initial bootup. Clear flag after bootup to detect regmap reset when device is operating	0x0: normal operation 0x1: Indicates that the registermap has been reset. All registers have been cleared to reset values.
uv_cp	2	Charge pump undervoltage condition flag. (Hint: will be active after initial bootup. Clear flag after bootup to detect fault when device is operating)	0x0: normal operation 0x1: Indicates an undervoltage on the charge pump. The driver is disabled during undervoltage. This flag is latched for information.

BITFIELD	BITS	DESCRIPTION	DECODE
drv_err	1	Driver error flag	0x0: normal operation 0x1: Indicates, that the driver has been shut down due to overtemperature or short circuit detection. Read DRV_STATUS for details. The flag can only be cleared when the temperature is below the limit again
reset	0	Reset flag (Hint: will be active after initial bootup. Clear flag after bootup to detect device was reset during operation)	0x0: normal operation 0x1: Indicates that the IC has been reset.

IFCNT (0x2)

Interface transmission counter.

This register becomes incremented with each successful UART interface write access. It can be read out to check the serial transmission for lost data. Read accesses do not change the content. Disabled in SPI operation. The counter wraps around from 255 to 0.

	1			1	I		1	1	
BIT	31	30	29	28	27	26	25	24	
Field	_	_	_	_	_	_	_	_	
Reset	_	_	_	_	-	_	_	_	
Access Type	_	_	-	-	-	_	_	_	
BIT	23	22	21	20	19	18	17	16	
Field	_	_	-	_	_	_	_	_	
Reset	_	_	-	_	-	_	_	_	
Access Type	-	_	-	_	_	_	-	_	
BIT	15	14	13	12	11	10	9	8	
Field	_	_	_	_	_	_	_	_	
Reset	_	_	-	_	_	_	_	_	
Access Type	_	-	-	-	-	_	-	_	
BIT	7	6	5	4	3	2	1	0	
Field		IFCNT[7:0]							
Reset				0:	x0				
Access Type		Read Only							

BITFIELD	BITS	DESCRIPTION
IFCNT	7:0	Interface transmission counter. This register becomes incremented with each successful UART interface write access. It can be read out to check the serial transmission for lost data. Read accesses do not change the content. Disabled in SPI operation. The counter wraps around from 255 to 0.

NODECONF (0x3)

BIT	31	30	29	28	27	26	25	24
Field	_	_	_	_	_	_	_	_
Reset	_	_	_	_	_	_	_	_
Access Type	-	-	-	-	-	-	_	_
BIT	23	22	21	20	19	18	17	16
Field	_	_	_	_	_	_	_	_
Reset	_	_	_	_	_	_	_	_
Access Type	_	-	_	-	_	-	_	_
BIT	15	14	13	12	11	10	9	8
Field	_	_	_	_		SENDDI	ELAY[3:0]	•
Reset	_	_	_	_		0	x0	
Access Type	_	_	_	_		Write	, Read	
BIT	7	6	5	4	3	2	1	0
Field		NODEADDR[7:0]						
1 101G		0x0						
Reset				0:	x0			

BITFIELD	BITS	DESCRIPTION	DECODE
SENDDELAY	11:8	SWUART Node Configuration	0x0: 8 bit times (not allowed with multiple nodes) 0x2: 3 x 8 bit times 0x4: 5 x 8 bit times 0x6: 7 x 8 bit times 0x8: 9 x 8 bit times 0xA: 11 x 8 bit times 0xC: 13 x 8 bit times 0xE: 15 x 8 bit times
NODEADDR	7:0	NODEADDR: These eight bits set the address of device for the UART interface. The address becomes incremented by one up to seven as defined by SDI, SCK, CSN. CSN, SCK, SDI 000: +0 001: +1 010: +2 011: +3 100: +4 101: +5 110: +6 111: +7 Range: 0-254 (do not increment beyond 254)	

IOIN (0x4)

Reads the state of all input pins available and returns IC revision in highest byte

BIT	31	30	29	28	27	26	25	24		
Field		VERSION[7:0]								
Reset										
Access Type		Read Only								
BIT	23	22	21	20	19	18	17	16		
Field	_	_	_	_	_	S	ILICON_RV[2:	0]		
Reset	_	_	-	-	_		0x0			
Access Type	-	_	_	_	_	Read Only				
BIT	15	14	13	12	11	10	9	8		
Field	ADC_ERR	EXT_CLK	EXT_RES_ DET	OUTPUT	COMP_B1_ B2	COMP_A1_ A2	COMP_B	COMP_A		
Reset	0x0	0x0	0x0	0x1	0x0	0x0	0x0	0x0		
Access Type	Read Only	Read Only	Read Only	Write, Read	Read Only	Read Only	Read Only	Read Only		
BIT	7	6	5	4	3	2	1	0		
Field	reserved	UART_EN	ENCN	DRV_ENN	ENCA	ENCB	REFR	REFL		
Reset		0x0		0x0	0x0	0x0	0x0	0x0		
Access Type	Read Only	Read Only	Read Only	Read Only	Read Only	Read Only	Read Only	Read Only		

BITFIELD	BITS	DESCRIPTION
VERSION	31:24	0x40 = first version of the IC Identical numbers mean full digital compatibility.
SILICON_RV	18:16	Silicon revision number
ADC_ERR	15	1: Signals that the ADC is not working correctly. Do not utilize ADC-features.
EXT_CLK 14		0: The internal oscillator is used for generating the clock-signal (12.5 MHz).
		1: The external oscillator is used for generating the clock-signal.
EXT_RES_DET	13	External resistor between REF and GND No external resistor detected
OUTPUT	12	Output polarity of SDO pin when UART is enabled via pin UART_EN. Its main purpose it to use SDO as NAO next address output signal for chain addressing of multiple ICs. Attention: Reset Value is 1 for use as NAO to next IC in single wire chain
COMP_B1_B2	11	COMP_B1_B2 (StallGuard4 comparator B, for IC test)
COMP_A1_A2	10	COMP_A1_A2 (StallGuard4 comparator A, for IC test)
COMP_B	9	COMP_B (chopper comparator B, for IC test)
COMP_A	8	COMP_A (chopper comparator A, for IC test)
reserved	7	
UART_EN	6	1 = UART interface is enabled
ENCN	5	N-channel state
DRV_ENN	4	Driver disabled/enabled state.
ENCA	3	A-channel state
ENCB	2	B-channel state
REFR	1	

BITFIELD	BITS	DESCRIPTION
REFL	0	

X COMPARE (0x5)

BIT	31	30	29	28	27	26	25	24	
Field	X_COMPARE[31:24]								
Reset	0xFFFFFFF								
Access Type		Write, Read							
BIT	23	22	21	20	19	18	17	16	
Field		•	1	X_COMPA	RE[23:16]	•	•	•	
Reset				0xFFF	FFFFF				
Access Type	Write, Read								
BIT	15	14	13	12	11	10	9	8	
Field		•	1	X_COMP.	ARE[15:8]		•	•	
Reset				0xFFF	FFFFF				
Access Type				Write,	Read				
BIT	7	6	5	4	3	2	1	0	
Field		1		X_COMP	ARE[7:0]			-	
Reset				0xFFF	FFFFF				
Access Type				Write,	Read				

BITFIELD	BITS	DESCRIPTION
X_COMPARE	31:0	Position comparison register for motion controller position strobe. X_COMPARE is an absolute position. The Position pulse is available on output SWP_DIAG1. XACTUAL = X_COMPARE: Output signal PP (position pulse) becomes high. It returns to a low state, if the positions mismatch. If X_COMPARE_REPEAT is >1, X_COMPARE is the position reference for the periodic position strobe trigger output.

X_COMPARE_REPEAT (0x6)

BIT	31	30	29	28	27	26	25	24
Field	_	_	_	_	_	_	_	_
Reset	_	_	_	_	_	_	_	_
Access Type	-	_	_	_	_	_	_	_

BIT	23	22	21	20	19	18	17	16		
Field		X_COMPARE_REPEAT[23:16]								
Reset		0x0								
Access Type		Write, Read								
BIT	15	14	13	12	11	10	9	8		
Field		•		X_COMPARE_	REPEAT[15:8]	•			
Reset		0x0								
Access Type				Write,	Read					
BIT	7	6	5	4	3	2	1	0		
Field		•	•	X_COMPARE	_REPEAT[7:0]			•		
Reset				0>	κ0					
Access Type				Write,	Read					

BITFIELD	BITS	DESCRIPTION
		This register defines a relative distance in microsteps (based on MRES configuration).
V 60115155 55515		If set to >1, the position compare pulse is raised every time a multiple of X_COMPARE_REPEAT µsteps have been made.
X_COMPARE_REPEAT	23:0	Thereby, the X_COMPARE register defines the base position for the modulo calculation of X_COMPARE_REPEAT steps have been made into positive or negative direction.
		X_COMPARE is incremented/decremented by X_COMPARE_REPEAT when the X_COMPARE position has been reached.

DRV_CONF (0xA)

BIT	31	30	29	28	27	26	25	24
Field	_	-	-	-	-	-	_	-
Reset	_	_	_	_	_	_	_	_
Access Type	_	_	-	_	_	_	_	_
BIT	23	22	21	20	19	18	17	16
Field	_	_	-	_	_	-	_	_
Reset	_	_	-	-	-	-	_	-
Access Type	_	-	-	_	_	_	_	_
BIT	15	14	13	12	11	10	9	8
Field	_	_	-	_	_	_	_	_
Reset	_	-	_	_	_	_	_	_
Access Type	_	-	-	-	-	-	-	-

BIT	7	6	5	4	3	2	1	0
Field	_	_	SLOPE_CONTROL[1:0]		_	_	CURRENT_RANGE[1:0]	
Reset	_	_	0x0		_	-	0x0	
Access Type	_	_	Write,	Write, Read		_	Write,	Read

BITFIELD	BITS	DESCRIPTION	DECODE
SLOPE_CO NTROL	5:4	Slope Control Setting	0x0: 100V/µs 0x1: 200V/µs 0x2: 400V/µs 0x3: 800V/µs
CURRENT_ RANGE	1:0	This setting allows a basic adaptation of the drivers RDSon current sensing to the motor current range. Select the lowest fitting range for best current precision. The value is the peak current setting.	0x0: 1A 0x1: 2A 0x2: 3A 0x3: 3A

GLOBAL SCALER (0xB)

BIT	31	30	29	28	27	26	25	24
Field	_	_	_	_	_	_	_	_
Reset	_	_	_	_	_	_	_	_
Access Type	_	-	_	-	-	-	-	-
BIT	23	22	21	20	19	18	17	16
Field	_	_	_	_	_	_	_	_
Reset	_	_	_	_	_	_	_	_
Access Type	-	_	_	_	-	_	-	_
BIT	15	14	13	12	11	10	9	8
Field	_	_	_	_	_	_	_	_
Reset	_	_	-	_	-	-	_	_
Access Type	_	_	_	_	-	_	_	_
BIT	7	6	5	4	3	2	1	0
Field		1	1	GLOBALS	CALER[7:0]	1	•	1
Reset				0:	x0			
Access Type		Write, Read						

BITFIELD	BITS	DESCRIPTION			
		Global scaling of Motor current. This value is multiplied to the current scaling in order to adapt a drive to a certain motor type. This value should be chosen before tuning other settings, because it also influences chopper hysteresis. This value is just intended for finetuning the motor current.			
GLOBALSCALER	7:0	0: Full Scale (or write 256) 1 31: Not allowed for operation 32 255: 32/256 255/256 of maximum current. Hint: Values >128 recommended for best results			

IHOLD_IRUN (0x10)

BIT	31	30	29	28	27	26	25	24
Field	_	_	_	_	IRUNDELAY[3:0]			
Reset	_	_	_	_		0:	K 4	
Access Type	_	_	_	_	Write, Read			
BIT	23	22	21	20	19	18	17	16
Field	_	_	-	-		IHOLDDI	ELAY[3:0]	
Reset	_	_	-	-		0:	κ1	
Access Type	_	_	_	_	Write, Read			
BIT	15	14	13	12	11	10	9	8
Field	_	-	-			IRUN[4:0]		
Reset	_	_	-			0b11111		
Access Type	_	_	_			Write, Read		
BIT	7	6	5	4 3 2 1 0				0
Field	_	_	-	IHOLD[4:0]				
Reset	_	-	-	0b01000				
Access				Write, Read				

BITFIELD	BITS	DESCRIPTION
IRUNDELAY	27:24	Controls the number of clock cycles for motor power up after start is detected. 0: instant power up 115: Delay per current increment step in multiple of IRUNDELAY * 512 clocks
IHOLDDELAY	19:16	Controls the number of clock cycles for motor power down after a motion as soon as standstill is detected (<i>stst</i> =1) and <i>TPOWERDOWN</i> has expired. The smooth transition avoids a motor jerk upon power down. 0: instant power down 115: Delay per current reduction step in multiple of 2^18 clocks
IRUN	12:8	Motor run current (0=1/3231=32/32) Hint: Use a setting between 16 to 31 for best microstep performance.

BITFIELD	BITS	DESCRIPTION
IHOLD	4:0	Standstill current (0=1/3231=32/32) In combination with StealthChop2 mode, setting <i>IHOLD</i> =0 allows to choose freewheeling or coil short circuit for motor stand still.

TPOWERDOWN (0x11)

		I	I	1		I		
BIT	31	30	29	28	27	26	25	24
Field	_	_	_	_	_	_	_	_
Reset	_	_	-	_	_	_	_	_
Access Type	-	_	_	_	_	-	_	_
BIT	23	22	21	20	19	18	17	16
Field	_	_	_	_	_	_	_	_
Reset	_	-	_	-	_	-	_	_
Access Type	_	-	_	-	_	-	_	_
BIT	15	14	13	12	11	10	9	8
Field	_	_	_	_	_	_	_	_
Reset	_	_	_	_	_	_	_	_
Access Type	-	-	-	-	-	-	-	-
BIT	7	6	5	4	3	2	1	0
Field		•	•	TPOWER	DOWN[7:0]	•	•	•
Reset		0xA						
Access Type		Write, Read						

BITFIELD	BITS	DESCRIPTION
		TPOWERDOWN sets the delay time after stand still (stst) of the motor to motor current power down. Time range is about 0 to 4 seconds.
TPOWERDOWN	7:0	Attention: A minimum setting of 2 is required to allow automatic tuning of StealthChop2 PWM_OFFS_AUTO.
		Reset Default = 10 0((2^8) - 1) x 2^18 t _{CLK}

TSTEP (0x12)

BIT	31	30	29	28	27	26	25	24
Field	_	_	_	_	_	_	_	_
Reset	_	_	_	_	_	_	_	_
Access Type	_	_	_	_	_	_	_	_

BIT	23	22	21	20	19	18	17	16
Field	_	_	-	_		TSTEF	P[19:16]	
Reset	_	_	_	_		0:	x0	
Access Type	_	Read Only						
BIT	15	14	13	12	11	10	9	8
Field		TSTEP[15:8]						
Reset				0:	(0			
Access Type				Read	Only			
BIT	7	6	5	4	3	2	1	0
Field		TSTEP[7:0]						
Reset		0x0						
Access Type				Read	Only			

BITFIELD	BITS	DESCRIPTION
TSTEP	19:0	Actual measured time between two 1/256 microsteps derived from the step input frequency in units of 1/fCLK. Measured value is (2^20)-1 in case of overflow or stand still. All TSTEP related thresholds use a hysteresis of 1/16 of the compare value to compensate for jitter in the clock or the step frequency. The flag small_hysteresis modifies the hysteresis to a smaller value of 1/32. (Txxx x 15/16) -1 or (Txxx x 31/32) -1 is used as a second compare value for each comparison value. This means, that the lower switching velocity equals the calculated setting, but the upper switching velocity is higher as defined by the hysteresis setting. When working with the motion controller, the measured TSTEP for a given velocity V is in the range
		$(2^{24} / V) \le TSTEP \le 2^{24} / V - 1.$ In DcStep mode $TSTEP$ will not show the mean velocity of the motor, but the
		In DcStep mode <i>TSTEP</i> will not show the mean velocity of the motor, but the velocities for each microstep, which may not be stable and thus does not
		represent the real motor velocity in case it runs slower than the target velocity.

TPWMTHRS (0x13)

BIT	31	30	29	28	27	26	25	24
Field	_	_	_	_	_	_	_	_
Reset	_	_	_	_	_	_	_	_
Access Type	_	-	-	_	_	_	_	_
BIT	23	22	21	20	19	18	17	16
Field	_	_	_	_		TPWMTH	IRS[19:16]	
Reset	_	_	-	_	0x0			
Access Type	-	_	_	_	Write, Read			

BIT	15	14	13	12	11	10	9	8	
Field		TPWMTHRS[15:8]							
Reset		0x0							
Access Type		Write, Read							
BIT	7	6	5	4	3	2	1	0	
Field				TPWMTI	HRS[7:0]				
Reset		0x0							
Access Type				Write,	Read				

BITFIELD	BITS	DESCRIPTION
TDMATUDO	40.0	This is the upper velocity for StealthChop2 voltage PWM mode. TSTEP ≥ TPWMTHRS
TPWMTHRS	19:0	 StealthChop2 PWM mode is enabled, if configured DcStep is disabled

TCOOLTHRS (0x14)

BIT	31	30	29	28	27	26	25	24					
Field	_	_	_	-	_	_	_	_					
Reset	_	_	_	_	_	_	_	_					
Access Type	-	_	-	-	_	-	-	-					
BIT	23	22	21	20	19	18	17	16					
Field	_	_	-	_		TCOOLTH	IRS[19:16]						
Reset	_	_	-	_		0:	x0						
Access Type	_	_	_	_	Write, Read								
BIT	15	14	13	12	11	10	9	8					
Field				TCOOLTI	HRS[15:8]								
Reset				0:	k 0								
Access Type				Write,	Read								
BIT	7	6	5	4	3	2	1	0					
Field		•	•	TCOOLT	HRS[7:0]	•	•	•					
Reset				0:	κ0								
Access Type				Write,	Read	Write, Read							

BITFIELD	BITS	DESCRIPTION
		This is the lower threshold velocity for switching on smart energy CoolStep and StallGuard feature. (unsigned)
TCOOLTHRS	19:0	Set this parameter to disable CoolStep at low speeds, where it cannot work reliably. The stop on stall function (enable with sg_stop when using internal motion controller) and the stall output signal become enabled when exceeding this velocity. In non-DcStep mode, it becomes disabled again once the velocity falls below this threshold.
		TCOOLTHRS ≥ TSTEP ≥ THIGH:
		CoolStep is enabled, if configured
		TCOOLTHRS ≥ TSTEP
		 Stop on stall is enabled, if configured Stall output signal (DIAG0/1) is enabled, if configured

THIGH (0x15)

BIT	31	30	29	28	27	26	25	24	
Field	_	_	_	_	_	_	_	_	
Reset	_	_	_	_	_	_	_	_	
Access Type	_	_	_	_	_	_	_	_	
BIT	23	22	21	20	19	18	17	16	
Field	_	_	_	_		THIGH	[19:16]		
Reset	_	_	_	_		0:	x0		
Access Type	_	_	_	_	Write, Read				
BIT	15	14	13	12	11	10	9	8	
Field				THIGH	H[15:8]				
Reset				0:	x0				
Access Type				Write,	Read				
BIT	7	6	5	4	3	2	1	0	
Field		•	•	THIG	H[7:0]	•	•		
Reset				0:	x0				
Access Type		Write, Read							

BITFIELD	BITS	DESCRIPTION
		This velocity setting allows velocity dependent switching into a different chopper mode and fullstepping to maximize torque. (unsigned) The stall detection feature becomes switched off for 2-3 electrical periods whenever passing <i>THIGH</i> threshold to compensate for the effect of switching modes.
THIGH	19:0	TSTEP ≤ THIGH:
		 CoolStep is disabled (motor runs with normal current scale) StealthChop2 voltage PWM mode is disabled If <i>vhighchm</i> is set, the chopper switches to <i>chm</i> = 1 with <i>TFD</i> = 0 (constant off time with slow decay, only). If <i>vhighfs</i> is set, the motor operates in fullstep mode and the stall detection becomes switched over to DcStep stall detection.

RAMPMODE (0x20)

BIT	31	30	29	28	27	26	25	24
Field	_	_	-	_	-	-	_	_
Reset	_	_	_	_	_	-	_	_
Access Type	_	_	_	_	_	_	_	_
BIT	23	22	21	20	19	18	17	16
Field	_	_	_	_	_	-	_	_
Reset	_	_	_	_	_	_	_	_
Access Type	_	_	_	_	_	_	_	_
BIT	15	14	13	12	11	10	9	8
Field	_	_	-	_	-	-	_	_
Reset	_	_	-	_	-	-	_	_
Access Type	_	_	_	_	_	_	_	_
BIT	7	6	5	4	3	2	1	0
Field	_	_	_	_	-	-	RAMPM	ODE[1:0]
Reset	_	_	_	_	_	_	0:	x0
Access Type	_	_	-	_	-	_	Write,	Read

BITFIELD	BITS	DESCRIPTION	DECODE
RAMPMODE	1:0	Motion Controller ramping mode	0x0: Positioning mode (using all A, D and V parameters) 0x1: Velocity mode to positive VMAX (using AMAX acceleration) 0x2: Velocity mode to negative VMAX (using AMAX acceleration) 0x3: Hold mode (velocity remains unchanged, unless stop event occurs)

XACTUAL (0x21)

BIT	31	30	29	28	27	26	25	24	
Field				XACTU	AL[31:24]		•		
Reset	0x0								
Access Type	Write, Read								
BIT	23	22	21	20	19	18	17	16	
Field				XACTU	AL[23:16]	1	•		
Reset				0	x0				
Access Type	Write, Read								
BIT	15	14	13	12	11	10	9	8	
Field				XACTU	AL[15:8]	•			
Reset				0	x0				
Access Type				Write	, Read				
BIT	7	6	5	4	3	2	1	0	
Field		ı	1	XACTU	JAL[7:0]	1	'	1	
Reset				0	x0				
Access Type		Write, Read							

BITFIELD	BITS	DESCRIPTION
		Actual motor position (signed)
XACTUAL	31:0	Hint: This value normally should only be modified, when homing the drive. In positioning mode, modifying the register content will start a motion.

VACTUAL (0x22)

BIT	31	30	29	28	27	26	25	24
Field	_	_	-	_	_	_	_	-
Reset	_	_	-	_	-	_	_	-
Access Type	_	_	_	_	_	_	_	_
BIT	23	22	21	20	19	18	17	16
Field				VACTUA	L[23:16]	•		
Reset				0:	(0			
Access Type				Read	Only			
BIT	15	14	13	12	11	10	9	8
Field				VACTU	AL[15:8]			
Reset				0:	(0			
Access Type	Read Only							

BIT	7	6	5	4	3	2	1	0		
Field		VACTUAL[7:0]								
Reset		0x0								
Access Type		Read Only								

BITFIELD	BITS	DESCRIPTION
		Actual motor velocity from ramp generator (signed)
VACTUAL	23:0	The sign matches the motion direction. A negative sign means motion to lower <i>XACTUAL</i> .
		+/-(2^23)-1 [µsteps / t]

VSTART (0x23)

BIT	31	30	29	28	27	26	25	24
Field	_	_	_	_	_	_	_	_
Reset	_	_	-	_	-	-	_	_
Access Type	-	-	-	_	_	-	-	-
BIT	23	22	21	20	19	18	17	16
Field	_	_	-	-	_	_	VSTAR	T[17:16]
Reset	_	_	_	_	_	_	0:	x0
Access Type	_	-	-	_	_	_	Write, Read	
BIT	15	14	13	12	11	10	9	8
Field				VSTAR	T[15:8]			
Reset				0:	κ 0			
Access Type				Write,	Read			
BIT	7	6	5	4	3	2	1	0
Field				VSTAF	RT[7:0]	1	1	'
Reset				0:	κ0			
Access Type				Write,	Read			

BITFIELD	BITS	DESCRIPTION
		Motor start velocity (unsigned)
VSTART	17:0	For universal use, set <i>VSTOP</i> ≥ <i>VSTART</i> . This is not required if the motion distance is sufficient to ensure deceleration from <i>VSTART</i> to <i>VSTOP</i> .
		0(2^18)-1 [µsteps / t]

A1 (0x24)

BIT	31	30	29	28	27	26	25	24
Field	_	-	-	_	-	-	_	_
Reset	_	_	_	_	_	_	_	_
Access Type	_	_	_	_	_	_	_	_
BIT	23	22	21	20	19	18	17	16
Field	_	_	_	_	_	-	A1[1	7:16]
Reset	_	-	-	_	-	-	0:	x0
Access Type	_	_	_	_	_	_	Write, Read	
BIT	15	14	13	12	11	10	9	8
Field	A1[15:8]							
Reset	0x0							
Access Type		Write, Read						
BIT	7	6	5	4	3	2	1	0
Field		A1[7:0]						
Reset		0x0						
Access Type		Write, Read						

BITFIELD	BITS	DESCRIPTION
		First acceleration between VSTART and V1 (unsigned)
A1	17:0	0(2^18)-1 [µsteps / ta²]

V1 (0x25)

BIT	31	30	29	28	27	26	25	24
Field	_	_	_	_	_	_	_	_
Reset	_	_	_	_	_	_	_	_
Access Type	-	-	-	-	_	-	-	_
BIT	23	22	21	20	19	18	17	16
Field	_	_	_	_	V1[19:16]			
Reset	_	_	_	_	0x0			
Access Type	_	_	_	_	Write, Read			
BIT	15	14	13	12	11	10	9	8
Field	V1[15:8]							
Reset	0x0							
Access Type	Write, Read							

BIT	7	6	5	4	3	2	1	0
Field	V1[7:0]							
Reset	0x0							
Access Type	Write, Read							

BITFIELD	BITS	DESCRIPTION
		First acceleration / deceleration phase threshold velocity (unsigned)
V1	19:0	0: Disables A1 and D1 phase, use AMAX, DMAX only
		0(2^20)-1 [µsteps / t]

AMAX (0x26)

BIT	31	30	29	28	27	26	25	24
Field	_	_	_	_	_	_	_	_
Reset	_	_	-	_	_	_	_	_
Access Type	_	_	-	-	_	-	_	_
BIT	23	22	21	20	19	18	17	16
Field	_	-	-	-	_	_	AMAX	[17:16]
Reset	_	_	_	_	_	_	0x0	
Access Type	_	_	-	_	_	-	Write, Read	
BIT	15	14	13	12	11	10	9	8
Field		•		AMA	([15:8]	1		
Reset	0x0							
Access Type	Write, Read							
BIT	7	6	5	4	3	2	1	0
Field		AMAX[7:0]						
Reset		0x0						
Access Type				Write,	Read			

BITFIELD	BITS	DESCRIPTION
		Second acceleration between V1 and VMAX (unsigned)
AMAX	17:0	This is the acceleration and deceleration value for velocity mode.
		0(2^18)-1 [µsteps / ta²]

VMAX (0x27)

BIT	31	30	29	28	27	26	25	24	
Field	_	_	-	-	_	-	_	_	
Reset	_	_	-	_	_	-	_	_	
Access Type	_	_	_	_	_	_	_	_	
BIT	23	22	21	20	19	18	17	16	
Field	_				VMAX[22:16]			1	
Reset	_				0x0				
Access Type	_		Write, Read						
BIT	15	14	13	12	11	10	9	8	
Field		•		VMAX	· ([15:8]				
Reset				0:	x0				
Access Type				Write	Read				
BIT	7	6	5	4	3	2	1	0	
Field		•		VMA	X[7:0]		•	•	
Reset				0:	x0				
Access Type				Write	Read				

BITFIELD	BITS	DESCRIPTION
		Motion ramp target velocity (for positioning ensure <i>VMAX</i> ≥ <i>VSTART</i>) (unsigned)
VMAX	22:0	This is the target velocity in velocity mode. It can be changed any time during a motion.
		0(2^23)-512 [µsteps / t]

DMAX (0x28)

BIT	31	30	29	28	27	26	25	24	
Field	_	_	_	_	_	_	_	_	
Reset	_	_	_	_	_	_	_	-	
Access Type	_	_	_	_	_	_	_	-	
BIT	23	22	21	20	19	18	17	16	
Field	_	_	_	_	_	_	DMAX	[17:16]	
Reset	_	_	_	_	_	_	0:	0x0	
							Write, Read		

BIT	15	15 14 13 12 11 10 9 8								
Field		DMAX[15:8]								
Reset		0x0								
Access Type		Write, Read								
BIT	7	6	5	4	3	2	1	0		
Field				DMA	X[7:0]					
Reset		0x0								
Access Type		Write, Read								

BITFIELD	BITS	DESCRIPTION
		Deceleration between VMAX and V1 (unsigned)
DMAX	17:0	0(2^18)-1 [µsteps / ta²]

TVMAX (0x29)

BIT	31	30	29	28	27	26	25	24		
Field	_	_	_	_	_	_	_	_		
Reset	_	_	_	_	_	_	_	_		
Access Type	_	_	_	_	_	_	_	_		
BIT	23	22	21	20	19	18	17	16		
Field	_	_	_	_	_	_	_	_		
Reset	_	_	_	_	_	_	_	_		
Access Type	_	_	_	_	_	_	_	_		
BIT	15	14	13	12	11	10	9	8		
Field				TVMA	X[15:8]					
Reset				0:	x0					
Access Type		Write, Read								
BIT	7	6	5	4	3	2	1	0		
Field		•		TVMA	X[7:0]	•	•	•		
Reset				0:	x0					
Access Type				Write,	Read					

BITFIELD	BITS	DESCRIPTION
		Minimum time for constant velocity segments in multiple of 512 clocks.
TVMAX	15:0	O: Disables minimum duration setting for constant velocity phase >0: A minimum duration of constant velocity is inserted in between of any change from acceleration to deceleration or vice versa to reduce jerk O(2^16)-1 * 512 t _{CLK}
		Note: Configure this register after setting VMAX when in Position mode and standstill. Set TVMAX=0 during velocity mode to avoid triggering the TVMAX delay when switching back to ramp mode.

D1 (0x2A)

BIT	31	30	29	28	27	26	25	24
Field	_	_	_	_	_	_	_	_
Reset	_	_	_	_	_	_	_	_
Access Type	_	_	_	_	_	_	_	_
BIT	23	22	21	20	19	18	17	16
Field	_	_	_	_	_	_	D1[1	17:16]
Reset	_	_	_	_	_	_	0xA	
Access Type	_	_	_	_	_	_	Write, Read	
BIT	15	14	13	12	11	10	9	8
Field				D1[′	15:8]	•		
Reset				02	κA			
Access Type	Write, Read							
BIT	7	6	5	4	3	2	1	0
Field		•		D1[7:0]	•	•	•
Reset				0:	κA			
Access Type				Write,	Read			

BITFIELD	BITS	DESCRIPTION
		Deceleration between V1 and VSTOP (unsigned)
D1	17:0	Attention: Do not set 0 in positioning mode, even if V1=0!
		1(2^16)-1 [µsteps / ta²] Reset Default = 10

VSTOP (0x2B)

BIT	31	30	29	28	27	26	25	24
Field	_	_	-	_	-	-	_	_
Reset	_	_	-	_	-	_	_	_
Access Type	_	_	_	_	_	_	_	_
BIT	23	22	21	20	19	18	17	16
Field	_	_	_	_	_	_	VSTOR	P[17:16]
Reset	_	_	_	_	_	_	0xA	
Access Type	_	_	-	_	_	-	Write, Read	
BIT	15	14	13	12	11	10	9	8
Field				VSTO	P[15:8]			
Reset				0)	κA			
Access Type				Write,	Read			
BIT	7	6	5	4	3	2	1	0
Field		•		VSTC	P[7:0]	<u>'</u>	•	•
Reset				0:	κA			
Access Type				Write,	Read			

BITFIELD	BITS	DESCRIPTION
		Motor stop velocity (unsigned)
		Hint: Set VSTOP ≥ VSTART to allow positioning for short distances
VSTOP	17:0	Attention: Do not set 0 in positioning mode, minimum 10 recommended!
		1(2^18)-1 [µsteps / t] Reset Default=10

TZEROWAIT (0x2C)

BIT	31	30	29	28	27	26	25	24
Field	_	_	_	_	_	_	_	_
Reset	_	_	_	_	_	_	_	_
Access Type	_	-	-	_	-	-	-	-
BIT	23	22	21	20	19	18	17	16
Field	_	_	_	_	_	_	_	_
Reset	_	_	_	_	_	_	_	_
Access							_	

BIT	15	14	13	12	11	10	9	8		
Field		TZEROWAIT[15:8]								
Reset		0x0								
Access Type		Write, Read								
BIT	7	6	5	4	3	2	1	0		
Field				TZEROV	VAIT[7:0]					
Reset		0x0								
Access Type	Write, Read									

BITFIELD	BITS	DESCRIPTION
TZEROWAIT	45.0	Defines the waiting time after ramping down to zero velocity before next movement or direction inversion can start. Time range is about 0 to 2 seconds.
	15:0	This setting avoids excess acceleration e.g. from VSTOP to -VSTART.
		0(2^16)-1 x 512 t _{CLK}

XTARGET (0x2D)

BIT	31	30	29	28	27	26	25	24	
Field	XTARGET[31:24]								
Reset	0x0								
Access Type	Write, Read								
BIT	23	22	21	20	19	18	17	16	
Field		•		XTARGE	T[23:16]				
Reset				0:	x0				
Access Type	Write, Read								
BIT	15	14	13	12	11	10	9	8	
Field			,	XTARG	ET[15:8]	,			
Reset				0:	x0				
Access Type				Write,	Read				
BIT	7	6	5	4	3	2	1	0	
Field		1	1	XTARG	ET[7:0]	•	1	1	
Reset	0x0								
Access Type				Write,	Read				

BITFIELD	BITS	DESCRIPTION
XTARGET		Target position for ramp mode (signed). Write a new target position to this register in order to activate the ramp generator positioning in <i>RAMPMODE</i> = 0. Initialize all velocity, acceleration and deceleration parameters before.
	31:0	Hint: he position is allowed to wrap around, thus, XTARGET value optionally can be treated as an unsigned number.
XTARGET	31.0	Hint: The maximum possible displacement is +/-((2^31)-1).
		Hint: When increasing V1, D1 or DMAX during a motion, rewrite XTARGET afterwards in order to trigger a second acceleration phase, if desired.
		-2^31 +(2^31)-1

V2 (0x2E)

BIT	31	30	29	28	27	26	25	24	
Field	_	-	-	_	-	_	_	_	
Reset	_	_	_	_	_	_	_	_	
Access Type	_	_	_	_	_	_	_	_	
BIT	23	22	21	20	19	18	17	16	
Field	_	-	_	_		V2[1	9:16]		
Reset	_	-	_	_		0.	x0		
Access Type	_	-	_	_	Write, Read				
BIT	15	14	13	12	11	10	9	8	
Field				V2[′	15:8]				
Reset				0:	x0				
Access Type				Write,	Read				
BIT	7	6	5	4	3	2	1	0	
Field	V2[7:0]								
Reset	0x0								
Access Type		Write, Read							

BITFIELD	BITS	DESCRIPTION
		Velocity difference from VMAX for activation of acceleration segments with AMAX/2 and DMAX/2.
V2	19:0	0: Disables AMAX/2 and DMAX/2 phase, use AMAX, DMAX only
		0(2^20)-1 [µsteps / t]

A2 (0x2F)

BIT	31	30	29	28	27	26	25	24	
Field	_	-	-	_	-	-	_	_	
Reset	_	_	-	_	_	_	_	_	
Access Type	_	_	-	_	_	_	_	_	
BIT	23	22	21	20	19	18	17	16	
Field	_	_	_	_	_	_	A2[1	7:16]	
Reset	_	_	-	-	-	-	0	x0	
Access Type	_	_	-	_	_	_	Write	Write, Read	
BIT	15	14	13	12	11	10	9	8	
Field				A2[′	15:8]				
Reset				0:	x0				
Access Type				Write,	Read				
BIT	7	6	5	4	3	2	1	0	
Field				A2[7:0]	'	•		
Reset				0:	x0				
Access Type		Write, Read							

BITFIELD	BITS	DESCRIPTION
		Acceleration between V1 and V2 (unsigned)
A2	17:0	0(2^18)-1 [µsteps / ta²]

D2 (0x30)

BIT	31	30	29	28	27	26	25	24
Field	_	_	_	_	_	_	_	_
Reset	_	_	-	-	_	_	_	_
Access Type	-	_	_	_	_	-	_	_
BIT	23	22	21	20	19	18	17	16
Field	_	_	_	_	_	_	D2[1	7:16]
Reset	_	_	-	_	_	_	0:	κA
Access Type	-	_	-	_	_	_	Write,	Read
BIT	15	14	13	12	11	10	9	8
Field				D2[15:8]			
Reset	0xA							
Access Type	Write, Read							

BIT	7	7 6 5 4 3 2 1 0								
Field		D2[7:0]								
Reset		0xA								
Access Type		Write, Read								

BITFIELD	BITFIELD BITS DESCRIPTION	
D2	17:0	Deceleration between V2 and V1 (unsigned) Attention: Do not set 0 in positioning mode, even if V2 = 0!
		1(2^18)-1 [µsteps / ta²] Reset Default = 10

VDCMIN (0x33)

dcStep start velocity

BIT	31	30	29	28	27	26	25	24
Field	_	_	-	_	_	-	_	_
Reset	_	_	_	_	_	_	_	_
Access Type	_	_	_	-	_	_	_	_
BIT	23	22	21	20	19	18	17	16
Field	_			1	VDCMIN[14:8]		•	•
Reset	_				0x0			
Access Type	_	Write, Read						
BIT	15	14	13	12	11	10	9	8
Field			1	VDCM	IIN[7:0]	1		•
Reset				0	x0			
Access Type				Write	, Read			
BIT	7	6	5	4	3	2	1	0
Field				reserv	ed[7:0]			1
Reset				0	x0			
Access Type		Read Only						

BITFIELD	BITS	DESCRIPTION
		Automatic commutation DcStep becomes enabled above velocity VDCMIN (unsigned)
		In this mode, the actual position is determined by the sensorless motor commutation and becomes fed back to <i>XACTUAL</i> . In case the motor becomes heavily loaded, <i>VDCMIN</i> also is used as the minimum step velocity. Activate stop on stall (<i>sg_stop</i>) to detect step loss.
VDCMIN	22:8	0: Disable, DcStep off <i>VACT</i> ≥ <i>VDCMIN</i> ≥ 256:
		 Triggers the same actions as exceeding <i>THIGH</i> setting. Switches on automatic commutation DcStep
		Hint: Also set DCCTRL parameters in order to operate DcStep.
		(Only bits 22 to 8 are used for value and for comparison)
reserved	7:0	reads always 0

SW_MODE (0x34)

Switch mode configuration

BIT	31	30	29	28	27	26	25	24
Field	_	_	_	_	_	_	_	_
Reset	_	_	_	_	-	_	_	_
Access Type	_	_	_	_	_	_	_	_
BIT	23	22	21	20	19	18	17	16
Field	_	_	_	_	_	_	_	_
Reset	_	-	-	-	-	-	-	-
Access Type	_	_	_	-	-	_	_	_
BIT	15	14	13	12	11	10	9	8
Field	_	virtual_stop _enc	en_virtual_s top_r	en_virtual_s top_l	en_softstop	sg_stop	en_latch_en coder	latch_r_inac tive
Reset	_	0x0	0x0	0x0	0x0	0x0	0x0	0x0
Access Type	-	Write, Read	Write, Read	Write, Read	Write, Read	Write, Read	Write, Read	Write, Read
BIT	7	6	5	4	3	2	1	0
Field	latch_r_acti ve	latch_l_inac tive	latch_l_activ e	swap_lr	pol_stop_r	pol_stop_l	stop_r_ena ble	stop_l_enab le
Reset	0x0	0x0	0x0	0x0	0x0	0x0	0x0	0x0
Access Type	Write, Read	Write, Read	Write, Read	Write, Read	Write, Read	Write, Read	Write, Read	Write, Read

BITFIELD	BITS	DESCRIPTION	DECODE
virtual_stop_ enc	14	Source for virtual stop (VIRTUAL_STOP_L and VIRTUAL_STOP_R) 0: Virtual stop relates to ramp generator position <i>XACTUAL</i> 1: Virtual stop relates to encoder position <i>X_ENC</i>	
en_virtual_st op_r	13	1: Enables automatic motor stop during active right virtual stop condition	
en_virtual_st op_l	12	1: Enables automatic motor stop during active left virtual stop condition	
en_softstop	11	0: Hard stop 1: Soft stop The soft stop mode always uses the deceleration ramp settings DMAX, V1, D1, V2, D2, VSTOP and TZEROWAIT for stopping the motor. A stop occurs when the velocity sign matches the reference switch position (REFL, VIRTUAL_STOP_L for negative velocities, REFR, VIRTUAL_STOP_R for positive velocities) and the respective switch stop function is enabled. A hard stop also uses TZEROWAIT before the motor becomes released. Attention: Do not use soft stop in combination with StallGuard2. Use soft stop for StealthChop operation at high velocity. In this case, hard stop must be avoided, as it could result in severe overcurrent.	0x0: Hard stop 0x1: Soft stop
sg_stop	10	Enable stop by StallGuard2 (also available in DcStep mode). Disable to release motor after stop event. Program <i>TCOOLTHRS</i> for velocity threshold. Hint: Do not enable during motor spin-up, wait until the motor velocity exceeds a certain value, where StallGuard2 delivers a stable result. This velocity threshold should be programmed using TCOOLTHRS.	0x0: disabled 0x1: enabled
en_latch_enc oder	9	1: Latch encoder position to ENC_LATCH upon reference switch event.	
latch_r_inacti ve	8	1: Activates latching of the position to <i>XLATCH</i> upon an inactive going edge on the right reference switch input REFR. The active level is defined by <i>pol_stop_r</i> .	
latch_r_activ e	7	1: Activates latching of the position to XLATCH upon an active going edge on the right reference switch input REFR. Hint: Activate latch_r_active to detect any spurious stop event by reading status_latch_r.	

Analog Devices | 118 www.analog.com

BITFIELD	BITS	DESCRIPTION	DECODE
latch_l_inacti ve	6	1: Activates latching of the position to XLATCH upon an inactive going edge on the left reference switch input REFL. The active level is defined by pol_stop_l.	
latch_l_active	5	1: Activates latching of the position to XLATCH upon an active going edge on the left reference switch input REFL. Hint: Activate latch_l_active to detect any spurious stop event by reading status_latch_l.	
swap_lr	4	1: Swap the left and the right reference switch input REFL and REFR	
pol_stop_r	3	Sets the active polarity of the right reference switch input 0=non-inverted, high active: a high level on REFR stops the motor 1=inverted, low active: a low level on REFR stops the motor	
pol_stop_l	2	Sets the active polarity of the left reference switch input 0=non-inverted, high active: a high level on REFL stops the motor 1=inverted, low active: a low level on REFL stops the motor	
stop_r_enabl	1	1: Enables automatic motor stop during active right reference switch input <i>Hint:</i> The motor restarts in case the stop switch becomes released.	
stop_l_enabl e	0	Enables automatic motor stop during active left reference switch input Hint: The motor restarts in case the stop switch becomes released.	

RAMP STAT (0x35)

Ramp status and switch event status

BIT	31	30	29	28	27	26	25	24
Field	_	_	-	_	_	-	_	_
Reset	_	_	_	_	_	-	_	_
Access Type	-	_	-	_	_	-	_	_
BIT	23	22	21	20	19	18	17	16
Field	_	_	-	_	_	-	_	_
Reset	_	_	_	_	_	_	_	_
Access Type	_	_	-	-	_	-	-	_
BIT	15	14	13	12	11	10	9	8
Field	status_virtu al_stop_r	status_virtu al_stop_l	status_sg	second_mo ve	t_zerowait_ active	vzero	position_rea ched	velocity_rea ched
Reset	0x1	0x1	0x0	0x0	0x0	0x0	0x0	0x0
Access Type	Read Only	Read Only	Read Only	Write 1 to Clear, Read	Read Only	Read Only	Read Only	Read Only

BIT	7	6	5	4	3	2	1	0
Field	event_pos_r eached	event_stop_ sg	event_stop_ r	event_stop_ I	status_latch _r	status_latch _l	status_stop _r	status_stop _I
Reset	0x0	0x0	0x0	0x0	0x0	0x0	0x0	0x0
Access Type	Write 1 to Clear, Read	Write 1 to Clear, Read	Read Only	Read Only	Write 1 to Clear, Read	Write 1 to Clear, Read	Read Only	Read Only

	ad Olcar, read	Oldar, Nedd Oldar, Nedd
BITFIELD	BITS	DESCRIPTION
status_virtual_stop_r	15	Virtual reference switch right status (1 = active)
status_virtual_stop_l	14	Virtual reference switch left status (1 = active)
status_sg	13	Signals an active StallGuard2 input from the CoolStep driver or from the DcStep unit, if enabled. Hint: When polling this flag, stall events may be missed – activate sg_stop to be sure not to miss the stall event.
second_move	12	Signals that the automatic ramp required moving back in the opposite direction, e.g. due to on-the-fly parameter change (Write '1' to clear)
t_zerowait_active	11	1: Signals, that <i>TZEROWAIT</i> is active after a motor stop. During this time, the motor is in standstill.
vzero	10	1: Signals, that the actual velocity is 0.
position_reached	9	1: Signals, that the target position is reached. This flag becomes set while XACTUAL and XTARGET match.
velocity_reached	8	Signals, that the target velocity is reached. This flag becomes set while VACTUAL and VMAX match.
event_pos_reached	7	Signals, that the target position has been reached (position_reached becoming active). (Write '1' to clear flag and interrupt condition) This bit is ORed to the interrupt output signal.
event_stop_sg	6	1: Signals an active StallGuard2 stop event. Resetting the register will clear the stall condition and the motor may re-start motion, unless the motion controller has been stopped. (Write '1' to clear flag and interrupt condition) This bit is ORed to the <i>interrupt output</i> signal.
event_stop_r	5	1: Active stop right condition due to stop switch or virtual stop. The stop condition and the interrupt condition can be removed by setting RAMP_MODE to hold mode or by commanding a move to the opposite direction. In soft_stop mode, the condition will remain active until the motor has stopped motion into the direction of the stop switch. Disabling the stop switch or the stop function also clears the flag, but the motor will continue motion. This bit is ORed to the interrupt output signal.
event_stop_I	4	1: Active stop left condition due to stop switch or virtual stop. The stop condition and the interrupt condition can be removed by setting RAMP_MODE to hold mode or by commanding a move to the opposite direction. In soft_stop mode, the condition will remain active until the motor has stopped motion into the direction of the stop switch. Disabling the stop switch or the stop function also clears the flag, but the motor will continue motion. This bit is ORed to the interrupt output signal.
status_latch_r	3	1: Latch right ready (enable position latching using SW_MODE settings latch_r_active or latch_r_inactive) (Write '1' to clear)

BITFIELD	BITS	DESCRIPTION
status_latch_l	2	1: Latch left ready (enable position latching using SW_MODE settings latch_I_active or latch_I_inactive) (Write '1' to clear)
status_stop_r	1	Reference switch right status (1 = active)
status_stop_I	0	Reference switch left status (1 = active)

XLATCH (0x36)

Ramp generator latch position

BIT	31	30	29	28	27	26	25	24		
Field	XLATCH[31:24]									
Reset										
Access Type				Read	Only					
BIT	23	22	21	20	19	18	17	16		
Field				XLATC	H[23:16]		1			
Reset										
Access Type	Read Only									
BIT	15	14	13	12	11	10	9	8		
Field				XLATC	H[15:8]					
Reset										
Access Type				Read	Only					
BIT	7	6	5	4	3	2	1	0		
Field				XLAT	CH[7:0]	•	•	•		
Reset										
Access Type	Read Only									

BITFIELD	BITS	DESCRIPTION
XLATCH	31:0	Ramp generator latch position, latches <i>XACTUAL</i> upon a programmable switch event (see <i>SW_MODE</i>). Hint: The encoder position can be latched to <i>ENC_LATCH</i> together with <i>XLATCH</i> to allow consistency checks.

ENCMODE (0x38)

BIT	31	30	29	28	27	26	25	24
Field	_	_	_	_	_	_	_	_
Reset	_	_	_	_	_	_	_	_
Access Type	_	_	_	_	-	_	_	_

BIT	23	22	21	20	19	18	17	16
Field	_	_	_	_	_	_	_	_
Reset	_	-	_	-	_	_	-	_
Access Type	-	_	-	-	-	-	-	-
BIT	15	14	13	12	11	10	9	8
Field	_	_	_	-	_	enc_sel_de cimal	latch_x_act	clr_enc_x
Reset	_	_	_	_	_	0x0	0x0	0x0
Access Type	_	_	_	-	_	Write, Read	Write, Read	Write, Read
BIT	7	6	5	4	3	2	1	0
Field	pos_neg_	_edge[1:0]	clr_once	clr_cont	ignore_AB	pol_N	pol_B	pol_A
Reset	0:	x0		0x0	0x0	0x0	0x0	0x0
Access Type	Write,	Read	Write, Read	Write, Read	Write, Read	Write, Read	Write, Read	Write, Read

BITFIELD	BITS	DESCRIPTION	DECODE
enc_sel_deci mal	10	Encoder prescaler mode selection	0x0: Encoder prescaler divisor binary mode: Counts ENC_CONST(fractional part) /65536 0x1: Encoder prescaler divisor decimal mode: Counts in ENC_CONST(fractional part) /10000
latch_x_act	9	Position latch configuration	0x0: disabled 0x1: Also latch XACTUAL position together with X_ENC. Allows latching the ramp generator position upon an N channel event as selected by pos_edge and neg_edge.
clr_enc_x	8	Encoder latch configuration	0x0: Upon N event, X_ENC becomes latched to ENC_LATCH only 0x1: Latch and additionally clear encoder counter X_ENC at N-event
pos_neg_edg e	7:6	N channel event sensitivity	0x0: N channel event is active during an active N event level 0x1: N channel is valid upon active going N event 0x2: N channel is valid upon inactive going N event 0x3: N channel is valid upon active going and inactive going N event
clr_once	5	Position latch configuration	0x0: disabled 0x1: Latch or latch and clear X_ENC on the next N event following the write access
clr_cont	4	Position latch configuration	0x0: disabled 0x1: Always latch or latch and clear <i>X_ENC</i> upon an N event (once per revolution, it is recommended to combine this setting with edge sensitive N event)
ignore_AB	3	N event configuration	0x0: An N event occurs only when polarities given by pol_N, pol_A and pol_B match. 0x1: Ignore A and B polarity for N channel event
pol_N	2	Defines active polarity of N	0x0: low active 0x1: high active

BITFIELD	BITS	DESCRIPTION	DECODE
pol_B	1	Required B polarity for an N channel event	0x0: neg 0x1: pos
pol_A	0	Required A polarity for an N channel event	0x0: neg 0x1: pos

X_ENC (0x39)

BIT	31	30	29	28	27	26	25	24	
Field				X_ENC	[31:24]	l	I	I .	
Reset				0)	κ 0				
Access Type				Write,	Read				
BIT	23	23 22 21 20 19 18 17 16							
Field				X_ENC	[23:16]	•	•	•	
Reset				0:	κ0				
Access Type				Write,	Read				
BIT	15	14	13	12	11	10	9	8	
Field				X_EN(C[15:8]			•	
Reset				0:	κ 0				
Access Type				Write,	Read				
BIT	7	6	5	4	3	2	1	0	
Field		1		X_EN	C[7:0]				
Reset				0:	κ0				
Access Type				Write,	Read				

BITFIELD	BITS	DESCRIPTION
X_ENC	31:0	Actual encoder position (signed)

ENC_CONST (0x3A)

BIT	31	30	29	28	27	26	25	24
Field				ENC_CO	NST[31:24]	I		
Reset				0x1	0000			
Access Type				Write	Read			
BIT	23	22	21	20	19	18	17	16
Field		Į.		ENC_CO	NST[23:16]	1		
Reset				0x1	0000			
Access Type				Write	Read			

BIT	15	14	13	12	11	10	9	8	
Field		ENC_CONST[15:8]							
Reset		0x10000							
Access Type		Write, Read							
BIT	7	6	5	4	3	2	1	0	
Field				ENC_CO	NST[7:0]				
Reset				0x10	0000				
Access Type				Write,	Read				

BITFIELD	BITS	DESCRIPTION
ENC_CONST	31:0	Accumulation constant (signed) 16 bit integer part, 16 bit fractional part X_ENC accumulates +/- ENC_CONST / (2^16 x X_ENC) (binary) or +/-ENC_CONST / (10^4 x X_ENC) (decimal) ENCMODE bit enc_sel_decimal switches between decimal and binary setting. Use the sign, to match rotation direction! binary: ± [µsteps/2^16] ±(0 32767.999847) decimal: ±(0.0 32767.9999)
		reset default = 1.0 (=65536)

ENC_STATUS (0x3B)

Encoder status information

BIT	31	30	29	28	27	26	25	24
Field	_	_	-	_	_	_	_	_
Reset	_	_	_	_	_	_	_	_
Access Type	_	_	-	_	-	-	-	-
BIT	23	22	21	20	19	18	17	16
Field	_	_	_	_	_	_	_	_
Reset	_	_	_	_	_	_	_	_
Access Type	_	_	_	_	_	_	_	_
BIT	15	14	13	12	11	10	9	8
Field	_	_	_	_	_	_	_	_
Reset	_	_	-	-	-	_	_	_
Access Type	-	_	-	_	_	_	_	_

BIT	7	6	5	4	3	2	1	0
Field	_	_	_	_	_	_	deviation_w arn	n_event
Reset	-	_	-	-	-	-	0x0	0x0
Access Type	_	_	_	_	_	_	Write 1 to Clear, Read	Write 1 to Clear, Read

BITFIELD	BITS	DESCRIPTION	DECODE
deviation_wa	1		0x0: no warning 0x1: deviation_warn cannot be cleared while a warning still persists. Set ENC_DEVIATION to zero to disable.
n_event	0		0x0: no event 0x1: Event detected. To clear the status bit, write with a 1 bit at the corresponding position.

ENC_LATCH (0x3C)

BIT	31	30	29	28	27	26	25	24		
Field	ENC_LATCH[31:24]									
Reset				0:	k 0					
Access Type		Read Only								
BIT	23	23 22 21 20 19 18 17 16								
Field			1	ENC_LAT	CH[23:16]	•				
Reset				0:	κ0					
Access Type				Read	Only					
BIT	15	14	13	12	11	10	9	8		
Field		•	•	ENC_LA	ГСН[15:8]		•			
Reset				0:	κ0					
Access Type				Read	Only					
BIT	7	6	5	4	3	2	1	0		
Field		•	•	ENC_LA	TCH[7:0]	•	•	•		
Reset				0:	κ0					
Access Type				Read	Only					

BITFIELD	BITS	DESCRIPTION
ENC_LATCH	31:0	Encoder position X_ENC latched on N event

ENC_DEVIATION (0x3D)

BIT	31	30	29	28	27	26	25	24
Field	_	_	_	_	_	_	_	_
Reset	_	_	-	_	-	_	_	_
Access Type	_	_	I	_	_	_	_	-
BIT	23	22	21	20	19	18	17	16
Field	_	_	_	_		ENC_DEVIA	TION[19:16]	
Reset	_	_	-	_		0:	x0	
Access Type	_	_	ı	_	Write, Read			
BIT	15	14	13	12	11	10	9	8
Field				ENC_DEVI	ATION[15:8]			
Reset				0:	x0			
Access Type				Write,	Read			
BIT	7	6	5	4	3	2	1	0
Field		ENC_DEVIATION[7:0]						
Reset		0x0						
Access Type				Write,	Read			

BITFIELD	BITS	DESCRIPTION
ENC_DEVIATION	19:0	Maximum number of steps deviation between encoder counter and XACTUAL for deviation warning Result in flag ENC_STATUS.deviation_warn 0 = Function is off.

VIRTUAL_STOP_L (0x3E)

BIT	31	30	29	28	27	26	25	24
Field				VIRTUAL_ST	OP_L[31:24]			
Reset				0x	:0			
Access Type				Write,	Read			
BIT	23	22	21	20	19	18	17	16
Field				VIRTUAL_ST	OP_L[23:16]			
Reset		0x0						
Access Type				Write,	Read			
BIT	15	14	13	12	11	10	9	8
Field				VIRTUAL_S1	ΓΟΡ_L[15:8]			
Reset		0x0						
Access Type		Write, Read						

BIT	7	6	5	4	3	2	1	0
Field		VIRTUAL_STOP_L[7:0]						
Reset		0x0						
Access Type		Write, Read						

BITFIELD	BITS	DESCRIPTION
VIRTUAL_STOP_L	31:0	Virtual stop switch based on encoder or ramp position. A stop is raised, based on the signed comparison virtual_stop_enc = 1: X_ENC <= VIRTUAL_STOP_L virtual_stop_enc = 0: XACTUAL <= VIRTUAL_STOP_L -2^31 +(2^31)-1

VIRTUAL_STOP_R (0x3F)

BIT	31	30	29	28	27	26	25	24
Field		VIRTUAL_STOP_R[31:24]						
Reset				0:	k 0			
Access Type				Write,	Read			
BIT	23	22	21	20	19	18	17	16
Field				VIRTUAL_ST	OP_R[23:16]	•	•	•
Reset				0:	κ 0			
Access Type		Write, Read						
BIT	15	14	13	12	11	10	9	8
Field				VIRTUAL_S	TOP_R[15:8]		•	
Reset				0:	κ0			
Access Type				Write,	Read			
BIT	7	6	5	4	3	2	1	0
Field				VIRTUAL_S	TOP_R[7:0]		•	
Reset		0x0						
Access Type				Write,	Read			

BITFIELD	BITS	DESCRIPTION
VIRTUAL_STOP_R	31:0	Virtual Stop Switch based on Encoder. A stop is raised, based on the signed comparison virtual_stop_enc = 1: X_ENC >= VIRTUAL_STOP_R virtual_stop_enc = 0: XACTUAL >= VIRTUAL_STOP_R -2^31 +(2^31)-1

ADC_VSUPPLY_AIN (0x50)

BIT	31	30	29	28	27	26	25	24
Field	_	_	_	ADC_AIN[12:8]				
Reset	_	_	_					
Access Type	-	_	-	Read Only				
BIT	23	22	21	20	19	18	17	16
Field			1	ADC_A	IN[7:0]		1	
Reset								
Access Type				Read	Only			
BIT	15	14	13	12	11	10	9	8
Field	_	_	_		AD	C_VSUPPLY[1	2:8]	ı
Reset	_	_	_					
Access Type	_	_	_			Read Only		
BIT	7	6	5	4	3	2	1	0
Field		l	1	ADC_VSU	PPLY[7:0]	1	I .	
Reset								
Access Type				Read	Only			

BITFIELD	BITS	DESCRIPTION
ADC_AIN	28:16	Value of voltage at AIN pin in integer. Update rate = each 2048 clocks
		$V_{AIN} = ADC_AIN * 305.2uV$
ADC_VSUPPLY	12:0	Actual Value of voltage on V _S (filtered with low pass filter) Update rate: each 2048 clocks
		$V_{S} = ADC_{VSUPPLY} * 9.732mV$

ADC_TEMP (0x51)

BIT	31	30	29	28	27	26	25	24
Field	_	-	_	RESERVED[12:8]				
Reset	_	-	_					
Access Type	_	ı	_	Read Only				
BIT	23	22	21	20	19	18	17	16
Field				RESER\	/ED[7:0]		•	
Reset								
Access Type	Read Only							

BIT	15	14	13	12	11	10	9	8
Field	_	_	_	ADC_TEMP[12:8]				
Reset	_	_	_					
Access Type	_	_	_	Read Only				
BIT	7	6	5	4 3 2 1 0				0
Field				ADC_TE	MP[7:0]			
Reset								
Access Type	Read Only							

BITFIELD	BITS	DESCRIPTION
RESERVED	28:16	
ADC TEMP	12:0	Actual Temperature(filtered with low pass filter) Update rate: each 2048 clocks.
_		$TEMP[°C] = \frac{ADC_TEMP - 2038}{7.7}$

OTW_OV_VTH (0x52)

BIT	31	30	29	28	27	26	25	24		
Field	_	_	-		OVERTEMPPREWARNING_VTH[12:8]					
Reset	_	_	-			0xB92				
Access Type	_	_	_		Write, Read					
BIT	23	22	21	20 19 18 17						
Field			OVE	ERTEMPPREW	ARNING_VTI	H[7:0]		•		
Reset				0xE	392					
Access Type				Write, Read						
BIT	15	14	13	12	11	10	9	8		
Field	_	_	-		OVER	RVOLTAGE_VTI	H[12:8]	•		
Reset	_	_	-			0xF25				
Access Type	_	_	_			Write, Read				
BIT	7	6	5	4	3	2	1	0		
Field				OVERVOLTA	GE_VTH[7:0]	1				
Reset				0xF	0xF25					
Access Type		Write, Read								

BITFIELD	BITS	DESCRIPTION
OVERTEMPPREWARN		Overtemperature warning threshold register:
	28:16	ADC_TEMP >= OVERTEMPPREWARNING_VTH
ING_VTH		Overtemperatureprewarning will be triggered
		(Reset: 0xB92 equals 120°C)

BITFIELD	BITS	DESCRIPTION
OVERVOLTAGE_VTH	12:0	Overvoltage threshold for output OV. Default: 38V, 36 V equals 1.125 V at ADC inputs

MSLUT_0 (0x60)

Microstep table entries 0...31

ie entries us) I									
31	30	29	28	27	26	25	24			
	MSLUT_0[31:24]									
	0xAAAAB554									
	Write, Read									
23	23 22 21 20 19 18 17 16									
			MSLUT_	0[23:16]						
			0xAAA	AB554						
Write, Read										
15	14	13	12	11	10	9	8			
			MSLUT	_0[15:8]						
			0xAAA	AB554						
			Write,	Read						
7	6	5	4	3	2	1	0			
		•	MSLUT	0[7:0]	•		•			
			0xAAA	AB554						
			Write,	Read						
	23	23 22 15 14	31 30 29 23 22 21 15 14 13	31 30 29 28 MSLUT OXAAA Write,	31 30 29 28 27 MSLUT_0[31:24] 0xAAAAB554 Write, Read 23 22 21 20 19 MSLUT_0[23:16] 0xAAAAB554 Write, Read 15 14 13 12 11 MSLUT_0[15:8] 0xAAAAB554 Write, Read	31 30 29 28 27 26	31 30 29 28 27 26 25			

BITFIELD	BITS	DESCRIPTION
MSLUT_0	31:0	Each bit gives the difference between entry x and entry x+1 when combined with the corresponding MSLUTSEL W bits: 0: W= %00: -1 %01: +0 %10: +1 %11: +2 1: W= %00: +0 %01: +1 %10: +2 %11: +3 This is the differential coding for the first quarter of a wave. Start values for CUR_A and CUR_B are stored for MSCNT position 0 in START_SIN and START_SIN90. ofs31, ofs30,, ofs01, ofs00 ofs255, ofs254,, ofs225, ofs224 reset default= sine wave table

MSLUT_1 (0x61)

Microstep table entries 32...63

BIT	31	30	29	28	27	26	25	24			
Field		MSLUT_1[31:24]									
Reset	0x4A9554AA										
Access Type		Write, Read									
BIT	23	23 22 21 20 19 18 17 16									
Field		1		MSLUT_	1[23:16]		•	•			
Reset				0x4A9	554AA						
Access Type	Write, Read										
BIT	15	14	13	12	11	10	9	8			
Field		•		MSLUT	_1[15:8]	•	1	1			
Reset				0x4A9	554AA						
Access Type				Write,	Read						
BIT	7	6	5	4	3	2	1	0			
Field		•	•	MSLUT	_1[7:0]	•	•	•			
Reset				0x4A9	554AA						
Access Type				Write,	Read						

BITFIELD	BITS	DESCRIPTION
MSLUT_1	31:0	Each bit gives the difference between entry x and entry x+1 when combined with the corresponding MSLUTSEL W bits: 0: W= %00: -1 %01: +0 %10: +1 %11: +2 1: W= %00: +0 %01: +1 %10: +2 %11: +3 This is the differential coding for the first quarter of a wave. Start values for CUR_A and CUR_B are stored for MSCNT position 0 in START_SIN and START_SIN90. ofs31, ofs30,, ofs01, ofs00 ofs255, ofs254,, ofs225, ofs224 reset default= sine wave table

MSLUT 2 (0x62)

Microstep table entries 64...95

BIT	31	31 30 29 28 27 26 25 24									
Field		MSLUT_2[31:24]									
Reset				0x244	92929						
Access Type				Write,	Read						

BIT	23	22	21	20	19	18	17	16			
Field		MSLUT_2[23:16]									
Reset		0x24492929									
Access Type		Write, Read									
BIT	15	15 14 13 12 11 10 9 8									
Field				MSLUT_	_2[15:8]						
Reset				0x2449	92929						
Access Type				Write,	Read						
BIT	7	6	5	4	3	2	1	0			
Field				MSLUT	_2[7:0]						
Reset		0x24492929									
Access Type				Write,	Read						

BITFIELD	BITS	DESCRIPTION
MSLUT_2	31:0	Each bit gives the difference between entry x and entry x+1 when combined with the corresponding MSLUTSEL W bits: 0: W= %00: -1

MSLUT_3 (0x63)

Microstep table entries 96...127

BIT	31	30	29	28	27	26	25	24			
Field		MSLUT_3[31:24]									
Reset		0x10104222									
Access Type		Write, Read									
BIT	23	22	21	20	19	18	17	16			
Field				MSLUT_	3[23:16]						
Reset				0x101	04222						
Access Type		Write, Read									

BIT	15	14	13	12	11	10	9	8			
Field		MSLUT_3[15:8]									
Reset		0x10104222									
Access Type				Write,	Read						
BIT	7	6	5	4	3	2	1	0			
Field				MSLUT	_3[7:0]						
Reset				0x101	04222						
Access Type				Write,	Read						

BITFIELD	BITS	DESCRIPTION
MSLUT_3	31:0	Each bit gives the difference between entry x and entry x+1 when combined with the corresponding MSLUTSEL W bits: 0: W= %00: -1 %01: +0 %10: +1 %11: +2 1: W= %00: +0 %01: +1 %10: +2 %11: +3 This is the differential coding for the first quarter of a wave. Start values for CUR_A and CUR_B are stored for MSCNT position 0 in START_SIN and START_SIN90. ofs31, ofs30,, ofs01, ofs00 ofs255, ofs254,, ofs225, ofs224 reset default= sine wave table

MSLUT_4 (0x64)

Microstep table entries 128...159

BIT	31	30	29	28	27	26	25	24	
Field				MSLUT	4[31:24]	•	•		
Reset				0xFBF	FFFFF				
Access Type		Write, Read							
BIT	23	22	21	20	19	18	17	16	
Field			•	MSLUT	_4[23:16]				
Reset				0xFBF	FFFFF				
Access Type				Write	Read				
BIT	15	14	13	12	11	10	9	8	
Field				MSLUT	_4[15:8]				
Reset				0xFBF	FFFFF				
Access Type				Write	Read				

BIT	7	6	5	4	3	2	1	0	
Field		MSLUT_4[7:0]							
Reset		0xFBFFFFF							
Access Type		Write, Read							

BITFIELD	BITS	DESCRIPTION
MSLUT_4	31:0	Each bit gives the difference between entry x and entry x+1 when combined with the corresponding MSLUTSEL W bits: 0: W= %00: -1 %01: +0 %10: +1 %11: +2 1: W= %00: +0 %01: +1 %10: +2 %11: +3 This is the differential coding for the first quarter of a wave. Start values for CUR_A and CUR_B are stored for MSCNT position 0 in START_SIN and START_SIN90. ofs31, ofs30,, ofs01, ofs00 ofs255, ofs254,, ofs225, ofs224 reset default= sine wave table

MSLUT_5 (0x65)

Microstep table entries 160...191

BIT	31	30	29	28	27	26	25	24
Field	MSLUT_5[31:24]							
Reset				0xB5B	B777D			
Access Type				Write,	Read			
BIT	23	22	21	20	19	18	17	16
Field			•	MSLUT_	5[23:16]	•	'	•
Reset				0xB5B	B777D			
Access Type	Write, Read							
BIT	15	14	13	12	11	10	9	8
Field			•	MSLUT	_5[15:8]	•		
Reset				0xB5B	B777D			
Access Type				Write,	Read			
BIT	7	6	5	4	3	2	1	0
Field				MSLUT	_5[7:0]			•
Reset				0xB5B	B777D			
Access Type				Write,	Read			

BITFIELD	BITS	DESCRIPTION
MSLUT_5	31:0	Each bit gives the difference between entry x and entry x+1 when combined with the corresponding MSLUTSEL W bits: 0: W= %00: -1 %01: +0 %10: +1 %11: +2 1: W= %00: +0 %01: +1 %10: +2 %11: +3 This is the differential coding for the first quarter of a wave. Start values for CUR_A and CUR_B are stored for MSCNT position 0 in START_SIN and START_SIN90. ofs31, ofs30,, ofs01, ofs00 ofs255, ofs254,, ofs225, ofs224 reset default= sine wave table

MSLUT 6 (0x66)

Microstep table entries 192...223

	ie entries 192.				_		T -		
BIT	31	30	29	28	27	26	25	24	
Field		MSLUT_6[31:24]							
Reset				0x492	95556				
Access Type				Write,	Read				
BIT	23	22	21	20	19	18	17	16	
Field				MSLUT_	6[23:16]				
Reset				0x492	95556				
Access Type	Write, Read								
BIT	15	14	13	12	11	10	9	8	
Field		•	•	MSLUT	_6[15:8]				
Reset				0x492	95556				
Access Type				Write,	Read				
BIT	7	6	5	4	3	2	1	0	
Field			•	MSLUT	_6[7:0]	•			
Reset				0x492	95556				
Access Type				Write,	Read				

BITFIELD	BITS	DESCRIPTION
MSLUT_6	31:0	Each bit gives the difference between entry x and entry x+1 when combined with the corresponding MSLUTSEL W bits: 0: W= %00: -1 %01: +0 %10: +1 %11: +2 1: W= %00: +0 %01: +1 %10: +2 %11: +3 This is the differential coding for the first quarter of a wave. Start values for CUR_A and CUR_B are stored for MSCNT position 0 in START_SIN and START_SIN90. ofs31, ofs30,, ofs01, ofs00 ofs255, ofs254,, ofs225, ofs224 reset default= sine wave table

MSLUT_7 (0x67)

Microstep table entries 224...255

BIT	31	30	29	28	27	26	25	24
Field	MSLUT_7[31:24]							
Reset				0x40	4222			
Access Type				Write	Read			
BIT	23	22	21	20	19	18	17	16
Field				MSLUT_	7[23:16]			,
Reset				0x40	4222			
Access Type	Write, Read							
BIT	15	14	13	12	11	10	9	8
Field				MSLUT	_7[15:8]		•	
Reset				0x40	4222			
Access Type				Write	Read			
BIT	7	6	5	4	3	2	1	0
Field				MSLU	_7[7:0]	•	•	•
Reset				0x40	4222			
Access Type				Write	Read			

BITFIELD	BITS	DESCRIPTION
MSLUT_7	31:0	Each bit gives the difference between entry x and entry x+1 when combined with the corresponding MSLUTSEL W bits: 0: W= %00: -1 %01: +0 %10: +1 %11: +2 1: W= %00: +0 %01: +1 %10: +2 %11: +3 This is the differential coding for the first quarter of a wave. Start values for CUR_A and CUR_B are stored for MSCNT position 0 in START_SIN and START_SIN90. ofs31, ofs30,, ofs01, ofs00 ofs255, ofs254,, ofs225, ofs224 reset default= sine wave table

MSLUTSEL (0x68)

BIT	31	30	29	28	27	26	25	24	
Field	X3[7:0]								
Reset				0x	FF				
Access Type		Write, Read							
BIT	23	22	21	20	19	18	17	16	
Field				X2[7:0]				
Reset				0x	FF				
Access Type	Write, Read								
BIT	15	14	13	12	11	10	9	8	
Field				X1[7:0]				
Reset				0x	80				
Access Type				Write,	Read				
BIT	7	6	5	4	3	2	1	0	
Field	W3[[1:0]	W2[1:0]		W1[1:0]		W0[1:0]		
Reset	0>	0x1		0x1		0x1		x2	
Access Type	Write,	Read	Write,	Read	Write,	Read	Write	, Read	

BITFIELD	BITS	DESCRIPTION
X3	31:24	LUT segment 1 start The sine wave look up table can be divided into up to four segments using an individual step width control entry <i>Wx</i> . The segment borders are selected by <i>X1</i> , <i>X2</i> and <i>X3</i> . Segment 0 goes from 0 to <i>X1</i> -1. Segment 1 goes from <i>X1</i> to <i>X2</i> -1. Segment 2 goes from <i>X2</i> to <i>X3</i> -1. Segment 3 goes from <i>X3</i> to 255. For defined response the values shall satisfy: 0< <i>X1</i> < <i>X2</i> < <i>X3</i>
X2	23:16	LUT segment 1 start The sine wave look up table can be divided into up to four segments using an individual step width control entry Wx. The segment borders are selected by X1, X2 and X3. Segment 0 goes from 0 to X1-1. Segment 1 goes from X1 to X2-1. Segment 2 goes from X2 to X3-1. Segment 3 goes from X3 to 255. For defined response the values shall satisfy: 0 <x1<x2<x3< td=""></x1<x2<x3<>
X1	15:8	LUT segment 1 start The sine wave look up table can be divided into up to four segments using an individual step width control entry Wx . The segment borders are selected by $X1$, $X2$ and $X3$. Segment 0 goes from 0 to $X1$ -1. Segment 1 goes from $X1$ to $X2$ -1. Segment 2 goes from $X2$ to $X3$ -1. Segment 3 goes from $X3$ to $X3$ -1. Segment 3 goes from $X3$ to $X3$ -1. For defined response the values shall satisfy: $X3$ -1.
W3	7:6	LUT width select from ofs(X3) to ofs255 Width control bit coding W0W3: %00: MSLUT entry 0, 1 select: -1, +0 %01: MSLUT entry 0, 1 select: +0, +1 %10: MSLUT entry 0, 1 select: +1, +2 %11: MSLUT entry 0, 1 select: +2, +3
W2	5:4	LUT width select from <i>ofs(X2)</i> to <i>ofs(X3-1)</i> Width control bit coding <i>W0W3</i> : %00: MSLUT entry 0, 1 select: -1, +0 %01: MSLUT entry 0, 1 select: +0, +1 %10: MSLUT entry 0, 1 select: +1, +2 %11: MSLUT entry 0, 1 select: +2, +3

BITFIELD	BITS	DESCRIPTION	
		LUT width select from ofs(X1) to ofs(X2-1)	
W1	3:2	Width control bit coding <i>W0W3</i> : %00: MSLUT entry 0, 1 select: -1, +0 %01: MSLUT entry 0, 1 select: +0, +1 %10: MSLUT entry 0, 1 select: +1, +2 %11: MSLUT entry 0, 1 select: +2, +3	
W0	1:0	LUT width select from <i>ofs00</i> to <i>ofs(X1-1)</i> Width control bit coding <i>W0W3</i> : %00: MSLUT entry 0, 1 select: -1, +0 %01: MSLUT entry 0, 1 select: +0, +1 %10: MSLUT entry 0, 1 select: +1, +2 %11: MSLUT entry 0, 1 select: +2, +3	

MSLUTSTART (0x69)

Start values are transferred to the microstep registers *CUR_A* and *CUR_B*, whenever the reference position *MSCNT* = 0 is passed.

o is passeu.	31	20	20	20	27	20	25	24
BIT	31							
Field				OFFSET_	SIN90[7:0]			
Reset				0:	x0			
Access Type				Write,	Read			
BIT	23	22	21	20	19	18	17	16
Field				START_S	SIN90[7:0]			•
Reset				0d:	247			
Access Type	Write, Read							
BIT	15	14	13	12	11	10	9	8
Field	_	_	_	_	_	_	_	_
Reset	_	_	_	_	_	_	_	_
Access Type	_							_
BIT	7	6	5	4	3	2	1	0
Field		START_SIN[7:0]						
Reset		0x0						
Access Type				Write	Read			

BITFIELD	BITS	DESCRIPTION
OFFSET_SIN90	31:24	Signed offset for cosine wave +/-127 microsteps. Adapt START_SIN90 to match the microstep wave table at position MSCNT = 0
START_SIN90	23:16	START_SIN90 gives the absolute value for cosine wave microstep table entry at MSCNT = 0 (table position 256 + OFFSET_SIN90).
START_SIN	7:0	START_SIN gives the absolute value at microstep table entry 0.

MSCNT (0x6A)

BIT	31	30	29	28	27	26	25	24
Field	_	_	_	_	_	_	_	_
Reset	_	_	-	_	_	_	_	_
Access Type	_	-	_	_	_	_	-	_
BIT	23	22	21	20	19	18	17	16
Field	_	_	_	_	_	_	_	_
Reset	_	_	_	_	_	_	_	_
Access Type	_	-	-	-	_	-	_	-
BIT	15	14	13	12	11	10	9	8
Field	_	_	-	-	_	_	MSCI	NT[9:8]
Reset	_	_	_	_	_	_	0	x0
Access Type	_	-	ı	_	_	-	Read	d Only
BIT	7	6	5	4	3	2	1	0
Field		MSCNT[7:0]						
Reset				0:	κ0			
Access Type		Read Only						

BITFIELD	BITS	DESCRIPTION
MSCNT	9:0	Microstep counter. Indicates actual position in the microstep table for CUR_A. CUR_B uses an offset of 256 (2 phase motor). Hint: Move to a position where MSCNT is zero before re-initializing MSLUTSTART or MSLUT and MSLUTSEL.

MSCURACT (0x6B)

BIT	31	30	29	28	27	26	25	24
Field	_	_	-	_	-	_	_	CUR_A[8]
Reset	_	-	-	_	_	_	_	0xF7
Access Type	_	_	_	_	_	_	_	Read Only
BIT	23	22	21	20	19	18	17	16
Field		CUR_A[7:0]						
Reset				0x	F7			
Access Type				Read	Only			
BIT	15	14	13	12	11	10	9	8
Field	_	_	_	_	_	_	_	CUR_B[8]
Reset	_	_	_	_	_	_	_	0x0
Access Type	_	_	-	_	_	_	_	Read Only

BIT	7	6	5	4	3	2	1	0
Field		CUR_B[7:0]						
Reset	0x0							
Access Type	Read Only							

BITFIELD	BITS	DESCRIPTION
CUR_A	24:16	Actual microstep current for motor phase A (co-sine wave) as read from MSLUT (not scaled by current)
CUR_B	8:0	Actual microstep current for motor phase B (sine wave) as read from MSLUT (not scaled by current)

CHOPCONF (0x6C)

BIT	31	30	29	28	27	26	25	24
Field	diss2vs	diss2g	reserved	intpol	MRES[3:0]			
Reset	0x0	0x0	0x0	0x1		0>	(0	
Access Type	Write, Read	Write, Read	Write, Read	Write, Read		Write,	Read	
BIT	23	22	21	20	19	18	17	16
Field		TPF	D[3:0]		vhighchm	vhighfs	-	TBL[1]
Reset		0)	< 4				_	0b10
Access Type	Write, Read				Write, Read	Write, Read	-	Write, Read
BIT	15	14	13	12	11	10	9	8
Field	TBL[0]	chm	_	disfdcc	fd3	HE	ND_OFFSET[3:1]
Reset	0b10		_	0x0			0x2	
Access Type	Write, Read	Write, Read	_	Write, Read	Write, Read		Write, Read	
BIT	7	6	5	4	3	2	1	0
Field	HEND_OFF SET[0]					TOFF[3:0]		
Reset	0x2	0x5			0x0			
Access Type	Write, Read		Write, Read			Write,	Read	

BITFIELD	BITS	DESCRIPTION	DECODE	
diss2vs	31	short to supply protection disable	0x0: Short to VS protection is on 0x1: Short to VS protection is disabled	
diss2g	30	short to GND protection disable	0x0: Short to GND protection is on 0x1: Short to GND protection is disabled	
reserved	29	reserved, do not use		
intpol	28	interpolation to 256 microsteps	0x0: no interpolation 0x1: The actual microstep resolution (<i>MRES</i>) becomes extrapolated to 256 microsteps for smoothest motor operation	

BITFIELD	BITS	DESCRIPTION	DECODE
MRES	27:24	micro step resolution selection %0000: Native 256 microstep setting. Normally use this setting with the internal motion controller. %0001 %1000: 128, 64, 32, 16, 8, 4, 2, FULLSTEP Reduced microstep resolution. The resolution gives the number of microstep entries per sine quarter wave. The driver automatically uses microstep positions which result in a symmetrical wave, when choosing a lower microstep resolution. step width = 2 ^{MRES} [microsteps]	
TPFD	23:20	passive fast decay time TPFD allows dampening of motor mid-range resonances. Passive fast decay time setting controls duration of the fast decay phase inserted after bridge polarity change N _{CLK} = 128 x TPFD %0000: Disable %0001 %1111: 1 15	
vhighchm	19	high velocity chopper mode This bit enables switching to <i>chm</i> = 1 and <i>fd</i> = 0, when <i>VHIGH</i> is exceeded. This way, a higher velocity can be achieved. Can be combined with <i>vhighfs</i> = 1. If set, the <i>TOFF</i> setting automatically becomes doubled during high velocity operation in order to avoid doubling of the chopper frequency.	
vhighfs	18	high velocity fullstep selection This bit enables switching to fullstep, when VHIGH is exceeded. Switching takes place only at 45° position. The fullstep target current uses the current value from the microstep table at the 45° position.	
TBL	16:15	TBL blank time setting. Sets comparator blank time in numbers of clock cycles. Hint: 24 or 36 clocks are recommended for most applications. Restriction for TBL = 0x0 : Use only in combination with external clock oscillator <= 8MHz Restriction for TBL = 0x1 : May be used with internal clock, or if external clock frequency <= 13MHz is applied.	0x0: 16 clocks 0x1: 24 clocks 0x2: 36 clocks 0x3: 48 clocks

Analog Devices | 142 www.analog.com

BITFIELD	BITS	DESCRIPTION	DECODE
chm	14	Chopper mode selection. This is only effective if en_pwm_mode is set to 0 or TSTEP < TPWMTHRS	0x0: Standard mode (SpreadCycle) 0x1: Constant off time with fast decay time. Fast decay time is also terminated when the negative nominal current is reached. Fast decay is after on time.
disfdcc	12	fast decay mode for chm = 1	0x0: enables current comparator usage for termination of the fast decay cycle 0x1: disables current comparator usage for termination of the fast decay cycle
		TFD[3]	
fd3	11	with chm = 1: MSB of fast decay time setting TFD	
HEND_OFFS ET	10:7	with chm = 0: HEND = hysteresis low value %0000 %1111: Hysteresis is -3, -2, -1, 0, 1,, 12 (1/512 of this setting adds to current setting) This is the hysteresis value which becomes used for the hysteresis chopper. with chm = 1: OFFSET = sine wave offset %0000 %1111: Offset is -3, -2, -1, 0, 1,, 12 This is the sine wave offset and 1/512 of the value becomes added to the absolute value of each sine wave entry.	
HSTRT_TFD 210	6:4	with chm = 0: HSTRT hysteresis start value added to HEND %000 %111: Add 1, 2,, 8 to hysteresis low value HEND (1/512 of this setting adds to current setting) Attention: Effective HEND + HSTRT ≤ 16. Hint: Hysteresis decrement is done each 16 clocks with chm = 1: TFD [20] fast decay time setting Fast decay time setting (MSB: fd3): %0000 %1111: Fast decay time setting TFD with NCLK = 32 x TFD (%0000: slow decay only)	
TOFF	3:0	TOFF off time and driver enable Off time setting controls duration of slow decay phase N _{CLK} = 24 + 32 x TOFF %0000: Driver disable, all bridges off %0001: 1 – use only with TBL ≥ 2 %0010 %1111: 2 15	

Analog Devices | 143 www.analog.com

COOLCONF (0x6D)

BIT	31	30	29	28	27	26	25	24
Field	-	-	_	_	_	_	_	sfilt
Reset	_	-	_	_	_	_	_	0x0
Access Type	_	-	_	_	_	_	_	Write, Read
BIT	23	22	21	20	19	18	17	16
Field	_	sgt[6:0]						
Reset	_	0x0						
Access Type	_	Write, Read						
BIT	15	14	13	12	11	10	9	8
Field	seimin	sedn[1:0]		_	semax[3:0]			
Reset	0x0	0x0		_	0x0			
Access Type	Write, Read	Write, Read		-	Write, Read			
BIT	7	6	5	4	3	2	1	0
Field	_	seup[1:0]		_	semin[3:0]			
Reset	_	0x0		_	0x0			
Access Type	_	Write, Read		_	Write, Read			

BITFIELD	BITS	DESCRIPTION	DECODE
sfilt	24	StallGuard2 and StallGuard4 filter enable	0x0: Standard mode, high time resolution for StallGuard 0x1: Filtered mode, StallGuard signal updated for each four fullsteps only to compensate for motor pole tolerances
sgt	22:16	StallGuard2 threshold value This signed value controls StallGuard2 level for stall output and sets the optimum measurement range for readout. A lower value gives a higher sensitivity. Zero is the starting value working with most motors. -64 to +63: A higher value makes StallGuard2 less sensitive and requires more torque to indicate a stall.	
seimin	15	minimum current for smart current control	0x0: 1/2 of current setting (<i>IRUN</i>) 0x1: 1/4 of current setting (<i>IRUN</i>)
sedn	14:13	current down step speed %00: For each 32 StallGuard2 values decrease by one %01: For each 8 StallGuard2 values decrease by one %10: For each 2 StallGuard2 values decrease by one %11: For each StallGuard2 value decrease by one	

BITFIELD	BITS	DESCRIPTION	DECODE
		StallGuard2 hysteresis value for smart current control	
semax	11:8	If the StallGuard2 result is equal to or above (SEMIN + SEMAX + 1) x 32, the motor current becomes decreased to save energy. %0000 %1111: 0 15	
		current up step width	
seup	6:5	Current increment steps per measured StallGuard2 value %00 %11: 1, 2, 4, 8	
		minimum StallGuard2 value for smart current control and smart current enable	
semin	3:0	If the StallGuard2 result falls below SEMIN x 32, the motor current becomes increased to reduce motor load angle. %0000: smart current control CoolStep off %0001 %1111: 1 15	

DCCTRL (0x6E)

DcStep (*DC*) automatic commutation configuration register (enable via pin DCEN or via *VDCMIN*)

Hint: Using a higher microstep resolution or interpolated operation, DcStep delivers a better StallGuard signal.

DC_SG is also available above VHIGH if whigher is activated. For best result also set whigherm

DC_5G is also available above virigin if virigins is activated. For best result also set virigin in

BIT	31	30	29	28	27	26	25	24					
Field	_	_	_	_	_	_	_	_					
Reset	_	_	_	_	_	_	_	_					
Access Type	_	_	_	_	_	_	_	_					
BIT	23	22	21	20	19	18	17	16					
Field		DC_SG[7:0]											
Reset	0x0												
Access Type	Write, Read												
BIT	15	14	13	12	11	10	9	8					
Field	_	_	-	_	_	-	DC_TII	ME[9:8]					
Reset	Ox0				k 0								
Access Type	Write, Read					Read							
BIT	7	6	5	4	3	2	1	0					
Field	DC_TIME[7:0]												
Reset	0x0												
Access Type				Write,	Read			Write, Read					

BITFIELD	BITS	DESCRIPTION	
DC_SG	23:16	Max. PWM on time for step loss detection using DcStep StallGuard2 in DcStep mode (<i>DC_SG</i> * 16/f _{CLK}) Set slightly higher than <i>DC_TIME</i> /16	
		0 = disable	
DC_TIME	9:0	Upper PWM on time limit for commutation (<i>DC_TIME</i> * 1/f _{CLK}). Set slightly above effective blank time <i>TBL</i> .	

DRV_STATUS (0x6F)

BIT	31	30	29	28	27	26	25	24
Field	stst	olb	ola	s2gb	s2ga	otpw	ot	stallguard
Reset								
Access Type	Read Only	Read Only	Read Only	Read Only	Read Only	Read Only	Read Only	Read Only
BIT	23	22	21	20	19	18	17	16
Field	_	_	_		C	S_ACTUAL[4:	0]	
Reset	_	_	_					
Access Type	_	_	_	Read Only				
BIT	15	14	13	12	11	10	9	8
Field	fsactive	stealth	s2vsb	s2vsa	-	-	SG_RES	SULT[9:8]
Reset					-	-		
Access Type	Read Only	Read Only	Read Only	Read Only – Read Only			Only	
BIT	7	6	5	4	3	2	1	0
Field		SG_RESULT[7:0]						
Reset		_ ` ` `						
Access Type		Read Only						

BITFIELD	BITS	DESCRIPTION	DECODE
stst	31	standstill indicator This flag indicates motor stand still in each operation mode. This occurs 2 ²⁰ clocks after the last step pulse.	
olb	30	open load indicator phase B	0x0: normal operation 0x1: Open load detected on phase B. Hint: This is just an informative flag. The driver takes no action upon it. False detection may occur in fast motion and standstill. Check during slow motion, only.
ola	29	open load indicator phase A	0x0: normal operation 0x1: Open load detected on phase A. Hint: This is just an informative flag. The driver takes no action upon it. False detection may occur in fast motion and standstill. Check during slow motion, only.

BITFIELD	BITS	DESCRIPTION	DECODE
s2gb	28	short to ground indicator phase B	0x0: normal operation 0x1: Short to GND detected on phase B. The driver becomes disabled. The flags stay active, until the driver is disabled by software (<i>TOFF</i> = 0) or by the DRV_ENN input.
s2ga	27	short to ground indicator phase A	0x0: normal operation 0x1: Short to GND detected on phase A. The driver becomes disabled. The flags stay active, until the driver is disabled by software (<i>TOFF</i> = 0) or by the DRV_ENN input.
otpw	26	overtemperature pre-warning flag	0x0: normal operation 0x1: Overtemperature pre-warning threshold is exceeded. The overtemperature pre-warning flag is common for both bridges.
ot	25	overtemperature flag	0x0: normal operation 0x1: Overtemperature limit has been reached. Drivers become disabled until <i>otpw</i> is also cleared due to cooling down of the IC. The overtemperature flag is common for both bridges.
stallguard	24	StallGuard2/StallGuard4 status	0x0: normal operation 0x1: Motor stall detected by StallGuard2 (in SpreadCycle operation) resp. by StallGuard4 (in StealthChop2 operatoin) or DcStep stall (in DcStep mode).
		actual motor current / smart energy current	
CS_ACTUAL	20:16	Actual current control scaling, for monitoring smart energy current scaling controlled via settings in register COOLCONF, or for monitoring the function of the automatic current scaling	
fsactive	15	full step active indicator	0x0: microstepping active 0x1: Indicates that the driver has switched to fullstep as defined by chopper mode settings and velocity thresholds
stealth	14	StealthChop2 indicator	0x0: StealthChop2 not active 0x1: Driver operates in StealthChop2 mode
s2vsb	13	short to supply indicator phase B	0x0: no error 0x1: Short to supply detected on phase B. The driver becomes disabled. The flags stay active, until the driver is disabled by software (<i>TOFF</i> =0) or by the ENN input.
s2vsa	12	short to supply indicator phase A	0x0: no error 0x1: Short to supply detected on phase A. The driver becomes disabled. The flags stay active, until the driver is disabled by software (<i>TOFF</i> =0) or by the ENN input.

BITFIELD	BITS	DESCRIPTION	DECODE
SG_RESULT	9:0	StallGuard2 result respectively StallGuard4 result (depending on actual chopper mode) resp. PWM on time for coil A in stand still with SpreadCycle for motor temperature detection. Mechanical load measurement: The StallGuard2/4 result gives a means to measure mechanical motor load. A higher value means lower mechanical load. For StallGuard2, a value of 0 signals highest load. With optimum SGT setting, this is an indicator for a motor stall. The stall detection compares SG_RESULT to 0 in order to detect a stall. SG_RESULT is used as a base for CoolStep operation, by comparing it to a programmable upper and a lower limit. It is not applicable in StealthChop2 mode. StallGuard2 works best with microstep operation or DcStep. Temperature measurement during SpreadCycle mode: In standstill, no StallGuard2 result can be obtained. SG_RESULT shows the chopper on-time for motor coil A instead. Move the motor to a determined microstep position at a certain current setting to get a rough estimation of motor temperature by a reading the chopper on-time. As the motor heats up, its coil resistance rises and the chopper on-time increases. For StallGuard4 specifics, please refer SG4_RESULT.	

PWMCONF (0x70)

BIT	31	30	29	28	27	26	25	24	
Field		PWM_LIM[3:0]				PWM_REG[3:0]			
Reset		0xC				0x4			
Access Type		Write, Read Write, Read			Read				
BIT	23	22	21	20	19	18	17	16	
Field	pwm_dis_re g_stst	pwm_meas _sd_enable	FREEWHEEL[1:0]		pwm_autogr ad	pwm_autos cale	PWM_FREQ[1:0]		
Reset	0x0	0x0	0x0		0x1	0x1	0x0		
Access Type	Write, Read	Write, Read	Write, Read		Write, Read	Write, Read	Write,	Read	
BIT	15	14	13	12	11	10	9	8	
Field		PWM_GRAD[7:0]							
Reset		0x0							
Access Type				Write	e, Read				

TMC5240

BIT	7	6	5	4	3	2	1	0
Field		PWM_OFS[7:0]						
Reset	0x1D							
Access Type	Write, Read							

BITFIELD	BITS	DESCRIPTION	DECODE
PWM_LIM	31:28	PWM automatic scale amplitude limit when switching on Limit for PWM_SCALE_AUTO when switching back from SpreadCycle to StealthChop2. This value defines the upper limit for bits 7 to 4 of the automatic current control when switching back. It can be set to reduce the current jerk during mode change back to StealthChop2. It does not limit PWM_GRAD or PWM_GRAD_AUTO offset. (Default = 12)	
PWM_REG	27:24	Regulation loop gradient User defined maximum PWM amplitude change per half wave when using pwm_autoscale=1. (115): 1: 0.5 increments (slowest regulation) 2: 1 increment 3: 1.5 increments 4: 2 increments (Reset default)) 8: 4 increments 15: 7.5 increments (fastest regulation)	
pwm_dis_reg _stst	23	1= Disable current regulation when motor is in standstill and current is reduced (less than IRUN). This option eliminates any regulation noise during standstill.	
pwm_meas_ sd_enable	22	Default=0; 1: Uses slow decay phases on low side to measure the motor current to reduce the lower current limit.	
FREEWHEE L	21:20	Allows different standstill modes Stand still option when motor current setting is zero (<i>I_HOLD</i> =0). %00: Normal operation %01: Freewheeling %10: Coil shorted using LS drivers %11: Coil shorted using HS drivers	

Analog Devices | 149 www.analog.com

BITFIELD	BITS	DESCRIPTION	DECODE
pwm_autogra d	19	PWM automatic gradient adaptation	0x0: Fixed value for PWM_GRAD (PWM_GRAD_AUTO = PWM_GRAD) 0x1: Automatic tuning (only with pwm_autoscale=1) (Reset default) PWM_GRAD_AUTO is initialized with PWM_GRAD while pwm_autograd=0 and becomes optimized automatically during motion. Preconditions 1. PWM_OFS_AUTO has been automatically initialized. This requires standstill at IRUN for >130ms in order to a) detect standstill b) wait > 128 chopper cycles at IRUN and c) regulate PWM_OFS_AUTO so that -1 < PWM_SCALE_AUTO < 1 2. Motor running and 1.5 x PWM_OFS_AUTO x (IRUN+1)/32 < PWM_SCALE_SUM < 4 x PWM_OFS_AUTO x (IRUN+1)/32 and PWM_SCALE_SUM < 255. Time required for tuning PWM_GRAD_AUTO About 8 fullsteps per change of +/-1.
pwm_autosc	osc 18 PWM automatic amplitude scaling		Also enables use of reduced chopper frequency for tuning PWM_OFS_AUTO. 0x0: User defined feed forward PWM amplitude. The current settings IRUN and IHOLD have no influence! The resulting PWM amplitude (limited to 0255) is: PWM_OFS * ((CS_ACTUAL+1) / 32)
			+ PWM_GRAD * 256 / TSTEP 0x1: Enable automatic current control (Reset default)
PWM_FREQ	17:16	PWM frequency selection: %00: f _{PWM} =2/1024 f _{CLK} (<i>Reset default</i>) %01: f _{PWM} =2/683 f _{CLK} %10: f _{PWM} =2/512 f _{CLK} %11: f _{PWM} =2/410 f _{CLK}	
PWM_GRAD	15:8	Velocity dependent gradient for PWM amplitude: PWM_GRAD x 256 / TSTEP This value is added to PWM_OFS to compensate for the velocity-dependent motor back-EMF. Use PWM_GRAD as initial value for automatic scaling to speed up the automatic tuning process. To do this, set PWM_GRAD to the determined, application specific value, with pwm_autoscale=0. Only afterwards, set pwm_autoscale=1. Enable StealthChop2 when finished.	
		Hint: After initial tuning, the required initial value can be read out from PWM_GRAD_AUTO.	

Analog Devices | 150 www.analog.com

BITFIELD	BITS	DESCRIPTION	DECODE
		User defined PWM amplitude offset (0-255) related to full motor current (CS_ACTUAL=31) in stand still. (Reset default=30) Use PWM_OFS as initial value for automatic scaling to speed up the automatic tuning process. To do this, set PWM_OFS to the determined, application specific value, with pwm_autoscale=0. Only afterwards, set pwm_autoscale=1. Enable StealthChop2 when finished.	
PWM_OFS	7:0	PWM_OFS = 0 will disable scaling down motor current below a motor specific lower measurement threshold. This setting should only be used under certain conditions, i.e. when the power supply voltage can vary up and down by a factor of two or more. It prevents the motor going out of regulation, but it also prevents power down below the regulation limit.	
		PWM_OFS > 0 allows automatic scaling to low PWM duty cycles even below the lower regulation threshold. This allows low (standstill) current settings based on the actual (hold) current scale (register IHOLD_IRUN).	

PWM_SCALE (0x71)

Results of StealthChop2 amplitude regulator. These values can be used to monitor automatic PWM amplitude scaling (255=max. voltage).

BIT	31	30	29	28	27	26	25	24
Field	_	-	-	-	-	_	_	PWM_SCA LE_AUTO[8
Reset	_	_	-	_	_	_	_	0x0
Access Type	_	-	_	_	_	_	_	Read Only
BIT	23	22	21	20	19	18	17	16
Field				PWM_SCAL	AUTO[7:0]	•	•	•
Reset				0:	κ0			
Access Type				Read	Only			
BIT	15	14	13	12	11	10	9	8
Field	_	_	_	_	_	_	PWM_SCA	LE_SUM[9:8]
Reset	_	_	_	_	_	_	C)x0
Access Type	_	-	-	_	_	_	Rea	d Only

BIT	7	6	5	4	3	2	1	0			
Field		PWM_SCALE_SUM[7:0]									
Reset		0x0									
Access Type		Read Only									

BITFIELD	BITS	DESCRIPTION
PWM_SCALE_AUTO	24:16	
PWM_SCALE_SUM	9:0	Bits: 90: [01023]PWM_SCALE_SUM: Actual PWM duty cycle. This value is used for scaling the values CUR_A and CUR_B read from the sine wave table. 1023: maximum duty cycle. This value is extended by two bits [1,0] for higher precision of duty cycle read out. Bits 92 correspond to the 8 bit values in other PWM duty cycle related registers.

PWM AUTO (0x72)

These automatically generated values can be read out in order to determine a default / power up setting for <code>PWM_GRAD</code> and <code>PWM_OFS</code>.

and PWW_O	rs.						
31	30	29	28	27	26	25	24
_	_	_	_	_	_	_	_
_	_	_	_	_	_	_	_
-	_	_	_	_	_	_	_
23	22	21	20	19	18	17	16
		1	PWM_GRAI	D_AUTO[7:0]		•	'
			0:	x0			
			Read	l Only			
15	14	13	12	11	10	9	8
_	_	_	_	_	-	_	_
_	_	_	_	_	-	_	_
_	-	-	_	-	-	-	_
7	6	5	4	3	2	1	0
	1	1	PWM_OFS	_AUTO[7:0]		•	1
			Read	l Only			
	31 - - - 23 15 - -		31 30 29 - - - - - - - - - 23 22 21 15 14 13 - - - - - - - - - - - - - - - - - - - - - - - -	31 30 29 28	31 30 29 28 27	31 30 29 28 27 26	31 30 29 28 27 26 25

BITFIELD	BITS	DESCRIPTION
PWM_GRAD_AUTO	23:16	Automatically determined gradient value
PWM_OFS_AUTO	7:0	Automatically determined offset value

SG4_THRS (0x74)

BIT	31	30	29	28	27	26	25	24
Field	_	_	_	_	_	-	_	_
Reset	_	_	_	_	_	-	_	_
Access Type	_	_	-	_	_	_	_	_
BIT	23	22	21	20	19	18	17	16
Field	_	_	-	_	_	-	_	_
Reset	_	_	_	_	_	_	_	_
Access Type	_	_	_	_	_	_	_	_
BIT	15	14	13	12	11	10	9	8
Field	_	_	_	_	_	_	sg_angle_of fset	sg4_filt_en
Reset	_	_	_	_	_	_	0x1	0x0
Access Type	_	_	-	-	-	_	Write, Read	Write, Read
BIT	7	6	5	4	3	2	1	0
Field		•		SG4_Th	HRS[7:0]	•		•
Reset				0:	x0			
Access Type		Write, Read						

BITFIELD	BITS	DESCRIPTION
sg_angle_offset	9	1: Automatic phase shift compensation based on StallGuard4, when switching from StealthChop2 to SpreadCycle controlled via TPWMTHRS
sg4_filt_en	8	1: enable SG4 filter, 0: disable SG4 filter
SG4_THRS	7:0	Detection threshold for stall. The StallGuard4 value SG4_RESULT becomes compared to this threshold. A stall is signaled with SG4_RESULT ≤ SG4_THRS SG4_THRS covers half of the possible SG4_RESULT range

SG4_RESULT (0x75)

BIT	31	30	29	28	27	26	25	24
Field	_	_	_	_	_	_	_	_
Reset	_	_	_	_	_	_	_	_
Access Type	_	-	-	-	-	_	-	_
BIT	23	22	21	20	19	18	17	16
Field	_	_	_	_	_	_	_	_
Reset	_	_	_	_	_	-	_	_
Access Type	_	-	-	-	-	-	-	-

BIT	15	14	13	12	11	10	9	8	
Field	_	_	_	_	_	_	SG4_RE	SULT[9:8]	
Reset	_	_	_	_	_	_	0x0		
Access Type	_	_	_	_	_	- Read Only			
BIT	7	6	5	4	3	2	1	0	
Field				SG4_RE	SULT[7:0]				
Reset	0x0								
	Read Only								

BITFIELD	BITS	DESCRIPTION
		StallGuard result for StallGuard4, only.
SG4_RESULT	9:0	SG4_RESULT becomes updated with each fullstep, independent of TCOOLTHRS and SG4THRS. A higher value signals a lower motor load and more torque headroom. Intended for StealthChop2 mode, only. Bits 9 and 0 will always show 0. Scaling to 10 bit is for compatibility to StallGuard2.

SG4_IND (0x76)

BIT	31	30	29	28	27	26	25	24
Field	SG4_IND_3[7:0]							
Reset	0x0							
Access Type	Read Only							
BIT	23	22	21	20	19	18	17	16
Field	SG4_IND_2[7:0]							
Reset	0x0							
Access Type	Read Only							
BIT	15	14	13	12	11	10	9	8
Field	SG4_IND_1[7:0]							
Reset	0x0							
Access Type	Read Only							
BIT	7	6	5	4	3	2	1	0
Field	SG4_IND_0[7:0]							
Reset	0x0							
Access Type	Read Only							

BITFIELD	BITS	DESCRIPTION	
SG4_IND_3	31:24	When SG4_filt_en = 1:	
	31.24	Displays SG4 measurement 3 used as filter input	
SG4_IND_2	23:16	When SG4_filt_en = 1:	
	23.10	Displays SG4 measurement 2 used as filter input	

TMC5240 36V 2A_{RMS}+ Smart Integrated Stepper Driver and Controller

BITFIELD	BITS	DESCRIPTION
SG4_IND_1	15:8	When SG4_filt_en = 1:
	15.0	Displays SG4 measurement 1 used as filter input
		displays SG4 measurement
SG4_IND_0	7:0 When SG4_filt_en = 1: Displays SG4 measurement 0 used as	When SG4_filt_en = 1:
		Displays SG4 measurement 0 used as filter input

Typical Application Circuits

Standard Application Circuit

The standard application circuit uses a minimum set of additional components. Use low ESR electrolytic capacitors for filtering the power supply. The capacitors need to cope with the current ripple caused by chopper operation. A minimum capacity of $100\mu\text{F}$ at V_S is recommended for best performance. Current ripple in the supply capacitors also depends on the power supply internal resistance and cable length. V_{CC_IO} must be supplied from an external source, e.g., a low-drop 3.3V regulator.

Place all filter capacitors as close as possible to the related IC pins. Use a solid common ground plane for all GND connections. Connect V_{DD1V8} filtering capacitor directly to the V_{DD1V8} pin.

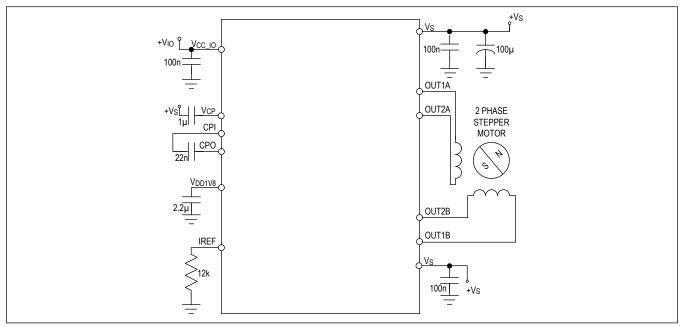


Figure 39. Standard Application Circuit

High Motor Current

When operating at a high motor current, the driver power dissipation due to MOSFET switch-on resistance significantly heats up the driver. This power dissipation heats up the PCB cooling infrastructure also, if operated at an increased duty cycle. This in turn leads to a further increase of driver temperature. An increase of temperature by about 100°C increases MOSFET resistance by roughly 50%. This is a typical behavior of MOSFET switches. Therefore, under high duty cycle, high load conditions, thermal characteristics have to be carefully taken into account, especially when increased environment temperatures are to be supported. Refer to the *Thermal Characteristics* and the *Layout Examples* sections of the evaluation kit as well.

As a rule of thumb, thermal properties of the PCB design may become critical at or above 1.5A RMS motor current for increased periods of time. Note that the resistive power dissipation raises with the square of the motor current. On the other hand, this means that a small reduction of motor current significantly saves heat dissipation and energy.

Driver Protection and EME Circuitry

Some applications have to cope with ESD events caused by motor operation or external influence. Despite ESD

Typical Application Circuits (continued)

circuitry within the driver chips, ESD events occurring during operation can cause a reset or even a destruction of the motor driver, depending on their energy. Especially, plastic housings and belt drive systems tend to cause ESD events of several kV. It is best practice to avoid ESD events by attaching all conductive parts, especially the motors themselves to PCB ground, or to apply electrically conductive plastic parts. In addition, the driver can be protected up to a certain degree against ESD events or live plugging/pulling the motor, which also causes high voltages and high currents into the motor connector terminals.

A simple scheme uses capacitors at the driver outputs to reduce the dV/dt caused by ESD events. Larger capacitors bring more benefit concerning ESD suppression, but cause additional current flow in each chopper cycle, and thus increase driver power dissipation, especially at high supply voltages. The values shown are example values – they might be varied between 100pF and 1nF. The capacitors also dampen high-frequency noise injected from digital parts of the application PCB circuitry and thus reduce electromagnetic emission.

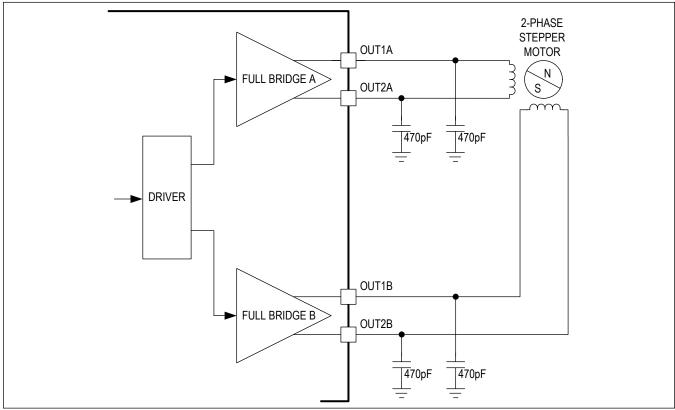


Figure 40. Simple ESD Enhancement

A more elaborate scheme uses LC filters to decouple the driver outputs from the motor connector. Varistors V1 and V2 in between of the coil terminals eliminate coil overvoltage caused by live plugging. Optionally protect all outputs by a varistor (V1A, V1B, V2A, V2B) against the ESD voltage. Fit the varistors to the supply voltage rating. The SMD inductivities conduct full motor coil current and need to be selected accordingly.

Typical Application Circuits (continued)

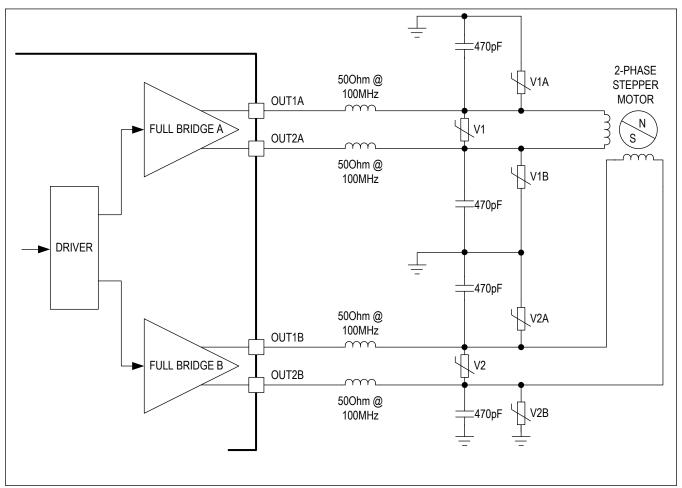


Figure 41. Extended Motor Output Protection

Ordering Information

PART NUMBER	TEMPERATURE RANGE	PIN-PACKAGE
TMC5240ATJ+	-40°C to +125°C	32 TQFN - 5mm x 5mm
TMC5240ATJ+T	-40°C to +125°C	32 TQFN - 5mm x 5mm
TMC5240AUU+	-40°C to +125°C	38 TSSOP-EP 4.4mm x 9.7mm
TMC5240AUU+T	-40°C to +125°C	38 TSSOP-EP 4.4mm x 9.7mm

⁺ Denotes a lead(Pb)-free/RoHS-compliant package.

T Denotes tape-and-reel.

Revision History

REVISION NUMBER	REVISION DATE	DESCRIPTION	PAGES CHANGED
0	12/22	Release for Market Intro	_