

# Numonyx® P33-65nm Flash Memory

128-Mbit, 64-Mbit Single Bit per Cell (SBC)

### **Datasheet**

## **Product Features**

- High performance:
  - 60ns initial access time for Easy BGA
  - 70ns initial access time for TSOP
  - 25ns 8-word asynchronous-page read mode
  - 52MHz with zero wait states, 17ns clock-todata output synchronous-burst read mode
  - 4-, 8-, 16-, and continuous-word options for burst mode
  - 3.0V buffered programming at 1.8MByte/s (Typ) using 256-word buffer
  - Buffered Enhanced Factory Programming at 3.2MByte/s (typ) using 256-word buffer
- Architecture:
  - Asymmetrically-blocked architecture
  - Four 32-KByte parameter blocks: top or bottom configuration
  - 128-KByte main blocks
  - Blank Check to verify an erased block
- Voltage and Power:
  - V<sub>CC</sub> (core) voltage: 2.3V 3.6V
  - V<sub>CCO</sub> (I/O) voltage: 2.3V 3.6V
  - Standby current:  $35\mu A(Typ)$  for 64-Mbit,  $50\mu A(Typ)$  for 128-Mbit
  - Continuous synchronous read current:
     23mA (Typ) at 52 MHz

- Security:
  - One-Time Programmable Registers:
    - 64 OTP bits, programmed with unique information by Numonyx
    - 2112 OTP bits, available for customer programming
  - Absolute write protection:  $V_{PP} = V_{SS}$
  - Power-transition erase/program lockout
  - Individual zero-latency block locking
  - Individual block lock-down capability
  - Password Access feature
- Software:
  - 20µs (Typ) program suspend
  - 20µs (Typ) erase suspend
  - Basic Command Set and Extended Function Interface (EFI) Command Set compatible
  - Common Flash Interface capable
- Density and Packaging:
  - 56-Lead TSOP package (128-Mbit, 64-Mbit)
  - 64-Ball Easy BGA package (128-Mbit, 64-Mbit)
  - 16-bit wide data bus
- Quality and Reliability:
  - JESD47E Compliant
  - Operating temperature: −40°C to +85°C
  - Minimum 100,000 erase cycles per block
  - 65nm process technology

INFORMATION IN THIS DOCUMENT IS PROVIDED IN CONNECTION WITH NUMONYX™ PRODUCTS. NO LICENSE, EXPRESS OR IMPLIED, BY ESTOPPEL OR OTHERWISE, TO ANY INTELLECTUAL PROPERTY RIGHTS IS GRANTED BY THIS DOCUMENT. EXCEPT AS PROVIDED IN NUMONYX'S TERMS AND CONDITIONS OF SALE FOR SUCH PRODUCTS, NUMONYX ASSUMES NO LIABILITY WHATSOEVER, AND NUMONYX DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY, RELATING TO SALE AND/OR USE OF NUMONYX PRODUCTS INCLUDING LIABILITY OR WARRANTIES RELATING TO FITNESS FOR A PARTICULAR PURPOSE, MERCHANTABILITY, OR INFRINGEMENT OF ANY PATENT, COPYRIGHT OR OTHER INTELLECTUAL PROPERTY RIGHT. Numonyx products are not intended for use in medical, life saving, life sustaining, critical control or safety systems, or in nuclear facility applications.

Numonyx may make changes to specifications and product descriptions at any time, without notice.

Numonyx, B.V. may have patents or pending patent applications, trademarks, copyrights, or other intellectual property rights that relate to the presented subject matter. The furnishing of documents and other materials and information does not provide any license, express or implied, by estoppel or otherwise, to any such patents, trademarks, copyrights, or other intellectual property rights.

Designers must not rely on the absence or characteristics of any features or instructions marked "reserved" or "undefined." Numonyx reserves these for future definition and shall have no responsibility whatsoever for conflicts or incompatibilities arising from future changes to them.

Contact your local Numonyx sales office or your distributor to obtain the latest specifications and before placing your product order.

Copies of documents which have an order number and are referenced in this document, or other Numonyx literature may be obtained by visiting Numonyx's website at <a href="http://www.numonyx.com">http://www.numonyx.com</a>.

Numonyx, the Numonyx logo, and are trademarks or registered trademarks of Numonyx, B.V. or its subsidiaries in other countries.

\*Other names and brands may be claimed as the property of others.

Copyright © 2011, Numonyx, B.V., All Rights Reserved.

Datasheet
2
Jul 2011
2
Order Number: 208034-04

# **Contents**

1.0		scription	
	1.2 Overview	tionv	5
	•	Maps	
2.0		mation	
		TSOPasy BGA Package	
		,	
3.0			
4.0	_		
5.0	•	ns	
		Disable	
		isable	
6.0	Command Set		16
0.0		ommand Codes	
	6.2 Device Co	ommand Bus Cycles	18
7.0	Read Operatio	on	20
		onous Page-Mode Read	
		nous Burst-Mode Read	
		vice Identifier	
		I	
8.0		ration	
		ogramming	
		Programming Enhanced Factory Programming	
		Suspend	
		Cuope de la contraction de la	
	0.5 Frogram	Resume	26
		ResumeProtection	
9.0	8.6 Program		26
9.0	8.6 Program <b>Erase Operation</b>	Protection	26 27
9.0	8.6 Program  Erase Operation 9.1 Block Era 9.2 Blank Cho	Protection	26 27 27 27
9.0	8.6 Program  Erase Operation 9.1 Block Era 9.2 Blank Cho 9.3 Erase Sus	Protection	26 27 27 27
9.0	8.6 Program  Erase Operation 9.1 Block Era 9.2 Blank Cho 9.3 Erase Sus 9.4 Erase Res	Protection	26 27 27 28 28
	8.6 Program  Erase Operation 9.1 Block Era 9.2 Blank Cho 9.3 Erase Sus 9.4 Erase Res 9.5 Erase Pro	Protection  on  ase  neck spend sume otection	26 27 27 28 28
	8.6 Program  Erase Operation 9.1 Block Era 9.2 Blank Cho 9.3 Erase Sus 9.4 Erase Res 9.5 Erase Pro  Security	Protection  on  ase  ack  spend  sume otection	26 27 27 28 28 28
	8.6 Program  Erase Operation 9.1 Block Era 9.2 Blank Cho 9.3 Erase Sus 9.4 Erase Res 9.5 Erase Pro  Security	Protection  on  ase  eck  spend  sume otection  cking.	26 27 27 28 28 28
	8.6 Program  Erase Operation 9.1 Block Era 9.2 Blank Cho 9.3 Erase Sus 9.4 Erase Res 9.5 Erase Pro  Security	Protection  on  ase  ack  spend  sume otection	26 27 27 28 28 29 29
10.0	8.6 Program  Erase Operation 9.1 Block Era 9.2 Blank Cho 9.3 Erase Sus 9.4 Erase Res 9.5 Erase Pro  Security	Protection  on  ase  aeck spend sume otection  cking le OTP Blocks d Access	26 27 27 28 28 29 31
10.0	8.6 Program  Erase Operation 9.1 Block Era 9.2 Blank Cho 9.3 Erase Sus 9.4 Erase Res 9.5 Erase Pro  Security	Protection  on  ase aeck aspend sume otection  cking le OTP Blocks d Access	26 27 27 28 28 29 31 31
10.0	8.6 Program  Erase Operation 9.1 Block Era 9.2 Blank Cho 9.3 Erase Sus 9.4 Erase Res 9.5 Erase Pro  Security	Protection  on  ase  aeck spend sume otection  cking le OTP Blocks d Access	26 27 27 28 28 29 31 31
10.0 11.0	8.6 Program  Erase Operation 9.1 Block Era 9.2 Blank Cho 9.3 Erase Sus 9.4 Erase Res 9.5 Erase Pro  Security	Protection  on  ase ase ase ase ase ase aspend asume astection  cking ase d Access  er  nfiguration Register e Programmable (OTP) Registers	26 27 27 28 28 29 31 31
10.0 11.0	8.6 Program  Erase Operation 9.1 Block Era 9.2 Blank Cho 9.3 Erase Sus 9.4 Erase Res 9.5 Erase Pro  Security	Protection  on  ase  ack  spend  sume  otection  cking  le OTP Blocks  d Access  er  nfiguration Register	26 27 27 28 28 29 31 31 32 40

	12.3	Power Supply Decoupling	.44
13.0	13.1	mum Ratings and Operating Conditions  Absolute Maximum Ratings  Operating Conditions	.45
14.0	14.1	rical Specifications  DC Current Characteristics  DC Voltage Characteristics	.46
15.0	15.1 15.2 15.3 15.4 15.5	Capacitance	.48 .49 .49 .54
16.0	Orde	ring Information	.59
A	<b>Supp</b> A.1 A.2 A.3	lemental Reference Information  Common Flash Interface  Flowcharts  Write State Machine	.60 .72
В	<b>Conv</b> B.1 B.2	Pentions - Additional Documentation  Acronyms  Definitions and Terms	.85
C	Revis	sion History	87

## 1.0 Functional Description

## 1.1 Introduction

This document provides information about the Numonyx $^{\circledR}$  P33-65nm Single Bit per Cell (SBC) Flash Memory and describes its features, operations, and specifications.

P33-65nm SBC device is offered in 64-Mbit and 128-Mbit densities. Benefits include high-speed interface NOR device, and support for code and data storage. Features include high-performance synchronous-burst read mode, a dramatical improvement in buffer program time through larger buffer size, fast asynchronous access times, low power, flexible security options, and two industry-standard package choices.

P33-65nm SBC device is manufactured using 65nm process technology.

### 1.2 Overview

This family of devices provides high performance at low voltage on a 16-bit data bus. Individually erasable memory blocks are sized for optimum code and data storage.

Upon initial power-up or return from reset, the device defaults to asynchronous pagemode read. Configuring the RCR enables synchronous burst-mode reads. In synchronous burst mode, output data is synchronized with a user-supplied clock signal. A WAIT signal provides an easy CPU-to-flash memory synchronization.

In addition to the enhanced architecture and interface, the device incorporates technology that enables fast factory program and erase operations. The device features a 256-word buffer to enable optimum programming performance, which can improve system programming throughput time significantly to 1.8MByte/s.

The P33-65nm SBC device supports read operations with VCC at 3.0V, and erase and program operations with VPP at 3.0V or 9.0V. Buffered Enhanced Factory Programming provides the fastest flash array programming performance with VPP at 9.0V, which increases factory throughput. With VPP at 3.0V, VCC and VPP can be tied together for a simple, ultra low power design. In addition to voltage flexibility, a dedicated VPP connection provides complete data protection when VPP  $\leq$  V<sub>PPL K</sub>.

The Command User Interface is the interface between the system processor and all internal operations of the device. An internal Write State Machine automatically executes the algorithms and timings necessary for block erase and program. A Status Register indicates erase or program completion and any errors that may have occurred.


An industry-standard command sequence invokes program and erase automation. Each erase operation erases one block. The Erase Suspend feature allows system software to pause an erase cycle to read or program data in another block. Program Suspend allows system software to pause programming to read other locations. Data is programmed in word increments (16 bits).

The one-time-programmable (OTP) Register allows unique flash device identification that can be used to increase system security. The individual Block Lock feature provides zero-latency block locking and unlocking. The P33-65nm SBC device adds enhanced protection via Password Access Mode which allows user to protect write and/or read access to the defined blocks. In addition, the P33-65nm SBC device could also provide the full-device OTP permanent lock feature.

Datasheet

#### **Memory Maps** 1.3

Figure 1: P33-65nm Memory Map (64-Mbit and 128-Mbit Densities)

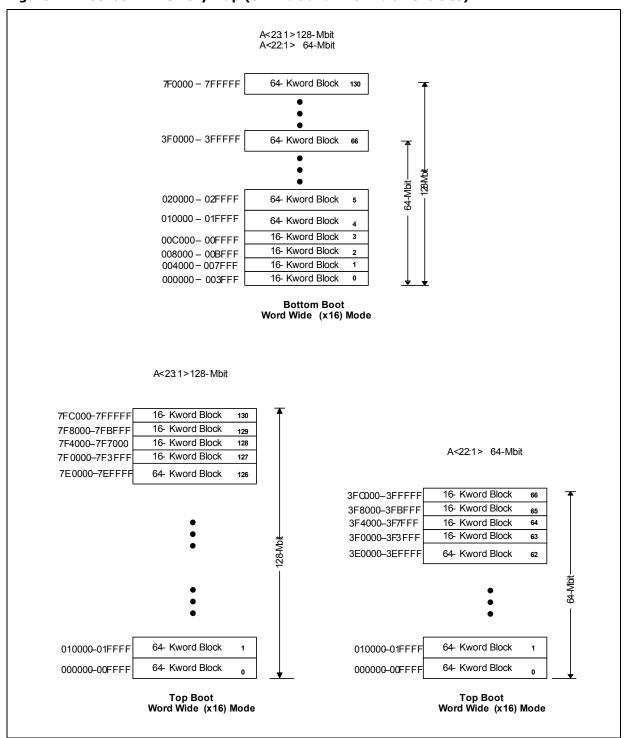


Jul 2011

Order Number: 208034-04

### **Package Information** 2.0

#### **56-Lead TSOP** 2.1

Figure 2: TSOP Mechanical Specifications

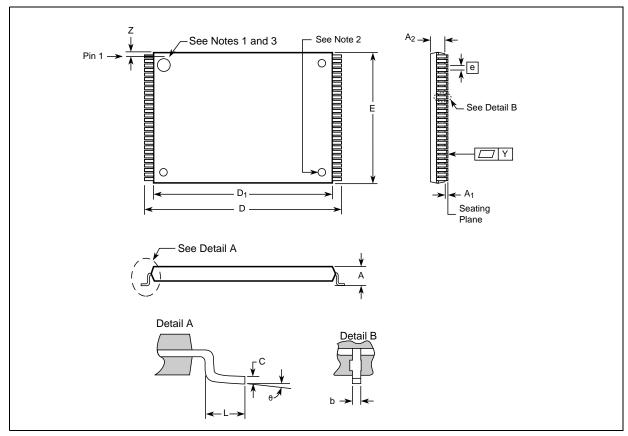

TSOP Package Dimensions (Sheet 1 of 2) Table 1:

Product Information	Symphol		Millimeters		Inches			
Product Information	Symbol	Min	Nom	Max	Min	Nom	Max	
Package Height	Α	-	-	1.200	-	-	0.047	
Standoff	A <sub>1</sub>	0.050	-	-	0.002	-	-	
Package Body Thickness	A <sub>2</sub>	0.965	0.995	1.025	0.038	0.039	0.040	
Lead Width <sup>(4)</sup>	b	0.170	0.220	0.270	0.0067	0.0087	0.0106	
Lead Thickness	С	0.100	0.150	0.200	0.004	0.006	0.008	
Package Body Length	D <sub>1</sub>	18.200	18.400	18.600	0.717	0.724	0.732	
Package Body Width	Е	13.800	14.000	14.200	0.543	0.551	0.559	
Lead Pitch	е	-	0.500	-	-	0.0197	-	
Terminal Dimension	D	19.800	20.00	20.200	0.780	0.787	0.795	
Lead Tip Length	L	0.500	0.600	0.700	0.020	0.024	0.028	

**TSOP Package Dimensions (Sheet 2 of 2)** 


Product Information	Symbol		Millimeters		Inches		
Froduct Information	Syllibol	Min	Nom	Max	Min	Nom	Max
Lead Count	N	-	56	-	-	56	-
Lead Tip Angle	θ	0°	3°	5°	0°	3°	5°
Seating Plane Coplanarity	Y	-	-	0.100	-	-	0.004
Lead to Package Offset	Z	0.150	0.250	0.350	0.006	0.010	0.014

### Notes:

- One dimple on package denotes Pin 1. If two dimples, then the larger dimple denotes Pin 1.
- 1. 2. 3. Pin 1 will always be in the upper left corner of the package, in reference to the product mark. For legacy lead width, 0.10mm(Min), 0.15mm(Typ) and 0.20mm(Max).
- 4.

#### 2.2 64-Ball Easy BGA Package

Figure 3: Easy BGA Mechanical Specifications (8x10x1.2 mm)

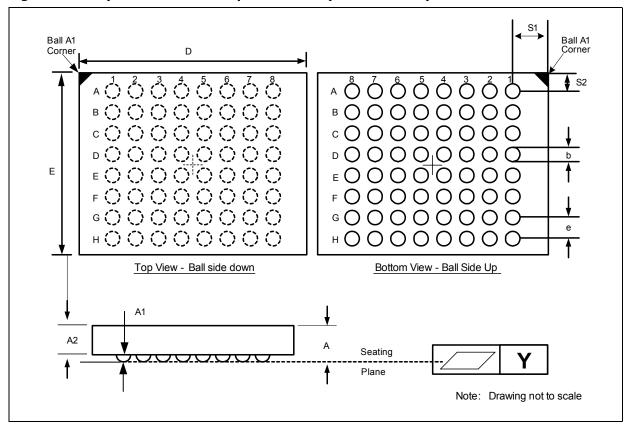


**Easy BGA Package Dimensions** Table 2:

Product Information	Symbol		Millimeter	Inches			
Product Information	Symbol	Min	Nom	Max	Min	Nom	Max
Package Height	Α	-	-	1.200	-	-	0.0472
Ball Height	A1	0.250	-	-	0.0098	-	-
Package Body Thickness	A2	-	0.780	-	-	0.0307	-
Ball (Lead) Width	b	0.310	0.410	0.510	0.0120	0.0160	0.0200
Package Body Width	D	9.900	10.000	10.100	0.3898	0.3937	0.3976
Package Body Length	E	7.900	8.000	8.100	0.3110	0.3149	0.3189
Pitch	[e]	-	1.000	-	-	0.0394	-
Ball (Lead) Count	N	-	64	-	-	64	-
Seating Plane Coplanarity	Y	-	-	0.100	-	-	0.0039
Corner to Ball A1 Distance Along D	S1	1.400	1.500	1.600	0.0551	0.0591	0.0630
Corner to Ball A1 Distance Along E	S2	0.400	0.500	0.600	0.0157	0.0197	0.0236

**Note:** Daisy Chain Evaluation Unit information is at Numonyx™ Flash Memory Packaging Technology http://developer.numonyx.com/design/flash/packtech.

#### **Ballouts** 3.0

Figure 4: 56-Lead TSOP Pinout (64-Mbit and 128-Mbit Densities)

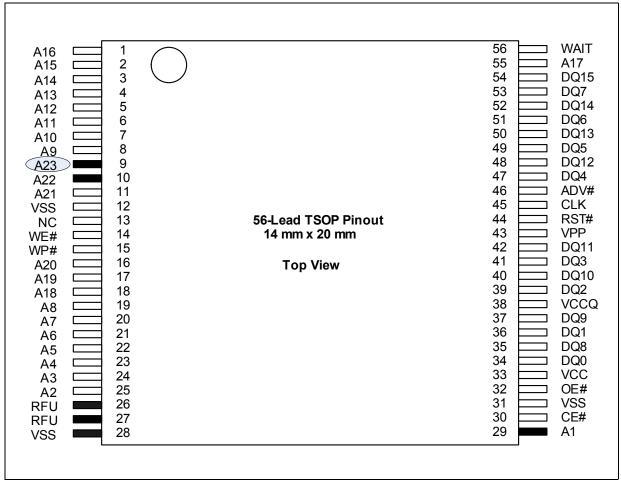

### Notes:

- 1. 2. 3.
- A1 is the least significant address bit.

  A23 is valid for 128-Mbit densities; otherwise, it is a no connect (NC).

  A22 is valid for 64-Mbit densities and above; otherwise, it is a no connect (NC).

  No Internal Connection on VCC Pin 13; it may be driven or floated. For legacy designs, pin can be tied to Vcc.
- One dimple on package denotes Pin 1 which will always be in the upper left corner of the package, in reference to the product mark.

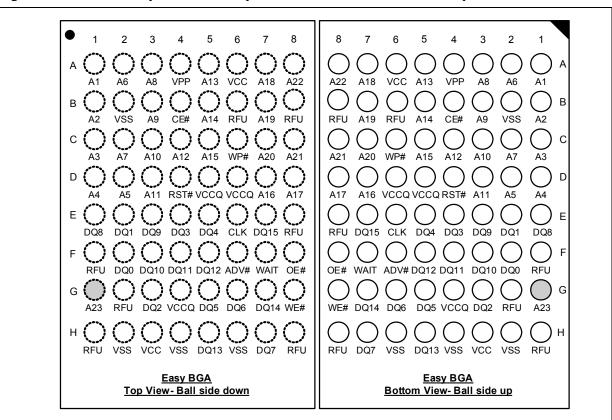


Figure 5: 64-Ball Easy BGA Ballout (64-Mbit and 128-Mbit Densities)

### Notes:

- A1 is the least significant address bit.

- 1. 2. 3. 4. A23 is valid for 128-Mbit densities; otherwise, it is a no connect.

  A22 is valid for 64-Mbit densities and above; otherwise, it is a no connect (NC).

  One dimple on package denotes Pin 1 which will always be in the upper left corner of the package, in reference to the product mark.

# 4.0 Signals

Table 3: TSOP and Easy BGA Signal Descriptions (Sheet 1 of 2)

Symbol	Туре	Name and Function
A[MAX:1]	Input	ADDRESS INPUTS: Device address inputs. 128-Mbit: A[23:1]; 64-Mbit: A[22:1]. WARNING: The active address pins unused in design should not be left float. Please tie them to VCCQ or VSS according to specific design requirements.
DQ[15:0]	Input/ Output	<b>DATA INPUT/OUTPUTS:</b> Inputs data and commands during write cycles; outputs data during reads of memory, Status Register, OTP Register, and Read Configuration Register. Data balls float when the CE# or OE# are deasserted. Data is internally latched during writes.
ADV#	Input	ADDRESS VALID: Active low input. During synchronous read operations, addresses are latched on the rising edge of ADV#, or on the next valid CLK edge with ADV# low, whichever occurs first.  In asynchronous mode, the address is latched when ADV# going high or continuously flows through
ADV#	Imput	if ADV# is held low.  WARNING: Designs not using ADV# must tie it to VSS to allow addresses to flow through.
CE#	Input	<b>CHIP ENABLE:</b> Active low input. CE# low selects the associated flash memory die. When asserted, flash internal control logic, input buffers, decoders, and sense amplifiers are active. When deasserted, the associated flash die is deselected, power is reduced to standby levels, data and WAIT outputs are placed in high-Z state.
		WARNING: All chip enables must be high when device is not in use.
CLK	Input	<b>CLOCK:</b> Synchronizes the device with the system's bus frequency in synchronous-read mode. During synchronous read operations, addresses are latched on the rising edge of ADV#, or on the next valid CLK edge with ADV# low, whichever occurs first.
		WARNING: Designs not using CLK for synchronous read mode must tie it to VCCQ or VSS.
OE#	Input	<b>OUTPUT ENABLE:</b> Active low input. OE# low enables the device's output data buffers during read cycles. OE# high places the data outputs and WAIT in High-Z.
RST#	Input	<b>RESET:</b> Active low input. RST# resets internal automation and inhibits write operations. This provides data protection during power transitions. RST# high enables normal operation. Exit from reset places the device in asynchronous read array mode.
WAIT	Output	<ul> <li>WAIT: Indicates data valid in synchronous array or non-array burst reads. RCR.10, (WT) determines its polarity when asserted. WAIT's active output is V<sub>OL</sub> or V<sub>OH</sub> when CE# and OE# are V<sub>IL</sub>. WAIT is high-Z if CE# or OE# is V<sub>IH</sub>.</li> <li>In synchronous array or non-array read modes, WAIT indicates invalid data when asserted and valid data when deasserted.</li> </ul>
		In asynchronous page mode, and all write modes, WAIT is deasserted.
WE#	Input	<b>WRITE ENABLE:</b> Active low input. WE# controls writes to the device. Address and data are latched on the rising edge of WE# or CE#, whichever occurs first.
WP#	Input	WRITE PROTECT: Active low input. WP# low enables the lock-down mechanism. Blocks in lock-down cannot be unlocked with the Unlock command. WP# high overrides the lock-down function enabling blocks to be erased or programmed using software commands.  WARNING: Designs not using WP# for protection could tie it to VCCQ or VSS without additional
		capacitor.
		<b>ERASE AND PROGRAM POWER:</b> A valid voltage on this pin allows erasing or programming. Memory contents cannot be altered when VPP $\leq$ V <sub>PPLK</sub> . Block erase and program at invalid VPP voltages should not be attempted. Set VPP = V <sub>PPl</sub> for in-system program and erase operations. To accommodate resistor or diode drops
VPP	Power/ Input	from the system supply, the $V_{IH}$ level of VPP can be as low as $V_{PPL}$ min to perform in-system flash modification. VPP may be 0 V during read operations.
		$V_{PPH}$ can be applied to main blocks for 1000 cycles maximum and to parameter blocks for 2500 cycles. VPP can be connected to 9 V for a cumulative total not to exceed 80 hours. Extended use of this pin at 9 V may reduce block cycling capability.
VCC	Power	<b>DEVICE CORE POWER SUPPLY:</b> Core (logic) source voltage. Writes to the flash array are inhibited when VCC $\leq$ V <sub>LKO</sub> . Operations at invalid VCC voltages should not be attempted.
VCCQ	Power	OUTPUT POWER SUPPLY: Output-driver source voltage.
VSS	Power	GROUND: Connect to system ground. Do not float any VSS connection.

Datasheet Jul 2011 12 Order Number: 208034-04

Table 3: TSOP and Easy BGA Signal Descriptions (Sheet 2 of 2)

Symbol	Туре	Name and Function
RFU	_	<b>RESERVED FOR FUTURE USE:</b> Reserved by Numonyx for future device functionality and enhancement. These should be treated in the same way as a Don't Use (DU) signal.
DU	_	DON'T USE: Do not connect to any other signal, or power supply; must be left floating.
NC	_	NO CONNECT: No internal connection; can be driven or floated.

#### 5.0 **Bus Operations**

CE# low and RST# high enable device read operations. The device internally decodes upper address inputs to determine the accessed block. ADV# low opens the internal address latches. OE# low activates the outputs and gates selected data onto the I/O

In asynchronous mode, the address is latched when ADV# goes high or continuously flows through if ADV# is held low. In synchronous mode, the address is latched by the first of either the rising ADV# edge or the next valid CLK edge with ADV# low (WE# and RST# must be  $V_{IH}$ ; CE# must be  $V_{II}$ ).

Bus cycles to/from the P33-65nm SBC device conform to standard microprocessor bus operations. Table 4, "Bus Operations Summary" summarizes the bus operations and the logic levels that must be applied to the device control signal inputs.

Table 4: **Bus Operations Summary** 

Bus Operation		RST#	CLK	ADV#	CE#	OE#	WE#	WAIT	DQ[15:0]	Notes
Read	Asynchronous	$V_{IH}$	Х	L	L	L	Н	Deasserted	Output	-
rcuu	Synchronous	$V_{\mathrm{IH}}$	Running	L	L	L	Н	Driven	Output	-
Write		$V_{\mathrm{IH}}$	Х	L	L	Н	L	High-Z	Input	1
Output Disable		$V_{\mathrm{IH}}$	Х	Х	L	Н	Н	High-Z	High-Z	2
Standby		$V_{\mathrm{IH}}$	Х	Х	Н	Х	Х	High-Z	High-Z	2
Reset		$V_{\mathrm{IL}}$	Х	Х	Х	Х	Х	High-Z	High-Z	2,3,4

#### Notes:

- Refer to the Table 6, "Command Bus Cycles" on page 18 for valid DQ[15:0] during a write 1. operation.
- 2.  $\dot{X} = Don't Care (H or L).$
- 3.
- RST# must be at  $V_{SS}$   $\pm$  0.2 V to meet the maximum specified power-down current. Recommend to set CE# and WE# to  $V_{IH}$  on 65nm device during power-on/reset to avoid invalid commands written into flash accidently.

#### 5.1 Read

To perform a read operation, RST# and WE# must be deasserted while CE# and OE# are asserted. CE# is the device-select control. When asserted, it enables the flash memory device. OE# is the data-output control. When asserted, the addressed flash memory data is driven onto the I/O bus.

#### 5.2 Write

To perform a write operation, both CE# and WE# are asserted while RST# and OE# are deasserted. During a write operation, address and data are latched on the rising edge of WE# or CE#, whichever occurs first. Table 6, "Command Bus Cycles" on page 18 shows the bus cycle sequence for each of the supported device commands, while Table 5, "Command Codes and Definitions" on page 16 describes each command. See Section 15.0, "AC Characteristics" on page 48 for signal-timing details.

Write operations with invalid VCC and/or VPP voltages can produce spurious results and should not be attempted.

Jul 2011 Order Number: 208034-04

Note:

## **5.3** Output Disable

When OE# is deasserted, device outputs DQ[15:0] are disabled and placed in a high-impedance (High-Z) state, WAIT is also placed in High-Z.

## 5.4 Standby

When CE# is deasserted the device is deselected and placed in standby, substantially reducing power consumption. In standby, the data outputs are placed in High-Z, independent of the level placed on OE#. Standby current,  $I_{CCS}$ , is the average current measured over any 5 ms time interval, 5  $\mu$ s after CE# is deasserted. During standby, average current is measured over the same time interval 5  $\mu$ s after CE# is deasserted.

When the device is deselected (while CE# is deasserted) during a program or erase operation, it continues to consume active power until the program or erase operation is completed.

## 5.5 Reset

As with any automated device, it is important to assert RST# when the system is reset. When the system comes out of reset, the system processor attempts to read from the flash memory if it is the system boot device. If a CPU reset occurs with no flash memory reset, improper CPU initialization may occur because the flash memory may be providing status information rather than array data. Flash memory devices from Numonyx allow proper CPU initialization following a system reset through the use of the RST# input. RST# should be controlled by the same low-true reset signal that resets the system CPU.

After initial power-up or reset, the device defaults to asynchronous Read Array mode, and the Status Register is set to 0x80. Asserting RST# de-energizes all internal circuits, and places the output drivers in High-Z. When RST# is asserted, the device shuts down the operation in progress, a process which takes a minimum amount of time to complete. When RST# has been deasserted, the device is reset to asynchronous Read Array state.

Note:

If RST# is asserted during a program or erase operation, the operation is terminated and the memory contents at the aborted location (for a program) or block (for an erase) are no longer valid, because the data may have been only partially written or erased.

When returning from a reset (RST# deasserted), a minimum wait is required before the initial read access outputs valid data. Also, a minimum delay is required after a reset before a write cycle can be initiated. After this wake-up interval passes, normal operation is restored. See Section 15.0, "AC Characteristics" on page 48 for details about signal-timing.

Jul 2011

Order Number: 208034-04

#### 6.0 **Command Set**

#### 6.1 **Device Command Codes**

The flash Command User Interface (CUI) provides access to device read, write, and erase operations. The CUI does not occupy an addressable memory location; it is part of the internal logic which allows the flash device to be controlled. The Write State Machine provides the management for its internal erase and program algorithms.

Commands are written to the CUI to control flash device operations. Table 5, Command Codes and Definitions" describes all valid command codes.

For operations that involve multiple command cycles, the possibility exists that the subsequent command does not get issued in the proper sequence. When this happens, the CUI sets Status Register bits SR[5,4] to indicate a command sequence error.

Some applications use illegal or invalid commands (like 0x00) accidentally or intentionally with the device. An illegal or invalid command doesn't change the device output state compared with the previous operation on 130nm device. But the output will change to Read Status Register mode on 65nm device.

After an illegal or invalid command, software may attempt to read the device. If the previous state is read array mode before an illegal command, software will expect to read array data on 130nm device, such as 0xFFFF in an unprogrammed location. On the 65nm device, software may not get the expected array data and instead the status register is read.

Please refer to the legal and valid commands/spec defined in the Datasheet, such as for read mode, issue 0xFF to Read Array mode, 0x90 to Read Signature, 0x98 to Read CFI/ OTP array mode.

Command Codes and Definitions (Sheet 1 of 3) Table 5:

Mode	Code	Device Mode	Description				
	0xFF	Read Array	Places the device in Read Array mode. Array data is output on DQ[15:0].				
	0x70	Read Status Register	Places the device in Read Status Register mode. The device enters this mode after a program or erase command is issued. SR data is output on DQ[7:0].				
Read	0x90	Read Device ID or Configuration Register	Places device in Read Device Identifier mode. Subsequent reads output manufacturer/device codes, Configuration Register data, Block Lock status, or OTP Register data on DQ[15:0].				
	0x98	Read Query	Places the device in Read Query mode. Subsequent reads output Common Flash Interface information on DQ[7:0].				
	0x50	Clear Status Register	The WSM can only set SR error bits. The Clear Status Register command is used to clear the SR error bits.				

Jul 2011 Datasheet Order Number: 208034-04

Table 5: Command Codes and Definitions (Sheet 2 of 3)

Mode	Code	Device Mode	Description
	0×40	Word Program Setup	First cycle of a 2-cycle programming command; prepares the CUI for a write operation. On the next write cycle, the address and data are latched and the WSM executes the programming algorithm at the addressed location. During program operations, the device responds only to Read Status Register and Program Suspend commands. CE# or OE# must be toggled to update the Status Register in asynchronous read. CE# or ADV# must be toggled to update the SR Data for synchronous Non-array reads. The Read Array command must be issued to read array data after programming has finished.
Write	0xE8	Buffered Program	This command loads a variable number of words up to the buffer size of 256 words onto the program buffer.
	0xD0	Buffered Program Confirm	The confirm command is issued after the data streaming for writing into the buffer is done. This instructs the WSM to perform the Buffered Program algorithm, writing the data from the buffer to the flash memory array.
	0x80	BEFP Setup	First cycle of a 2-cycle command; initiates the BEFP mode. The CUI then waits for the BEFP Confirm command, 0xD0, that initiates the BEFP algorithm. All other commands are ignored when BEFP mode begins.
	0xD0	BEFP Confirm	If the previous command was BEFP Setup (0x80), the CUI latches the address and data, and prepares the device for BEFP mode.
	0x20	Block Erase Setup	First cycle of a 2-cycle command; prepares the CUI for a block-erase operation. The WSM performs the erase algorithm on the block addressed by the Erase Confirm command. If the next command <i>is not</i> the Erase Confirm (0xD0) command, the CUI sets Status Register bits SR [5,4], and places the device in Read Status Register mode.
Erase	0xD0	Block Erase Confirm	If the first command was Block Erase Setup (0x20), the CUI latches the address and data, and the WSM erases the addressed block. During blockerase operations, the device responds only to Read Status Register and Erase Suspend commands. CE# or OE# must be toggled to update the Status Register in asynchronous read. CE# or ADV# must be toggled to update the SR Data for synchronous Non-array reads.
Suspend	0xB0	Program or Erase Suspend	This command issued to any device address initiates a suspend of the currently-executing program or block erase operation. The Status Register indicates successful suspend operation by setting either SR.2 (program suspended) or SR 6 (erase suspended), along with SR.7 (ready). The WSM remains in the suspend mode regardless of control signal states (except for RST# asserted).
	0xD0	Suspend Resume	This command issued to any device address resumes the suspended program or block-erase operation.
	0x60	Block lock Setup	First cycle of a 2-cycle command; prepares the CUI for block lock configuration changes. If the next command is not Block Lock (0x01), Block Unlock (0xD0), or Block Lock-Down (0x2F), the CUI sets SR.5 and SR.4, indicating a command sequence error.
	0x01	Block lock	If the previous command was Block Lock Setup (0x60), the addressed block is locked.
Protection	0xD0	Unlock Block	If the previous command was Block Lock Setup (0x60), the addressed block is unlocked. If the addressed block is in a lock-down state, the operation has no effect.
	0x2F	Lock-Down Block	If the previous command was Block Lock Setup (0x60), the addressed block is locked down.
	0xC0	Protection program setup	First cycle of a 2-cycle command; prepares the device for a OTP Register or Lock Register program operation. The second cycle latches the register address and data, and starts the programming algorithm to program data into the OTP array.

Datasheet Jul 2011 17 Order Number: 208034-04

Table 5: Command Codes and Definitions (Sheet 3 of 3)

Mode	Code	Device Mode	Description				
Configuration	0x60	Read Configuration Register Setup	First cycle of a 2-cycle command; prepares the CUI for device read configuration. If the Set Read Configuration Register command (0x03) is not the next command, the CUI sets Status Register bits SR.5 and SR.4, indicating a command sequence error.				
Comiguration	0x03 Read Configuration Register		If the previous command was Read Configuration Register Setup (0x60), the CUI latches the address and writes A[16:1]to the Read Configuration Register. Following a Configure RCR command, subsequent read operations access array data.				
blank check	0xBC	Blank Check	First cycle of a 2-cycle command; initiates the Blank Check operation on a main block.				
Dialik Check	0xD0	Blank Check Confirm	Second cycle of blank check command sequence; it latches the block address and executes blank check on the main array block.				
other	0xEB	Extended Function Interface	This command is used in extended function interface. first cycle of a multiple-cycle command second cycle is a Sub-Op-Code, the data written on third cycle is one less than the word count; the allowable value on this cycle are 0 through 511. The subsequent cycles load data words into the program buffer at a specified address until word count is achieved.				

## 6.2 Device Command Bus Cycles

Device operations are initiated by writing specific device commands to the CUI. See Table 6, "Command Bus Cycles" on page 18. Several commands are used to modify array data including Word Program and Block Erase commands. Writing either command to the CUI initiates a sequence of internally-timed functions that culminate in the completion of the requested task. However, the operation can be aborted by either asserting RST# or by issuing an appropriate suspend command.

Table 6: Command Bus Cycles (Sheet 1 of 2)

Mode	Command	Bus	Fi	irst Bus Cy	cle	\$	Second Bus Cycle			
Mode	Command	Cycles	Oper	Addr <sup>(1)</sup>	Data <sup>(2)</sup>	Oper	Addr <sup>(1)</sup>	Data <sup>(2)</sup>		
	Read Array	1	Write	DnA	0xFF	-	-	-		
	Read Device Identifier	≥ 2	Write	DnA	0x90	Read	DBA + IA	ID		
Read	Read CFI	≥ 2	Write	DnA	0x98	Read	DBA + CFI-A	CFI-D		
	Read Status Register	2	Write	DnA	0x70	Read	DnA	SRD		
	Clear Status Register	1	Write	DnA	0x50	-	-	-		
	Word Program	2	Write	WA	0x40	Write	WA	WD		
	Buffered Program <sup>(3)</sup>	> 2	Write	WA	0xE8	Write	WA	N - 1		
Program	Buffered Enhanced Factory Program (BEFP) <sup>(4)</sup>	> 2	Write	WA	0x80	Write	WA	0xD0		
Erase	Block Erase	2	Write	ВА	0x20	Write	ВА	0xD0		
Suspend	Program/Erase Suspend	1	Write	DnA	0xB0	-	-	-		
Suspenu	Program/Erase Resume	1	Write	DnA	0xD0	-	-	-		

Datasheet

Jul 2011
18
Order Number: 208034-04

Table 6: Command Bus Cycles (Sheet 2 of 2)

Mode	Command	Bus	Fi	irst Bus Cy	cle	Second Bus Cycle			
Mode	Command	Cycles	Oper	Addr <sup>(1)</sup>	Data <sup>(2)</sup>	Oper	Addr <sup>(1)</sup>	Data <sup>(2)</sup>	
	Lock Block	2	Write	BA	0x60	Write	BA	0x01	
	Unlock Block	2	Write	BA	0x60	Write	BA	0xD0	
	Lock-down Block	2	Write	BA	0x60	Write	BA	0x2F	
Protection	Program OTP Register	2	Write	PRA	0xC0	Write	OTP-RA	OTP-D	
	Program Lock Register	2	Write	LRA	0xC0	Write	LRA	LRD	
Configuration	Program Read Configuration Register	2	Write	RCD	0x60	Write	RCD	0x03	
Others	Blank Check 2		Write	BA	0xBC	Write	BA	D0	
	Extended Function Interface <sup>(5)</sup>	>2	Write	WA	0xEB	Write	WA	Sub-Op code	

#### Notes:

1. First command cycle address should be the same as the operation's target address.

DBA = Device Base Address

DnA = Address within the device.

IA = Identification code address offset.

CFI-A = Read CFI address offset.

WA = Word address of memory location to be written.

BA = Address within the block.

OTP-RA = OTP Register address.

LRA = Lock Register address.

RCD = Read Configuration Register data on A[16:1].

2. ID = Identifier data.

CFI-D = CFI data on DQ[15:0].

SRD = Status Register data.

WD = Word data.

N = Word count of data to be loaded into the write buffer.

OTP-D = OTP Register data.

LRD = Lock Register data.

- 3. The second cycle of the Buffered Program Command is the word count of the data to be loaded into the write buffer. This is followed by up to 256 words of data. Then the confirm command (0xD0) is issued, triggering the array programming operation.
- 4. The confirm command (0xD0) is followed by the buffer data.
- The second cycle is a Sub-Op-Code, the data written on third cycle is N-1; 1≤ N ≤ 256. The subsequent cycles load data words into the program buffer at a specified address until word count is achieved, after the data words are loaded, the final cycle is the confirm cycle 0xD0).

## 7.0 Read Operation

The device can be in any of four read states: Read Array, Read Identifier, Read Status or Read Query. Upon power-up, or after a reset, the device defaults to Read Array mode. To change the read state, the appropriate read command must be written to the device (see Section 6.2, "Device Command Bus Cycles" on page 18). The following sections describe read-mode operations in detail.

The device supports two read modes: asynchronous page mode and synchronous burst mode. Asynchronous page mode is the default read mode after device power-up or a reset. The RCR must be configured to enable synchronous burst reads of the flash memory array (see Section 11.1, "Read Configuration Register" on page 33).

## 7.1 Asynchronous Page-Mode Read

Following a device power-up or reset, asynchronous page mode is the default read mode and the device is set to Read Array mode. However, to perform array reads after any other device operation (e.g. write operation), the Read Array command must be issued in order to read from the flash memory array.

To perform an asynchronous page-mode read, an address is driven onto the address bus, and CE# and ADV# are asserted. WE# and RST# must already have been deasserted. WAIT is deasserted during asynchronous page mode. ADV# can be driven high to latch the address, or it must be held low throughout the read cycle. CLK is not used for asynchronous page-mode reads, and is ignored. If only asynchronous reads are to be performed, CLK should be tied to a valid  $V_{IH}$  or  $V_{IL}$ level, WAIT signal can be floated and ADV# must be tied to ground. Array data is driven onto DQ[15:0] after an initial access time  $t_{AVOV}$  delay. (see Section 15.0, "AC Characteristics" on page 48).

In asynchronous page mode, eight data words are "sensed" simultaneously from the flash memory array and loaded into an internal page buffer. The buffer word corresponding to the initial address on the Address bus is driven onto DQ[15:0] after the initial access delay. The lowest four address bits determine which word of the 16-word page is output from the data buffer at any given time.

## 7.2 Synchronous Burst-Mode Read

To perform a synchronous burst-read, an initial address is driven onto the address bus, and CE# and ADV# are asserted. WE# and RST# must already have been deasserted. ADV# is asserted, and then deasserted to latch the address. Alternately, ADV# can remain asserted throughout the burst access, in which case the address is latched on the next valid CLK edge while ADV# is asserted.

During synchronous array and non-array read modes, the first word is output from the data buffer on the next valid CLK edge after the initial access latency delay (see Section 11.1.2, "Latency Count (RCR[13:11])" on page 34). Subsequent data is output on valid CLK edges following a minimum delay. However, for a synchronous non-array read, the same word of data will be output on successive clock edges until the burst length requirements are satisfied. Refer to the following waveforms for more detailed information:

- Figure 20, "Synchronous Single-Word Array or Non-array Read Timing" on page 52
- Figure 21, "Continuous Burst Read, showing an Output Delay Timing" on page 53
- Figure 22, "Synchronous Burst-Mode Four-Word Read Timing" on page 53

Datasheet
20
Order Number: 208034-04

### 7.3 Read Device Identifier

The Read Device Identifier command instructs the device to output manufacturer code, device identifier code, block-lock status, OTP Register data, or Read Configuration Register data (see Section 6.2, "Device Command Bus Cycles" on page 18 for details on issuing the Read Device Identifier command). Table 7, "Device Identifier Information" on page 21 and Table 8, "Device ID codes" on page 21 show the address offsets and data values for this device.

Table 7: Device Identifier Information

Item	Address <sup>(1,2)</sup>	Data
Manufacturer Code	0x00	0x89h
Device ID Code	0x01	ID (see Table 8)
Block Lock Configuration:		Lock Bit:
Block Is Unlocked		DQ0 = 0b0
Block Is Locked	BBA + 0x02	DQ0 = 0b1
Block Is not Locked-Down		DQ1 = 0b0
Block Is Locked-Down		DQ1 = 0b1
Read Configuration Register	0x05	RCR Contents
General Purpose Register <sup>(3)</sup>	DBA + 0x07	GPR data
Lock Register 0	0x80	PR-LK0
64-bit Factory-Programmed OTP Register	0x81-0x84	Numonyx Factory OTP Register data
64-bit User-Programmable OTP Register	0x85-0x88	User OTP Register data
Lock Register 1	0x89	OTP Register lock data
128-bit User-Programmable OTP Registers	0x8A-0x109	User OTP Register data

### Notes:

- 1. BBA = Block Base Address.
- DBA = Device base Address, Numonyx reserves other configuration address locations.
- In P33-65nm SBC, the GPR is used as read out register for Extended Function interface command.

Table 8: Device ID codes

		Device Identifier Codes				
ID Code Type	Device Density	-T (Top Parameter)	-B (Bottom Parameter)			
Device Code	64-Mbit	881D	8820			
Device Code	128-Mbit	881E	8821			

## 7.4 Read CFI

The Read CFI command instructs the device to output Common Flash Interface data when read. See Section 6.1, "Device Command Codes" on page 16 for detail on issuing the CFI Query command. Section A.1, "Common Flash Interface" on page 60 shows CFI information and address offsets within the CFI database.

 Datasheet
 Jul 2011

 21
 Order Number: 208034-04

#### 8.0 **Program Operation**

The device supports three programming methods: Word Programming (40h/10h), Buffered Programming (E8h, D0h), and Buffered Enhanced Factory Programming (80h, D0h). The following sections describe device programming in detail.

Successful programming requires the addressed block to be unlocked. If the block is locked down, WP# must be deasserted and the block must be unlocked before attempting to program the block. Attempting to program a locked block causes a program error (SR.4 and SR.1 set) and termination of the operation. See Section 10.0, "Security" on page 29 for details on locking and unlocking blocks.

#### 8.1 **Word Programming**

Word programming operations are initiated by writing the Word Program Setup command to the device. This is followed by a second write to the device with the address and data to be programmed. The device outputs Status Register data when read. See Figure 29, "Word Program Flowchart" on page 72. VPP must be above VppI K, and within the specified  $V_{PPI}$  Min/Max values.

During programming, the WSM executes a sequence of internally-timed events that program the desired data bits at the addressed location, and verifies that the bits are sufficiently programmed. Programming the flash memory array changes "ones" to "zeros". Memory array bits that are zeros can be changed to ones only by erasing the block.

The Status Register can be examined for programming progress and errors by reading at any address. The device remains in the Read Status Register state until another command is written to the device.

Status Register bit SR.7 indicates the programming status while the sequence executes. Commands that can be issued to the device during programming are Program Suspend, Read Status Register, Read Device Identifier, Read CFI, and Read Array (this returns unknown data).

When programming has finished, Status Register bit SR.4 (when set) indicates a programming failure. If SR.3 is set, the WSM could not perform the word programming operation because VPP was outside of its acceptable limits. If SR.1 is set, the word programming operation attempted to program a locked block, causing the operation to abort.

Before issuing a new command, the Status Register contents should be examined and then cleared using the Clear Status Register command. Any valid command can follow, when word programming has completed.

#### 8.2 **Buffered Programming**

The device features a 256-word buffer to enable optimum programming performance. For Buffered Programming, data is first written to an on-chip write buffer. Then the buffer data is programmed into the flash memory array in buffer-size increments. This can improve system programming performance significantly over non-buffered programming. (see Figure 32, "Buffer Program Flowchart" on page 75).

When the Buffered Programming Setup command is issued, Status Register information is updated and reflects the availability of the buffer. SR.7 indicates buffer availability: if set, the buffer is available; if cleared, the buffer is not available.

Note: The device defaults to output SR data after the Buffered Programming Setup Command (E8h) is issued. CE# or OE# must be toggled to update Status Register. Don't issue the

Read SR command (70h), which would be interpreted by the internal state machines as Buffer Word Count.

On the next write, a word count is written to the device at the buffer address. This tells the device how many data words will be written to the buffer, up to the maximum size of the buffer.

On the next write, a device start address is given along with the first data to be written to the flash memory array. Subsequent writes provide additional device addresses and data. All data addresses must lie within the start address plus the word count. Optimum programming performance and lower power usage are obtained by aligning the starting address at the beginning of a 256-word boundary (A[8:1] = 0x00).

Note:

If a misaligned address range is issued during buffered programming, the program region must also be within an 256-word aligned boundary.

After the last data is written to the buffer, the Buffered Programming Confirm command must be issued to the original block address. The WSM begins to program buffer contents to the flash memory array. If a command other than the Buffered Programming Confirm command is written to the device, a command sequence error occurs and SR[7,5,4] are set. If an error occurs while writing to the array, the device stops programming, and SR[7,4] are set, indicating a programming failure.

When Buffered Programming has completed, additional buffer writes can be initiated by issuing another Buffered Programming Setup command and repeating the buffered program sequence. Buffered programming may be performed with VPP =  $V_{PPL}$  or  $V_{PPH}$  (See Section 13.2, "Operating Conditions" on page 45 for limitations when operating the device with VPP =  $V_{PPH}$ ).

If an attempt is made to program past an erase-block boundary using the Buffered Program command, the device aborts the operation. This generates a command sequence error, and SR[5,4] are set.

If Buffered programming is attempted while VPP is below  $V_{PPLK}$ , SR[4,3] are set. If any errors are detected that have set Status Register bits, the Status Register should be cleared using the Clear Status Register command.

## 8.3 Buffered Enhanced Factory Programming

Buffered Enhanced Factory Programing (BEFP) speeds up flash programming. The enhanced programming algorithm used in BEFP eliminates traditional programming elements that drive up overhead in device programmer systems. (see Figure 33, "BEFP Flowchart" on page 76).

BEFP consists of three phases: Setup, Program/Verify, and Exit It uses a write buffer to spread flash program performance across 256 data words. Verification occurs in the same phase as programming to accurately program the flash memory cell to the correct bit state.

A single two-cycle command sequence programs the entire block of data. This enhancement eliminates three write cycles per buffer: two commands and the word count for each set of 256 data words. Host programmer bus cycles fill the device's write buffer followed by a status check. SR.0 indicates when data from the buffer has been programmed into sequential flash memory array locations.

Following the buffer-to-flash array programming sequence, the Write State Machine (WSM) increments internal addressing to automatically select the next 256-word array boundary. This aspect of BEFP saves host programming equipment the address-bus setup overhead.

With adequate continuity testing, programming equipment can rely on the WSM's internal verification to ensure that the device has programmed properly. This eliminates the external post-program verification and its associated overhead.

#### 8.3.1 **BEFP Requirements and Considerations**

Table 9: **BEFP Requirements** 

Parameter/Issue	Requirement	Notes
Case Temperature	$T_C = 30^{\circ}C \pm 10^{\circ}C$	-
VCC	Nominal Vcc	-
VPP	Driven to V <sub>PPH</sub>	-
Setup and Confirm	Target block must be unlocked before issuing the BEFP Setup and Confirm commands.	-
Programming	The first-word address (WAO) of the block to be programmed must be held constant from the setup phase through all data streaming into the target block, until transition to the exit phase is desired.	-
Buffer Alignment	WAO must align with the start of an array buffer boundary.	1

**Note:** Word buffer boundaries in the array are determined by A[8:1] (0x00 through 0xFF); the alignment start point is A[8:1] =

Table 10: BEFP Considerations

Parameter/Issue	Requirement			
Cycling	For optimum performance, cycling must be limited below 50 erase cycles per block.	1		
Programming blocks	BEFP programs one block at a time; all buffer data must fall within a single block.	2		
Suspend	BEFP cannot be suspended.	-		
Programming the flash memory array	Programming to the flash memory array can occur only when the buffer is full.	3		

### Notes:

- Some degradation in performance may occur is this limit is exceeded, but the internal algorithm continues to work
- 2. If the internal address counter increments beyond the block's maximum address, addressing wraps around to the beginning of the block.
- 3. If the number of words is less than 256, remaining locations must be filled with 0xFFFF.

#### 8.3.2 **BEFP Setup Phase**

After receiving the BEFP Setup and Confirm command sequence, Status Register bit SR.7 (Ready) is cleared, indicating that the WSM is busy with BEFP algorithm startup. A delay before checking SR.7 is required to allow the WSM enough time to perform all of its setups and checks (Block-Lock status, VPP level, etc.). If an error is detected, SR.4 is set and BEFP operation terminates. If the block was found to be locked, SR.1 is also set. SR.3 is set if the error occurred due to an incorrect VPP level.

### Note:

Reading from the device after the BEFP Setup and Confirm command sequence outputs Status Register data. Do not issue the Read Status Register command; it will be interpreted as data to be loaded into the buffer.

Jul 2011 Datasheet Order Number: 208034-04

#### 8.3.3 **BEFP Program/Verify Phase**

After the BEFP Setup Phase has completed, the host programming system must check SR[7,0] to determine the availability of the write buffer for data streaming. SR.7 cleared indicates the device is busy and the BEFP program/verify phase is activated. SR.0 indicates the write buffer is available.

Two basic sequences repeat in this phase: loading of the write buffer, followed by buffer data programming to the array. For BEFP, the count value for buffer loading is always the maximum buffer size of 256 words. During the buffer-loading sequence, data is stored to sequential buffer locations starting at address 0x00. Programming of the buffer contents to the flash memory array starts as soon as the buffer is full. If the number of words is less than 256, the remaining buffer locations must be filled with 0xFFFF

### Caution:

The buffer must be completely filled for programming to occur. Supplying an address outside of the current block's range during a buffer-fill sequence causes the algorithm to exit immediately. Any data previously loaded into the buffer during the fill cycle is not programmed into the array.

The starting address for data entry must be buffer size aligned, if not the BEFP algorithm will be aborted and the program fails and (SR.4) flag will be set.

Data words from the write buffer are directed to sequential memory locations in the flash memory array; programming continues from where the previous buffer sequence ended. The host programming system must poll SR.0 to determine when the buffer program sequence completes. SR.0 cleared indicates that all buffer data has been transferred to the flash array; SR.0 set indicates that the buffer is not available yet for the next fill cycle. The host system may check full status for errors at any time, but it is only necessary on a block basis after BEFP exit. After the buffer fill cycle, no write cycles should be issued to the device until SR.0 = 0 and the device is ready for the next buffer fill.

### Note:

Any spurious writes are ignored after a buffer fill operation and when internal program is proceeding.

The host programming system continues the BEFP algorithm by providing the next group of data words to be written to the buffer. Alternatively, it can terminate this phase by changing the block address to one outside of the current block's range.

The Program/Verify phase concludes when the programmer writes to a different block address; data supplied must be 0xFFFF. Upon Program/Verify phase completion, the device enters the BEFP Exit phase.

#### 8.3.4 **BEFP Exit Phase**

When SR.7 is set, the device has returned to normal operating conditions. A full status check should be performed at this time to ensure the entire block programmed successfully. When exiting the BEFP algorithm with a block address change, the read mode will not change. After BEFP exit, any valid command can be issued to the device.

#### 8.4 **Program Suspend**

Issuing the Program Suspend command while programming suspends the programming operation. This allows data to be accessed from the device other than the one being programmed. The Program Suspend command can be issued to any device address. A program operation can be suspended to perform reads only. Additionally, a

Order Number: 208034-04

program operation that is running during an erase suspend can be suspended to perform a read operation (see Figure 30, "Program Suspend/Resume Flowchart" on page 73).

When a programming operation is executing, issuing the Program Suspend command requests the WSM to suspend the programming algorithm at predetermined points. The device continues to output Status Register data after the Program Suspend command is issued. Programming is suspended when Status Register bits SR[7,2] are set. Suspend latency is specified in Section 15.5, "Program and Erase Characteristics" on page 58.

To read data from the device, the Read Array command must be issued. Read Array, Read Status Register, Read Device Identifier, Read CFI, and Program Resume are valid commands during a program suspend.

During a program suspend, deasserting CE# places the device in standby, reducing active current. VPP must remain at its programming level, and WP# must remain unchanged while in program suspend. If RST# is asserted, the device is reset.


## 8.5 Program Resume

The Resume command instructs the device to continue programming, and automatically clears Status Register bits SR[7,2]. This command can be written to any address. If error bits are set, the Status Register should be cleared before issuing the next instruction. RST# must remain deasserted (see Figure 30, "Program Suspend/Resume Flowchart" on page 73).

## 8.6 Program Protection

When VPP =  $V_{\rm IL}$ , absolute hardware write protection is provided for all device blocks. If VPP is at or below  $V_{\rm PPLK}$ , programming operations halt and SR.3 is set indicating a VPP-level error. Block Lock Registers are not affected by the voltage level on VPP; they may still be programmed and read, even if VPP is less than  $V_{\rm PPLK}$ .

Figure 6: Example VPP Supply Connections

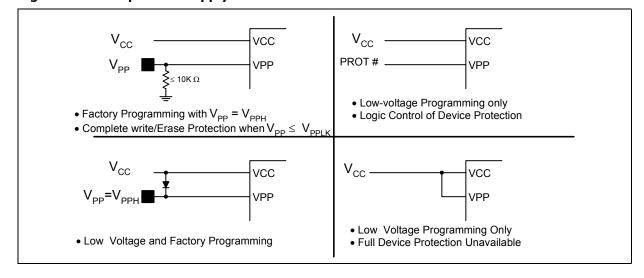

Datasheet

Jul 2011
26

Order Number: 208034-04

## 9.0 Erase Operation

Flash erasing is performed on a block basis. An entire block is erased each time an erase command sequence is issued, and only one block is erased at a time. When a block is erased, all bits within that block read as logical ones. The following sections describe block erase operations in detail.

### 9.1 Block Erase

Block erase operations are initiated by writing the Block Erase Setup command to the address of the block to be erased (see Section 6.2, "Device Command Bus Cycles" on page 18). Next, the Block Erase Confirm command is written to the address of the block to be erased. If the device is placed in standby (CE# deasserted) during an erase operation, the device completes the erase operation before entering standby. VPP must be above V<sub>PPLK</sub> and the block must be unlocked (see Figure 34, "Block Erase Flowchart" on page 77).

During a block erase, the WSM executes a sequence of internally-timed events that conditions, erases, and verifies all bits within the block. Erasing the flash memory array changes "zeros" to "ones". Memory array bits that are ones can be changed to zeros only by programming the block.

The Status Register can be examined for block erase progress and errors by reading any address. The device remains in the Read Status Register state until another command is written. SR.0 indicates whether the addressed block is erasing. Status Register bit SR.7 is set upon erase completion.

Status Register bit SR.7 indicates block erase status while the sequence executes. When the erase operation has finished, Status Register bit SR.5 indicates an erase failure if set. SR.3 set would indicate that the WSM could not perform the erase operation because VPP was outside of its acceptable limits. SR.1 set indicates that the erase operation attempted to erase a locked block, causing the operation to abort.

Before issuing a new command, the Status Register contents should be examined and then cleared using the Clear Status Register command. Any valid command can follow once the block erase operation has completed.

The Block Erase operation is aborted by performing a reset or powering down the device. In this case, data integrity cannot be ensured, and it is recommended to erase again the blocks aborted.

## 9.2 Blank Check

The Blank Check operation determines whether a specified main block is blank (i.e. completely erased). Without Blank Check, Block Erase would be the only other way to ensure a block is completely erased. so Blank Check can be used to determine whether or not a prior erase operation was successful; this includes erase operations that may have been interrupted by power loss.

Blank check can apply to only one block at a time, and no operations other than Status Register Reads are allowed during Blank Check (e.g. reading array data, program, erase etc). Suspend and resume operations are not supported during Blank Check, nor is Blank Check supported during any suspended operations.

Blank Check operations are initiated by writing the Blank Check Setup command to the block address. Next, the Check Confirm command is issued along with the same block address. When a successful command sequence is entered, the device automatically enters the Read Status State. The WSM then reads the entire specified block, and determines whether any bit in the block is programmed or over-erased.

 Datasheet
 Jul 2011

 27
 Order Number: 2080 34-04

The Status Register can be examined for Blank Check progress and errors by reading any address within the block being accessed. During a blank check operation, the Status Register indicates a busy status (SR.7 = 0). Upon completion, the Status Register indicates a ready status (SR.7  $\stackrel{\cdot}{=}$  1). The Status Register should be checked for any errors, and then cleared. If the Blank Check operation fails, which means the block is not completely erased, the Status Register bit SR.5 will be set ("1"). CE# or OE# toggle (during polling) updates the Status Register.

After examining the Status Register, it should be cleared by the Clear Status Register command before issuing a new command. The device remains in Status Register Mode until another command is written to the device. Any command can follow once the Blank Check command is complete.

#### 9.3 **Erase Suspend**

Issuing the Erase Suspend command while erasing suspends the block erase operation. This allows data to be accessed from memory locations other than the one being erased. The Erase Suspend command can be issued to any device address. A block erase operation can be suspended to perform a word or buffer program operation, or a read operation within any block except the block that is erase suspended (see Figure 31, "Erase Suspend/Resume Flowchart" on page 74).

When a block erase operation is executing, issuing the Erase Suspend command requests the WSM to suspend the erase algorithm at predetermined points. The device continues to output Status Register data after the Erase Suspend command is issued. Block erase is suspended when Status Register bits SR[7,6] are set. Suspend latency is specified in Section 15.5, "Program and Erase Characteristics" on page 58.

To read data from the device (other than an erase-suspended block), the Read Array command must be issued. During Erase Suspend, a Program command can be issued to any block other than the erase-suspended block. Block erase cannot resume until program operations initiated during erase suspend complete. Read Array, Read Status Register, Read Device Identifier, Read CFI, and Erase Resume are valid commands during Erase Suspend. Additionally, Clear Status Register, Program, Program Suspend, Block Lock, Block Unlock, and Block Lock-Down are valid commands during Erase Suspend.

During an erase suspend, deasserting CE# places the device in standby, reducing active current. VPP must remain at a valid level, and WP# must remain unchanged while in erase suspend. If RST# is asserted, the device is reset.

#### 9.4 **Erase Resume**

The Erase Resume command instructs the device to continue erasing, and automatically clears SR[7,6]. This command can be written to any address. If Status Register error bits are set, the Status Register should be cleared before issuing the next instruction. RST# must remain deasserted.

#### 9.5 **Erase Protection**

When  $VPP = V_{IL}$ , absolute hardware erase protection is provided for all device blocks. If VPP is at or below V<sub>PPLK</sub>, erase operations halt and SR.3 is set indicating a VPP-level error.

Jul 2011 Datasheet Order Number: 208034-04

## 10.0 Security

The device features security modes used to protect the information stored in the flash memory array. The following sections describe each security mode in detail.

## 10.1 Block Locking

Individual instant block locking is used to protect user code and/or data within the flash memory array. All blocks power up in a locked state to protect array data from being altered during power transitions. Any block can be locked or unlocked with no latency. Locked blocks cannot be programmed or erased; they can only be read.

Software-controlled security is implemented using the Block Lock and Block Unlock commands. Hardware-controlled security can be implemented using the Block Lock-Down command along with asserting WP#. Also, VPP data security can be used to inhibit program and erase operations (see Section 8.6, "Program Protection" on page 26 and Section 9.5, "Erase Protection" on page 28).

The P33-65nm SBC device also offers four pre-defined areas in the main array that can be configured as One-Time Programmable (OTP) for the highest level of security. These include the four 32 KB parameter blocks together as one and the three adjacent 128 KB main blocks. This is available for top or bottom parameter devices.

## 10.1.1 Lock Block

To lock a block, issue the Lock Block Setup command. The next command must be the Lock Block command issued to the desired block's address (see Section 6.2, "Device Command Bus Cycles" on page 18 and Figure 35, "Block Lock Operations Flowchart" on page 78). If the Set Read Configuration Register command is issued after the Block Lock Setup command, the device configures the RCR instead.

Block lock and unlock operations are not affected by the voltage level on VPP. The block lock bits may be modified and/or read even if VPP is at or below  $V_{PPLK}$ .

### 10.1.2 Unlock Block

The Unlock Block command is used to unlock blocks (see Section 6.2, "Device Command Bus Cycles" on page 18). Unlocked blocks can be read, programmed, and erased. Unlocked blocks return to a locked state when the device is reset or powered down. If a block is in a lock-down state, WP# must be deasserted before it can be unlocked (see Figure 7, "Block Locking State Diagram" on page 30).

### 10.1.3 Lock-Down Block

A locked or unlocked block can be locked-down by writing the Lock-Down Block command sequence (see Section 6.2, "Device Command Bus Cycles" on page 18). Blocks in a lock-down state cannot be programmed or erased; they can only be read. However, unlike locked blocks, their locked state cannot be changed by software commands alone. A locked-down block can only be unlocked by issuing the Unlock Block command with WP# deasserted. To return an unlocked block to locked-down state, a Lock-Down command must be issued prior to changing WP# to V<sub>IL</sub>. Locked-down blocks revert to the locked state upon reset or power up the device (see Figure 7, "Block Locking State Diagram" on page 30).


Datasheet

Jul 2011
29
Order Number: 208034-04

### 10.1.4 Block Lock Status

The Read Device Identifier command is used to determine a block's lock status (see Section 7.3, "Read Device Identifier" on page 21). Data bits DQ[1:0] display the addressed block's lock status; DQ0 is the addressed block's lock bit, while DQ1 is the addressed block's lock-down bit.

Figure 7: Block Locking State Diagram

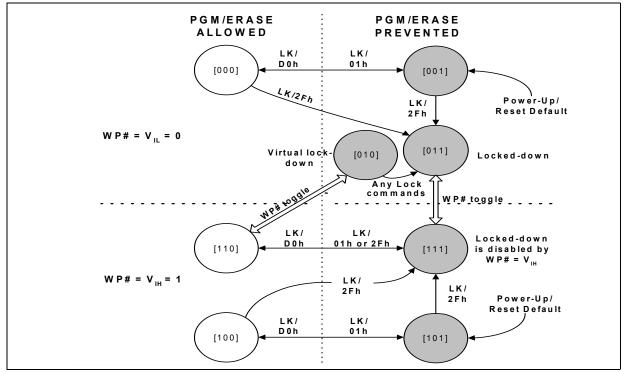

Note: LK: Lock Setup Command, 60h; LK/D0h: Unlock Command; LK/01h: Lock Command; LK/2Fh: Lock-Down Command.

### 10.1.5 Block Locking During Suspend

Block lock and unlock changes can be performed during an erase suspend. To change block locking during an erase operation, first issue the Erase Suspend command. Monitor the Status Register until SR.7 and SR.6 are set, indicating the device is suspended and ready to accept another command.

Next, write the desired lock command sequence to a block, which changes the lock state of that block. After completing block lock or unlock operations, resume the erase operation using the Erase Resume command.

Note:

A Lock Block Setup command followed by any command other than Lock Block, Unlock Block, or Lock-Down Block produces a command sequence error and set Status Register bits SR.4 and SR.5. If a command sequence error occurs during an erase suspend, SR.4 and SR.5 remains set, even after the erase operation is resumed. Unless the Status Register is cleared using the Clear Status Register command before resuming the erase operation, possible erase errors may be masked by the command sequence error.

Datasheet

Jul 2011
30
Order Number: 208034-04

If a block is locked or locked-down during an erase suspend of the *same* block, the lock status bits change immediately. However, the erase operation completes when it is resumed. Block lock operations cannot occur during a program suspend. See Appendix A, "Write State Machine" on page 81, which shows valid commands during an erase suspend.

### 10.2 Selectable OTP Blocks

Blocks from the main array may be optionally configured as OTP. Ask your local Numonyx representative for details about any of these selectable OTP implementations.

### 10.3 Password Access

Password Access is a security enhancement offered on the P33-65nm device. This feature protects information stored in main-array memory blocks by preventing content alteration or reads until a valid 64-bit password is received. Password Access may be combined with Non-Volatile Protection and/or Volatile Protection to create a multitiered solution. Please contact your Numonyx Sales for further details concerning Password Access.

## 11.0 Status Register

To read the Status Register, issue the Read Status Register command at any address. Status Register information is available to which the Read Status Register, Word Program, or Block Erase command was issued. SRD is automatically made available following a Word Program, Block Erase, or Block Lock command sequence. Reads from the device after any of these command sequences outputs the device's status until another valid command is written (e.g. the Read Array command).

The Status Register is read using single asynchronous-mode or synchronous burst mode reads. SRD is output on DQ[7:0], while 0x00 is output on DQ[15:8]. In asynchronous mode the falling edge of OE#, or CE# (whichever occurs first) updates and latches the Status Register contents. However, when reading the Status Register in synchronous burst mode, CE# or ADV# must be toggled to update SRD.

The Device Ready Status bit (SR.7) provides overall status of the device. SR[6:1] present status and error information about the program, erase, suspend, VPP, and block-locked operations.

**Table 11: Status Register Description** 

Status Regist	Status Register (SR) Default Value = 0x8									
Device Ready Status	Erase Suspend Status <sup>1</sup>	Erase/Blank Check Status	Program Status		VPP Status	Program Suspend Status	Block-Locked Status	BEFP Write Status		
DRS	ESS	ES	P	S	VPPS	PSS	BLS	BWS		
7	6	5		4	3	2	1	0		
Bit	Na	me				Description				
7	Device Ready S	itatus			ousy; program or eady; SR[6:1] ar	, ,	rogress; SR.0 va	lid.		
6	Erase Suspend	0 = Erase suspend not in effect. 1 = Erase suspend in effect.								
5	Erase/Blank Check Status		SR.5	SR.4	Description					
4	Program Status	Command Sequence Error	0 0 1 1	0 1 0 1	Program error - Erase or Blank	se operation suc operation aborte Check error - op ence error - con	ed. eration aborted.			
3	VPP Status	l	0 = VPP within acceptable limits during program or erase operation. $1 = VPP \le V_{PPLK}$ during program or erase operation.							
2	Program Suspe	0 = Program suspend not in effect. 1 = Program suspend in effect.								
1	Block-Locked S	0 = Block not locked during program or erase. 1 = Block locked during program or erase; operation aborted.								
0	BEFP Write Star	buffer: 0 = BE	r Buffered Enhanced Factory Programming (BEFP) data is loaded into the er: BEFP complete. BEFP in-progress.							

<sup>1.</sup> Always clear the Status Register before resuming erase operations afer an Erase Suspend command; this prevents ambiguity in Status Register information. For example, if a command sequence error occurs during an erase suspend state, the Status Register contains the command sequence error status (SR[7,5,4] set). When the erase operation resumes and finishes, possible errors during the erase operation cannot be deteted via the Status Register because it contains the previous error status.

2. BEFP mode is only valid in array.

Datasheet

Jul 2011
32
Order Number: 208034-04

## 11.0.1 Clear Status Register

The Clear Status Register command clears the Status Register. It functions independent of VPP. The WSM sets and clears SR[7,6,2], but it sets bits SR[5:3,1] without clearing them. The Status Register should be cleared before starting a command sequence to avoid any ambiguity. A device reset also clears the Status Register.

## 11.1 Read Configuration Register

The RCR is used to select the read mode (synchronous or asynchronous), and it defines the synchronous burst characteristics of the device. To modify RCR settings, use the Configure Read Configuration Register command (see Section 6.2, "Device Command Bus Cycles" on page 18).

RCR contents can be examined using the Read Device Identifier command, and then reading from offset 0x05 (see Section 7.3, "Read Device Identifier" on page 21).

The RCR is shown in Table 12. The following sections describe each RCR bit.

Table 12: Read Configuration Register Description (Sheet 1 of 2)

Read Co	d Configuration Register (RCR)															
Read Mode	RES	Latency Count		WAIT Polarity	Output   Duist   CER   RES   RES				Burst Wrap	Burst Length						
RM	R LC[3:0]				WP	DOC	WD	BS	CE	R	R	BW		BL[2:0]		
15	14	13	12	11	10	9	8	7	6	5	4	3 2 1 0				
Bit		Na	ime						Descr	iption						
15	Read Mode (RM)				0 = Sync 1 = Asyn				(default	)						
14	Reser	ved (R)			Set to 0.	This bit c	annot be	altered	by custo	mer.						
13:11	Latency Count (LC[2:0])				000 = Code 0 reserved 001 = Code 1 reserved 010 = Code 2 011 = Code 3 100 = Code 4 101 = Code 5 110 = Code 6 111 = Code 7(default)											
10	WAIT Polarity (WP)				0 =WAIT signal is active low 1 =WAIT signal is active high (default)											
9	Data Output Configuration (DOC)				0 =Data held for a 1-clock data cycle 1 =Data held for a 2-clock data cycle (default)											
8	WAIT Delay (WD)				0 =WAIT deasserted with valid data 1 =WAIT deasserted one data cycle before valid data (default)											
7	Burst	Sequen	ice (BS)		0 =Reserved 1 =Linear (default)											
6	Clock Edge (CE) 0 = Falling edge 1 = Rising edge (default)															

 Datasheet
 Jul 2011

 33
 Order Number: 208034-04

Table 12: Read Configuration Register Description (Sheet 2 of 2)

5:4	Reserved (R)	Set to 0. This bit cannot be altered by customer.
3	Burst Wrap (BW)	0 =Wrap; Burst accesses wrap within burst length set by BL[2:0] 1 =No Wrap; Burst accesses do not wrap within burst length (default)
2:0	Burst Length (BL[2:0])	001 =4-word burst 010 =8-word burst 011 =16-word burst 111 =Continuous-word burst (default) (Other bit settings are reserved)

## 11.1.1 Read Mode (RCR.15)

The Read Mode (RM) bit selects synchronous burst-mode or asynchronous page-mode operation for the device. When the RM bit is set, asynchronous page mode is selected (default). When RM is cleared, synchronous burst mode is selected.

## 11.1.2 Latency Count (RCR[13:11])

The Latency Count (LC) bits tell the device how many clock cycles must elapse from the rising edge of ADV# (or from the first valid clock edge after ADV# is asserted) until the first valid data word is driven onto DQ[15:0]. The input clock frequency is used to determine this value and Figure 8 shows the data output latency for the different settings of LC. The maximum Latency Count for P33 would be Code 4 based on the Max clock frequency specification of 52 MHz, and there will be zero WAIT States when bursting within the word line. Please also refer to Section 11.1.3, "End of Word Line (EOWL) Considerations" on page 36 for more information on EOWL.

Refer to Table 13, "LC and Frequency Support" on page 35 for Latency Code Settings.

Datasheet

Jul 2011
34

Order Number: 208034-04

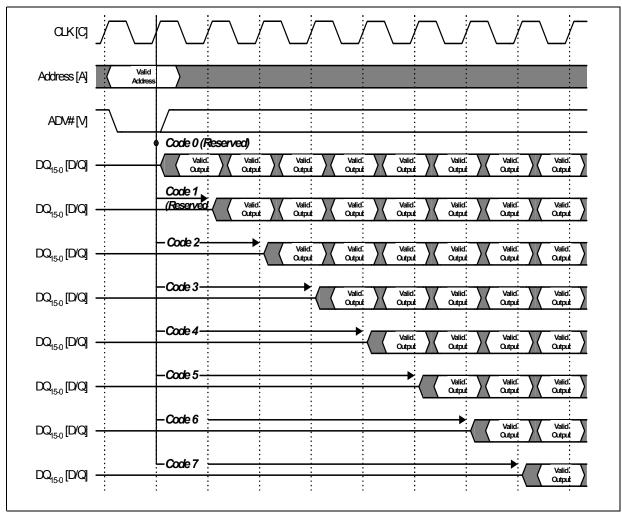


Figure 8: First-Access Latency Count

Table 13: LC and Frequency Support

Latency Count Settings	Frequency Support (MHz)
3	≤ 40
4	≤ 52

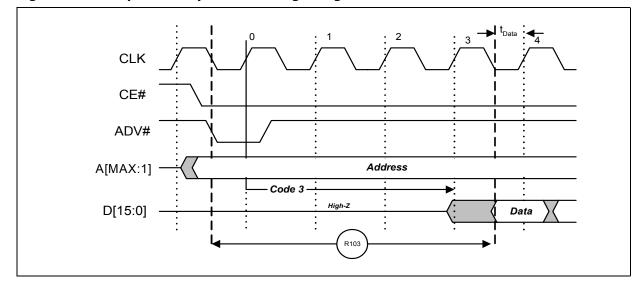


Figure 9: Example Latency Count Setting Using Code 3

## 11.1.3 End of Word Line (EOWL) Considerations

End of Wordline (EOWL) WAIT states can result when the starting address of the burst operation is not aligned to an 8-word boundary; that is, A[3:1] of start address does not equal 0x0. Figure 10, "End of Wordline Timing Diagram" on page 36 illustrates the end of wordline WAIT state(s), which occur after the first 8-word boundary is reached. The number of data words and the number of WAIT states is summarized in Table 14, "End of Wordline Data and WAIT state Comparison" on page 37for both P33-130nm and P33-65nm SBC devices.

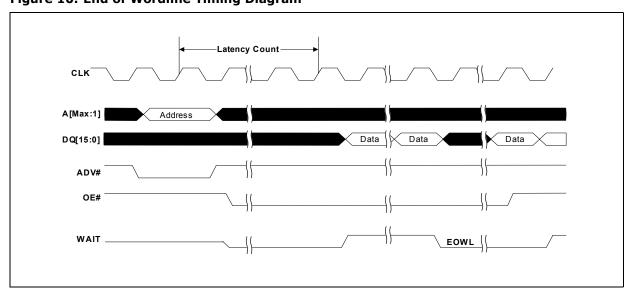


Figure 10: End of Wordline Timing Diagram

Datasheet

Table 14: End of Wordline Data and WAIT state Comparison

Latanau Caumt	P33-1	.30nm	P33-65nm			
Latency Count	Data States	WAIT States	Data States	WAIT States		
1	Not Supported	Not Supported	Not Supported	Not Supported		
2	4	0 to 1	8	0 to 1		
3	4	0 to 2	8	0 to 2		
4	4	0 to 3	8	0 to 3		
5	4	0 to 4	8	0 to 4		
6	4	0 to 5	8	0 to 5		
7	4	0 to 6	8	0 to 6		

## **11.1.4 WAIT Polarity (RCR.10)**

The WAIT Polarity bit (WP), RCR.10 determines the asserted level ( $V_{OH}$  or  $V_{OL}$ ) of WAIT. When WP is set, WAIT is asserted high. When WP is cleared, WAIT is asserted low (default). WAIT changes state on valid clock edges during active bus cycles (CE# asserted, OE# asserted, RST# deasserted).

## 11.1.5 WAIT Signal Function

The WAIT signal indicates data valid when the device is operating in synchronous mode (RCR.15=0). The WAIT signal is only "deasserted" when data is valid on the bus.

When the device is operating in synchronous non-array read mode, such as read status, read ID, or read query. The WAIT signal is also "deasserted" when data is valid on the bus.

WAIT behavior during synchronous non-array reads at the end of word line works correctly only on the first data access.

When the device is operating in asynchronous page mode, asynchronous single word read mode, and all write operations, WAIT is set to a deasserted state as determined by RCR.10. See Figure 18, "Asynchronous Single-Word Read (ADV# Latch)" on page 51, and Figure 19, "Asynchronous Page-Mode Read Timing" on page 52.

 Datasheet
 Jul 2011

 37
 Order Number: 208034-04

**Table 15: WAIT Functionality Table** 

Condition	WAIT	Notes
CE# = `1', OE# = `X' or CE# = `0', OE# = `1'	High-Z	1
CE# ='0', OE# = '0'	Active	1
Synchronous Array Reads	Active	1
Synchronous Non-Array Reads	Active	1
All Asynchronous Reads	Deasserted	1
All Writes	High-Z	1,2

#### Notes:

- 1. **Active:** WAIT is asserted until data becomes valid, then deasserts.
- 2. When  $OE# = V_{IH}$  during writes, WAIT = High-Z.

# 11.1.6 Data Output Configuration (RCR.9)

The Data Output Configuration (DOC) bit, RCR.9 determines whether a data word remains valid on the data bus for one or two clock cycles. This period of time is called the "data cycle". When DOC is set, output data is held for two clocks (default). When DOC is cleared, output data is held for one clock (see Figure 11, "Data Hold Timing" on page 38). The processor's data setup time and the flash memory's clock-to-data output delay should be considered when determining whether to hold output data for one or two clocks. A method for determining the Data Hold configuration is shown below:

To set the device at one clock data hold for subsequent reads, the following condition must be satisfied:


 $t_{DATA}$  = Data set up to Clock (defined by CPU)

For example, with a clock frequency of 40 MHz, the clock period is 25 ns. Assuming  $t_{CHQV}=20$  ns and  $t_{DATA}=4$  ns. Applying these values to the formula above:

20 ns + 4 ns 
$$\leq$$
 25 ns

The equation is satisfied and data will be available at every clock period with data hold setting at one clock. If  $t_{CHQV\,(ns)} + t_{DATA}\,(ns) >$ One CLK Period (ns), data hold setting of 2 clock periods must be used.

Figure 11: Data Hold Timing

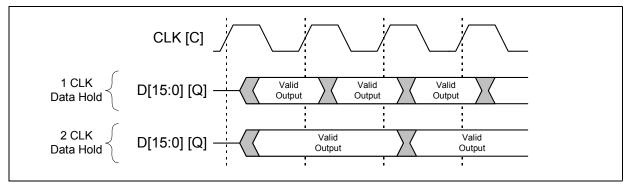

Datasheet

Jul 2011
38

Order Number: 208034-04

# 11.1.7 WAIT Delay (RCR.8)

The WAIT Delay (WD) bit controls the WAIT assertion-delay behavior during synchronous burst reads. WAIT can be asserted either during or one data cycle before valid data is output on DQ[15:0]. When WD is set, WAIT is deasserted one data cycle before valid data (default). When WD is cleared, WAIT is deasserted during valid data.

## 11.1.8 Burst Sequence (RCR.7)

The Burst Sequence (BS) bit selects linear-burst sequence (default). Only linear-burst sequence is supported. Table 16 shows the synchronous burst sequence for all burst lengths, as well as the effect of the Burst Wrap (BW) setting.

**Table 16: Burst Sequence Word Ordering** 

Start	Burst		Burst Addressing	Sequence (DEC)	
Addr. (DEC)	Wrap (RCR.3)	4-Word Burst (BL[2:0] = 0b001)	8-Word Burst (BL[2:0] = 0b010)	16-Word Burst (BL[2:0] = 0b011)	Continuous Burst (BL[2:0] = 0b111)
0	0	0-1-2-3	0-1-2-3-4-5-6-7	0-1-2-3-414-15	0-1-2-3-4-5-6
1	0	1-2-3-0	1-2-3-4-5-6-7-0	1-2-3-4-515-0	1-2-3-4-5-6-7
2	0	2-3-0-1	2-3-4-5-6-7-0-1	2-3-4-5-615-0-1	2-3-4-5-6-7-8
3	0	3-0-1-2	3-4-5-6-7-0-1-2	3-4-5-6-715-0-1-2	3-4-5-6-7-8-9
4	0		4-5-6-7-0-1-2-3	4-5-6-7-815-0-1-2-3	4-5-6-7-8-9-10
5	0		5-6-7-0-1-2-3-4	5-6-7-8-915-0-1-2-3- 4	5-6-7-8-9-10-11
6	0		6-7-0-1-2-3-4-5	6-7-8-9-1015-0-1-2- 3-4-5	6-7-8-9-10-11-12
7	0		7-0-1-2-3-4-5-6	7-8-9-1015-0-1-2-3- 4-5-6	7-8-9-10-11-12-13
:	:	:	:	:	:
14	0			14-15-0-1-212-13	14-15-16-17-18-19-20- 
15	0			15-0-1-2-313-14	15-16-17-18-19-20-21- 
:	:	:	:	:	:
0	1	0-1-2-3	0-1-2-3-4-5-6-7	0-1-2-3-414-15	0-1-2-3-4-5-6
1	1	1-2-3-4	1-2-3-4-5-6-7-8	1-2-3-4-515-16	1-2-3-4-5-6-7
2	1	2-3-4-5	2-3-4-5-6-7-8-9	2-3-4-5-616-17	2-3-4-5-6-7-8
3	1	3-4-5-6	3-4-5-6-7-8-9-10	3-4-5-6-717-18	3-4-5-6-7-8-9
4	1		4-5-6-7-8-9-10-11	4-5-6-7-818-19	4-5-6-7-8-9-10
5	1		5-6-7-8-9-10-11-12	5-6-7-8-919-20	5-6-7-8-9-10-11
6	1		6-7-8-9-10-11-12-13	6-7-8-9-1020-21	6-7-8-9-10-11-12
7	1		7-8-9-10-11-12-13-14	7-8-9-10-1121-22	7-8-9-10-11-12-13
:	i.	:	:	:	i i
14	1			14-15-16-17-1828-29	14-15-16-17-18-19-20- 
15	1			15-16-17-18-1929-30	15-16-17-18-19-20-21- 

Datasheet 39

#### 11.1.9 Clock Edge (RCR.6)

The Clock Edge (CE) bit selects either a rising (default) or falling clock edge for CLK. This clock edge is used at the start of a burst cycle, to output synchronous data, and to assert/deassert WAIT.

#### 11.1.10 **Burst Wrap (RCR.3)**

The Burst Wrap (BW) bit determines whether 4, 8, or 16-word burst length accesses wrap within the selected word-length boundaries or cross word-length boundaries. When BW is set, burst wrapping does not occur (default). When BW is cleared, burst wrapping occurs.

#### 11.1.11 Burst Length (RCR[2:0])

The Burst Length bits (BL[2:0]) selects the linear burst length for all synchronous burst reads of the flash memory array. The burst lengths are 4-word, 8-word, 16-word, and continuous word.

Continuous burst accesses are linear only, and do not wrap within any word length boundaries (see Table 16, "Burst Sequence Word Ordering" on page 39). When a burst cycle begins, the device outputs synchronous burst data until it reaches the end of the "burstable" address space.

#### 11.2 One-Time Programmable (OTP) Registers

The device contains 17 OTP Registers that can be used to implement system security measures and/or device identification. Each OTP Register can be individually locked.

The first 128-bit OTP Register is comprised of two 64-bit (8-word) segments. The lower 64-bit segment is pre-programmed at the Numonyx factory with a unique 64-bit number. The other 64-bit segment, as well as the other sixteen 128-bit OTP Registers, are blank. Users can program these registers as needed. Once programmed, users can then lock the OTP Register(s) to prevent additional bit programming (see Figure 12, "OTP Register Map" on page 41).

The OTP Registers contain OTP bits; when programmed, PR bits cannot be erased. Each OTP Register can be accessed multiple times to program individual bits, as long as the register remains unlocked.

Each OTP Register has an associated Lock Register bit. When a Lock Register bit is programmed, the associated OTP Register can only be read; it can no longer be programmed. Additionally, because the Lock Register bits themselves are OTP, when programmed, Lock Register bits cannot be erased. Therefore, when a OTP Register is locked, it cannot be unlocked.

Jul 2011 Datasheet

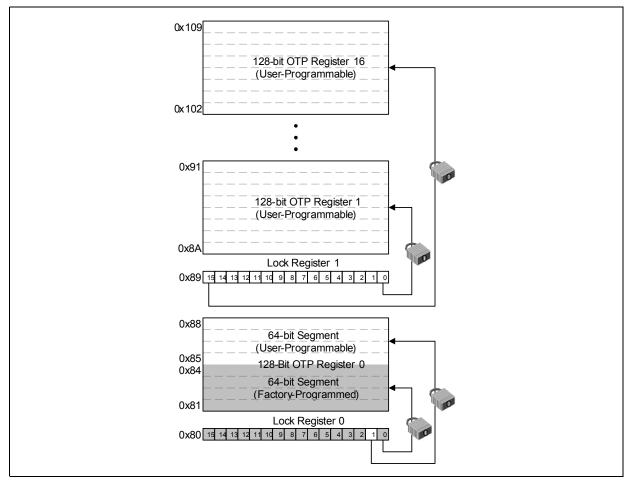


Figure 12: OTP Register Map

# 11.2.1 Reading the OTP Registers

The OTP Registers can be read from OTP-RA address. To read the OTP Register, first issue the Read Device Identifier command at OTP-RA address to place the device in the Read Device Identifier state (see Section 6.2, "Device Command Bus Cycles" on page 18). Next, perform a read operation using the address offset corresponding to the register to be read. Table 7, "Device Identifier Information" on page 21 shows the address offsets of the OTP Registers and Lock Registers. PR data is read 16 bits at a time.

# 11.2.2 Programming the OTP Registers

To program any of the OTP Registers, first issue the Program OTP Register command at the parameter's base address plus the offset to the desired OTP Register (see Section 6.2, "Device Command Bus Cycles" on page 18). Next, write the desired OTP Register data to the same OTP Register address (see Figure 12, "OTP Register Map" on page 41).

Datasheet
41

The device programs the 64-bit and 128-bit user-programmable OTP Register data 16 bits at a time (see Figure 36, "OTP Register Programming Flowchart" on page 79). Issuing the Program OTP Register command outside of the OTP Register's address space causes a program error (SR.4 set). Attempting to program a locked OTP Register causes a program error (SR.4 set) and a lock error (SR.1 set).

Note:

When programming the OTP bits in the OTP Registers for a Top Parameter Device, the following upper address bits must also be driven properly: A[Max:17] driven high  $(V_{IH})$ .

### 11.2.3 Locking the OTP Registers

Each OTP Register can be locked by programming its respective lock bit in the Lock Register. To lock a OTP Register, program the corresponding bit in the Lock Register by issuing the Program Lock Register command, followed by the desired Lock Register data (see Section 6.2, "Device Command Bus Cycles" on page 18). The physical addresses of the Lock Registers are 0x80 for register 0 and 0x89 for register 1. These addresses are used when programming the Lock Registers (see Table 7, "Device Identifier Information" on page 21).

Bit 0 of Lock Register 0 is already programmed during the manufacturing process at the "factory", locking the lower, pre-programmed 64-bit region of the first 128-bit OTP Register containing the unique identification number of the device. Bit 1 of Lock Register 0 can be programmed by the user to lock the user-programmable, 64-bit region of the first 128-bit OTP Register. When programming Bit 1 of Lock Register 0, all other bits need to be left as '1' such that the data programmed is 0xFFFD.

Lock Register 1 controls the locking of the upper sixteen 128-bit OTP Registers. Each of the 16 bits of Lock Register 1 correspond to each of the upper sixteen 128-bit OTP Registers. Programming a bit in Lock Register 1 locks the corresponding 128-bit OTP Register.

Caution: After being locked, the OTP Registers cannot be unlocked.

Datasheet

Jul 2011
42
Order Number: 208034-04

#### 12,0 **Power and Reset Specifications**

#### 12.1 **Power-Up and Power-Down**

Power supply sequencing is not required if VPP is connected to VCC or VCCQ. Otherwise VCC and VCCQ should attain their minimum operating voltage before applying VPP.

Power supply transitions should only occur when RST# is low. This protects the device from accidental programming or erasure during power transitions.

#### 12.2 **Reset Specifications**

Asserting RST# during a system reset is important with automated program/erase devices because systems typically expect to read from flash memory when coming out of reset. If a CPU reset occurs without a flash memory reset, proper CPU initialization may not occur. This is because the flash memory may be providing status information, instead of array data as expected. Connect RST# to the same active low reset signal used for CPU initialization.

Also, because the device is disabled when RST# is asserted, it ignores its control inputs during power-up/down. Invalid bus conditions are masked, providing a level of memory protection.

Table 17: Power and Reset

Num	Symbol	Parameter	Min	Max	Unit	Notes
P1	t <sub>PLPH</sub>	RST# pulse width low	100	-	ns	1,2,3,4
P2	+	RST# low to device reset during erase	-	25		1,3,4,7
F 2	<sup>T</sup> PLRH	RST# low to device reset during program	-	25	μs	1,3,4,7
Р3	t <sub>VCCPH</sub>	VCC Power valid to RST# de-assertion (high)	60	-		1,4,5,6

### Notes:

- These specifications are valid for all device versions (packages and speeds).
- The device may reset if  $t_{\text{PLPH}}$  is <  $t_{\text{PLPH}}$  Min, but this is not guaranteed. Not applicable if RST# is tied to VCC.
- 3.
- 4. Sampled, but not 100% tested.
- When RST# is tied to the VCC supply, device will not be ready until  $t_{VCCPH}$  after VCC  $\geq V_{CCMIN}$ . When RST# is tied to the VCCQ supply, device will not be ready until  $t_{VCCPH}$  after VCC  $\geq V_{CCMIN}$ .
- Reset completes within t<sub>PLPH</sub> if RST# is asserted while no erase or program operation is executing.

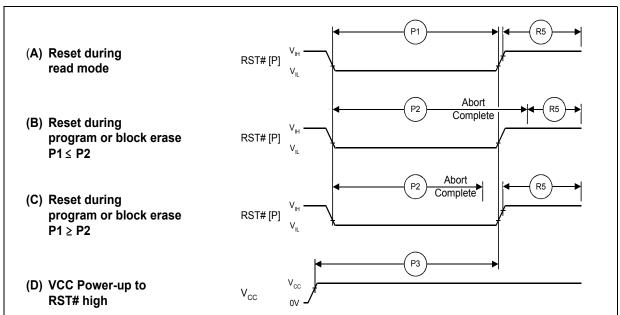


Figure 13: Reset Operation Waveforms

# 12.3 Power Supply Decoupling

Flash memory devices require careful power supply de-coupling. Three basic power supply current considerations are: 1) standby current levels; 2) active current levels; and 3) transient peaks produced when CE# and OE# are asserted and deasserted.

When the device is accessed, many internal conditions change. Circuits within the device enable charge-pumps, and internal logic states change at high speed. All of these internal activities produce transient signals. Transient current magnitudes depend on the device outputs' capacitive and inductive loading. Two-line control and correct de-coupling capacitor selection suppress transient voltage peaks.

Because Numonyx flash memory devices draw their power from VCC, VPP, and VCCQ, each power connection should have a  $0.1~\mu F$  ceramic capacitor to ground. High-frequency, inherently low-inductance capacitors should be placed as close as possible to package leads.

Additionally, for every eight devices used in the system, a  $4.7~\mu F$  electrolytic capacitor should be placed between power and ground close to the devices. The bulk capacitor is meant to overcome voltage droop caused by PCB trace inductance.

#### **Maximum Ratings and Operating Conditions** 13.0

#### **Absolute Maximum Ratings** 13.1

Stressing the device beyond the Absolute Maximum Ratings may cause permanent Warning:

damage. These are stress ratings only.

Table 18: Absolute Maximum Ratings

Parameter	Maximum Rating	Notes
Temperature under bias	-40 °C to +85 °C	-
Storage temperature	-65 °C to +125 °C	-
Voltage on any input/output signal (except VCC, VPP and VCCQ)	-2.0 V to +5.6 V	1
VPP voltage	-2.0 V to +11.5 V	1,2
VCC voltage	-2.0 V to +5.6 V	1
VCCQ voltage	-2.0 V to +5.6 V	1
Output short circuit current	100 mA	3

#### Notes:

- Voltages shown are specified with respect to  $V_{SS}$ . During infrequent non-periodic transitions, the level may undershoot to -2.0~V for periods less than 20 ns or overshoot to VCC +2.0~V or VCCQ +2.0~V for periods less than 20 ns. Program/erase voltage is typically 2.3  $V_{CS} \sim 3.6~V$ . 9.0 V can be applied for 80 hours maximum total. 9.0 V program/erase
- 2. voltage may reduce block cycling capability.
- 3. Output shorted for no more than one second. No more than one output shorted at a time.

#### 13.2 **Operating Conditions**

Note: Operation beyond the Operating Conditions is not recommended and extended exposure beyond the Operating Conditions may affect device reliability.

**Table 19: Operating Conditions** 

Symbol	Param	Min	Max	Units	Notes		
T <sub>C</sub>	Operating Temperature	Operating Temperature				1	
VCC	VCC Supply Voltage	2.3	3.6		-		
VCCO	L/O Supply Voltage	CMOS inputs	2.3	3.6			
vccQ	CCQ I/O Supply Voltage	TTL inputs	2.4	3.6	V	-	
$V_{PPL}$	V <sub>PP</sub> Voltage Supply (Logic Level)	1.5	3.6				
$V_{PPH}$	Buffered Enhanced Factory Program	nming V <sub>PP</sub>	8.5	9.5			
t <sub>PPH</sub>	Maximum V <sub>PP</sub> Hours	VPP = V <sub>PPH</sub>	-	80	Hours	2	
Block	Main and Parameter Blocks	$VPP = V_{PPL}$	100,000	-		2	
Erase	Main Blocks	VPP = V <sub>PPH</sub>	-	1000	Cycles		
Cycles	Parameter Blocks	VPP = V <sub>PPH</sub>	-	2500			

### Notes:

- $T_C$  = Case Temperature.
- In typical operation VPP program voltage is  $V_{PPL}$ .

Jul 2011 Datasheet Order Number: 208034-04

# 14.0 Electrical Specifications

# 14.1 DC Current Characteristics

Datasheet 46

Table 20: DC Current Characteristics (Sheet 1 of 2)

Sym		Parameter		(VC	Inputs CQ = 3.6 V)	(VC	inputs CQ = · 3.6 V)	Unit	Test C	onditions	Notes
				Тур	Max	Тур	Max				
I <sub>LI</sub>	Input Load	d Current		-	±1	-	±2	μA	VCC = VCC Max VCCQ = VCCQ Max V <sub>IN</sub> = VCCQ or V <sub>SS</sub>		1,6
I <sub>LO</sub>	Output Leakage Current	DQ[15:0],\	WAIT	-	±1	-	±10	μA	VCC = VCC Max VCCQ = VCCQ Max V <sub>IN</sub> = VCCQ or V <sub>SS</sub>		1,0
			64-Mbit	35	120	710	2000		VCC = VCC Ma		
I <sub>CCS</sub> , I <sub>CCD</sub>	VCC Stand Power-Dov	"		55	120	710	2000	μA	VCCQ = VCC N CE# = VCCQ RST# = VCCQ RST# = V <sub>SS</sub> (f WP# = V <sub>IH</sub>	(for I <sub>CCS</sub> )	1,2
		Asynchrono Word f = 5 CLK)		20	25	-	-	mA	8-Word Read		
		Page-Mode f = 13 MHz		12	16	-	-	mA	8-Word Read	VCC = VCC <sub>Max</sub>	
I <sub>CCR</sub>				16	19	-	-	mA	4-Word Read $CE\# = V_{IL}$ $OE\# = V_{IH}$		1
Con				19	22	-	-	mA	8-Word Read	Inputs: V <sub>IL</sub> or	
		Synchronous Burst f = 52 MHz, LC=4		22	26	-	-	mA	16-Word Read	V <sub>IH</sub>	
				23	28	-	-	mA	Continuous Read		
I <sub>CCW</sub> ,	VCC Progr	am Current,		35	50	35	50		$VPP = V_{PPL}, Pg$	m/Ers in progress	1,3,5
I <sub>CCE</sub>	VCC Erase			26	33	26	33	mA	VPP = V <sub>PPH</sub> , Poprogress	gm/Ers in	1,3,5
I <sub>CCWS</sub> ,	VCC Progr		64-Mbit	35	120	710	2000		65 # V666		
I <sub>CCES</sub>	Suspend ( VCC Erase Suspend (		128-Mbit	55	120	710	2000	μA	CE# = VCCQ; progress	suspend in	1,3,4
I <sub>PPS</sub> , I <sub>PPWS</sub> , IPPES	VPP Progra	lby Current, am Suspend Suspend Cu	,	0.2	5	0.2	5	μΑ	VPP = V <sub>ppL</sub> , suspend in progress		1,3,7
I <sub>PPR</sub>	VPP Read	ead		2	15	2	15	μΑ	$VPP = V_{PPL}$		1,3
т	VDD Drogs	om Current		0.05	0.10	0.05	0.10	mΛ	VPP = V <sub>PPL</sub> , pr	ogram in progress	3
I <sub>PPW</sub>	ver Progra	am Current		5	10	5	10	mA	VPP = V <sub>PPH</sub> , pr	ogram in progress	3
т	\/ Fracc	Current		0.05	0.10	0.05	0.10	mA	$VPP = V_{PPL}$ , er	ase in progress	3
I <sub>PPE</sub>	V <sub>PP</sub> Erase	Current		5	10	5	10	IIIA	$VPP = V_{PPH}$ , er	ase in progress	3

Table 20: DC Current Characteristics (Sheet 2 of 2)

Sym	Parameter		Inputs CQ = 3.6 V)	(VC	nputs CQ = 3.6 V)	Unit	Test Conditions	VPP = V <sub>PPL</sub> VPP = V <sub>PPH</sub> 3	
		Тур	Max	Тур	Max				
T	VPP Blank Check	0.05	0.10	0.05	0.10	mA	$VPP = V_{PPL}$		
1 <sub>PPBC</sub>	VPP Blank Check		10	5	10			<u> </u>	

#### Notes:

- All currents are RMS unless noted. Typical values at typical VCC,  $T_C$  = +25 °C.  $I_{CCS}$  is the average current measured over any 5 ms time interval 5  $\mu$ s after CE# is deasserted.
- 3. Sampled, not 100% tested.
- $I_{\text{CCES}}$  is specified with the device deselected. If device is read while in erase suspend, current is  $I_{\text{CCES}}$  plus  $I_{\text{CCR}}$ .  $I_{\text{CCW}}$   $I_{\text{CCE}}$  measured over typical or max times specified in Section 15.5, "Program and Erase Characteristics" on page 58. 5.
- if  $V_{IN}$  > VCC the input load current increases to 10 $\mu$ A max.
- the  $I_{PPS},\,I_{PPWS},\,I_{PPES}$  Will increase to 200µA when VPP/WP# is at  $V_{PPH}.$

#### **DC Voltage Characteristics** 14.2

**Table 21: DC Voltage Characteristics** 

Sym	Parameter	CMOS Inputs (VCCQ = 2.3 V - 3.6 V)		TTL Inp (VCCQ = 2.4	outs <sup>(1)</sup> 4 V – 3.6 V)	Unit	Test Conditions	Notes
		Min	Max	Min	Max			
V <sub>IL</sub>	Input Low Voltage	-0.5	0.4	-0.5	0.6	V	-	2
V <sub>IH</sub>	Input High Voltage	VCCQ - 0.4	VCCQ + 0.5	2.0	VCCQ + 0.5	V	-	2
V <sub>OL</sub>	Output Low Voltage	-	0.2	-	0.2	V	$ \begin{array}{c} \text{VCC} = \text{VCC Min} \\ \text{VCCQ} = \text{VCCQ Min} \\ \text{I}_{\text{OL}} = 100 \; \mu\text{A} \end{array} $	-
V <sub>OH</sub>	Output High Voltage	VCCQ - 0.2	-	VCCQ - 0.2	-	٧	$ \begin{array}{c} \text{VCC} = \text{VCC Min} \\ \text{VCCQ} = \text{VCCQ Min} \\ \text{I}_{\text{OH}} = -100 \; \mu\text{A} \end{array} $	-
V <sub>PPLK</sub>	VPP Lock-Out Voltage	-	0.4	-	0.4	V	-	3
V <sub>LKO</sub>	VCC Lock Voltage	1.5	-	1.5	-	V	-	-
$V_{LKOQ}$	VCCQ Lock Voltage	0.9	-	0.9	-	V	-	-
V <sub>PPL</sub>	VPP Voltage Supply (Logic Level)	1.5	3.6	1.5	3.6	V	-	-
V <sub>PPH</sub>	Buffered Enhanced Factory Programming VPP	8.5	9.5	8.5	9.5	V	-	-


### Notes:

- 1. 2. 3.
- Synchronous read mode is not supported with TTL inputs.  $V_{IL}$  can undershoot to -0.4 V and  $V_{IH}$  can overshoot to VCCQ + 0.4 V for durations of 20 ns or less.  $VPP \leq V_{PPLK}$  inhibits erase and program operations. Do not use  $V_{PPL}$  and  $V_{PPH}$  outside their valid ranges.

# 15.0 AC Characteristics


# 15.1 AC Test Conditions

Figure 14: AC Input/Output Reference Waveform



**Note:** AC test inputs are driven at VCCQ for Logic "1" and 0 V for Logic "0." Input/output timing begins/ends at VCCQ/2. Input rise and fall times (10% to 90%) < 5 ns. Worst-case speed occurs at VCC = VCC<sub>Min</sub>.

Figure 15: Transient Equivalent Testing Load Circuit

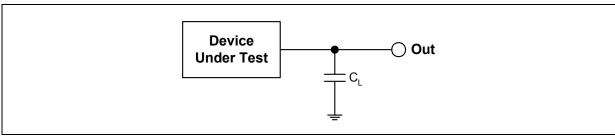


### Notes:

- . See the following table for component values.
- 2. Test configuration component value for worst case speed conditions.
- 3. C<sub>L</sub> includes jig capacitance

Table 22: Test Configuration Component Value for Worst Case Speed Conditions

Test Configuration	C <sub>L</sub> (pF)
VCCQ Min Standard Test	30

Figure 16: Clock Input AC Waveform

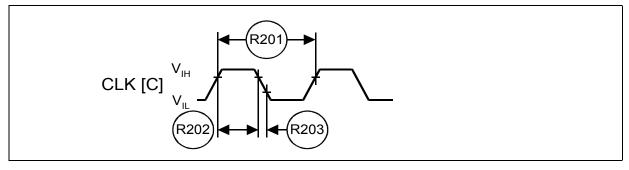

#### **Capacitance 15.2**

**Table 23: Capacitance** 

Symbol	Parameter	Signals	Min	Тур	Max	Unit	Condition	Notes
C <sub>IN</sub>	Input Capacitance	Address, Data, CE#, WE#, OE#, RST#, CLK, ADV#, WP#	2	6	7	pF	Typ temp = 25 °C, Max temp = 85 °C, VCC = (0 V - 3.6 V), VCCQ = (0 V - 3.6 V),	1,2,3
C <sub>OUT</sub>	Output Capacitance	Data, WAIT	2	4	5	pF	Discrete silicon die	

### Notes:

- Capacitance values are for a single die; for dual die, the capacitance values are doubled. Sampled, not 100% tested. Silicon die capacitance only, add 1 pF for discrete packages.

### **AC Read Specifications 15.3**

Table 24: AC Read Specifications - (Sheet 1 of 2)

Num	Symbol	Parameter		Min	Max	Unit	Notes
Asynchro	nous Specific	cations				I.	1
R1	+	Road cycle time	Easy BGA	60	-	ns	-
KI	t <sub>AVAV</sub>	Read cycle time	TSOP	70	-	ns	-
R2	+	Address to output valid	Easy BGA	-	60	ns	-
KZ	t <sub>AVQV</sub>	Address to output valid	TSOP		70	ns	-
R3	+	CE# low to output valid	Easy BGA	-	60	ns	-
K3	t <sub>ELQV</sub>	CL# low to output valid	TSOP		70	ns	-
R4	t <sub>GLQV</sub>	OE# low to output valid		-	25	ns	1,2
R5	t <sub>PHQV</sub>	RST# high to output valid		-	150	ns	1
R6	t <sub>ELQX</sub>	CE# low to output in low-Z		0	-	ns	1,3
R7	t <sub>GLQX</sub>	OE# low to output in low-Z	OE# low to output in low-Z				1,2,3
R8	t <sub>EHQZ</sub>	CE# high to output in high-Z	-	20	ns		
R9	t <sub>GHQZ</sub>	OE# high to output in high-Z	OE# high to output in high-Z				1,3
R10	t <sub>OH</sub>	Output hold from first occurring address, change	CE#, or OE#	0	-	ns	
R11	t <sub>EHEL</sub>	CE# pulse width high		17	-	ns	1
R12	t <sub>ELTV</sub>	CE# low to WAIT valid		-	17	ns	1
R13	t <sub>EHTZ</sub>	CE# high to WAIT high-Z		-	20	ns	1,3
R15	t <sub>GLTV</sub>	OE# low to WAIT valid		-	17	ns	1
R16	t <sub>GLTX</sub>	OE# low to WAIT in low-Z		0	-	ns	1.2
R17	t <sub>GHTZ</sub>	OE# high to WAIT in high-Z		-	20	ns	1,3
Latching	Specification	s		•			
R101	t <sub>AVVH</sub>	Address setup to ADV# high	10	-	ns	1	
R102	t <sub>ELVH</sub>	CE# low to ADV# high		10	-	ns	1
R103	+	ADV# low to output valid	Easy BGA	-	60	ns	1
KIUS	$t_VLQV$	ADV# low to output valid	TSOP	-	70	ns	1

Datasheet 49

Table 24: AC Read Specifications - (Sheet 2 of 2)

Num	Symbol	Parameter		Min	Max	Unit	Notes	
R104	t <sub>VLVH</sub>	ADV# pulse width low			-	ns	1	
R105	t <sub>VHVL</sub>	ADV# pulse width high		10	-	ns	1	
R106	t <sub>VHAX</sub>	Address hold from ADV# high		9	-	ns	1,4	
R108	t <sub>APA</sub>	Page address access		-	25	ns	1	
R111	t <sub>phvh</sub>	RST# high to ADV# high		30	-	ns		
Clock Sp	ecifications							
R200	f	CLK frequency	Easy BGA	-	52	MHz		
K200	f <sub>CLK</sub>	CLK frequency	TSOP	-	40	MHz		
R201	+	CLK period	Easy BGA	19.2	-	ns		
K201	t <sub>CLK</sub>	CLK period	TSOP	25	-	ns	1,3,5,6	
R202		+	CLK high/low time	Easy BGA	5	-	ns	
KZUZ	t <sub>CH/CL</sub>	CLK High/low time	TSOP	9	-	ns		
R203	t <sub>FCLK/RCLK</sub>	CLK fall/rise time	0.3	3	ns			
Synchro	nous Specifica	tions <sup>(5)</sup>						
R301	t <sub>AVCH/L</sub>	Address setup to CLK		9	-	ns	1,6	
R302	t <sub>VLCH/L</sub>	ADV# low setup to CLK		9	-	ns	1,6	
R303	t <sub>ELCH/L</sub>	CE# low setup to CLK		9	-	ns	1,6	
R304	+	CLK to output valid	Easy BGA	-	17	ns	1,6	
N304	t <sub>CHQV / tCLQV</sub>	CER to output valid	TSOP	-	20	ns	1,6	
R305	+	Output hold from CLK	Easy BGA	3	-	ns	1,6	
K303	t <sub>CHQX</sub>	Output Hold Holli CER	TSOP	5	-	ns	1,6	
R306	t <sub>CHAX</sub>	Address hold from CLK		10	-	ns	1,4,6	
R307	+	CLK to WAIT valid	Easy BGA	-	17	ns	1,6	
KJU/	t <sub>CHTV</sub>	TSOP		-	20	ns	1,6	
R311	t <sub>CHVL</sub>	CLK Valid to ADV# Setup		3	-	ns	1	
R312	tourv	WAIT Hold from CLK	Easy BGA	3	-	ns	1,6	
1/312	t <sub>CHTX</sub>	WALL HOLD TOTAL CER	TSOP	5	-	ns	1,6	

### Notes:

- See Figure 14, "AC Input/Output Reference Waveform" on page 48 for timing measurements and max allowable input slew rate. OE# may be delayed by up to  $t_{ELQV}$   $t_{GLQV}$  after CE#'s falling edge without impact to  $t_{ELQV}$ . Sampled, not 100% tested. Address hold in synchronous burst read mode is  $t_{CHAX}$  or  $t_{VHAX}$ , whichever timing specification is satisfied first. Synchronous burst read mode is not supported with TTL level inputs. Applies only to subsequent synchronous reads. 1.

- 2. 3. 4. 5. 6.

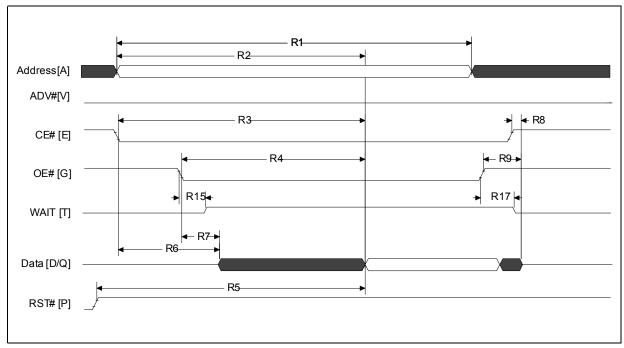


Figure 17: Asynchronous Single-Word Read (ADV# Low)

**Note:** WAIT shown deasserted during asynchronous read mode (RCR.10=0, WAIT asserted low).

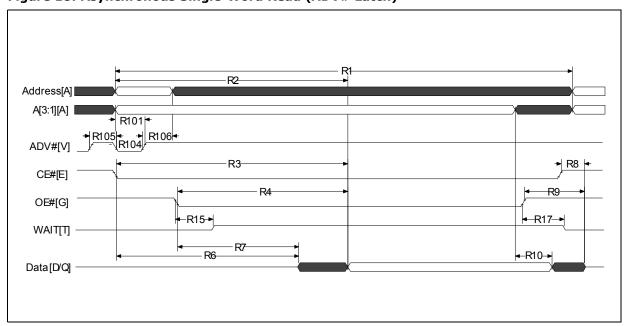


Figure 18: Asynchronous Single-Word Read (ADV# Latch)

**Note:** WAIT shown deasserted during asynchronous read mode (RCR.10=0, WAIT asserted low)

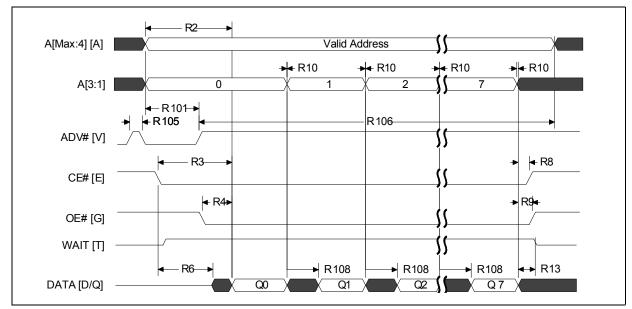


Figure 19: Asynchronous Page-Mode Read Timing

 $\textbf{\textit{Note:}} \quad \text{WAIT shown deasserted during asynchronous read mode (RCR.10=0, WAIT asserted low)}.$ 

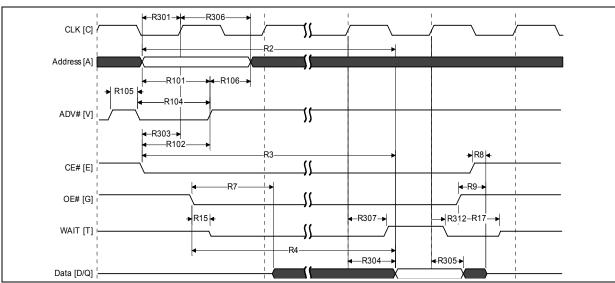


Figure 20: Synchronous Single-Word Array or Non-array Read Timing

### Notes:

- WAIT is driven per OE# assertion during synchronous array or non-array read, and can be configured to assert either during or one data cycle before valid data.
- This diagram illustrates the case in which an n-word burst is initiated to the flash memory array and it is terminated by CE# deassertion after the first word in the burst.

Datasheet Jul 2011 52 Order Number: 208034-04

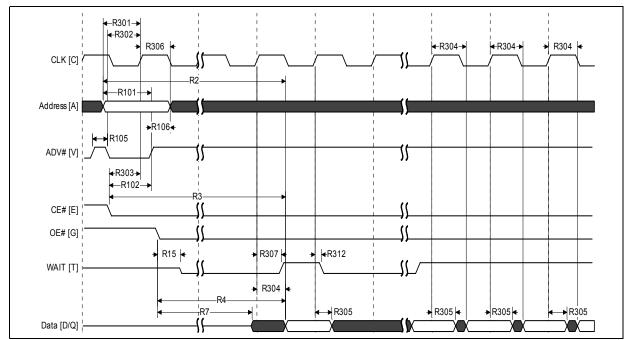


Figure 21: Continuous Burst Read, showing an Output Delay Timing

### Notes:

- WAIT is driven per OE# assertion during synchronous array or non-array read, and can be configured to assert either during or one data cycle before valid data.
- 2. At the end of Word Line; the delay incurred when a burst access crosses a 16-word boundary and the starting address is not 4-word boundary aligned. See Section 11.1.3, "End of Word Line (EOWL) Considerations" on page 36 for more information.

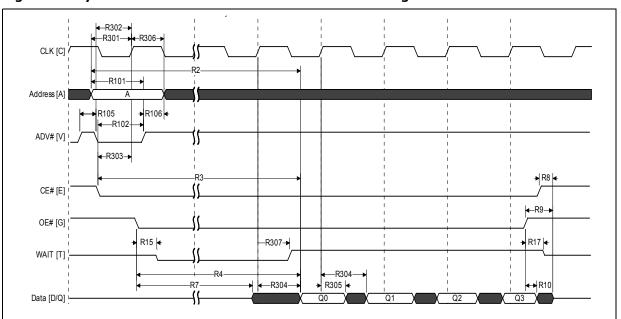


Figure 22: Synchronous Burst-Mode Four-Word Read Timing

**Note:** WAIT is driven per OE# assertion during synchronous array or non-array read. WAIT asserted during initial latency and deasserted during valid data (RCR.10=0, WAIT asserted low).

#### **15.4 AC Write Specifications**

**Table 25: AC Write Specifications** 

Num	Symbol	Parameter	Min	Max	Unit	Notes
W1	t <sub>PHWL</sub>	RST# high recovery to WE# low	150	-	ns	1,2,3
W2	t <sub>ELWL</sub>	CE# setup to WE# low	0	-	ns	1,2,3
W3	t <sub>WLWH</sub>	WE# write pulse width low	50	-	ns	1,2,4
W4	t <sub>DVWH</sub>	Data setup to WE# high	50	-	ns	1,2, 12
W5	t <sub>AVWH</sub>	Address setup to WE# high	50	-	ns	
W6	t <sub>WHEH</sub>	CE# hold from WE# high	0	-	ns	1.3
W7	t <sub>WHDX</sub>	Data hold from WE# high	0	-	ns	1,2
W8	t <sub>WHAX</sub>	Address hold from WE# high	0	-	ns	1
W9	t <sub>WHWL</sub>	WE# pulse width high	20	-	ns	1,2,5
W10	t <sub>VPWH</sub>	VPP setup to WE# high	200	-	ns	1 2 2 7
W11	t <sub>QVVL</sub>	VPP hold from Status read	0	-	ns	1,2,3,7
W12	t <sub>QVBL</sub>	WP# hold from Status read	0	-	ns	1 2 2 7
W13	t <sub>BHWH</sub>	WP# setup to WE# high	200	-	ns	1,2,3,7
W14	t <sub>WHGL</sub>	WE# high to OE# low	0	-	ns	1,2,9
W16	t <sub>WHQV</sub>	WE# high to read valid	t <sub>AVQV</sub> + 35	-	ns	1,2,3,6,10
Write to	Asynchronou	s Read Specifications	•			•
W18	t <sub>WHAV</sub>	WE# high to Address valid	0	-	ns	1,2,3,6,8
Write to	Synchronous	Read Specifications	•			•
W19	t <sub>WHCH/L</sub>	WE# high to Clock valid	19	-	ns	1 2 2 6 10
W20	t <sub>WHVH</sub>	WE# high to ADV# high	19	-	ns	1,2,3,6,10
Write S	pecifications w	rith Clock Active	•			•
W21	t <sub>VHWL</sub>	ADV# high to WE# low	-	20	ns	1 2 2 11
W22	t <sub>CHWL</sub>	Clock high to WE# low	-	20	ns	1,2,3,11

### Notes:

- Write timing characteristics during erase suspend are the same as write-only operations.
- A write operation can be terminated with either CE# or WE#. 2.
- 3. Sampled, not 100% tested.
- 4.
- Sampled, not 100% tested.

  Write pulse width low ( $t_{WLWH}$  or  $t_{ELEH}$ ) is defined from CE# or WE# low (whichever occurs last) to CE# or WE# high (whichever occurs first). Hence,  $t_{WLWH} = t_{ELEH} = t_{WLEH} = t_{ELWH}$ .

  Write pulse width high ( $t_{WHWL}$  or  $t_{EHEL}$ ) is defined from CE# or WE# high (whichever occurs first) to CE# or WE# low (whichever occurs last). Hence,  $t_{WHWL} = t_{EHEL} = t_{WHEL} = t_{EHWL}$ ).  $t_{WHVH}$  or  $t_{WHCH/L}$  must be met when transiting from a write cycle to a synchronous burst read.

  VPP and WP# should be at a valid level until erase or programs success is determined. 5.
- 6.
- 7.
- This specification is only applicable when transiting from a write cycle to an asynchronous read. See spec W19 and W20 for synchronous read.

  When doing a Read Status operation following any command that alters the Status Register, W14 is 20 ns.

  Add 10 ns if the write operations results in a RCR or block lock status change, for the subsequent read operation to 8.
- 9.
- 10. reflect this change.
- 11. These specs are required only when the device is in a synchronous mode and clock is active during address setup phase.
- This specification must be complied with by customer's writing timing. The result would be unpredictable if any violation 12. to this timing specification.

Jul 2011 Datasheet Order Number: 208034-04

Figure 23: Write-to-Write Timing


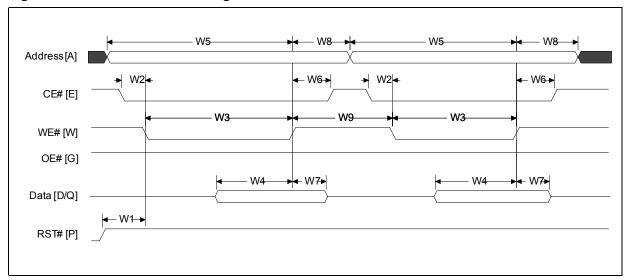


Figure 24: Asynchronous Read-to-Write Timing

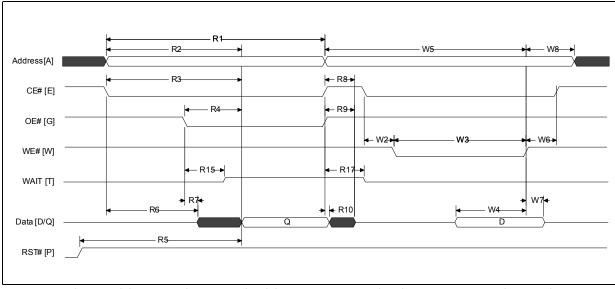

Note: WAIT deasserted during asynchronous read and during write. WAIT High-Z during write per OE# deasserted.


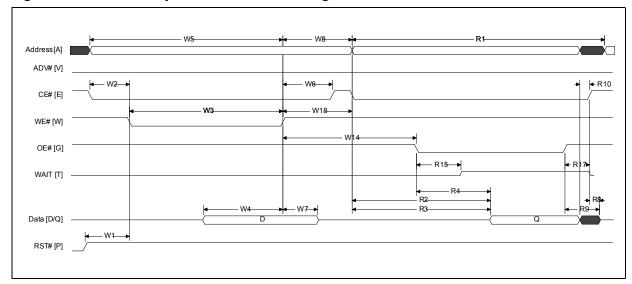


Figure 25: Write-to-Asynchronous Read Timing

Figure 26: Synchronous Read-to-Write Timing

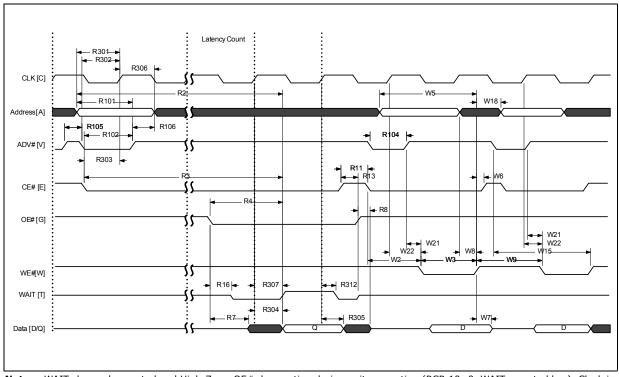

WAIT shown deasserted and High-Z per OE# deassertion during write operation (RCR 10=0, WAIT asserted low). Clock is Note: ignored during write operation.

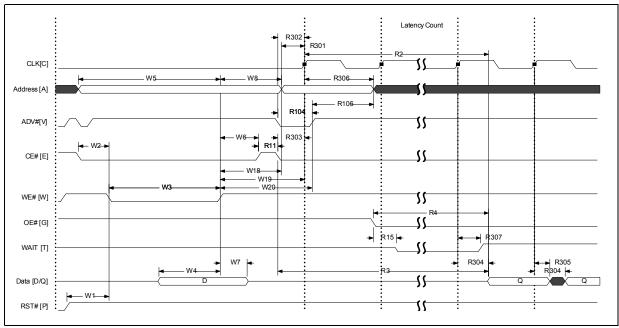


Figure 27: Write-to-Synchronous Read Timing

**Note:** WAIT shown deasserted and High-Z per OE# deassertion during write operation (RCR.10=0, WAIT asserted low).

### **Program and Erase Characteristics** 15.5

Table 26: Program and Erase Specifications

Num	Symbol		Parameter M		$V_{PPL}$		V <sub>PPH</sub>			Unit	Note
Num	Symbol				Тур	Max	Min	Тур	Max	Oiiit	Note
	U.		Conventional Wo	ord Prog	amming	9		l	ı		ı
W200	t <sub>PROG/W</sub>	Program Time			40	175	-	40	175	μs	1
	U.		Buffered Pr	ogramm	ing			l	ı		ı
			Aligned 16-Wd, BP time (32 Words)	-	70	200	-	70	200		
W250		Program Time	Aligned 32-Wd, BP time (32 Word)	-	85	200	-	85	200	μs	1
			one full buffer (256 Words)	-	284	1280	-	160	800		
	1	•	Buffered Enhanced I	Factory F	rogram	ming		,			
W451	t <sub>BEFP/B</sub>	Program	Single byte	N/A	N/A	N/A	-	0.31	-		1,2
W452	t <sub>BEFP/Setup</sub>	Program	BEFP Setup	N/A	N/A	N/A	10	-	-	μs	1
			Erase and	Susper	ıd						
W500	t <sub>ERS/PB</sub>	- Erase Time	32-KByte Parameter	-	0.4	2.5	-	0.4	2.5		
W501	t <sub>ERS/MB</sub>	Liase IIIIle	128-KByte Main	-	0.5	4.0	-	0.5	4.0	S	1
W600	t <sub>SUSP/P</sub>		Program suspend	-	20	25	-	20	25		1
W601	t <sub>SUSP/E</sub>	Suspend Latency	Erase suspend	-	20	25	-	20	25	μs	
W602	t <sub>ERS/SUSP</sub>	1	Erase to Suspend	-	500	-	-	500	-		1,3
	•	•	blank	check		•		•			
W702	t <sub>BC/MB</sub>	blank check	Main Array Block	-	3.2	-	-	3.2	-	ms	-

### Notes:


Datasheet 58 Jul 2011 Order Number: 208034-04

<sup>1.</sup> 

Typical values measured at  $T_C = +25$  °C and nominal voltages. Performance numbers are valid for all speed versions. Excludes system overhead. Sampled, but not 100% tested. Averaged over entire device. W602 is the typical time between an initial block erase or erase resume command and the a subsequent erase suspend command. Violating the specification repeatedly during any particular block erase may cause erase failures. 2. 3.

# 16.0 Ordering Information

Figure 28: Decoder for P33-65nm (SBC) Products

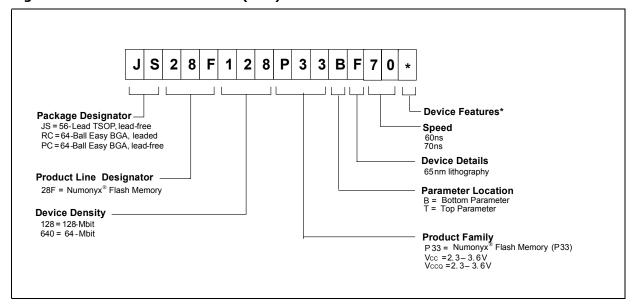

**Table 27: Valid Combinations for Discrete Products** 

64-Mbit	128-Mbit
RC28F640P33TF60*	RC28F128P33TF60*
RC28F640P33BF60*	RC28F128P33BF60*
PC28F640P33TF60*	PC28F128P33TF60*
PC28F640P33BF60*	PC28F128P33BF60*
JS28F640P33TF70*	JS28F128P33TF70*
JS28F640P33BF70*	JS28F128P33BF70*

Note:

The last digit is randomly assigned to cover packing media and/or features or other specific configuration. For further information on ordering products or for product part numbers, go to: http://www.micron.com/partscatalog.html?categoryPath=products/nor\_flash/parallel\_nor\_flash

Datasheet

Jul 2011
59

Order Number: 208034-04

# **Appendix A Supplemental Reference Information**

### A.1 Common Flash Interface

The Common Flash Interface (CFI) is part of an overall specification for multiple command-set and control-interface descriptions. This appendix describes the database structure containing the data returned by a read operation after issuing the Read CFI command (see Section 6.2, "Device Command Bus Cycles" on page 18). System software can parse this database structure to obtain information about the flash device, such as block size, density, bus width, and electrical specifications. The system software will then know which command set(s) to use to properly perform flash writes, block erases, reads and otherwise control the flash device.

## A.1.1 Query Structure Output

The Query database allows system software to obtain information for controlling the flash device. This section describes the device's CFI-compliant interface that allows access to Query data.

Query data are presented on the lowest-order data outputs ( $DQ_{7-0}$ ) only. The numerical offset value is the address relative to the maximum bus width supported by the device. On this family of devices, the Query table device starting address is a 10h, which is a word address for x16 devices.

For a word-wide (x16) device, the first two Query-structure bytes, ASCII "Q" and "R," appear on the low byte at word addresses 10h and 11h. This CFI-compliant device outputs 00h data on upper bytes. The device outputs ASCII "Q" in the low byte (DQ $_{7-0}$ ) and 00h in the high byte (DQ $_{15-8}$ ).

At Query addresses containing two or more bytes of information, the least significant data byte is presented at the lower address, and the most significant data byte is presented at the higher address.

In all of the following tables, addresses and data are represented in hexadecimal notation, so the "h" suffix has been dropped. In addition, since the upper byte of wordwide devices is always "00h," the leading "00" has been dropped from the table notation and only the lower byte value is shown. Any x16 device outputs have 00h on the upper byte in this mode.

Table 28: Summary of Query Structure Output as a Function of Device and Mode

Device	Hex Offset	Hex Code	ASCII Value
	00010:	51	"Q"
Device Addresses	00011:	52	"R"
	00012:	59	"Y"

Datasheet

50

Order Number: 208034-04

Table 29: Example of Query Structure Output of x16 Devices

Offset	Hex Code Value				
A <sub>X</sub> -A <sub>1</sub>	D <sub>15</sub>	-D <sub>0</sub>			
00010h	0051	"Q"			
00011h	0052	"R"			
00012h	0059	"Y"			
00013h	P_ID <sub>LO</sub>	PrVendor ID#			
00014h	P_ID <sub>HI</sub>	Prvendor ID#			
00015h	P <sub>LO</sub>	PrVendor TblAdr			
00016h	P <sub>HI</sub>	Prvendor ibladi			
00017h	A_ID <sub>LO</sub>	AltVendor ID#			
00018h	A_ID <sub>HI</sub>	Aitvendor ID#			

# A.1.2 Query Structure Overview

The Query command causes the flash component to display the Common Flash Interface (CFI) Query structure or *database*. Table 30 summarizes the structure sub-sections and address locations.

**Table 30: Query Structure** 

00001-Fh	Reserved	Reserved for vendor-specific information		
00010h	CFI query identification string	Command set ID and vendor data offset		
0001Bh	System interface information	Device timing & voltage information		
00027h	Device geometry definition	Flash device layout		
<b>P</b> (3)	Drimon, Numanus anacifa Estandad Osaas	Vendor-defined additional information specific		
P(°)	Primary Numonyx-specific Extended Query	to the Primary Vendor Algorithm		

### Note:

- Refer to the Query Structure Output section and offset 28h for the detailed definition of offset address as a function of device bus width and mode.
- 2. BA = Block Address beginning location (i.e., 08000h is block 1's beginning location when the block size is 32-KWord).
- 3. Offset 15 defines "P" which points to the Primary Numonyx-specific Extended Query Table.

### A.1.3 Read CFI Identification String

The Identification String provides verification that the component supports the Common Flash Interface specification. It also indicates the specification version and supported vendor-specified command set(s).

**Table 31: CFI Identification** 

Offset	Length	Description	Add.	Hex Code	Value
10h	3	Query-unique ASCII string "QRY"	10: 11: 12:	-51 -52 -59	"Q" "R" "Y"
13h	2	Primary vendor command set and control interface ID code. 16-bit ID code for vendor-specified algorithms	13: 14:	-01 -00	
15h	2	Extended Query Table primary algorithm address	15: 16:	-0A -01	
17h	2	Alternate vendor command set and control interface ID code. 0000h means no second vendor-specified algorithm exists	17: 18:	-00 -00	
19h	2	Secondary algorithm Extended Query Table address. 0000h means none exists	19: 1A:	-00 -00	

Datasheet 52 Jul 2011 Order Number: 208034-04

**Table 32: System Interface Information** 

Offset	Length	Description	Add	Hex Code	Value
1Bh	1	VCC logic supply minimum program/erase voltage bits 0-3 BCD 100 mV bits 4-7 BCD volts	1B:	-23	2.3V
1Ch	1	VCC logic supply maximum program/erase voltage bits 0-3 BCD 100 mV bits 4-7 BCD volts	1C:	-36	3.6V
1Dh	1	VPP [programming] supply minimum program/erase voltage bits 0-3 BCD 100 mV bits 4-7 HEX volts	1D:	-85	8.5V
1Eh	1	VPP [programming] supply maximum program/erase voltage bits 0-3 BCD 100 mV bits 4-7 HEX volts	1E:	-95	9.5V
1Fh	1	"n" such that typical single word program time-out = $2^n \mu$ -sec	1F:	-06	64µs
20h	1	"n" such that typical full buffer write time-out = $2^n \mu$ -sec	20:	-09	512µs
21h	1	"n" such that typical block erase time-out = 2 <sup>n</sup> m-sec	21:	-09	0.5s
22h	1	"n" such that typical full chip erase time-out = $2^n$ m-sec	22:	-00	NA
23h	1	"n" such that maximum word program time-out = $2^n$ times typical	23:	-02	256µs
24h	1	"n" such that maximum buffer write time-out = $2^n$ times typical	24:	-02	2048µs
25h	1	"n" such that maximum block erase time-out = $2^n$ times typical	25:	-03	4s
26h	1	"n" such that maximum chip erase time-out = $2^n$ times typical	26:	-00	NA

# A.1.4 Device Geometry Definition

**Table 33: Device Geometry Definition** 

Offset	Length	Description							Add	Hex Code	Value		
27h	1	"n" such	"n" such that device size = $2^n$ in number of bytes							27:	See Tab	le Below	
		"n" such	Flash device interface code assignment: "n" such that n+1 specifies the bit field that represents the flash device width capabilities as described in the table:										
		7	6	5	4	3	2	1	0				
28h	2	_	_	_	_	x64	x32	x16	x8	28:	-01	x16	
		15	14	13	12	11	10	9	8				
		_	_	_	_	_	_	_	_	29:	-00		
2Ah	2	"n" cuch	that may		bor of but	too in weits	e buffer =	on.		2A:	-09	512	
ZAN	2	n such	тпат тпах	mum num	iber of by	tes in write	e burrer =	2		2B:	-00		
2Ch	1	1. x = 2. x sp sam	0 means ecifies the e-size era	e number o se blocks.	olocking; to of device i	he device regions wi	: erases in l th one or r blocking re	more cont	iguous	2C:	See Tab	le Below	
										2D:			
2D	4		_	n 1 Inform ⊦1 = numl		ntical-size	erase bloc	rks		2E:	See Tab	le Below	
	·						z x 256 by			2F:	000 .00	20.011	
										30:			
		Eraca Bla	ack Dogior	1 2 Inform	ation					31:			
31h	4		_			ntical-size	erase bloc	:ks		32:	See Tab	le Below	
		bits 16-31 = z, region erase block(s) size are z x 256 bytes						33:					
										34:			
										35:			
35h	4	Reserved	for futur	e erase blo	ock region	informati	on			36:	See Table Below		
										37:			
										38:			

Address	64-1	Mbit	128-	Mbit
Address	-В	-Т	-В	-T
27:	-17	-17	-18	-18
28:	-01	-01	-01	-01
29:	-00	-00	-00	-00
2A	-09	-09	-09	-09
2B	-00	-00	-00	-00
2C:	-02	-02	-02	-02
2D:	-03	-3E	-03	-7E
2E:	-00	-00	-00	-00
2F:	-80	-00	-80	-00

Address	64-1	Mbit	128-	Mbit
Address	-В	-Т	-В	-Т
30:	-00	-02	-00	-02
31:	-3E	-03	-7E	-03
32:	-00	-00	-00	-00
33:	-00	-80	-00	-80
34:	-02	-00	-02	-00
35:	-00	-00	-00	-00
36:	-00	-00	-00	-00
37:	-00	-00	-00	-00
38:	-00	-00	-00	-00

# A.1.5 Numonyx-Specific Extended Query Table

**Table 34: Primary Vendor-Specific Extended Query:** 

Offset P=10Ah	Length	Description (Optional flash features and commands)	Add.	Hex Code	Value	
(P+0)h				10A:	-50	"P"
(P+1)h	3	Primary extended query table Unique ASCII string "PRI"		10B:	-52	"R"
(P+2)h		onique Abell builty TN2		10C:	-49	"I"
(P+3)h	1	Major version number, ASCII		10D:	-31	"1"
(P+4)h	1	Minor version number, ASCII				"5 <i>"</i>
(P+5)h	4	Optional feature and command support (1=yes, 0=no)		10F:	-E6	
(P+6)h		bits 10-31 are reserved; undefined bits are "0". If bit 31		110 <sup>(1)</sup> :	-01	
(P+7)h		"1"then another 31 bit field of Optional features follows at		111:	-00	
(P+8)h		the end of the bit-30 field.		112:	-00	
		bit 0 Chip erase supported		bit 0	No	
		bit 1 Suspend erase supported		bit 1	= 1	Yes
		bit 2 Suspend program supported		bit 2	Yes	
		bit 3 Legacy lock/unlock supported		bit 3 = 0		No
	bit 4 Queued erase supported				bit 4 = 0	
		bit 5 Instant individual block locking supported		bit 5	= 1	Yes
		bit 6 Protection bits supported		bit 6	= 1	Yes
		bit 7 Pagemode read supported		bit 7	= 1	Yes
		his O. Complements and assessments of	TSOP	bit 8	= 0	No
		bit 8 Synchronous read supported	BGA	bit 8	= 1	Yes
		bit 9 Simultaneous operations supported		bit 9 = 0		No
		bit 10 Extended Flash Array Blocks supported		bit 10 = 0		No
		bit 11 Permanent Block Locking of up to Full Main Array supported		bit 11 = 0		No
		bit 12 Permanent Block Locking of up to Partial Main Array supported		bit 12	= 0	No
		bit 30 CFI Link(s) to follow		bit 30	= 0	No
		bit 31 Another "Optional Features" field to follow		bit 31	= 0	No
(P+9)h	1	Supported functions after suspend: read Array, Status, Query Other supported operations are: bits 1-7 reserved; undefined bits are "0"		113:	-01	
		bit 0 Program supported after erase suspend		bit 0	= 1	Yes
(P+A)h	2	Block Status Register mask		114:	-03	
(P+B)h		bits 2-15 are Reserved; undefined bits are "0"		115:	-00	
		bit 0 Block Lock-Bit Status Register active		bit 0	= 1	Yes
		bit 1 Block Lock-Down Bit Status active		bit 1	= 1	Yes
		bit 4 EFA Block Lock-Bit Status Register active		bit 4	= 0	No

Datasheet Jul 2011 65 Order Number: 208034-04

Offset P=10Ah	Length	Description (Optional flash features and commands)		Add.	Hex Code	Value
		bit 5 EFA Block Lock-Down Bit Status active		bit 5	= 0	No
(P+C)h	1	VCC logic supply highest performance program/erase voltage bits 0-3 BCD value in 100 mV bits 4-7 BCD value in volts		116:	-30	3.0V
(P+D)h	1	VPP optimum program/erase supply voltage bits 0-3 BCD value in 100 mV bits 4-7 HEX value in volts		117:	-90	9.0V

### Note:

1. Address 0x110 for TSOP: -00; Address 0x110 for BGA: -01.

# **Table 35: OTP Register Information**

Offset <sup>(1)</sup> P=10Ah	Length	Description (Optional flash features and commands)		Hex Code	Value
(P+E)h	1	Number of Protection register fields in JEDEC ID space. "00h," indicates that 256 protection fields are available	118:	-02	2
(P+F)h (P+10)h (P+11)h (P+12)h	4	Protection Field 1: Protection Description This field describes user-available One Time Programmable (OTP) Protection register bytes. Some are pre-programmed with device-unique serial numbers. Others are user programmable. Bits 0–15 point to the Protection register Lock byte, the section's first byte. The following bytes are factory pre-programmed and user-programmable.  bits 0–7 = Lock/bytes Jedec-plane physical low address bits 8–15 = Lock/bytes Jedec-plane physical high address bits 16–23 = "n" such that 2" = factory pre-programmed bytes bits 24–31 = "n" such that 2" = user programmable bytes		-80 -00 -03 -03	80h 00h 8 byte 8 byte
(P+13)h (P+14)h (P+15)h (P+16)h (P+17)h (P+18)h (P+19)h	10	Protection Field 2: Protection Description Bits 0–31 point to the Protection register physical Lock-word address in the Jedec-plane. Following bytes are factory or user-programmable. bits $32-39 = "n"$ such that $n = factory pgm'd groups$ (low byte) bits $40-47 = "n"$ such that $n = factory pgm'd groups$ (high byte) bits $48-55 = "n" \setminus 2^n = factory programmable bytes/group$	11D: 11E: 11F: 120: 121: 122: 123:	-89 -00 -00 -00 -00 -00	89h 00h 00h 00h
(P+1A)h (P+1B)h (P+1C)h		bits $56-63 = "n"$ such that $n = user pgm'd groups (low byte) bits 64-71 = "n" such that n = user pgm'd groups (high byte) bits 72-79 = "n" such that 2^n = user programmable bytes/group$	124: 125: 126:	-10 -00 -04	16 0 16

Datasheet 3ul 2011 66 Order Number: 208034-04

**Table 36: Burst Read Information** 

Offset P=10Ah	Length	Description (Optional flash features and commands)	Add.	Hex Code	Value
(P+1D)h	1	Page Mode Read capability bits 0-7 = "n" such that 2" HEX value represents the number of read-page bytes. See offset 28h for device word width to determine page-mode data output width. 00h indicates no read page buffer.		-04	16 Byte
(P+1E)h	1	Number of synchronous mode read configuration fields that follow. 00h indicates no burst capability.			4
(P+1F)h	1	Synchronous mode read capability configuration 1  Bits 3-7 = Reserved  bits 0-2 "n" such that 2 <sup>n+1</sup> HEX value represents the maximum number of continuous synchronous reads when the device is configured for its maximum word width. A value		-01	4
(P+20)h	1	Synchronous mode read capability configuration 2		-02	8
(P+21)h	1	Synchronous mode read capability configuration 3	12B:	-03	16
(P+22)h	1	Synchronous mode read capability configuration 4	12C:	-07	Cont

**Table 37: Partition and Erase Block Region Information** 

Offset <sup>(1)</sup>			See	table below	
P = 10Ah		Description		Addı	ress
Bottom	Тор	(Optional flash features and commands)	Len	Bot	Тор
		Number of device hardware-partition regions within the device.	1	12D:	12D:
	x = 0: a single hardware partition device (no fields follow).				
		x specifies the number of device partition regions containing			
(P+23)h	(P+23)h	one or more contiguous erase block regions.			

Datasheet Jul 2011 67 Order Number: 208034-04

Table 38: Partition Region 1 Information (Sheet 1 of 2)

Offset <sup>(1)</sup>			See	table b	elow
P = 1	l0Ah	Description		Address	
Bottom	Тор	(Optional flash features and commands)	Len	Bot	Тор
(P+24)h	(P+24)h	Data size of this Parition Region Information field	2	12E:	12E
(P+25)h	(P+25)h	(# addressable locations, including this field)		12F	12F
(P+26)h	(P+26)h	Number of identical partitions within the partition region	2	130:	130:
(P+27)h	(P+27)h			131:	131:
(P+28)h	(P+28)h	Number of program or erase operations allow ed in a partition	1	132:	132:
		bits 0–3 = number of simultaneous Program operations			
		bits 4–7 = number of simultaneous Erase operations			
(P+29)h	(P+29)h	Simultaneous program or erase operations allow ed in other partitions w hile a	1	133:	133:
		partition in this region is in Program mode			
		bits 0–3 = number of simultaneous Program operations			
		bits 4–7 = number of simultaneous Erase operations			
(P+2A)h	(P+2A)h	Simultaneous program or erase operations allowed in other partitions while a	1	134:	134:
		partition in this region is in Erase mode			
		bits 0–3 = number of simultaneous Program operations			
		bits 4–7 = number of simultaneous Erase operations			
(P+2B)h	(P+2B)h	Types of erase block regions in this Partition Region.	1	135:	135:
		x = 0 = no erase blocking; the Partition Region erases in bulk			
		x = number of erase block regions w / contiguous same-size			
		erase blocks. Symmetrically blocked partitions have one			
		blocking region. Partition size = (Type 1 blocks)x(Type 1			
		block sizes) + (Type 2 blocks)x(Type 2 block sizes) ++			
		(Type n blocks)x(Type n block sizes)			

Table 39: Partition Region 1 Information (Sheet 2 of 2)

Offset <sup>(1)</sup>			See	table b	elow
P = 1	I0Ah	Description		Addı	ess
Bottom	Тор	(Optional flash features and commands)	Len	Bot	Тор
(P+2C)h	(P+2C)h	Partition Region 1 Erase Block Type 1 Information	4	136:	136:
(P+2D)h	(P+2D)h	bits 0–15 = y, y+1 = # identical-size erase blks in a partition		137:	137:
(P+2E)h	(P+2E)h	bits 16–31 = z, region erase block(s) size are z x 256 bytes		138:	138:
(P+2F)h	(P+2F)h			139:	139:
(P+30)h		Partition 1 (Erase Block Type 1)	2	13A:	13A:
(P+31)h	(P+31)h	Block erase cycles x 1000		13B:	13B:
(P+32)h	(P+32)h	Partition 1 (erase block Type 1) bits per cell; internal EDAC	1	13C:	13C:
		bits 0–3 = bits per cell in erase region			
		bit 4 = internal EDAC used (1=yes, 0=no) bits 5–7 = reserve for future use			
(D:00)I	(D: 00)I			400	100
(P+33)h	(P+33)n	Partition 1 (erase block Type 1) page mode and synchronous mode capabilities defined in Table 10.	1	13D:	13D:
	bit 0 = page-mode host reads permitted (1=yes, 0=no) bit 1 = synchronous host reads permitted (1=yes, 0=no)				
		bit 2 = synchronous host reads permitted (1=yes, 0=no)			
		bits 3–7 = reserved for future use			
		Partition Region 1 (Erase Block Type 1) Programming Region Information	6		
(P+34)h	(P+34)h	bits 0–7 = x, 2^x = Programming Region aligned size ( <b>bytes</b> )		13E:	13E:
(P+35)h	(P+35)h	bits 8–14 = Reserved; bit 15 = Legacy flash operation (ignore 0:7)		13F:	13F:
(P+36)h	(P+36)h	bits 16–23 = y = Control Mode <b>valid</b> size in bytes		140:	140:
(P+37)h	(P+37)h	bits 24-31 = Reserved		141:	141:
(P+38)h	(P+38)h	bits 32-39 = z = Control Mode <b>invalid</b> size in bytes		142:	142:
(P+39)h	(P+39)h	bits 40-46 = Reserved; bit 47 = Legacy flash operation (ignore 23:16 & 39:32)		143:	142.
(P+3A)h	(P+3A)h			144:	144:
(P+3B)h	(P+3B)h	bits 0–15 = y, y+1 = # identical-size erase blks in a partition		145:	145:
(P+3C)h	(P+3C)h	bits 16–31 = z, region erase block(s) size are z x 256 bytes		146:	146:
(P+3D)h	(P+3D)h	2.10 10 01 =, region el aco sicol (c) 0.20 al 0 = // 200 s) 100		147:	147:
(P+3E)h	` ,	Partition 1 (Erase Block Type 2)	2	148:	148:
(P+3F)h	(P+3F)h	Block erase cycles x 1000		149:	149:
(P+40)h	(P+40)h	Partition 1 (erase block Type 2) bits per cell; internal EDAC	1	14A:	14A:
		bits 0-3 = bits per cell in erase region			
		bit 4 = internal EDAC used (1=yes, 0=no)			
		bits 5–7 = reserve for future use			
(P+41)h	(P+41)h	Partition 1 (erase block Type 2) page mode and synchronous mode capabilities	1	14B:	14B:
		defined in Table 10.			
		bit 0 = page-mode host reads permitted (1=yes, 0=no)			
		bit 1 = synchronous host reads permitted (1=yes, 0=no)			
		bit 2 = synchronous host writes permitte			
		Partition Region 1 (Erase Block Type 2) Programming Region Information	6		
(P+42)h	(P+42)h	bits $0-7 = x$ , $2^x = \text{Programming Region aligned size } (bytes)$		14C:	14C:
(P+43)h	(P+43)h	bits 8–14 = Reserved; bit 15 = Legacy flash operation (ignore 0:7)		14D:	14D:
(P+44)h	(P+44)h	bits 16–23 = y = Control Mode valid size in bytes		14E:	14E:
(P+45)h	(P+45)h	bits 24-31 = Reserved		14F:	14F:
(P+46)h	(P+46)h	bits 32-39 = z = Control Mode invalid size in bytes		150:	150:
(P+47)h	(P+47)h	bits 40-46 = Reserved; bit 47 = Legacy flash operation (ignore 23:16 & 39:3	32)	151:	151:

**Table 40: Partition and Erase Block Region Information** 

Add	64-	Mbit	128	-Mbit
Auu	-В	-т	-В	-т
12D:	-01	-01	-01	-01
12E:	-24	-24	-24	-24
12F:	-00	-00	-00	-00
130:	-01	-01	-01	-01
131:	-00	-00	-00	-00
132:	-11	-11	-11	-11
133:	-00	-00	-00	-00
134:	-00	-00	-00	-00
135:	-02	-02	-02	-02
136:	-03	-3E	-03	-7E
137:	-00	-00	-00	-00
138:	-80	-00	-80	-00
139:	-00	-02	-00	-02
13A:	-64	-64	-64	-64
13B:	-00	-00	-00	-00
13C:	-02	-02	-02	-02
13D:	-03	-03	-03	-03
13E:	-00	-00	-00	-00
13F:	-80	-80	-80	-80
140:	-00	-00	-00	-00
141:	-00	-00	-00	-00
142	-00	-00	-00	-00
143:	-80	-80	-80	-80
144:	-3E	-03	-7E	-03
145:	-00	-00	-00	-00
146:	-00	-80	-00	-80
147:	-02	-00	-02	-00
148:	-64	-64	-64	-64
149:	-00	-00	-00	-00
14A:	-02	-02	-02	-02
14B:	-03	-03	-03	-03
14C:	-00	-00	-00	-00
14D:	-80	-80	-80	-80
14E:	-00	-00	-00	-00
14F:	-00	-00	-00	-00
150:	-00	-00	-00	-00
151:	-80	-80	-80	-80


Datasheet Jul 2011 70 Order Number: 208034-04

**Table 41: CFI Link Information** 

Length	Description (Optional flash features and commands)	Add.	Hex Code	Value	
4	CFI Link Field bit definitions Bits 0-9 = Address offset (within 32Mbit segment) of referenced CFI table Bits 10-27 = nth 32Mbit segment of referenced CFI table Bits 28-30 = Memory Type Bit 31 = Another CFI Link field immediately follows	152: 153: 154: 155:	-F	-FF	
1	CFI Link Field Quantity Subfield definitions Bits 0-3 = Quantity field (n such that n+1 equals quantity) Bit 4 = Table & Die relative location Bit 5 = Link Field & Table relative location Bits 6-7 = Reserved		-FF		

# A.2 Flowcharts

Figure 29: Word Program Flowchart

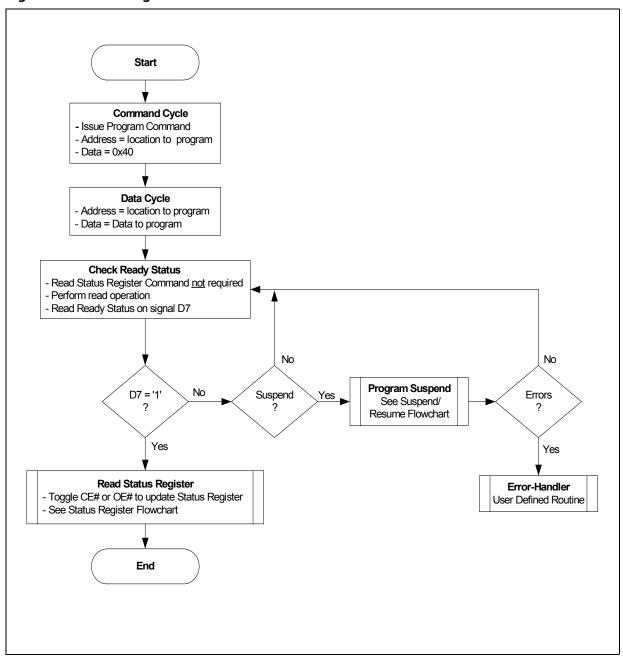

PROGRAM SUSPEND /RESUME PROCEDURE Bus Start Command Comments Operation Read LStatus Read Data= 70h Write Status Addr= Block to suspend (BA) Write 70h Any Address Data= B0h Program Program Suspend Write Addr= X Suspend Write B0h Any Address Status register data Initiate a read cycle to update Status Read register Read Status Addr= Suspended block (BA) Register Check SR7 1= WSM ready 0= WSM busy Standby SR.7= Check SR2 Standby 1= Program suspended Program SR.2: 0= Program completed Completed Read Thray Read Data= FFh Write Addr= Block address to read(BA) Array Write FFh Any Address Read array data from block other than Read the one being programmed Read Array Data Program Data= D0 h Write Addr= Suspended block (BA) Done Reading Program Yes Resume Read Array Write D0h Write FFh Any Address Program Read Array Resumed Data Read Status

Figure 30: Program Suspend/Resume Flowchart

Write70h Any Address

> Jul 2011 Order Number: 208034-04

 $\mathsf{PG}\underline{\mathsf{M}}\,\mathsf{SUS}\,\mathsf{WMF}$ 

**ERASE SUSPEND / RESUME PROCEDURE** Start Bus Command Comments Operation Write 0x70, (Read Status) Any device Address Data = 0x70Read Write Addr = Any device address Status Write 0xB0. Erase Data = 0xB0Any device Write (Erase Suspend) Suspend Addr = Any device address address Status Register data Read None Read Status Addr = Any device address Register Check SR[7]: Idle None 1 = WSM ready 0 = WSM busy SR[7] = Check SR[6]: Idle None 1 = Erase suspended 0 = Erase completed Erase SR[6] = Completed Data = 0xFF or 0x40Read Array Write Addr = Any address within the or Program suspended device Read or Read array or program data from /to None Program Read Read or Write block other than the one being erased Program? Program Read Array Erase Data = 0xD0Write No Data Loop Resume Addr = Any device address Done If the suspended partition was placed in Read Array mode or a Program Loop: Yes Return device to Status mode : Read Write 0xD0, Status Data = 0x70(Erase Resume) Register Addr = Any device Address Any Address Write 0xFF, Erase (Read Array) Any device Resumed (1) Address 1. The  $t_{\mbox{\tiny ERS/SUSP}}$  timing between the initial block erase or erase Read Array Write 0x70, (Read Status) resume command and a subsequent erase suspend command Any device Data should be followed. Address

Figure 31: Erase Suspend/Resume Flowchart

Datasheet

Jul 2011
74

Order Number: 208034-04

Start Bus Operation Command Comments Write to Buffer Data=E8H Addr= Block Address Write Device Use Single Word Supports Buffe Writes? Programming SR.7 = Valid Read Addr= Block Address (Note 7) Yes Check SR7 Set Timeout or 1 = Device WSM is Busy 0 = Device WSM is Ready Standby Loop Counter Data=N-1 = Word Count Write Clear Status Register N = 0 corresponds to count1 Addr = Block Address ( Notest, 2) Address within Device Data = Write Buffer Data Write ( Notes3, 4) Get Next Target Address Data = Write Buffer Data Write ( Notes5, 6) Addr=Address within buffer range ▼ Issue Write to Buffe Command E8h
Block Address Program Confirm Data=D0H Write Addr= Block Address Status register Data CE# and OE# low updates SR Addr= Block Address Read Status Register Block Address Read (note 7) Check SR7 No Standby 1 = WSM Ready 0 = WSM Busy Timeou Is WSM Ready? or Count Notes: Yes SR. 7= Expired ? 1. Word count values on DQ-DQ<sub>15</sub> are loaded into the Count register. Count ranges for this device are №0000h to 00FFh. , 1 = Yes Write Word Count Block Address 2. The device outputs the Status Register when read 3. Write Buffer contents will be programmed at the device start address or destination flash address Write Buffer Data X = X + 1Start Address 4. Align the start address on a Write Buffer boundary for maximum programming performance(i.e.,  $A_8\text{-}A_1$  of the start Write Buffer Data X = 0Address within buffer range 5. The device aborts the Buffered Program command if the No current address is outside the original block address 6. The Status register indicates an "improper command Sequence" if the Buffered Program command is aborted Follow this with a Clear Status Register command Abort Bufferred X = N? Program? Yes Yes 7. The device defaults to output SR data after the Buffered Programming Setup Command(E8h) is issued. CE# or OE# Write Confirm D0h Write to another Block Address Block Address must be be toggled to update Status RegisteDon't issue the Read SR command(70h), which would be interpreted by the Buffered Program internal state machine as Buffer Word Count Aborted 8. Full status check can be done after all erase and write Read Status Registe sequences complete Write FFh after the last operation to reset the device to read array mode No Suspend Suspend Yes SR.7=? Program Program Loop Full Status Check if Desired nother Buffered Programming? No Program Complete

Figure 32: Buffer Program Flowchart

Setup Phase Program/Verify Phase Exit Phase Read Status Start Register Read Status Register Issue BEFP <u>Setup</u> Cmd (Data = 0x80) No (SR.0=1) Buffer Ready? No (SR.7=0) Issue BEFP <u>Confirm</u> Cmd (Data = 00D0h) BEFP Exited ? Yes (SR.0=0) Write Data Word to Buffer Yes (SR.7=1) BEFP Full Status Setup Register check for Delay errors No Buffer Full ? Read Status Finish Register Yes Read Status Register Yes (SR.7=0) BEFP Setup Done ?

Program Done ?

Program More Data ?

No Write 0xFFFFh outside Block

Yes

No (SR.0=1)

Yes (SR.0=0)

Figure 33: BEFP Flowchart

No (SR.7=1)

SR Error Handler (User-Defined)

Exit

Figure 34: Block Erase Flowchart


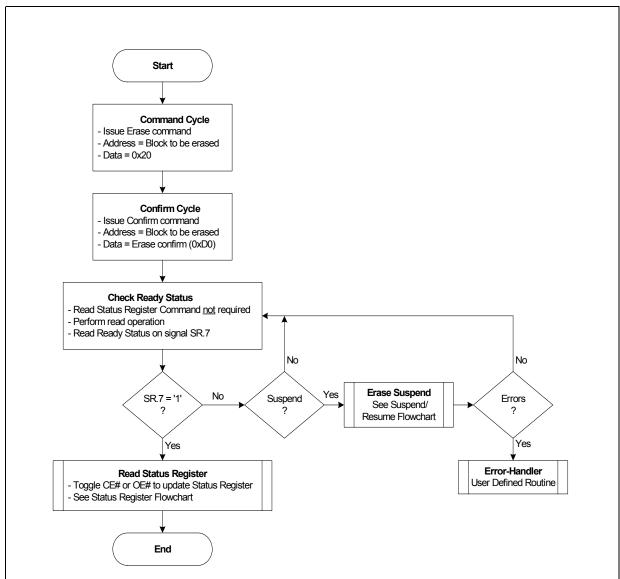


Figure 35: Block Lock Operations Flowchart

LOCKING OPERATIONS PROCEDURE

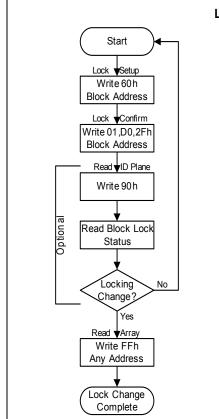

#### Command Comments Operation Lock Data = 60h Write Setup Addr = Block to lock/unlock/lock-down (BA) Lock, Data = 01h (Lock block) D0h (Unlock block) Unlock, or Write 2Fh (Lockdown block) Lockdown Addr = Block to lock/unlock/lock-down (BA) Confirm Write Read ID Data = 90h (Optional) Plane Addr = Block address offset+2(BA+2) Read Block Lock Block Lock status data (Optional) Status Addr = Block address offset+2 (BA+2) Confirm locking change on DQ<sub>1</sub>, DQ<sub>0</sub>. Standby (See Block Locking State Transitions Table (Optional) for valid combinations.) Data = FFh Read Write Array Addr = Block address (BA)

LOCK\_OP.WMF

Datasheet
78

Jul 2011
78

Order Number: 208034-04

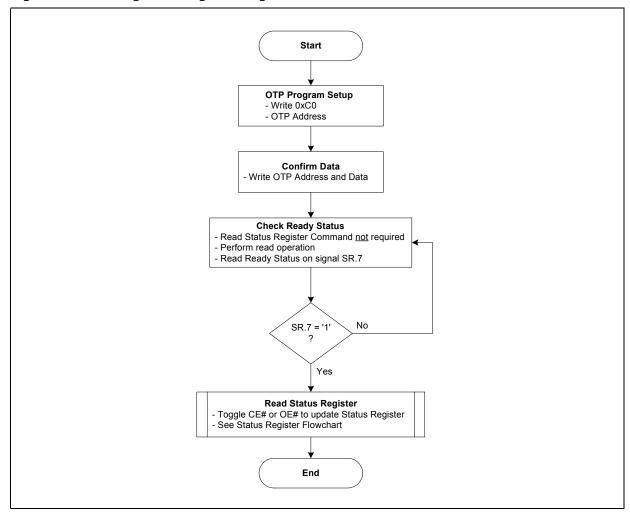


Figure 36: OTP Register Programming Flowchart

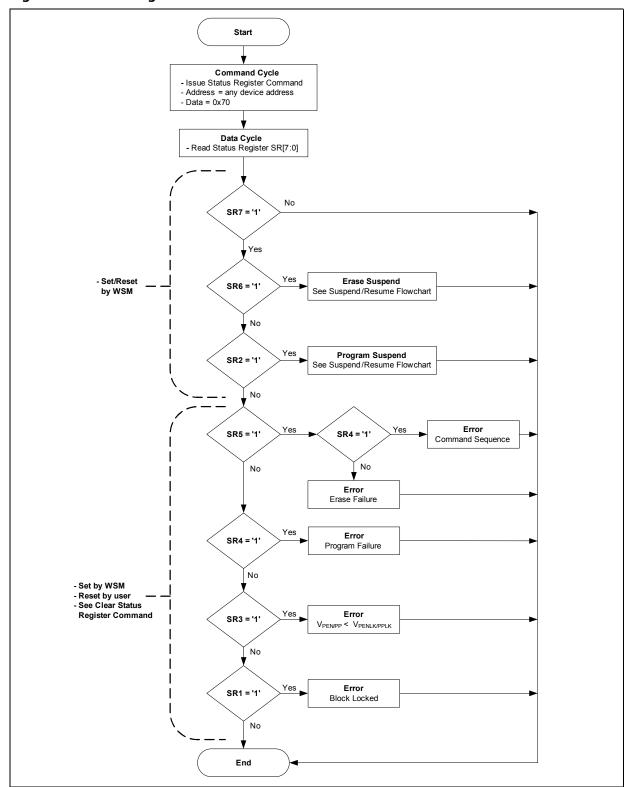


Figure 37: Status Register Flowchart

## A.3 Write State Machine

Show here are the command state transitions (Next State Table) based on incoming commands. Only one partition can be actively programming or erasing at a time. Each partition stays in its last read state (Read Array, Read Device ID, Read CFI or Read Status Register) until a new command changes it. The next WSM state does not depend on the partition's output state.

Note: IS refers to Illegal State in the Next State Tables.

Table 42: Next State Table for P3x-65nm (Sheet 1 of 3)

							Co	mma	nd I	nput	and	Resi	ultin	g Chi	p Ne	xt S	tate	1)			
Current	Chip State	Array Read <sup>(3)</sup>	Word Pgm Setup (4,9)	BP Setup <sup>(8)</sup>	EFI Command Setup	Erase Setup <sup>(4,9)</sup>	BEFP Setup <sup>(6)</sup>	Confirm <sup>(7)</sup>	Pgm/Ers Suspend	Read Status	Clear SR <sup>(5)</sup>	Read ID/Query	Lock/RCR/ECR Setup	Blank Check	OTP Setup	Lock Blk Confirm <sup>(7)</sup>	Lock-down Blk Confirm <sup>(7)</sup>	Write ECR/RCR Confirm <sup>(7)</sup>	Block Address Change	Other Commands <sup>(2)</sup>	WSM Operation Completes
		(FFh)	(40h)	(E8h)	(EBh)	(20h)	(80h)	(D0h)	(B0)	(70h)	(50h)	(90h, 98h)	(60h)	(BCh)	(C0h)	(01h)	(2Fh)	(03h, 04h)		other	>
R	eady	Ready	Program Setup	BP Setup	EFI Setup	Erase Setup	BEFP Setup		I	Ready	/		Lock/RCR /ECR Setup	BC Setup	OTP Setup	Ready			N/A	Ready	N/A
Lock/RCI	R/ECR Setup		F Er	leady ror [l	(Loc Botch	k i])		Ready (Lock Error					[Boto	ch])	Ready (Lock Error [Botc h])	Ready (Lock Block )	Ready (Lock down Block )	Ready (Set CR)	N/A	Ready (Lock Error [Botch])	N/A
	Setup	OTP Busy OTP Busy N/A OTP Busy										N/A									
OTP	Busy	OTP Busy	IS in OTP Busy		Busy	IS in Bu			OTP Busy					State Busy		OTP Busy			N/A	OTP Busy	Ready
	IS in OTP Busy Setup		OTP	Busy					Word	Program	o Puev		0	TP Busy	/				N/A	Pgm Busy	N/A
	Busy	Pgm Busy	IS in Pgm Busy	Pgm	Busy	IS in Bu	Pgm sy	Pgm Busy	y Susp Word Fight Busy			IS ir	Word Busy	Pgm	Wor	d Pgm	Busy	N/A	Pgm Busy	Ready	
Word	IS in Pgm Busy											Pgm B	usy							1	
Program	Suspend	Pgm Susp	IS in Pgm Susp	Pg Sust	jm bend	IS in Su		Pgm Busy						State i Suspen			rd Prog Suspen		N/A	Word Pgm Susp	N/A
	IS in Pgm Suspend									W	ord Pro	gram S	Suspend	i							
	EFI Setup										Sub-fui	nction S	Setup								
	Sub-function Setup									9	Sub-op	-code L	oad 1								
	Sub-op-code Load 1						Sı	ub-func	tion Lo	ad 2 if	word o	ount >0	0, else	Sub-fu	nction o	confirm	ı				N/A
	Sub-function Load 2				S	ub-fun	ction C	onfirm i	if data	load in	progra	m buff	er is co	mplete	, ELSE	Sub-fu	nction	Load 2			
- F-T	Sub-function Confirm	Ready (Error [Botch]) S-fn Busy Ready (Error [Botch])																			
EFI	Sub-function Busy	S-fn Busy	IS in S-fn Busy	S-fn	Busy	Illegal in S-fr	State Busy	S-fn Busy	S-fn Susp S-fn Busy			у	IS in S-fn Busy			S-fn Busy				Ready	
	IS in Sub- function Busy										Sub-fu	nction	Busy								] [
	Sub-function Susp	S-fn Susp	IS in S-fn Susp	Sub-fu	ınction	Illegal in S-fr	State Busy	S-fn Busy		fn pend	S-fn Susp (Er bits clear)	S-fn Susp		n S-fn S	Susp	S-f	n Susp	end	N/A	S-fn Susp	N/A
1	IS in S-fn Susp									5	up-tun	tion St	uspend								

Table 42: Next State Table for P3x-65nm (Sheet 2 of 3)

l able 4	42: Next								-		and		-	g Chi	p Ne	xt S	tate	(1)			
Current	: Chip State	Wo					BEFP Setup (6)	Confirm (7)	Bom/Ers Suspend	Read Status	Clear SR (5)	Read ID/Query	Lock/RCR/ECR Setup	Blank Check	OTP Setup	Lock Blk Confirm (7)	Lock-down Blk Confirm (7)	Write ECR/RCR Confirm (7)	Block Address Change	Other Commands (2)	WSM Operation Completes
	Setup	(FFh)	(40h)	(E8h)	(EBh)	(20h)	(0011)	(5011)	` ,	, ,	ВР	Load 1		, ,	` ′	(01.1)	(2)	04h)		ociici	
	BP Load 1 <sup>(8)</sup> BP Load 2 <sup>(8)</sup>		BP Load 2 if word count >0, else BP confirm  Ready BP Confirm if data (Error) load in program												N/A						
D. K.	BP Confirm		Dan	di (Foo			i ii uate	BP	ii progr	aiii bu	ilei is c	[Botc h])	buffer is complete, else BP load 2								
Buffer Pgm		BP	IS in	dy (Err			Chaha	Busy	D.D.				1		y (Erro						
(ĔP)	BP Busy  IS in BP Busy	Busy	BP Busy	BP E	Busy	Illegal in BP	Busy	BP Busy	BP Susp		BP Busy B	P Busy	IS	in BP B	usy		BP Bus	у		BP Busy	Ready
	BP Susp	BP Susp						BP Busy	BP Su	spend	BP Susp (Er bits clear)	BP Susp	IS	in BP S	usp	В	Suspe	end	N/A	BP Susp	N/A
	IS in BP Susp							Frace			BP	Suspen							Ready (Frr		
	Setup		Rea I IS in	dy (Err	or [Bot			Erase Busy				Rea	dy (Err	or [Bot	ch])				N/A	Ready (Err Botch0])	N/A
	Busy	Erase Busy	Erase Busy	Erase	Busy	IS in Bu		Erase Busy	Erase Susp	E	rase Bu	-		Erase	Busy	Е	rase Bu	ısy	N/A	Ers Busy	
Erase	IS in Erase Busy Suspend	Erase Susp	Erase Susp Word Pgm Setup Setup in Setup in Erase Susp Susp Susp				Erase pend	Erase Busy	Era Sust	ase bend	Erase Susp (Er bits clear)	Erase Susp	Lock/ RCR/ ECR Setup in Erase Susp Susp			Erase Suspend			N/A	Erase Susp	Ready N/A
	IS in Erase Susp							l	l		Erase	Suspe			l						
	Setup	Word Pgm busy in Erase Susp	IS in Pgm busy in Ers Susp	Word bus Erase	y in	IS in Pgm b Ers S	usy in	Word Pgm busy in Erase Susp	Word Pgm busy in Erase Susp					n Word in Ers		Word Pgm busy in Erase Susp			N/A		Erase Susp
Word	Illegal state(IS) in Pgm busy in Erase Suspend								ord Pgm	busy	in Erase	Suspe	end							Word Pgm Busy in Ers Suspend	IS in Ers Susp
Pgm in Erase Suspend	Suspend	Word Pgm susp in Ers susp	iS in pgm susp in Ers Susp	Word susp su	in Ers	iS in susp i Su	pgm in Ers sp	Word Pgm busy in Erase Susp	Word Pgm susp in Ers susp	Word Pgm susp in Ers susp	Word Pgm Susp in Ers Susp (Er bits clear)	Word Pgm susp in Ers susp		Nord in Ers			Pgm s Ers sus		N/A		N/A
	Illegal State in Word Program Suspend in Erase Suspend								,	Word P	gm bus	y in Era	ase Sus	spend							
	Setup BP Load 1 <sup>(8)</sup>						E	BP Load	1 2 in E		.oad 1 i Jspend				e BP co	nfirm					
	BP Load 2 <sup>(8)</sup>	ı	3P Conf	firming	Erase S	Suspend					ffer is o						Susper	ıd	Ers Susp (Error [Botc h])	BP Confirm in Erase Suspend when count=0, ELSE BP load 2	N/A
	BP Confirm	ap IIS in BP ap I																			
BP in Erase Suspend	BP Busy	BP Busy in Ers Susp	BP Busy in Ers Susp	BP Bu Erase	usy in Susp	Illegal in BP B Ers S	usy in	Busy in Ers Susp	Busy BP Susp BP Busy in Ers Susp IS in BP Busy in BP Busy in Ers Susp N/A BP										BP Busy in Ers Susp	Erase Susp	
	IS in BP Busy									ВР	Busy in	Erase	Susper	nd							IS in Ers Susp
	BP Susp	BP Susp in Ers Susp	IS in BP Susp in Ers Susp	BP Su in E Susp	rase	Illegal in BP B Ers S	usy in	BP Busy in Ers Susp	BP St Ers S	Susp	BP Susp in Ers Susp (Er bits clear)	BP Susp in Ers Susp	Eras	n BP Bu se Susp		BP Su	sp in E	rs Susp	N/A	BP Susp in Ers Susp	N/A
	IS in BP Suspend									DP 51	uspend	ııı ⊏ras	e susp	enu							<u> </u>

Table 42: Next State Table for P3x-65nm (Sheet 3 of 3)

								mma	_			Res	_	g Chi	p Ne	xt S	tate	1)			
Current	Chip State	Array Read <sup>(3)</sup>	Word Pgm Setup <sup>(4,9)</sup>	BP Setup (8)	EFI Command Setup	Erase Setup (4,9)	BEFP Setup <sup>(6)</sup>	Confirm (7)	Pgm/Ers Suspend	Read Status	Clear SR <sup>(5)</sup>	Read ID/Query	Lock/RCR/ECR Setup	Blank Check	OTP Setup	Lock Blk Confirm <sup>(7)</sup>	Lock-down Blk Confirm (7)	Write ECR/RCR Confirm <sup>(7)</sup>	Block Address Change	Other Commands <sup>(2)</sup>	WSM Operation Completes
		(FFh)	(40h)	(E8h)	(EBh)	(20h)	(80h)	(D0h)	(B0)	(70h)	(50h)	(90h, 98h)	(60h)	. ,	. ,	(01h)	(2Fh)	(03h, 04h)		other	_
	EFI Setup Sub-function													Suspend							
	Setup Sub-op-code																				-
	Load 1				Sub-f	unction	Load 2	2 in Era	se Sus	pend if	word c	ount >	0, else	Sub-fu	nction (	confirm	in Era	se Sus	pend		
	Sub-function Load 2	Sub-function Confirm in Erase Suspend if data load in program buffer is complete, ELSE Sub-function Load 2 (Error   Blotc   Blotc   Complete, ELSE Sub-function Load 2 (Error   Blotc   Sub-function Load 2 (Error   Blotc   Blotc   Complete, ELSE Sub-function Load 2 (Error   Blotc   Blotc   Blotc   Complete, ELSE Sub-function Load 2 (Error   Blotc   B									Sub-function Confirm if data load in program buffer is complete, ELSE Sub-function Load 2	N/A									
EFI in	Sub-function Confirm	E	rase S	uspend	(Error	[Botch]	])	C 6:					Er	ase Su	spend (	Error [	Botch]	)			
Erase Suspend	Sub-function Busy	S-fn Busy in Ers Susp	IS in S-fn Busy in Ers Susp	S-fn B Ers Su	lusy in Ispend	Illegal in S-fr in Ers	State Busy Susp	S-fn Busy in Ers Susp	S-fn Susp in Ers Susp	Susp S-fn Busy in Ers n Ers Susp			IS in	IS in S-fn Busy in Ers Susp			S-fn Busy in Ers Susp			S-fn Busy in Ers Susp	Erase Susp
	IS in Sub- function Busy									Sub-f	unction	Busy	in Ers S	Susp							IS in Ers Susp
	Sub-function Susp	S-fn Susp in Ers Susp	IS in S-fn Susp in Ers Susp	Susp	-fn end in Susp	Illegal in S-fr in Ers	State Busy Susp	S-fn Busy in Ers Susp	Suspe	-fn end in Susp	S-fn Susp in Ers Susp (Er bits clear)	S-fn Susp in Ers Susp		IS in S-fn Susp in Ers Susp			iuspend Susp	l in Ers	N/A	S-fn Susp in Ers Susp	N/A
1	IS in Phase-1 Susp	Sub-Function Suspend in Erase Suspend																			
EFA Blo	R/ECR/Lock ck Setup in Suspend	Ers Ers Ers Ers Ers Ers										Ers Susp (Error [Botch])	N/A								
	Setup		Read	ly (Err	or [Bo	tch])		BUSY				Rea	dy (Err	or [Bot	ch])					Ready (Error [Botch])	N/A
Blank Check	Blank Check Busy	BC BUSY BC BUSY IS in BC BUSY Blank Check Busy Blank Check Busy								Busy		IS in BC Busy BC Busy							BC Busy	Ready	
	IS in Blank Check Busy								Е	3P Bus	У										
BEFP	Setup			ıdy (Err	-			Load Data							y (Erro	-					N/A
	BEFP Busy	BEFP	Prograi	m and \	/erify B	usy (if	Block A	Address	given treated	matche d as da	s addre ta. (7)	ess give	en on B	EFP Se	tup cor	nmand	). Com	mands	Ready	BEFP Busy	Ready

Table 43: Output Next State Table for P3x-65nm

				Co	mma	nd I	nput	to C	hip	and	Resu	lting	) Out	put	MUX	Nex	t Sta	ite <sup>(1</sup>	)	
Current Chip State	Array Read (3)	Word Pgm Setup (4,9)	BP Setup (8)	(HBB3) EFI Command Setup	Erase Setup (4,9)	BEFP Setup (6)	Confirm (7)	Pgm/Ers Suspend	Read Status	Clear SR (5)	Read ID/Query	(409) Lock/RCR/ECR Setup	Blank Check	OTP Setup	Lock Blk Confirm (7)	Lock-down BIk Confirm (7)	Write ECR/RCR Confirm (7)	Block Address Change	Other Commands (2)	WSM Operation Completes
BEFPSetup, BEFP Pgm & Verify Busy,		,	(==:1)	.==/	/	(/	ν/	()	( )	(==-1)	98n)	()	(= =:-)	/	/	, <i>,</i>	U4n)			
Erase Setup, OTP Setup, BP Setup, Load 1, Load 2 BP Setup, Load 1, Load 2 - in Erase Susp. BP Confirm EFI Sub-function Confirm WordPgmSetup, Word Pgm Setup in Erase Susp, BP Confirm in Erase Suspend, EFI S-fn Confirm in Ers Susp, Blank Check Setup, Blank Check Setup, Lock/RCR/ECR Setup, Lock/RCR/ECR Setup in Erase Susp							St	atus	S Re		ıs Ro	ead					Array Read			not Change
EFI S-fn Setup, Ld 1, Ld 2 EFI S-fn Setup, Ld1, Ld 2 - in							0	utpı	ıt M	UX	will	not	cha	nge			Αœ			does
Erase Susp.  BP Busy BP Busy in Erase Suspend EFI Sub-function Busy EFI Sub-fn Busy in Ers Susp Word Program Busy, Word Pgm Busy in Erase Suspend, OTP Busy Erase Busy		Status Read Output MUX d																		
Ready, Word Pgm Suspend, BP Suspend, Erase Suspend, BP Suspend in Erase Suspend	Array Read			S	tatus	s Rea	d			Array Read	ID/Query Read		S	Status	s Rea	d		Output MUX does not Change	Status Read	

### Notes:

- IS refers to *Illegal State* in the Next State Table.
- 2. 3. "Illegal commands" include commands outside of the allowed command set.
- The device defaults to "Read Array" on powerup.
- If a "Read Array" is attempted when the device is busy, the result will be "garbage" data (we should not tell the user that it will actually be Status Register data). The key point is that the output mux will be pointing to the "array", but garbage data will be output. "Read ID" and "Read Query" commands do the exact same thing in the device. The ID and Query data are located at different locations in the address map.
- 5. The Clear Status command only clears the error bits in the Status Register if the device is not in the following modes: 1. WSM running (Pgm Busy, Erase Busy, Pgm Busy In Erase Suspend, OTP Busy, BEFP modes) 2. Suspend states (Erase Suspend, Pgm Suspend, Pgm Suspend In Erase Suspend).
- BEFP writes are only allowed when the Status Register bit #0 = 0 or else the data is ignored.
- Confirm commands (Lock Block, Unlock Block, Lock-Down Block, Configuration Register and Blank Check) perform the operation and then move to the Ready State.
- 8. Buffered programming will botch when a different block address (as compared to the address given on the first data write cycle) is written during the BP Load1 and BP Load2 states.
- All two cycle commands will be considered as a contiguous whole during device suspend states. Individual commands will not be parsed separately. (I.e. If an erase set-up command is issued followed by a D0h command, the D0h command will not resume the program operation. Issuing the erase set-up places the CUI in an "illegal state". A subsequent command 9. will clear the "illegal state", but the command will be otherwise ignored.

Jul 2011 Datasheet Order Number: 208034-04

# **Appendix B Conventions - Additional Documentation**

# **B.1** Acronyms

BEFP: Buffered Enhanced Factory Programming

CUI: Command User Interface
CFI: Common Flash Interface
EFI: Extended Function Interface

SBC : Single Bit per Cell

OTP: One-Time Programmable

PLR: one-time programmable Lock Register
PR: one-time programmable Register
RCR: Read Configuration Register
RFU: Reserved for Future Use

SR : Status Register
SRD Status Register Data
WSM Write State Machine

### **B.2** Definitions and Terms

VCC: Signal or voltage connection

V<sub>CC</sub>: Signal or voltage level

h: Hexadecimal number suffix

0b: Binary number prefix

0x: hexadecimal number prefix

SR.4: Denotes an individual register bit.

A[15:0]: Denotes a group of similarly named signals, such as address or data bus.

A5: Denotes one element of a signal group membership, such as an individual address

bit.

Bit : Single Binary unit

Byte: Eight bits

Word: Two bytes, or sixteen bits

 Kbit:
 1024 bits

 KByte:
 1024 bytes

 KWord:
 1024 words

 Mbit:
 1,048,576 bits

 MByte:
 1,048,576 bytes

 MWord:
 1,048,576 words

K 1,000 M 1,000,000

3.0 V :  $V_{CC}$  (core) and  $V_{CCQ}$  (I/O) voltage range of 2.3 V - 3.6 V

9.0 V : VPP voltage range of 8.5 V – 9.5 V

A group of bits, bytes, or words within the flash memory array that erase simultaneously. The P33-65nm has two block sizes: 32 KByte and 128 KByte. Block:

An array block that is usually used to store code and/or data. Main blocks are larger Main block:

than parameter blocks.

Parameter block:

A device with its parameter blocks located at the highest physical address of its Top parameter device :

A device with its parameter blocks located at the lowest physical address of its Bottom parameter device :

memory map.

Jul 2011 Datasheet 86 Order Number: 208034-04

# **Appendix C Revision History**

Date	Revision	Description
Jul 2009	01	Initial release.
Apr 2010	02	Update the buffered program performance, suspend latency, BEFP performance in Table 26, "Program and Erase Specifications" on page 58.  Update the 40Mhz spec for TSOP package in Table 24, "AC Read Specifications -" on page 49.  Add t <sub>DVWH</sub> timing comments in Table 25, "AC Write Specifications" on page 54.  Reflect the program performance in CFI in Table 32, "System Interface Information" on page 63.
Jul 2010	03	Ordering information update.
Jul 2011	04	Update TSOP lead width "b" symbol. Clarify CLK, WP#, WE# pin description. Maximum rating note clarification. Update Table 14 EOWL of Latency count 2. Update TSOP CFI on Burst read. Add invalid commands clarifications on 65nm. Add a note on reset in Bus Operation to avoid invalid commands. Update Micron Part catalog link. Correct some other minor errors.

Datasheet 3 Jul 2011 87 Order Number: 208034-04

Datasheet Jul 2011 88 Order Number: 208034-04