


Generation 4

High Density

White COB Arrays

White LED

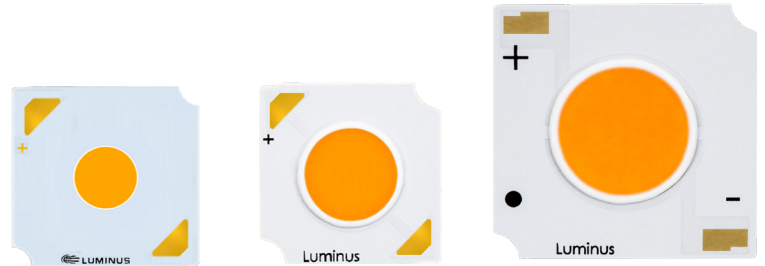

Contents

Part Number Nomenclature	2
CCT, CRI & R9 Specification	..2
Chromaticity Bin Structure	..3
Ordering Part Numbers	... 4
Operating Characteristics	..9
Optical and Electrical Characteristics	 11
Typical Spectrum	 16
Radiation Pattern	 16
Mechanical Dimension	... 17
Shipping Container	 18
Label Information	 18
Technology Review	 19
Test Specifications	 19
Handling Notes	 20

Features:

- High lumen density (3000K,90CRI)
 - > 40 lumens per square millimeter of Light Emitting Surface (LES)
- Wide CCT range 2200K, 2400K, 2700K, 3000K, 3500K, 4000K, 5000K
- AccuWhite High Color Rendering, 97CRI Typ. Most CCTs
- 3-SDCM and 2-SDCM color binning accuracy
- Excellent optical emission uniformity and color over angle consistency
- Exceptional long term color stability
- Superior thermal conductivity for uniform heat spreading
- Environmentally friendly: RoHS and REACH compliant
- UL recognized, file # E465703



Applications

- | | |
|--|--|
| <ul style="list-style-type: none"> • Spotlights/Track Lights • Downlights • Shop Lighting • Hospitality Lighting | <ul style="list-style-type: none"> • Architectural and Specialty • Street Lighting • Parking Lot and Area Lighting • Tunnel Lighting |
|--|--|

Part Number Nomenclature

All Luminus COB products are packaged and labeled with part numbers as outlined in the table on page 4. Luminus may include any smaller chromaticity bin that is contained in the larger bin as part of the ordered part. When shipped, each package will contain only a single flux and chromaticity bin. The part number designation is as follows:

CHM	6	NN	XX	VV	QQPP	FG	W
Product Family	LES ¹	CCT ²	Min. CRI ³	Typical Voltage	Package Configurator ⁴	Flux Bin	Chromaticity Bin
Chip on Board, Multi-die	6.3mm LES diameter	See Note 2 below	CRI See Table Below	Volts (V)	BH40	Lumens	See page 3 for bins

Notes:

1. Light Emitting Surface (LES) Diameter. 4--4.5mm, 6--6.3mm, 9--9.0mm
2. Correlated Color Temperature (CCT), NN nomenclature corresponds to the following:
 22= 2200k
 24= 2400k
 27= 2700k
 30= 3000k
 35= 3500K
 40= 4000K
 50= 5000K
3. Minimum Color Rendering Index (CRI).
4. BH is a special substrate for high density parts; 4 means Generation 4 COB products, 0 means a product with chromaticity on the black body locus (BBL), and 2 means a Sensus product with chromaticity 6-SDCM below the BBL.
5. Luminus part numbers may be accompanied by prefixes or suffixes. The most common is the "Rev01" suffix indicating a part is fully released and carries a full warranty. These additional characters may appear on shipping labels, packing slips and invoices. In all cases the basic part number described above will always be included.


CCT, CRI and R9 Values

Correlated Color Temperatures	XX Value	CRI	*R9
2700K, 3000K, 3500K, 4000K, 5000K	80	>80	>0
2200K, 2400K, 2700K, 3000K, 3500K, 4000K, 5000K	90	>90	>50
2700K, 3000K	95	>95	>85
3500K, 4000K, 5000K			>75

Note: R9 values have a tolerance of +/- 5%

Chromaticity Bin Structure

Chromaticity Bins: 1931 CIE Color Space

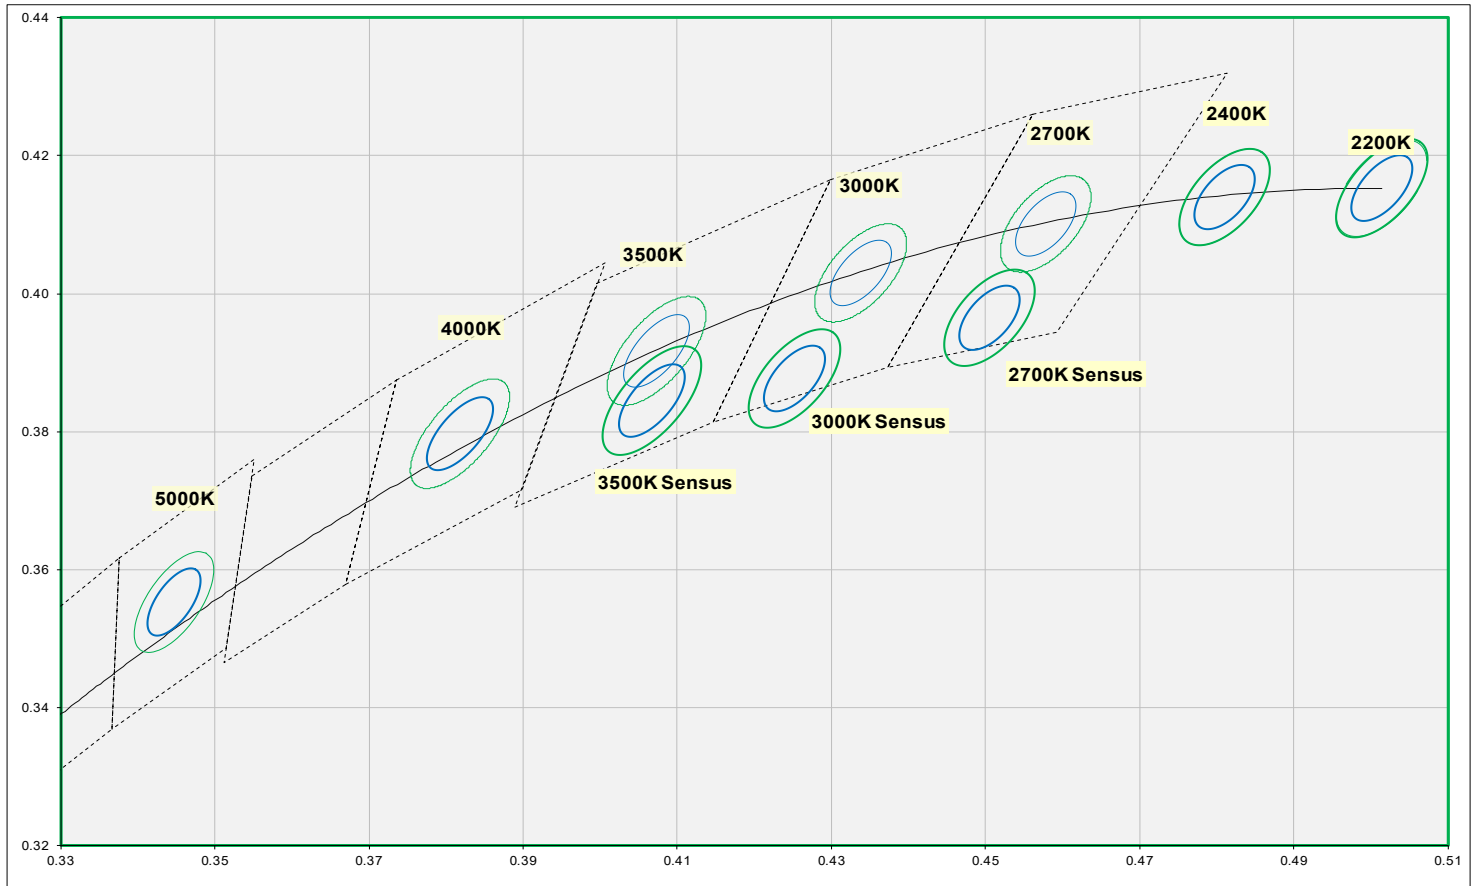

The following tables describe the chromaticity bin center points, the orientation angle for the MacAdam ellipse (θ°), and the maximum radii for the ellipses. The ANSI Bin is provided for reference.

CCT	Center Point		Angle θ°	3-step Bin		2-step Bin	
	CIE _x	CIE _y		a	b	a	b
2200K	0.5014	0.4153	53.7	0.0083	0.0041	0.0056	0.0027
2400K	0.4810	0.4140	53.7	0.0081	0.0042	0.0054	0.0028
2700K	0.4578	0.4101	53.7	0.0081	0.0042	0.0054	0.0028
2700K Sensus	0.4505	0.3965	53.7	0.0081	0.0042	0.0054	0.0028
3000K	0.4338	0.4030	53.2	0.0083	0.0041	0.0056	0.0027
3000K Sensus	0.4252	0.3877	53.6	0.0083	0.0041	0.0056	0.0027
3500K	0.4073	0.3917	54.0	0.0093	0.0041	0.0062	0.0028
3500K Sensus	0.4067	0.3845	54.0	0.0093	0.0041	0.0062	0.0028
4000K	0.3818	0.3797	53.7	0.0094	0.0040	0.0063	0.0027
5000K	0.3447	0.3553	59.6	0.0082	0.0035	0.0055	0.0024

Note: Luminus maintains a ± 0.005 tolerance on chromaticity (CIE_x and CIE_y) measurements

Ordering Part Numbers

The following tables describe products with typical flux and minimum flux measured at 200mA and specified at $T_j = 85^\circ\text{C}$. The values at 25°C are calculated and shown for reference only.

CCT	Output Flux (lm)			Color Rendering Index (min.)	Ordering Part Number	
	Typ. (85°C)	Min. (85°C)	Calculated Typ. (25°C)		3-step MacAdam Ellipse	2-step MacAdam Ellipse
2200K	530	490	585	90	CHM-4-22-90-36-BH40-F5-3	CHM-4-22-90-36-BH40-F5-2
2400K	600	560	660	90	CHM-4-24-90-36-BH40-F5-3	CHM-4-24-90-36-BH40-F5-2
2700K	720	670	790	80	CHM-4-27-80-36-BH40-F5-3	CHM-4-27-80-36-BH40-F5-2
	630	585	695	90	CHM-4-27-90-36-BH40-F5-3	CHM-4-27-90-36-BH40-F5-2
	525	490	580	95	CHM-4-27-95-36-BH40-F5-3	CHM-4-27-95-36-BH40-F5-2
2700K Sensus	615	570	675	90	CHM-4-27-90-36-BH42-F5-3	CHM-4-27-90-36-BH42-F5-2
3000K	755	700	830	80	CHM-4-30-80-36-BH40-F5-3	CHM-4-30-80-36-BH40-F5-2
	655	610	720	90	CHM-4-30-90-36-BH40-F5-3	CHM-4-30-90-36-BH40-F5-2
	565	525	620	95	CHM-4-30-95-36-BH40-F5-3	CHM-4-30-95-36-BH40-F5-2
3000K Sensus	640	595	705	90	CHM-4-30-90-36-BH42-F5-3	CHM-4-30-90-36-BH42-F5-2
	550	510	605	95	CHM-4-30-95-36-BH42-F5-3	CHM-4-30-95-36-BH42-F5-2
3500K	800	745	880	80	CHM-4-35-80-36-BH40-F5-3	CHM-4-35-80-36-BH40-F5-2
	655	610	720	90	CHM-4-35-90-36-BH40-F5-3	CHM-4-35-90-36-BH40-F5-2
	550	510	605	95	CHM-4-35-95-36-BH40-F5-3	CHM-4-35-95-36-BH40-F5-2
3500K Sensus	640	595	705	90	CHM-4-35-90-36-BH42-F5-3	CHM-4-35-90-36-BH42-F5-2
4000K	775	720	855	80	CHM-4-40-80-36-BH40-F5-3	CHM-4-40-80-36-BH40-F5-2
	705	655	775	90	CHM-4-40-90-36-BH40-F5-3	CHM-4-40-90-36-BH40-F5-2
	620	575	680	95	CHM-4-40-95-36-BH40-F5-3	CHM-4-40-95-36-BH40-F5-2
5000K	790	735	870	80	CHM-4-50-80-36-BH40-F5-3	CHM-4-50-80-36-BH40-F5-2
	705	655	775	90	CHM-4-50-90-36-BH40-F5-3	CHM-4-50-90-36-BH40-F5-2
	620	575	680	95	CHM-4-50-95-36-BH40-F5-3	CHM-4-50-95-36-BH40-F5-2

Note: Luminus maintains a +/- 6% tolerance on flux measurements.
Luminus maintains a +/- 2% tolerance on CRI measurements.

Ordering Part Numbers

The following tables describe products with typical flux and minimum flux measured at 400mA and specified at $T_j = 85^\circ\text{C}$. The values at 25°C are calculated and shown for reference only.

CCT	Output Flux (lm)			Color Rendering Index (min.)	Ordering Part Number	
	Typ. (85°C)	Min. (85°C)	Calculated Typ. (25°C)		3-step MacAdam Ellipse	2-step MacAdam Ellipse
2200K	530	490	585	90	CHM-4-22-90-18-BH40-F5-3	CHM-4-22-90-18-BH40-F5-2
2400K	600	560	660	90	CHM-4-24-90-18-BH40-F5-3	CHM-4-24-90-18-BH40-F5-2
2700K	720	670	790	80	CHM-4-27-80-18-BH40-F5-3	CHM-4-27-80-18-BH40-F5-2
	630	585	695	90	CHM-4-27-90-18-BH40-F5-3	CHM-4-27-90-18-BH40-F5-2
	525	490	580	95	CHM-4-27-95-18-BH40-F5-3	CHM-4-27-95-18-BH40-F5-2
2700K Sensus	615	570	675	90	CHM-4-27-90-18-BH42-F5-3	CHM-4-27-90-18-BH42-F5-2
3000K	755	700	830	80	CHM-4-30-80-18-BH40-F5-3	CHM-4-30-80-18-BH40-F5-2
	655	610	720	90	CHM-4-30-90-18-BH40-F5-3	CHM-4-30-90-18-BH40-F5-2
	565	525	620	95	CHM-4-30-95-18-BH40-F5-3	CHM-4-30-95-18-BH40-F5-2
3000K Sensus	640	595	705	90	CHM-4-30-90-18-BH42-F5-3	CHM-4-30-90-18-BH42-F5-2
	550	510	605	95	CHM-4-30-95-18-BH42-F5-3	CHM-4-30-95-18-BH42-F5-2
3500K	800	745	880	80	CHM-4-35-80-18-BH40-F5-3	CHM-4-35-80-18-BH40-F5-2
	655	610	720	90	CHM-4-35-90-18-BH40-F5-3	CHM-4-35-90-18-BH40-F5-2
	550	510	605	95	CHM-4-35-95-18-BH40-F5-3	CHM-4-35-95-18-BH40-F5-2
3500K Sensus	640	595	705	90	CHM-4-35-90-18-BH42-F5-3	CHM-4-35-90-18-BH42-F5-2
4000K	775	720	855	80	CHM-4-40-80-18-BH40-F5-3	CHM-4-40-80-18-BH40-F5-2
	705	655	775	90	CHM-4-40-90-18-BH40-F5-3	CHM-4-40-90-18-BH40-F5-2
	620	575	680	95	CHM-4-40-95-18-BH40-F5-3	CHM-4-40-95-18-BH40-F5-2
5000K	790	735	870	80	CHM-4-50-80-18-BH40-F5-3	CHM-4-50-80-18-BH40-F5-2
	705	655	775	90	CHM-4-50-90-18-BH40-F5-3	CHM-4-50-90-18-BH40-F5-2
	620	575	680	95	CHM-4-50-95-18-BH40-F5-3	CHM-4-50-95-18-BH40-F5-2

Note: Luminus maintains a +/- 6% tolerance on flux measurements.
Luminus maintains a +/- 2% tolerance on CRI measurements.

Ordering Part Numbers

The following tables describe products with typical flux and minimum flux measured at 400mA and specified at $T_j = 85^\circ\text{C}$. The values at 25°C are calculated and shown for reference only.

CCT	Output Flux (lm)			Color Rendering Index (min.)	Ordering Part Number	
	Typ. (85°C)	Min. (85°C)	Calculated Typ. (25°C)		3-step MacAdam Ellipse	2-step MacAdam Ellipse
2200K	1165	1085	1285	90	CHM-6-22-90-36-BH40-F5-3	CHM-6-22-90-36-BH40-F5-2
2400K	1240	1150	1360	90	CHM-6-24-90-36-BH40-F5-3	CHM-6-24-90-36-BH40-F5-2
2700K	1490	1385	1640	80	CHM-6-27-80-36-BH40-F5-3	CHM-6-27-80-36-BH40-F5-2
	1300	1205	1430	90	CHM-6-27-90-36-BH40-F5-3	CHM-6-27-90-36-BH40-F5-2
	1085	1010	1195	95	CHM-6-27-95-36-BH40-F5-3	CHM-6-27-95-36-BH40-F5-2
2700K Sensus	1260	1175	1385	90	CHM-6-27-90-36-BH42-F5-3	CHM-6-27-90-36-BH42-F5-2
3000K	1560	1450	1715	80	CHM-6-30-80-36-BH40-F5-3	CHM-6-30-80-36-BH40-F5-2
	1355	1260	1490	90	CHM-6-30-90-36-BH40-F5-3	CHM-6-30-90-36-BH40-F5-2
	1170	1085	1285	95	CHM-6-30-95-36-BH40-F5-3	CHM-6-30-95-36-BH40-F5-2
3000K Sensus	1315	1220	1445	90	CHM-6-30-90-36-BH42-F5-3	CHM-6-30-90-36-BH42-F5-2
	1135	1055	1250	95	CHM-6-30-95-36-BH42-F5-3	CHM-6-30-95-36-BH42-F5-2
3500K	1655	1540	1820	80	CHM-6-35-80-36-BH40-F5-3	CHM-6-35-80-36-BH40-F5-2
	1350	1255	1485	90	CHM-6-35-90-36-BH40-F5-3	CHM-6-35-90-36-BH40-F5-2
	1300	1205	1430	95	CHM-6-35-95-36-BH40-F5-3	CHM-6-35-95-36-BH40-F5-2
3500K Sensus	1310	1215	1440	90	CHM-6-35-90-36-BH42-F5-3	CHM-6-35-90-36-BH42-F5-2
4000K	1605	1495	1765	80	CHM-6-40-80-36-BH40-F5-3	CHM-6-40-80-36-BH40-F5-2
	1465	1360	1610	90	CHM-6-40-90-36-BH40-F5-3	CHM-6-40-90-36-BH40-F5-2
	1285	1195	1410	95	CHM-6-40-95-36-BH40-F5-3	CHM-6-40-95-36-BH40-F5-2
5000K	1635	1520	1800	80	CHM-6-50-80-36-BH40-F5-3	CHM-6-50-80-36-BH40-F5-2
	1490	1385	1640	90	CHM-6-50-90-36-BH40-F5-3	CHM-6-50-90-36-BH40-F5-2
	1290	1200	1415	95	CHM-6-50-95-36-BH40-F5-3	CHM-6-50-95-36-BH40-F5-2

Note: Luminus maintains a +/- 6% tolerance on flux measurements.
Luminus maintains a +/- 2% tolerance on CRI measurements.

Ordering Part Numbers

The following tables describe products with typical flux and minimum flux measured at 800mA and specified at $T_j = 85^\circ\text{C}$. The values at 25°C are calculated and shown for reference only.

CCT	Output Flux (lm)			Color Rendering Index (min.)	Ordering Part Number	
	Typ. (85°C)	Min. (85°C)	Calculated Typ. (25°C)		3-step MacAdam Ellipse	2-step MacAdam Ellipse
2200K	1165	1085	1285	90	CHM-6-22-90-18-BH40-F5-3	CHM-6-22-90-18-BH40-F5-2
2400K	1240	1150	1360	90	CHM-6-24-90-18-BH40-F5-3	CHM-6-24-90-18-BH40-F5-2
2700K	1490	1385	1640	80	CHM-6-27-80-18-BH40-F5-3	CHM-6-27-80-18-BH40-F5-2
	1300	1205	1430	90	CHM-6-27-90-18-BH40-F5-3	CHM-6-27-90-18-BH40-F5-2
	1085	1010	1195	95	CHM-6-27-95-18-BH40-F5-3	CHM-6-27-95-18-BH40-F5-2
2700K Sensus	1260	1175	1385	90	CHM-6-27-90-18-BH42-F5-3	CHM-6-27-90-18-BH42-F5-2
3000K	1560	1450	1715	80	CHM-6-30-80-18-BH40-F5-3	CHM-6-30-80-18-BH40-F5-2
	1355	1260	1490	90	CHM-6-30-90-18-BH40-F5-3	CHM-6-30-90-18-BH40-F5-2
	1170	1085	1285	95	CHM-6-30-95-18-BH40-F5-3	CHM-6-30-95-18-BH40-F5-2
3000K Sensus	1315	1220	1445	90	CHM-6-30-90-18-BH42-F5-3	CHM-6-30-90-18-BH42-F5-2
	1135	1055	1250	95	CHM-6-30-95-18-BH42-F5-3	CHM-6-30-95-18-BH42-F5-2
3500K	1655	1540	1820	80	CHM-6-35-80-18-BH40-F5-3	CHM-6-35-80-18-BH40-F5-2
	1350	1255	1485	90	CHM-6-35-90-18-BH40-F5-3	CHM-6-35-90-18-BH40-F5-2
	1300	1205	1430	95	CHM-6-35-95-18-BH40-F5-3	CHM-6-35-95-18-BH40-F5-2
3500K Sensus	1310	1215	1440	90	CHM-6-35-90-18-BH42-F5-3	CHM-6-35-90-18-BH42-F5-2
4000K	1605	1495	1765	80	CHM-6-40-80-18-BH40-F5-3	CHM-6-40-80-18-BH40-F5-2
	1465	1360	1610	90	CHM-6-40-90-18-BH40-F5-3	CHM-6-40-90-18-BH40-F5-2
	1285	1195	1410	95	CHM-6-40-95-18-BH40-F5-3	CHM-6-40-95-18-BH40-F5-2
5000K	1635	1520	1800	80	CHM-6-50-80-18-BH40-F5-3	CHM-6-50-80-18-BH40-F5-2
	1490	1385	1640	90	CHM-6-50-90-18-BH40-F5-3	CHM-6-50-90-18-BH40-F5-2
	1290	1200	1415	95	CHM-6-50-95-18-BH40-F5-3	CHM-6-50-95-18-BH40-F5-2

Note: Luminus maintains a +/- 6% tolerance on flux measurements.
Luminus maintains a +/- 2% tolerance on CRI measurements.

Ordering Part Numbers

The following tables describe products with typical flux and minimum flux measured at 700mA and specified at $T_j = 85^\circ\text{C}$. The values at 25°C are calculated and shown for reference only.

CCT	Output Flux (lm)			Color Rendering Index (min.)	Ordering Part Number	
	Typ. (85°C)	Min. (85°C)	Calculated Typ. (25°C)		3-step MacAdam Ellipse	2-step MacAdam Ellipse
2200K	2060	1915	2265	90	CHM-9-22-90-36-BH40-F5-3	CHM-9-22-90-36-BH40-F5-2
2400K	2255	2095	2480	90	CHM-9-24-90-36-BH40-F5-3	CHM-9-24-90-36-BH40-F5-2
2700K	2715	2525	2985	80	CHM-9-27-80-36-BH40-F5-3	CHM-9-27-80-36-BH40-F5-2
	2365	2200	2600	90	CHM-9-27-90-36-BH40-F5-3	CHM-9-27-90-36-BH40-F5-2
	1975	1835	2170	95	CHM-9-27-95-36-BH40-F5-3	CHM-9-27-95-36-BH40-F5-2
2700K Sensus	2305	2140	2535	90	CHM-9-27-90-36-BH42-F5-3	CHM-9-27-90-36-BH42-F5-2
3000K	2840	2640	3125	80	CHM-9-30-80-36-BH40-F5-3	CHM-9-30-80-36-BH40-F5-2
	2470	2295	2715	90	CHM-9-30-90-36-BH40-F5-3	CHM-9-30-90-36-BH40-F5-2
	2125	1980	2340	95	CHM-9-30-95-36-BH40-F5-3	CHM-9-30-95-36-BH40-F5-2
3000K Sensus	2405	2235	2645	90	CHM-9-30-90-36-BH42-F5-3	CHM-9-30-90-36-BH42-F5-2
	2070	1925	2275	95	CHM-9-30-95-36-BH42-F5-3	CHM-9-30-95-36-BH42-F5-2
3500K	3010	2800	3310	80	CHM-9-35-80-36-BH40-F5-3	CHM-9-35-80-36-BH40-F5-2
	2460	2290	2705	90	CHM-9-35-90-36-BH40-F5-3	CHM-9-35-90-36-BH40-F5-2
	2110	1960	2320	95	CHM-9-35-95-36-BH40-F5-3	CHM-9-35-95-36-BH40-F5-2
3500K Sensus	2395	2225	2635	90	CHM-9-35-90-36-BH42-F5-3	CHM-9-35-90-36-BH42-F5-2
4000K	2925	2720	3215	80	CHM-9-40-80-36-BH40-F5-3	CHM-9-40-80-36-BH40-F5-2
	2665	2480	2930	90	CHM-9-40-90-36-BH40-F5-3	CHM-9-40-90-36-BH40-F5-2
	2335	2175	2570	95	CHM-9-40-95-36-BH40-F5-3	CHM-9-40-95-36-BH40-F5-2
5000K	2980	2770	3280	80	CHM-9-50-80-36-BH40-F5-3	CHM-9-50-80-36-BH40-F5-2
	2715	2525	2985	90	CHM-9-50-90-36-BH40-F5-3	CHM-9-50-90-36-BH40-F5-2
	2345	2180	2580	95	CHM-9-50-95-36-BH40-F5-3	CHM-9-50-95-36-BH40-F5-2

Note: Luminus maintains a +/- 6% tolerance on flux measurements.
Luminus maintains a +/- 2% tolerance on CRI measurements.

CHM-4 Operating Characteristics¹

Parameter-36V	Symbol	Minimum	Typical	Maximum	Unit
Forward Current ²	I_f		200	500	mA
Forward Voltage ³	V_f	31.0	35.3	39.0	V
Parameter-18V	Symbol	Minimum	Typical	Maximum	Unit
Forward Current ²	I_f		400	1000	mA
Forward Voltage ³	V_f	15.4	17.6	19.5	V
Parameter	Symbol	Minimum	Typical	Maximum	Unit
Power			7.5	13.7	W
Operating Case Temperature	T_c			120	°C
Light Emitting Surface Diameter	LES		4.5		mm
Thermal Resistance (junction-to-case)	Θ_{jc}		1.7		°C/W
Junction Temperature	T_j			140	°C
Viewing Angle			120		Degree

CHM-6 Operating Characteristics¹







Parameter-36V	Symbol	Minimum	Typical	Maximum	Unit
Forward Current ²	I_f		400	750	mA
Forward Voltage ³	V_f	31.0	35.3	38.5	V
Parameter-18V	Symbol	Minimum	Typical	Maximum	Unit
Forward Current ²	I_f		800	1500	mA
Forward Voltage ³	V_f	15.4	17.6	19.2	V
Parameter	Symbol	Minimum	Typical	Maximum	Unit
Power			15.2	27.2	W
Operating Case Temperature	T_c			120	°C
Light Emitting Surface Diameter	LES		6.3		mm
Thermal Resistance (junction-to-case)	Θ_{jc}		1.0		°C/W
Junction Temperature	T_j			140	°C
Viewing Angle			120		Degree

CHM-9 Operating Characteristics¹

Parameter-36V	Symbol	Minimum	Typical	Maximum	Unit
Forward Current ²	I_f		700	1500	mA
Forward Voltage ³	V_f	31.3	34.8	38.0	V
Parameter	Symbol	Minimum	Typical	Maximum	Unit
Power			24.3	57	W
Operating Case Temperature	T_c			120	°C
Light Emitting Surface Diameter	LES		9.0		mm
Thermal Resistance (junction-to-case)	Θ_{jc}		0.5		°C/W
Junction Temperature	T_j		0.63	140	°C
Viewing Angle			120		Degree


Notes:

1. Ratings are based on operation at a constant junction temperature of $T_j = 85^\circ\text{C}$.
2. To prevent damage refer to operating conditions and derating curves for appropriate maximum operating conditions
3. Voltage is rated at typical forward current. For voltage at higher drive current, refer to performance graphs.
4. Device operation not recommended at drive currents less than 10% of the typical value
5. Caution must be taken not to stare at the light emitted from these LEDs. Under special circumstances, the high intensity could damage the eye.
6. All product operating specifications are subject to change without advance notice.

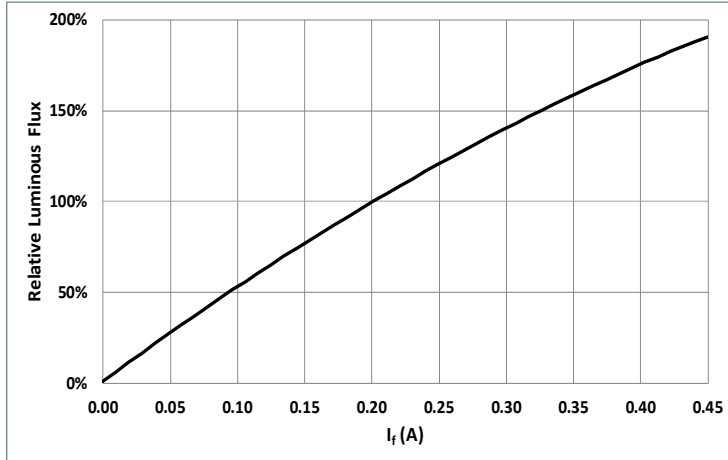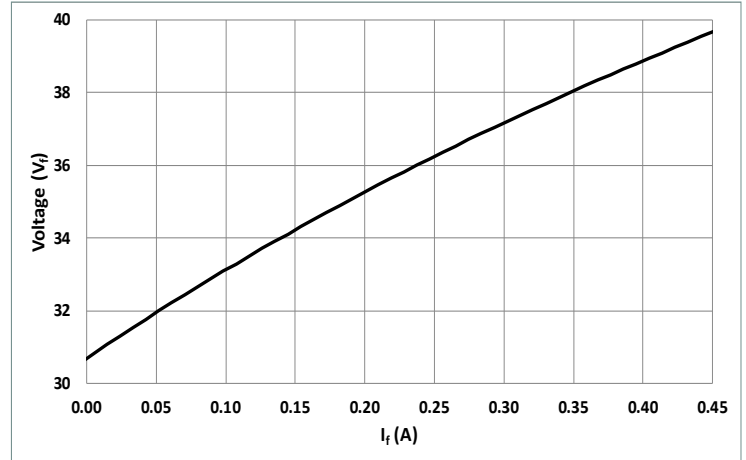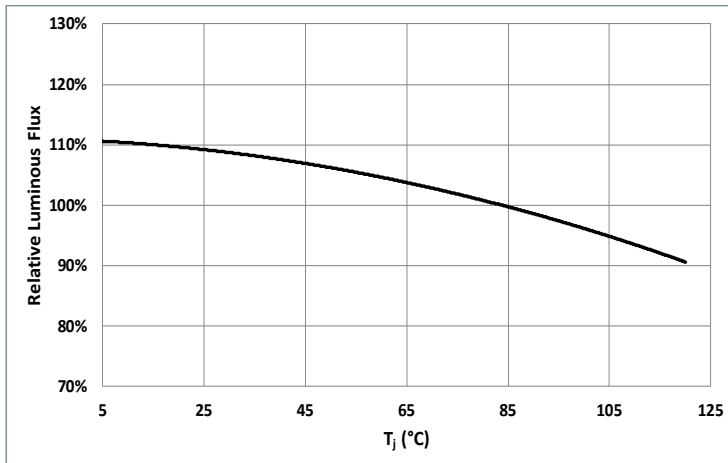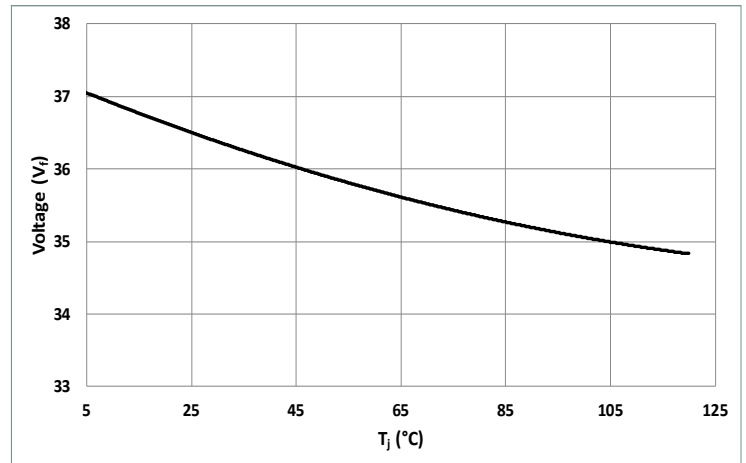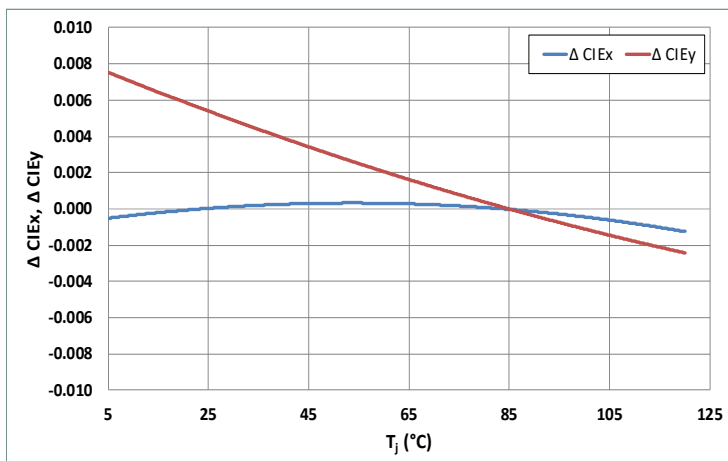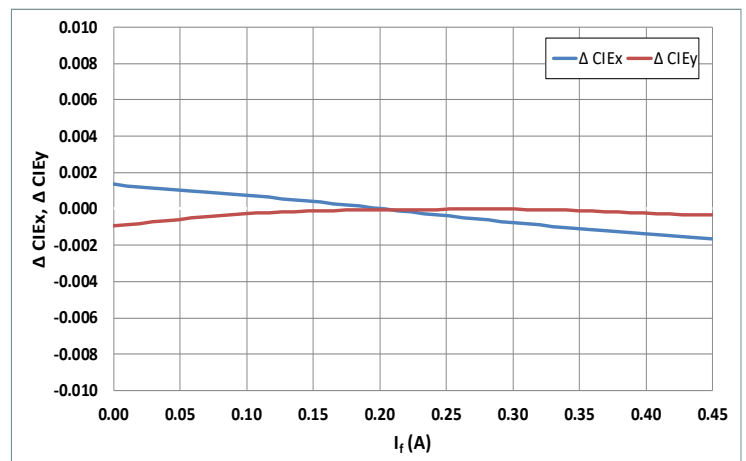
CHM-4 36V Optical & Electrical Characteristics
Relative Output Flux vs. Forward Current @ 85°C

Forward Current vs. Forward Voltage @ 85°C

Relative Output Flux vs. Junction Temperature

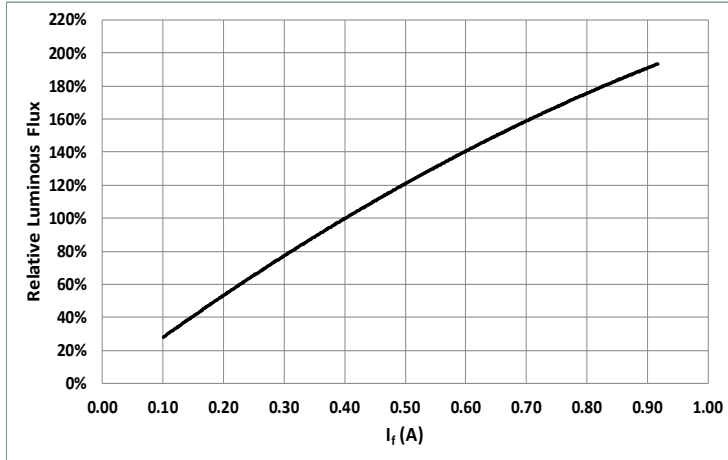Change in Voltage vs. Junction Temperature

Change in CIE_x/y vs. Junction Temp. (3000K, 90CRI)

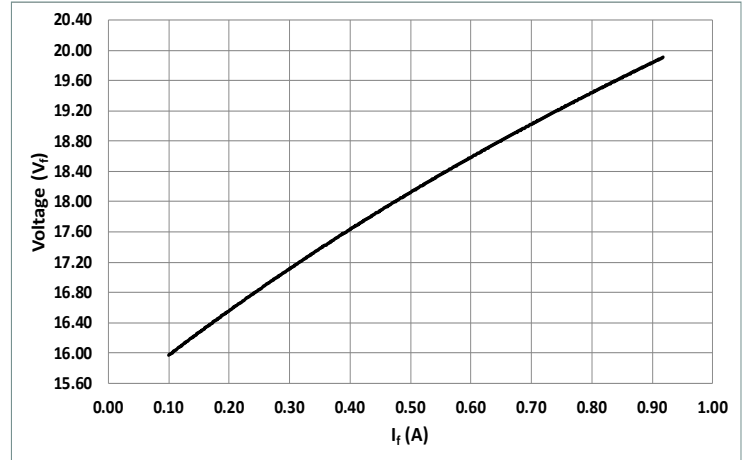Change in CIE_x/y vs. Forward Current (3000K, 90CRI)


CHM-4 18V Optical & Electrical Characteristics


Relative Output Flux vs. Forward Current @ 85°C




Forward Current vs. Forward Voltage @ 85°C




Relative Output Flux vs. Junction Temperature

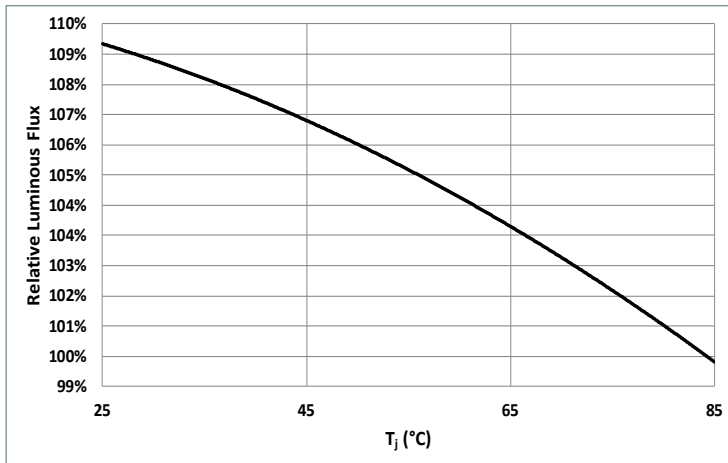


Change in Voltage vs. Junction Temperature

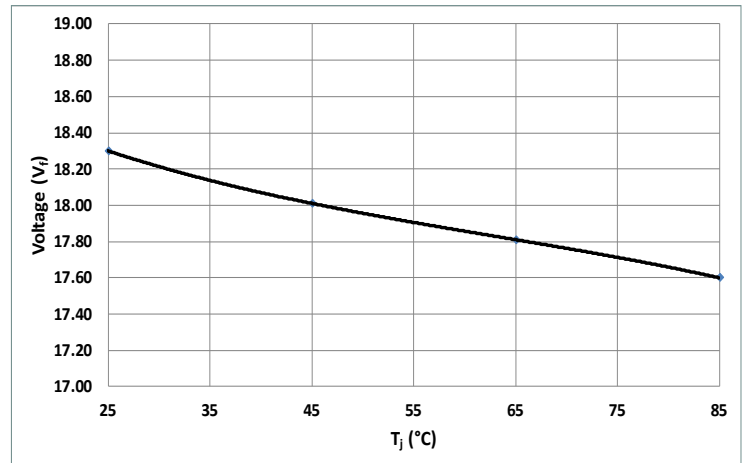

Change in CIE_x/y vs. Junction Temp. (3000K, 90CRI)

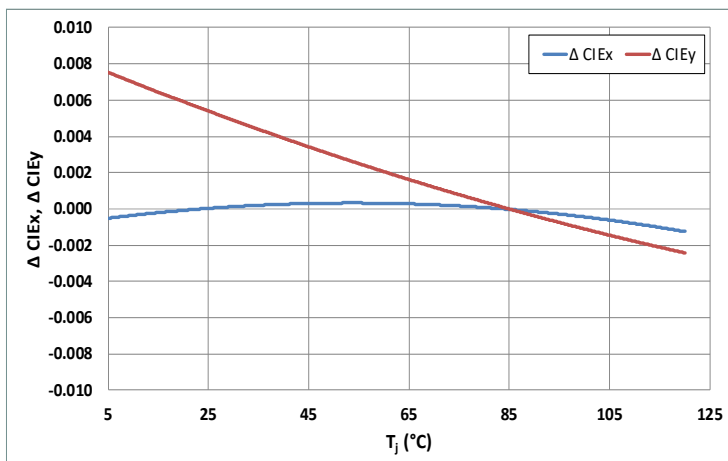


Change in CIE_x/y vs. Forward Current (3000K, 90CRI)

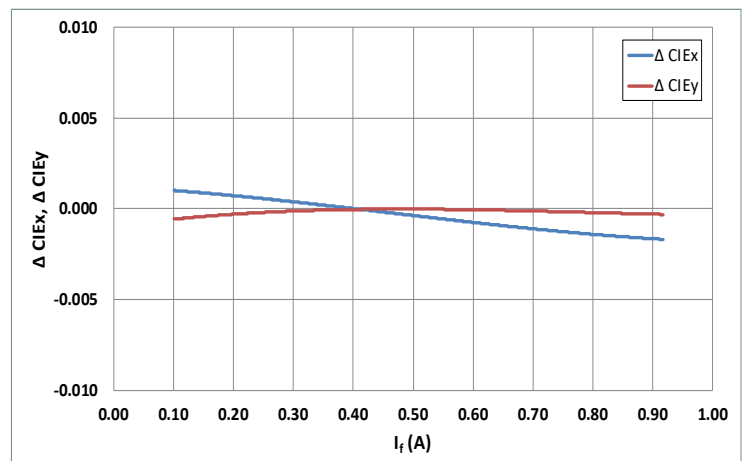


CHM-6 36V Optical & Electrical Characteristics


Relative Output Flux vs. Forward Current @ 85°C

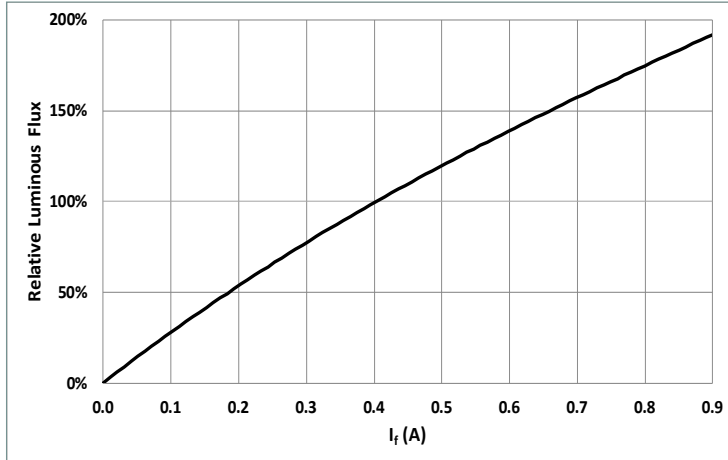


Forward Current vs. Forward Voltage @ 85°C

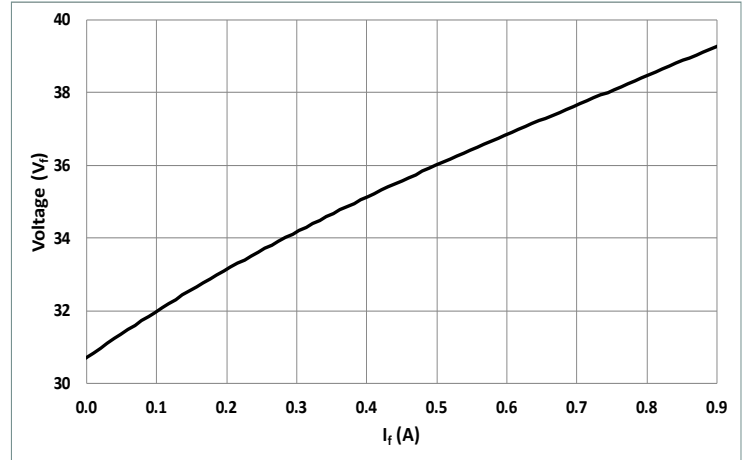


Relative Output Flux vs. Junction Temperature

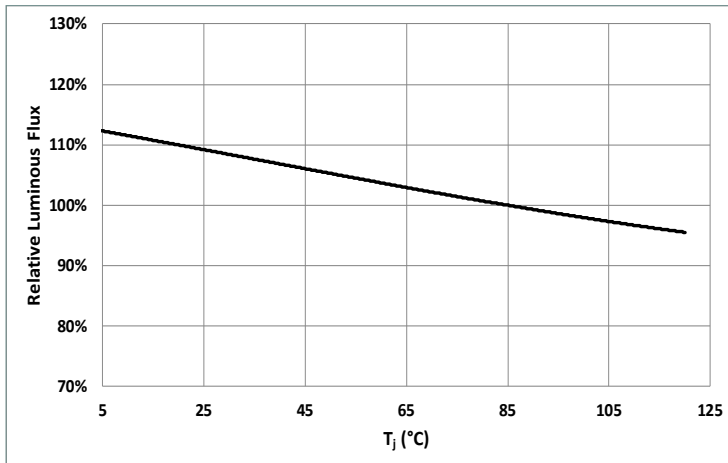


Change in Voltage vs. Junction Temperature

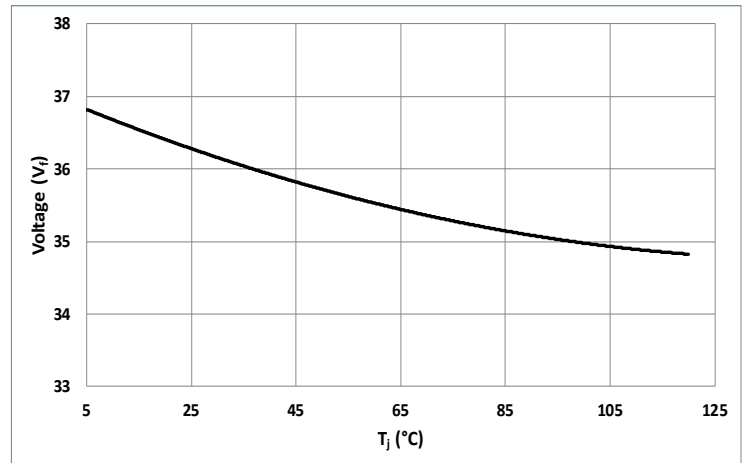

Change in CIE_x/y vs. Junction Temp. (3000K, 90CRI)

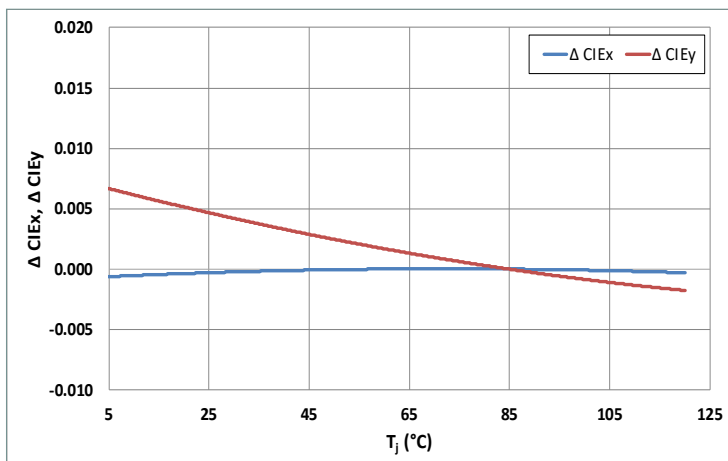


Change in CIE_x/y vs. Forward Current (3000K, 90CRI)

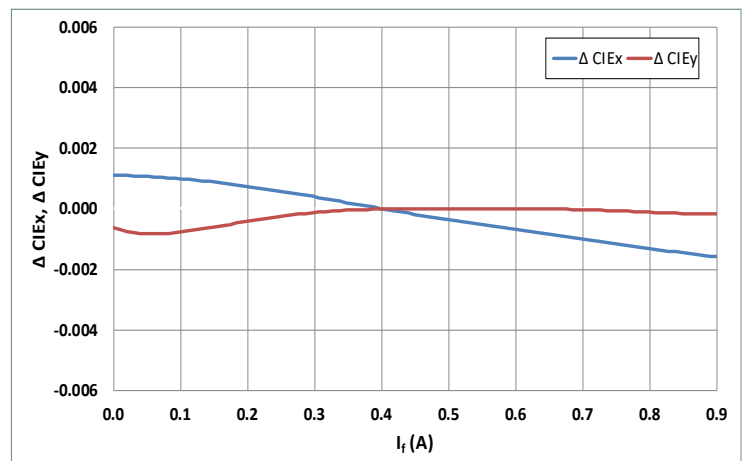


CHM-6 18V Optical & Electrical Characteristics


Relative Output Flux vs. Forward Current @ 85°C

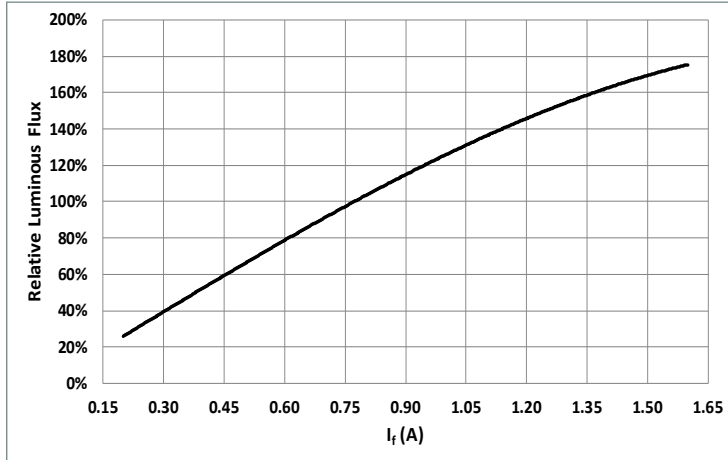


Forward Current vs. Forward Voltage @ 85°C

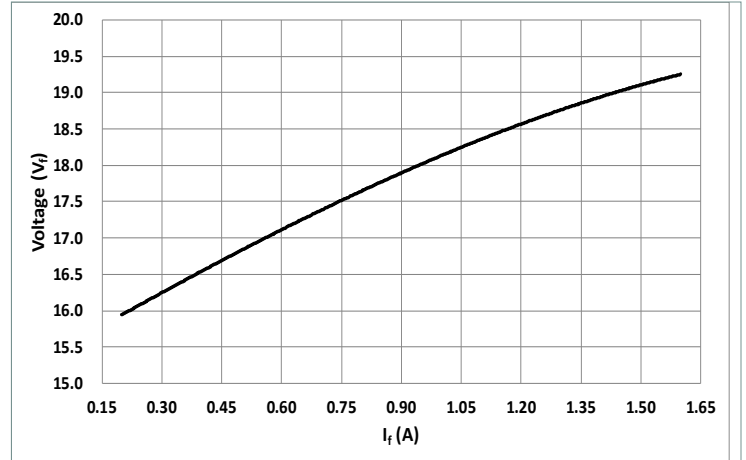


Relative Output Flux vs. Junction Temperature

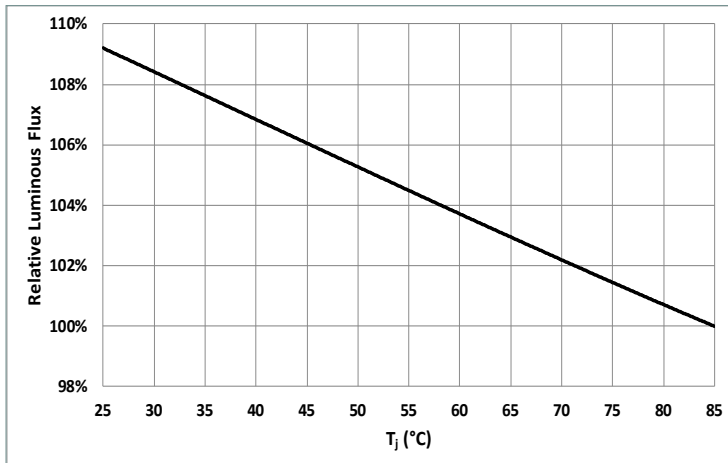


Change in Voltage vs. Junction Temperature

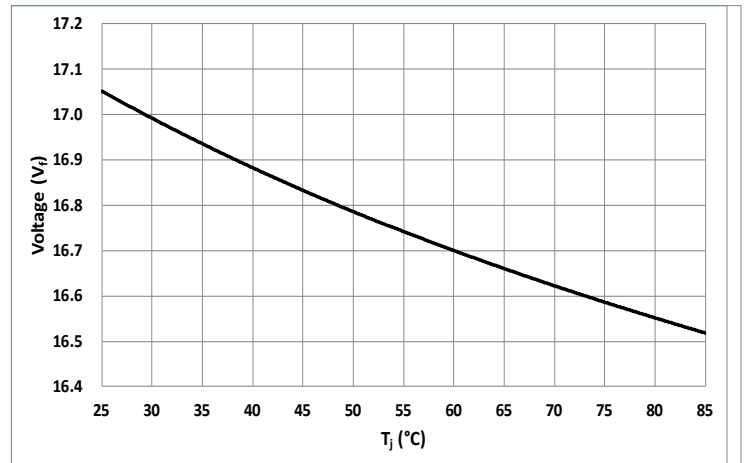

Change in CIE_x/y vs. Junction Temp. (3000K, 90CRI)

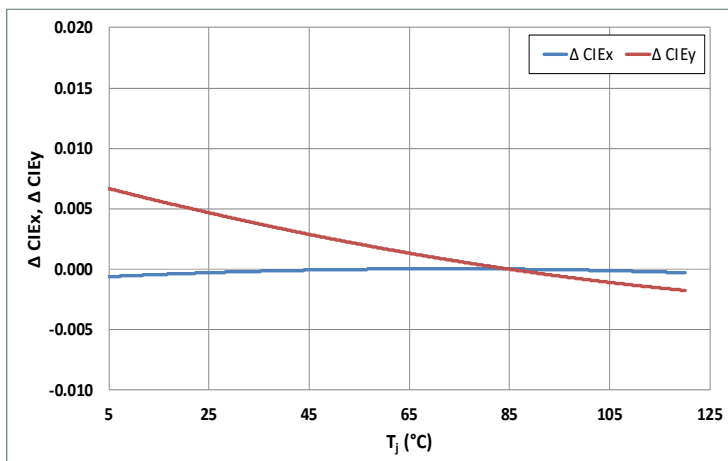


Change in CIE_x/y vs. Forward Current (3000K, 90CRI)

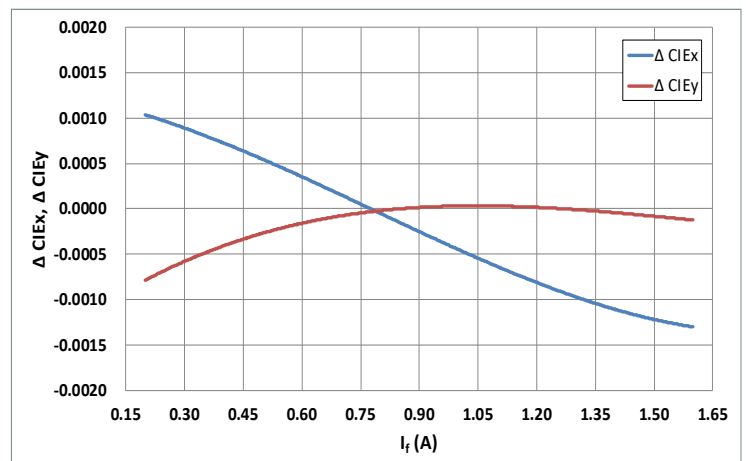


CHM-9 36V Optical & Electrical Characteristics


Relative Output Flux vs. Forward Current @ 85°C

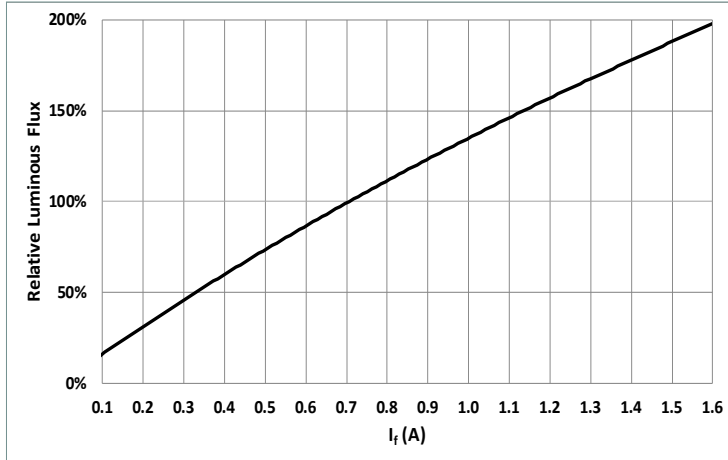


Forward Current vs. Forward Voltage @ 85°C

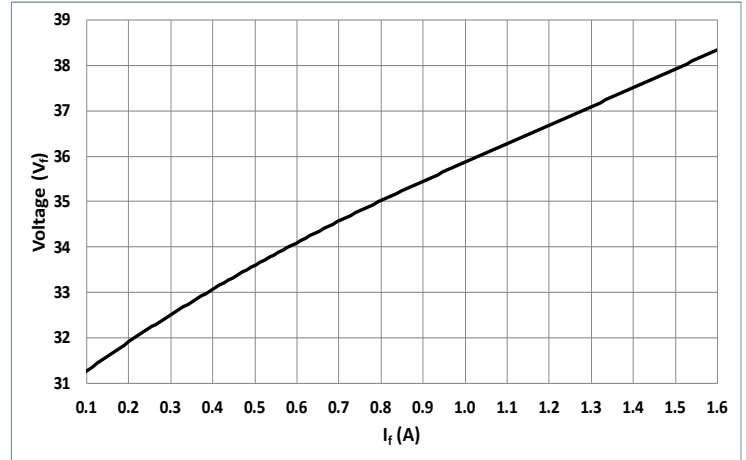


Relative Output Flux vs. Junction Temperature

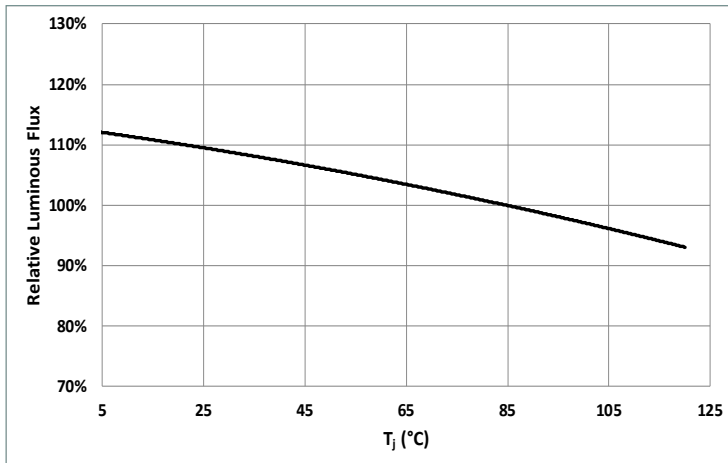


Change in Voltage vs. Junction Temperature

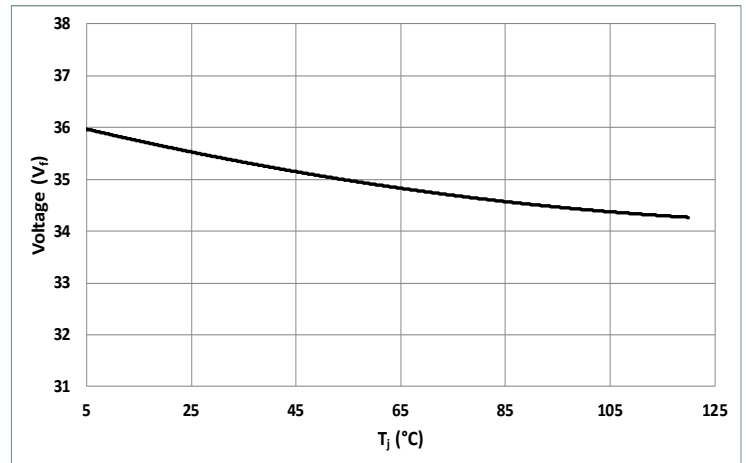


Change in CIE_x/y vs. Junction Temp. (3000K, 90CRI)

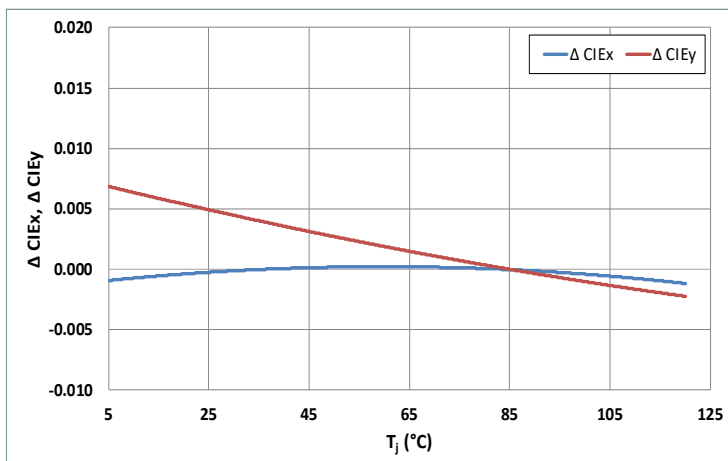

Change in CIE_x/y vs. Forward Current (3000K, 90CRI)

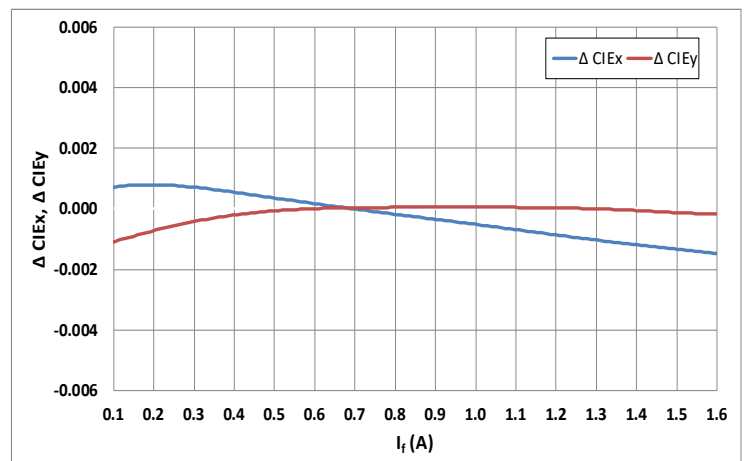


Typical Spectrum

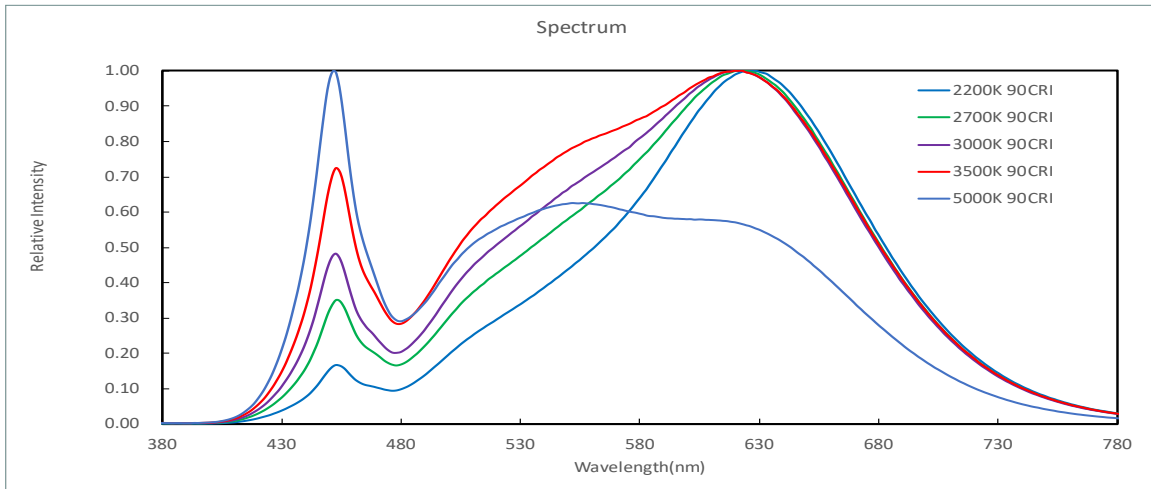


Radiation Pattern






Typical Polar Radiation Pattern

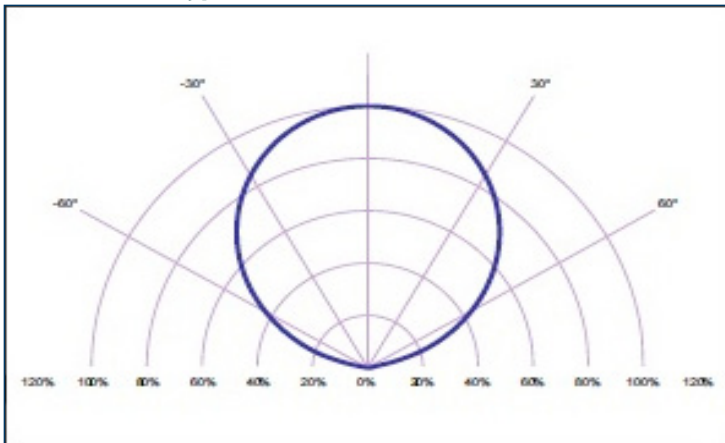

Typical Angular Radiation Pattern


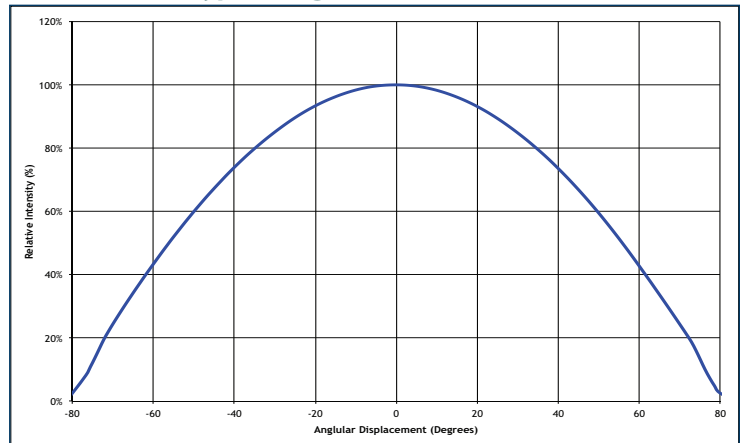


Derating Curve

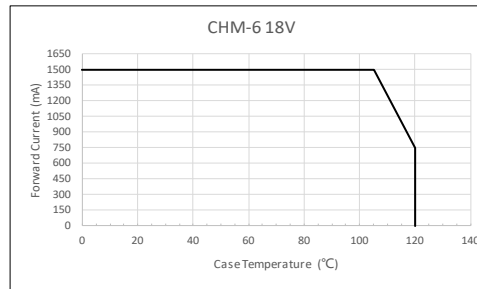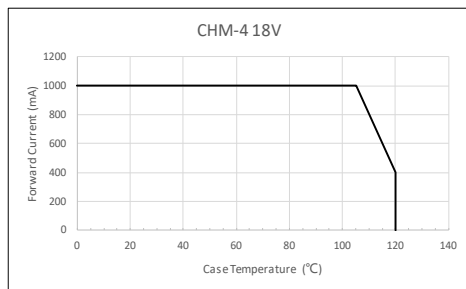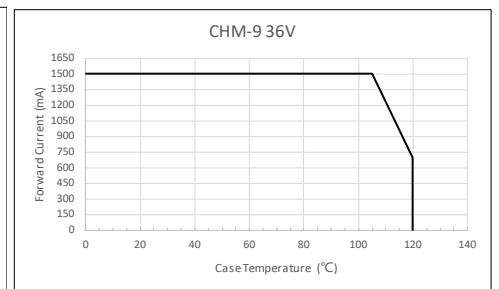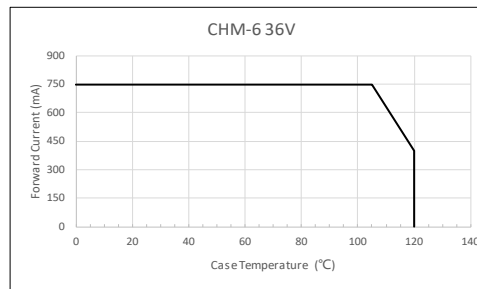
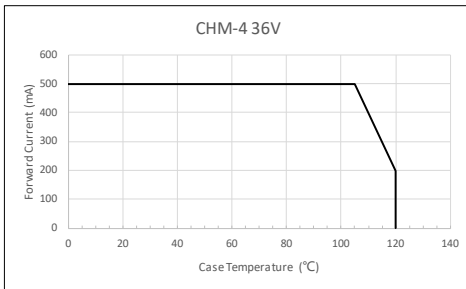


CHM-4-BH40 Mechanical Dimensions


Note: Unless otherwise specified, tolerance is $\pm 0.3\text{mm}$

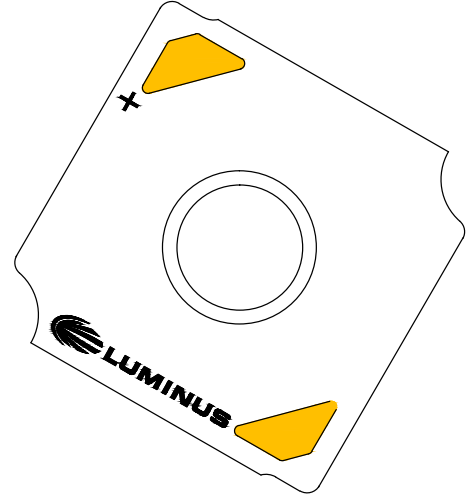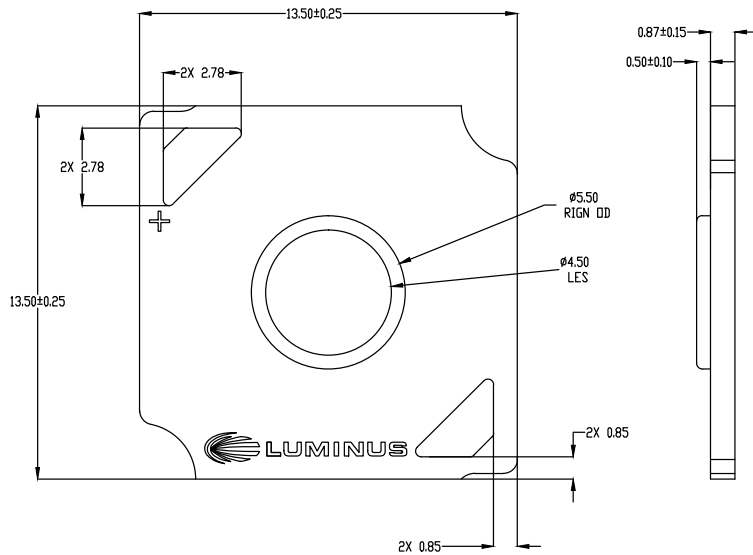

CHM-6-BH40 Mechanical Dimensions

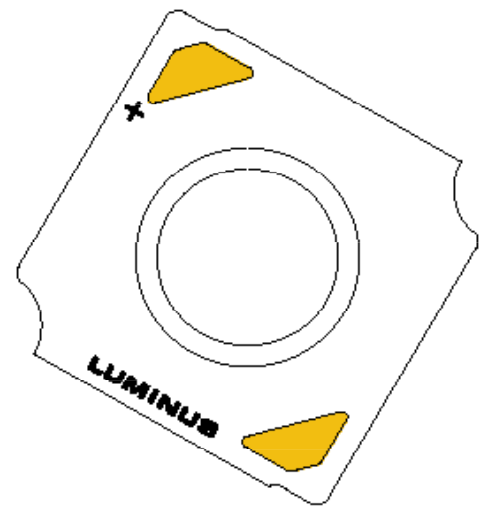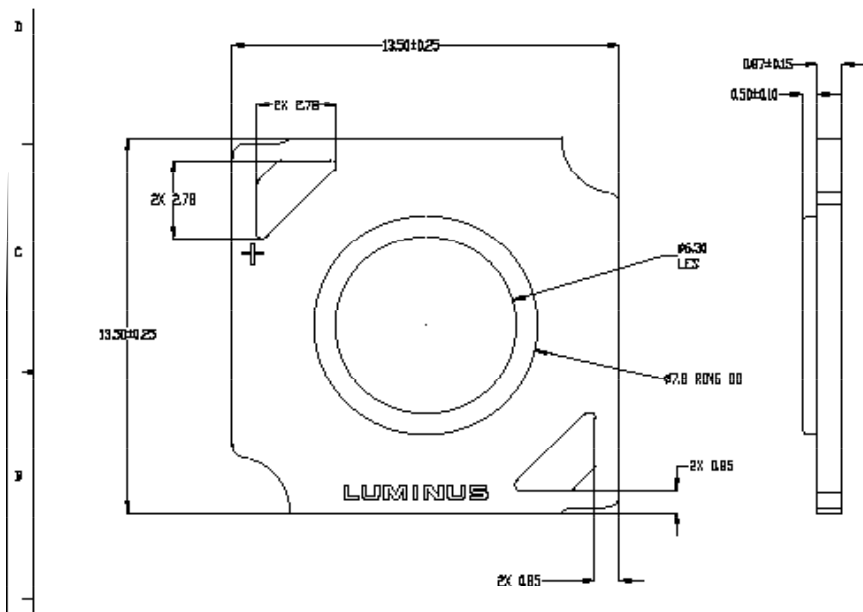

CHM-9-BH40 Mechanical Dimensions

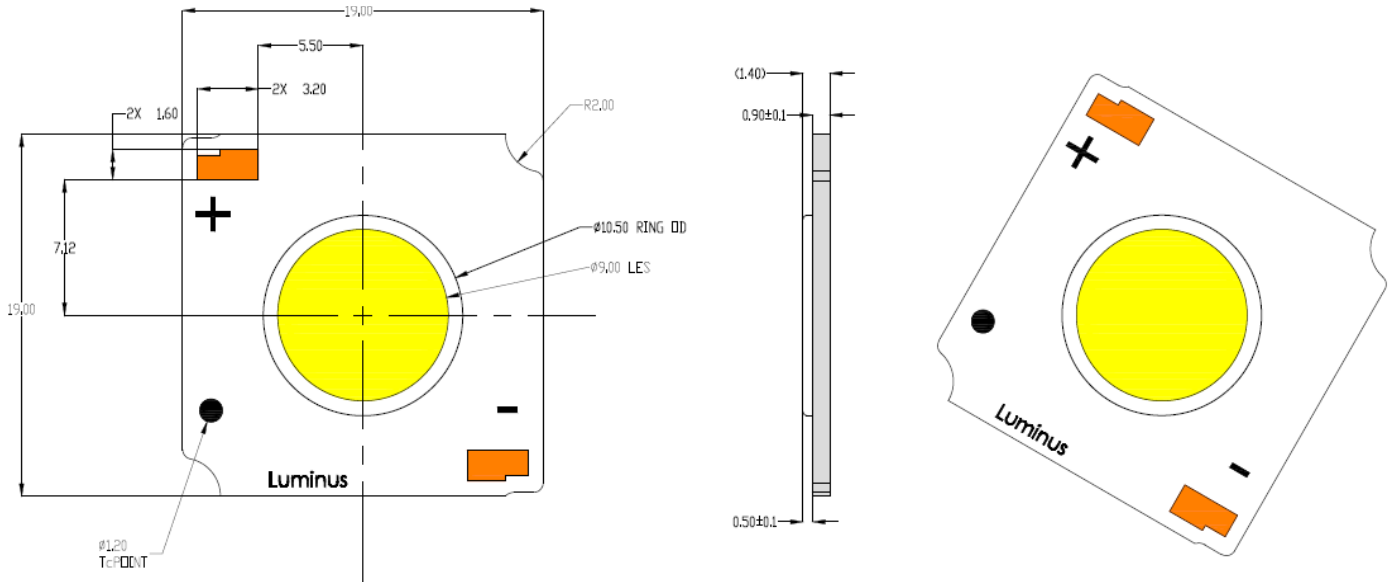

Shipping Container



Package model -- for illumination

Note:

CHM-4, CHM-6, 80 pcs per tray,
CHM-9, 45 pcs per tray, and 5 trays
are stacked together to be sealed
in an anti-static bag.



Note:

The anti-static bag is boxed for
easier storage, CHM-4, CHM-6
400 pcs per box, CHM-9 225
pcs per box.

Label Information



Label model -- for illumination only

Notes:

- ① Manufacture part number, flux bin and chromaticity bin
- ② Customer part number
- ③ Rev.01 indicates a fully released product
- ④ Box ID
- ⑤ Production ID
- ⑥ Total number of units in a box

Technology Overview

Luminus Chip-on-Board (COB) LED series offers a complete lighting class solution designed for high performance illumination applications. The selection covers a wide lumen range from less than 300lm to over 25,000lm, all major color temperatures and can deliver color rendering greater than 97 at 2700K and 3000K and R9 equal to 95. These breakthroughs allow illumination engineers and designers to develop lighting solutions with maximum efficacy, brightness and overall quality.

Reliability

Designed from the ground up, the Luminus COB LED is one of the most reliable light sources in the world today. Having passed a rigorous suite of environmental and mechanical stress tests, including mechanical shock, vibration, temperature cycling and humidity. Only then are the devices qualified for use in a wide range of lighting application including some of the most demanding commercial applications. Delivered with fully qualified LM80 test data and TM21 lifetime results that certify lumen maintenance at 50,000 hours or more, Luminus COB LEDs are ready for the toughest challenges.

UL Recognized Compliance

Luminus COB arrays are tested in accordance with ANSI/UL 8750 to ensure safe operation for their intended applications.

REACH & RoHS Compliance

All LED products manufactured by Luminus are REACH and RoHS compliant and free of hazardous materials, including lead and mercury

Test Specifications

Every Luminus LED is fully tested to ensure it meets the high quality standards customers have come to expect from Luminus' products.

Traceability

Each Luminus COB LED is marked with a 2D bar code that contains a unique serial number. With this serial number, Luminus has the ability to provide customers with actual test data measurements for a specific LED. In addition, the 2D bar code is linked to manufacturing date codes that enables traceability of production processes and materials.

Testing Temperature

Luminus COB products are measured at temperatures typical for the LED operating in the fixture. Each device is tested at 85°C junction temperature eliminating the need to scale data sheet specifications to real world situations.

Chromaticity Bin Range

Chromaticity binning delivers color consistency for every order. Standard products are delivered with a 3-step MacAdam ellipse. This ensures color performance matching in the application. For the most demanding application, Luminus is one of only a few companies that can provide a 2 SCDM bin distribution. These tightly controlled, small distribution bins provide customers predictable, repeatable colors.

Handling Notes

Luminus products are designed for robust performance in general lighting application. However, care must be taken when handling and assembling the LEDs into their fixtures. To avoid damaging Luminus COBs please follow these guidelines.

The following is an overview of the application notes detailing some of the practices to follow when working with these devices. More detailed information is available on the Luminus web site at www.luminus.com.

General Handling

Devices are made to be lifted or carried with tweezers on two adjacent corners opposite the contact pads. At no time should the devices be handled by or should anything come in contact with the light emitting surface (LES) area. This area includes the yellow colored circular area and the ring surrounding it. There are electrical connections under the LES which if damaged will cause the device to fail. In addition, the ring frame itself should not be used for moving, lifting or carrying the device. Also do not attach any optics or mechanical holders to the ring as it is not capable to handle the mechanical stress.

Storage Condition

Please follow the conditions below.

Before opened	Temperature 5~30 °C, relative humidity less than 60%. Note: before opened LED should be used within a year
After opened	Temperature 5~30°C, relative humidity less than 60%. Please apply soldering within one week. After opened LED should be kept in an aluminum moisture proof bag with a moisture absorbent material
Avoid corrosive gas	Avoid exposing to air with corrosive gas. If exposed, electrode surface would be damaged, which may affect soldering. Furthermore, if the device is stored in an environment which contain elements that could volatize resin material, then the volatized resin particles may stick to electrodes, which may result in connection failures.

Static Electricity

Luminus COBs are electronic devices which can be damaged by electrostatic discharge (ESD). Please use appropriate measures to assure the devices do not experience ESD during their handling and or storage. ESD protection guidelines should be used at all time when working with Luminus COBs.

Storage	Luminus products are delivered in ESD shielded bags and should be stored in these bags until used
Transporting	When transporting the devices from one assembly area to another, ESD shielded carts and carriers should be used
Assembly	Individuals handling Luminus COBs during assembly should be trained in ESD protection practices. Assemblers should maintain constant conductive contact with a path to ground by means of a wrist strap, ankle straps, mat or other ESD protection system

Chemical Compatibility

The resin material used to form the LES can get hydrocarbons from the surrounding environment. As a result, certain chemical compounds (H_2SO_4 , H_2S , SO_2 , NH_3 , H_3PO_4 etc.) are not recommended for use with the Luminus products. Use of these compounds can cause damage to the light output of the device and may permanently damage the device. Please refer to the table below for a list of the compounds not recommended for use with the Luminus COB products.

Common Chemicals Known to Adversely Affect Luminus Devices		
Acetates	Ethers	Potassium hydroxide
Acetic acid	Cl, F or Br containing compounds	Siloxanes, fatty acids
Acrylates	Liquid hydrocarbons	Sodium Hydroxide
Aldehydes	Hydrochloric Acid	Sulfur compounds
Aldehydes	Ketones	Sulfuric Acid
Amines	Nitric Acid	Toluene
Benzene	Phosphoric acid	Xylenes
Dienes		

Thermal Interface Material (TIM)

Proper thermal management is critical for successful operation of any LED system. Excess operating temperature can reduce the light output of the device. And excessive heating can cause permanent damage to the device. Proper TIM material is a crucial component for effective heat transfer away from the LED during normal operation. Please refer to www.luminus.com for specific recommendations for TIM solutions. The compounds not recommended for use with the Luminus COB products.

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Luminus Devices:

CHM-4-30-90-36-BH40-F5-3	CHM-6-30-90-36-BH40-F5-3	CHM-9-30-90-36-BH40-F5-3	CHM-4-30-90-36-BH40-F5-2
CHM-6-30-90-36-BH40-F5-2	CHM-9-30-90-36-BH40-F5-2	CHM-4-22-90-18-BH40-F5-3	CHM-4-22-90-36-BH40-F5-3
CHM-4-24-90-18-BH40-F5-3	CHM-4-24-90-36-BH40-F5-3	CHM-4-27-80-18-BH40-F5-3	CHM-4-27-80-36-BH40-F5-3
CHM-4-27-90-18-BH40-F5-3	CHM-4-27-90-18-BH42-F5-3	CHM-4-27-90-36-BH40-F5-3	CHM-4-27-90-36-BH42-F5-3
CHM-4-27-95-18-BH40-F5-3	CHM-4-27-95-36-BH40-F5-3	CHM-4-30-80-18-BH40-F5-3	CHM-4-30-80-36-BH40-F5-3
CHM-4-30-90-18-BH40-F5-3	CHM-4-30-90-18-BH42-F5-3	CHM-4-30-90-36-BH42-F5-3	CHM-4-30-95-18-BH40-F5-3
CHM-4-30-95-18-BH42-F5-3	CHM-4-30-95-36-BH40-F5-3	CHM-4-30-95-36-BH42-F5-3	CHM-4-35-80-18-BH40-F5-3
CHM-4-35-80-36-BH40-F5-3	CHM-4-35-90-18-BH40-F5-3	CHM-4-35-90-18-BH42-F5-3	CHM-4-35-90-36-BH40-F5-3
CHM-4-35-90-36-BH42-F5-3	CHM-4-35-95-18-BH40-F5-3	CHM-4-35-95-36-BH40-F5-3	CHM-4-40-80-18-BH40-F5-3
CHM-4-40-80-36-BH40-F5-3	CHM-4-40-90-18-BH40-F5-3	CHM-4-40-90-36-BH40-F5-3	CHM-4-40-95-18-BH40-F5-3
CHM-4-40-95-36-BH40-F5-3	CHM-4-50-80-18-BH40-F5-3	CHM-4-50-80-36-BH40-F5-3	CHM-4-50-90-18-BH40-F5-3
CHM-4-50-90-36-BH40-F5-3	CHM-4-50-95-18-BH40-F5-3	CHM-4-50-95-36-BH40-F5-3	CHM-6-22-90-18-BH40-F5-3
CHM-6-22-90-36-BH40-F5-3	CHM-6-24-90-18-BH40-F5-3	CHM-6-24-90-36-BH40-F5-3	CHM-6-27-80-18-BH40-F5-3
CHM-6-27-80-36-BH40-F5-3	CHM-6-27-90-18-BH40-F5-3	CHM-6-27-90-18-BH42-F5-3	CHM-6-27-90-36-BH40-F5-3
CHM-6-27-90-36-BH42-F5-3	CHM-6-27-95-18-BH40-F5-3	CHM-6-27-95-36-BH40-F5-3	CHM-6-30-80-18-BH40-F5-3
CHM-6-30-80-36-BH40-F5-3	CHM-6-30-90-18-BH40-F5-3	CHM-6-30-90-18-BH42-F5-3	CHM-6-30-90-36-BH42-F5-3
CHM-6-30-95-18-BH40-F5-3	CHM-6-30-95-18-BH42-F5-3	CHM-6-30-95-36-BH40-F5-3	CHM-6-30-95-36-BH42-F5-3
CHM-6-35-80-18-BH40-F5-3	CHM-6-35-80-36-BH40-F5-3	CHM-6-35-90-18-BH40-F5-3	CHM-6-35-90-18-BH42-F5-3
CHM-6-35-90-36-BH40-F5-3	CHM-6-35-90-36-BH42-F5-3	CHM-6-35-95-18-BH40-F5-3	CHM-6-35-95-36-BH40-F5-3
CHM-6-40-80-18-BH40-F5-3	CHM-6-40-80-36-BH40-F5-3	CHM-6-40-90-18-BH40-F5-3	CHM-6-40-90-36-BH40-F5-3
CHM-6-40-95-18-BH40-F5-3	CHM-6-40-95-36-BH40-F5-3	CHM-6-50-80-18-BH40-F5-3	CHM-6-50-80-36-BH40-F5-3
CHM-6-50-90-18-BH40-F5-3	CHM-6-50-90-36-BH40-F5-3	CHM-6-50-95-18-BH40-F5-3	CHM-6-50-95-36-BH40-F5-3
CHM-9-22-90-36-BH40-F5-3	CHM-9-24-90-36-BH40-F5-3	CHM-9-27-80-36-BH40-F5-3	CHM-9-27-90-36-BH40-F5-3
CHM-9-27-90-36-BH42-F5-3	CHM-9-27-95-36-BH40-F5-3	CHM-9-30-80-36-BH40-F5-3	CHM-9-30-90-36-BH42-F5-3
CHM-9-30-95-36-BH40-F5-3	CHM-9-30-95-36-BH42-F5-3	CHM-9-35-80-36-BH40-F5-3	CHM-9-35-90-36-BH40-F5-3